

SONY®

TRINITRON® COLOR VIDEO MONITOR

BVM-14E1E/14E1U

CHASSIS NO. SCC-J32E-A/SCC-H99F-A

BVM-14E5E/14E5U

CHASSIS NO. SCC-J32F-A/SCC-H99G-A

BVM-14F1E/14F1U

CHASSIS NO. SCC-J32B-A/SCC-H99B-A

BVM-14F5E/14F5U

CHASSIS NO. SCC-J32C-A/SCC-H99C-A

BVM-20E1E/20E1U

CHASSIS NO. SCC-J32D-A/SCC-H99E-A

BVM-20F1E/20F1U

CHASSIS NO. SCC-J32A-A/SCC-H99A-A

MONITOR CONTROL UNIT
BKM-10R



OPERATION AND MAINTENANCE MANUAL

1st Edition (Revised 1)

Serial No. 2000001 and Higher (ALL MODELS)

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!
COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHASSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISE LORS DE TOUT DEPANNAGE. LE CHASSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDE A L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MARQUE Δ SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT LA IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANT CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTE.

TABLE OF CONTENTS

1. GENERAL

• BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U/20E1U/20F1E/20F1U	1-30
Overview	1-30
Features	1-30
Options	1-30
Connector panel configuration	1-33
Location and Function of Parts	1-33
Front Panel	1-35
Rear Panel	1-35
Guidance for Basic Monitor Operations	1-35
Basic Menu Operations	1-37
Displaying the Menus	1-37
ADDRESS Menu	1-37
Selecting the Menu	1-37
Changing the Settings	1-41
Preset Adjustment of the Picture Level Control Knobs —	1-41
CONTROL PRESET ADJ Menu	1-43
Structure and Usage of the CONTROL PRESET ADJ Menu	1-43
Adjusting the Color Temperature —	1-43
COLOR TEMP ADJ Menu	1-44
Structure and Usage of the COLOR TEMP ADJ Menu	1-44
Setting the Input Configuration —	1-44
INPUT CONFIGURATION Menu	1-44
Structure and Usage of the INPUT CONFIGURATION Menu	1-44
Assigning the Remote Control Functions —	1-44
REMOTE Menu	1-44
Structure and Usage of the REMOTE Menu	1-44
Setting the Password PASSWORD Menu	1-44
Structure and Usage of the PASSWORD Menu	1-44
Setting the Channel Selection Method and Power-Up Conditions —	1-44
SYSTEM CONFIGURATION Menu	1-44
Structure and Usage of the SYSTEM CONFIGURATION Menu	1-44
Setting the Screen Display — ON SCREEN SET Menu ..	1-44
Structure and Usage of the ON SCREEN SET Menu	1-44
Convergence Adjustments — ALIGNMENT Menu	1-44
Structure and Usage of the ALIGNMENT Menu	1-44
Monitor Memory Card Data Operations —	1-44
MEMORY CARD Menu	1-44
Structure and Usage of the MEMORY CARD Menu	1-44
Monitor-to-Monitor Data Copy — COPY Menu	1-44
Structure and Usage of the COPY Menu	1-44
Displaying Information About the Monitor —	1-44
STATUS Menu	1-44
Structure and Usage of the STATUS Menu	1-44
Selecting the Monitor to Control — ADDRESS Menu	1-44
Structure and Usage of the ADDRESS Menu	1-44
Specifications	1-44

2. DISASSEMBLY

2-1-1. Cabinet Removal (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	2-1
2-1-2. Cabinet Removal (BVM-20E1E/20E1U/20F1E/20F1U)	2-1
2-2-1. PA Board Removal (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	2-2
2-2-2. PA Board Removal (BVM-20E1E/20E1U/20F1E/20F1U)	2-2
2-3-1. PC Board Removal (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	2-3
2-3-2. PC Board Removal (BVM-20E1E/20E1U/20F1E/20F1U)	2-3
2-4. E and G Boards Removal and Check	2-4
2-5. BC and BK Boards Removal and Check	2-4
2-6-1. Slot Card Assy Removal (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	2-5
2-6-2. Slot Card Assy Removal (BVM-20E1E/20E1U/20F1E/20F1U)	2-5
2-7. TA and TB Boards Removal	2-6
2-8-1-1. YA, YB and YC Boards Removal (BVM-14E1E/14E1U/14F1E/14F1U)	2-6
2-8-1-2. BEZEL ASSY Removal (BVM-14E5E/14E5U/14F1E/14F1U)	2-7
2-8-1-3. HA, HB, YA, YB and YC Boards Removal (BVM-14E5E/14E5U/14F5E/14F5U)	2-7
2-8-2. YA, YB and YC Boards Removal (BVM-20E1E/20E1U/20F1E/20F1U)	2-8
2-9-1. Picture Tube Removal (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	2-8
2-9-2. Picture Tube Removal (BVM-20E1E/20E1U/20F1E/20F1U)	2-9
2-10. Upper Cover Removal (BKM-10R)	2-10

2-11. HA and HB Boards Removal (BKM-10R)	2-10
2-12. HC Board Removal (BKM-10R)	2-11

3. CIRCUIT DESCRIPTIONS

3-1. BK Board Descriptions	3-1
1-1. BK Select Switch	3-1
1-2. Clamp Circuit (1)	3-1
1-3. WB INSERT Pulse Insertion Circuit	3-1
1-4. Chroma Level Adjustment Circuit	3-1
1-5. Matrix Circuit	3-1
1-6. RGB Switch	3-1
1-7. Clamp Circuit (2)	3-1
1-8. Half Blanking Switch	3-1
1-9. 100 IRE Pulse, SET UP Pulse Insertion Circuit	3-1
1-10. Blue-Only Switch	3-1
1-11. Contrast, Bright Adjustment Circuit	3-2
1-12. Pulse Insertion Circuit	3-2
1-13. Drive Control Amplifier	3-2
1-14. Clamp Circuit (3)	3-2
1-15. Cut-Off Switch	3-2
1-16. VIDEO OUT Amplifier	3-2
1-17. G2 Control	3-2
2. ABL, Overload Detection	3-2
3. Control Circuit	3-2
BK Board Block Diagram (1)	3-3
BK Board Block Diagram (2)	3-7
3-2. BC Board Descriptions	3-10
1. Serial Communication with Boards	3-10
2. Internal Signal Generation	3-10
3. VITC Reading	3-10
4. Character Generator	3-10
5. Parallel Remote Control	3-10
6. ISR Terminal	3-10
7. Serial Remote Terminal	3-10
8. Communication with Control Block (HC Board)	3-10
BC Board Block Diagram	3-11
3-3. E Board Descriptions	3-15
E Board Block Diagram	3-15
1. Horizontal System	3-18
1-1. H DELAY Circuit	3-18
1-2. AFC Circuit	3-18
1-3. Horizontal Deflection Circuit	3-18
1-4. H Center Circuit	3-18
1-5. Landing Circuit	3-18
1-6. NTC Drive Circuit	3-18
1-7. H Linearity Circuit	3-18
1-8. Rotation Circuit (20-Inch Model)	3-18
1-9. H Convergence Circuit (20-Inch Model)	3-18
2. Vertical System	3-18
2-1. V Counter	3-18
2-2. V OSC Circuit	3-18
2-3. Vertical Deflection Circuit	3-18
3. Protection Circuit	3-19
3-1. H STOP, V STOP Detection Circuit	3-19
3-2. Excessive Current Protection Circuit for Horizontal Deflection Circuit Power Supply	3-19
4. Control Circuit	3-19

3-4. D Board Descriptions	3-19
1-1. Signal Generator (IC105)	3-19
1-2. DEFLECTION Generator	3-19
1-3. H. CONVER Generator	3-19
1-4. D/A Converter	3-19
1-5. NTC Signal Generation	3-19
1-6. H.CONV. SIDE Signal Generation	3-20
1-7. H.LIN Signal Generation	3-20
1-8. D.F.X. Signal, D.F.Y. Signal Generation	3-20
D Board Block Diagram	3-20
3-5. PA Board Descriptions	3-23
1-1. High Voltage Regulator Circuit	3-23
1-2. High Voltage Protector Circuit	3-23
1-3. High Voltage Current Protector, ABL Circuit	3-23
1-4. Screen (G2) Voltage Regulator	3-23
1-5. DF Drive Circuit	3-23
PA, PC Board Block Diagram	3-24
3-6. Power Supply Circuit Descriptions (G, GA, GB and GC Board)	3-26
1. RCC Switching Regulator (IC4 and T5)	3-26
2. PFC Switching Regulator	3-26
3. PFC OVP Circuit	3-26
4. Half Bridge Switching Regulator (Q6, Q7, T4, GA Board IC101, IC102)	3-26
5. Power Supply Control	3-26
6. PFC Failure Detection Circuit	3-26
7. OVP (Over voltage protection), OCP (Over current protection) Circuits (GB Board)	3-26
8. SHUT DOWN Circuit (Q301 to Q312 of GB Board)	3-26
9. Encoder (GB Board)	3-26
10. CRT Protection	3-26
G, GA, GB, GC Board Block Diagram	3-27
3-7. Control Unit Descriptions (BVM-14F5U/14F5E, BKM-10R)	3-30
1. Key Scan, LED Lighting	3-30
2. Memory Card	3-30
HA Board Block Diagram	3-31
HB Board Block Diagram	3-31
HC Board Block Diagram	3-31

4. ELECTRICAL ADJUSTMENTS

4-1. Basic Adjustments in Replacement of CRT	4-1
4-2. Safety Related Adjustments	4-12
4-3. Electrical Adjustments	4-16
1. E Board Adjustments	4-16
2. BK Board Adjustments	4-18
3. BC Board Adjustments	4-25


5. DIAGRAMS

- 5-1. Overall Block Diagram 5-1
- 5-2. Frame Schematic Diagram (1) 5-5
- 5-2. Frame Schematic Diagram (2) 5-9
- 5-3. Circuit Boards Location 5-13
- 5-4. Printed Wiring Boards and Schematic Diagrams ... 5-14
- TA, TB boards (BVM-14E5E/14E5U/14F5E/14F5U/
20E1E/20E1U/20F1E/20F1U) 5-15
- TA, TB boards
(BVM-14E1E/14E1U/14F1E/14F1U) 5-24
- BK board 5-30
- BC board 5-60
- E board 5-76
- D board 5-89
- PA, PC, C boards 5-95
- YA, YB, YC boards 5-101
- HD board (BVM-14E1E/14E1U/14F1E/14F1U/20E1E/
20E1U/20F1E/20F1U, BKM-10R) 5-101
- G board 5-105
- GA, GB, GC boards 5-111
- HA board (BVM-14E5E/14E5U/14F5E/
14F5U, BKM-10R) 5-116
- HB board (BVM-14E5E/14E5U/14F5E/
14F5U, BKM-10R) 5-119
- HC board (BVM-14E5E/14E5U/14F5E/
14F5U, BKM-10R) 5-122
- 5-5. Semiconductors 5-126

6. EXPLODED VIEWS

- 6-1. Cover (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/
14F1U/14F5E/14F5U) 6-1
- 6-2. Chassis (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/
14F1U/14F5E/14F5U) 6-3
- 6-3. Picture Tube (BVM-14E1E/14F1U/14E5E/14E5U/
14F1E/14F1U/14F5E/14F5U) 6-5
- 6-4. Cover (BVM-20E1E/20E1U/20F1E/20F1U) 6-6
- 6-5. Chassis (BVM-20E1E/20E1U/20F1E/20F1U) 6-7
- 6-6. Picture Tube (BVM-20E1E/20E1U/20F1E/20F1U) 6-8
- 6-7. Control (BKM-10R) 6-9

- 7. ELECTRICAL PARTS LIST 7-1

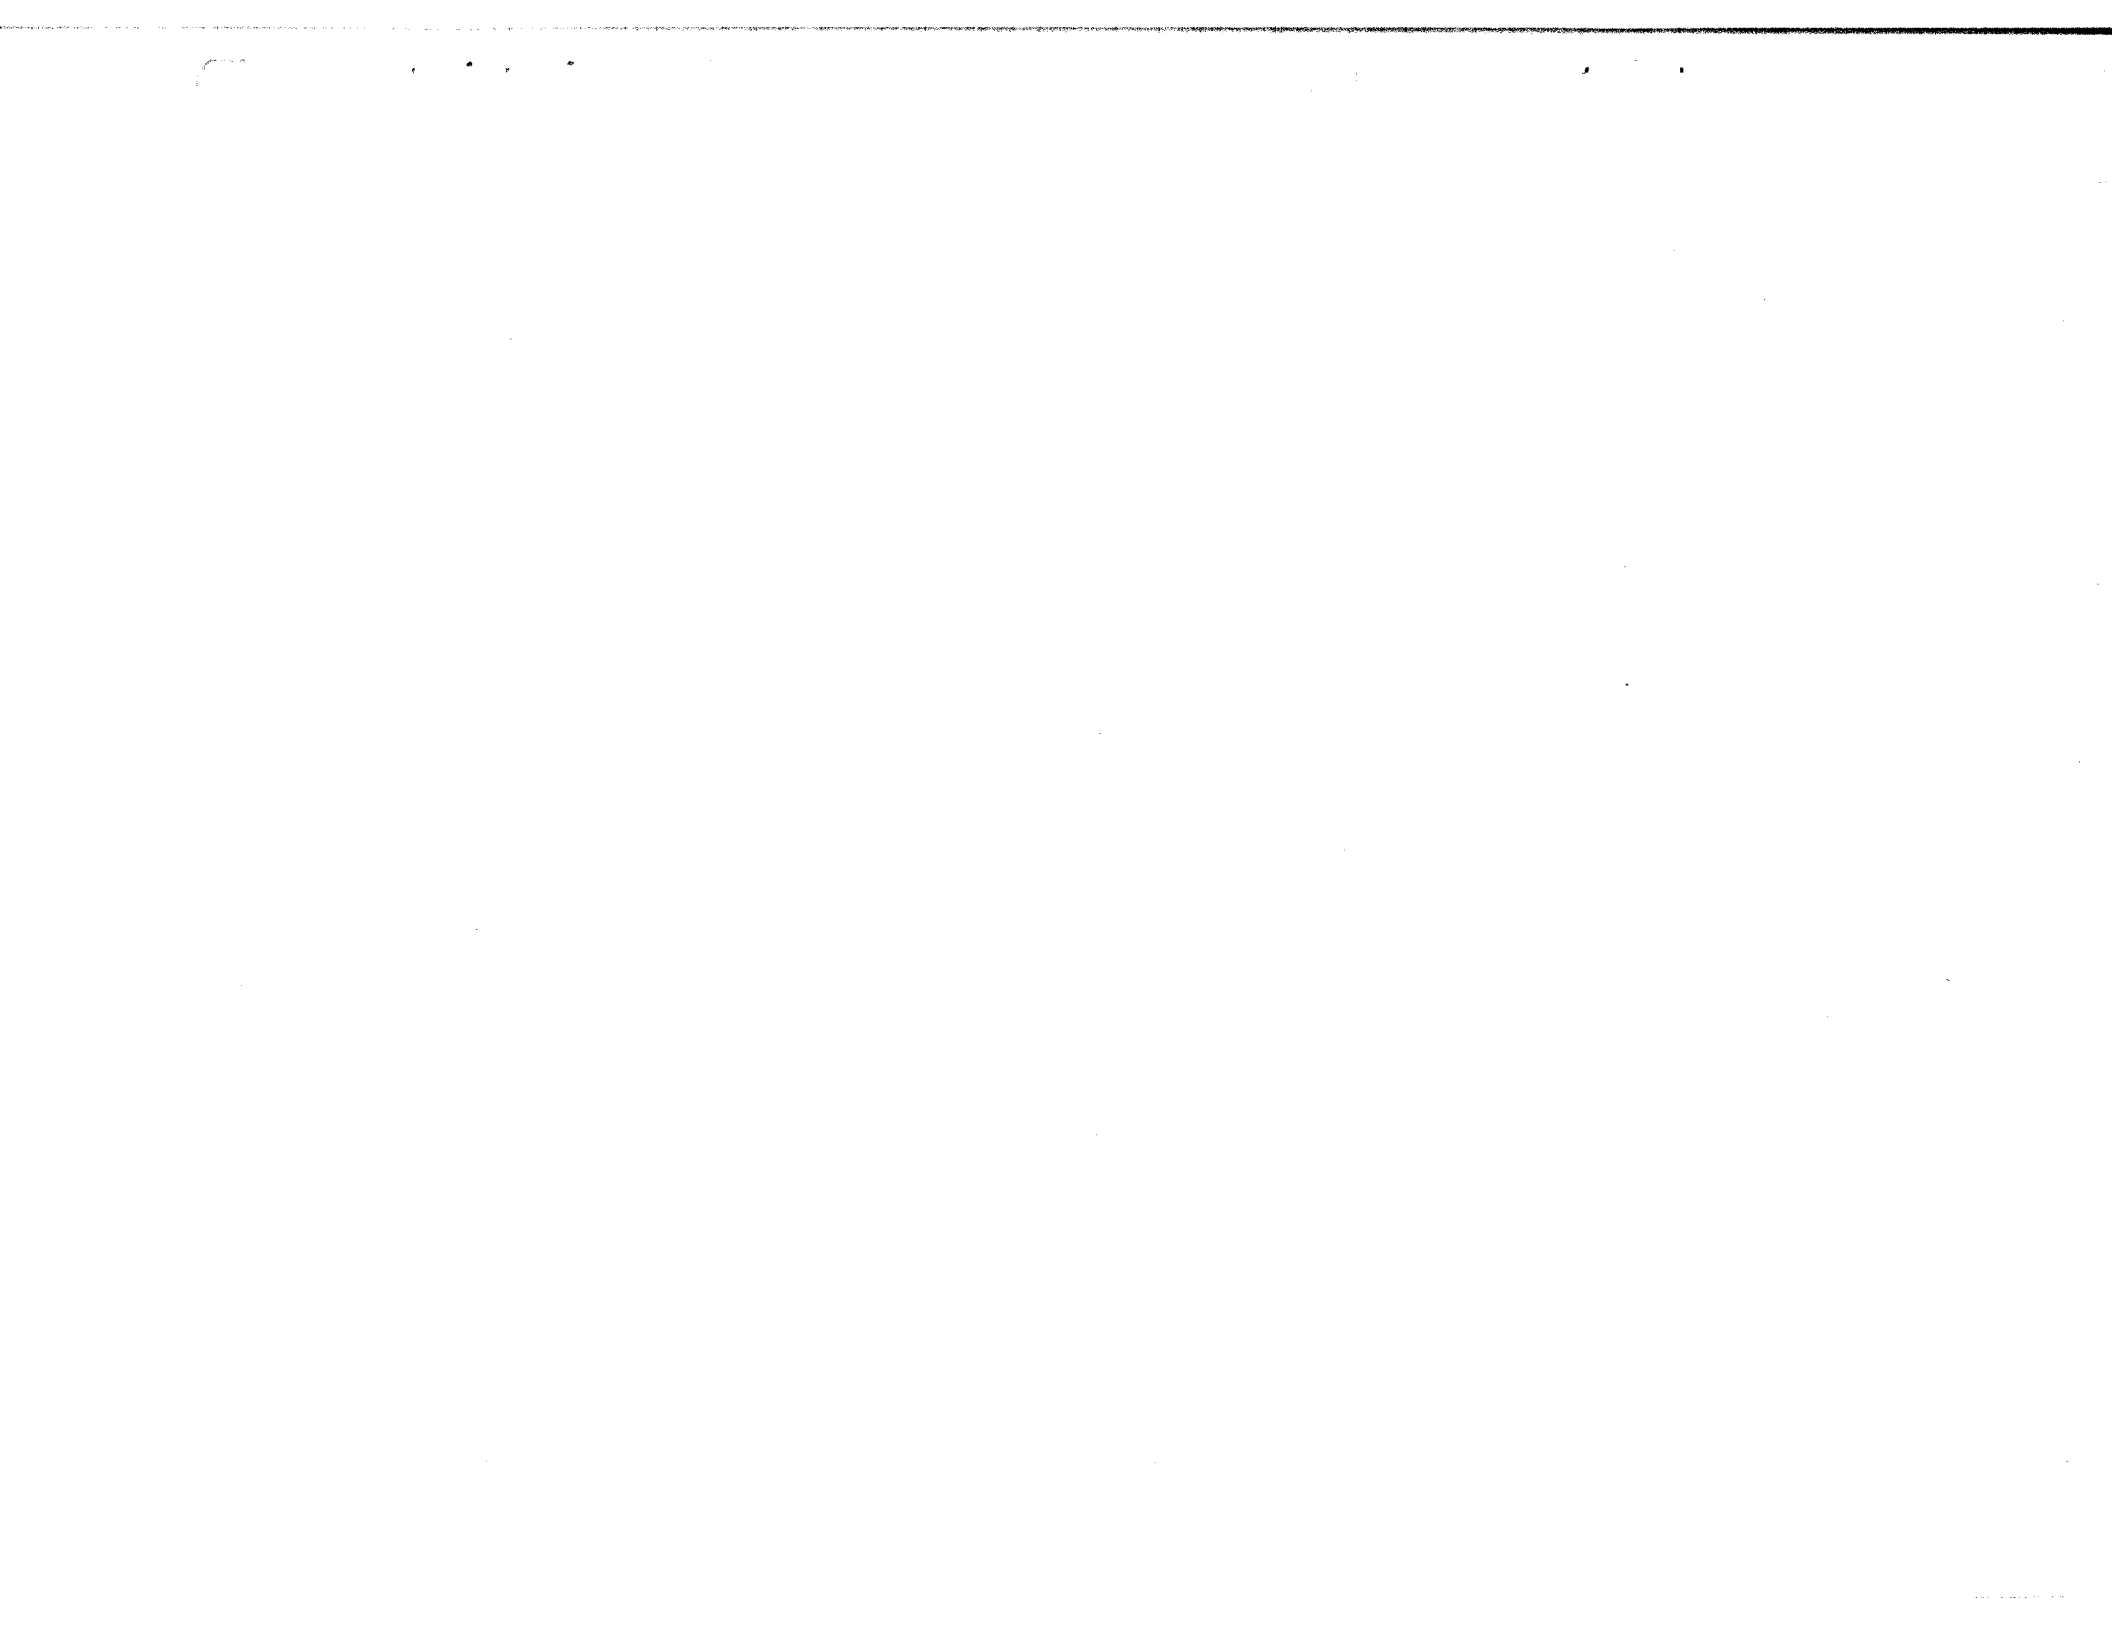

SECTION 1. GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual.

WARNING: THIS WARNING IS APPLICABLE FOR USA ONLY.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

ATTENTION: Il y a un risque d'explosion si la pile est mal insérée. Remplacer la pile uniquement par une pile de même type ou de type équivalent recommandé par le fabricant. Jeter les piles usées conformément aux instructions du fabricant.

VORSICHT: Es besteht Explosionsgefahr, wenn die Batterie inkorrekt eingewechselt wird. Es darf nur eine identische oder eine vom Hersteller empfohlene Batterie des gleichen Typs eingesetzt werden. Es dürfen nur eine identische oder eine vom Hersteller empfohlene Batterie des gleichen Typs eingesetzt werden. Entladene Batterien sind nach den Anweisungen des Herstellers zu entsorgen.

PRECAUCION: Peligro de explosión en caso de haberse instalado incorrectamente la batería. Cambie sólo por una del mismo tipo o especificaciones equivalentes, de entre las recomendadas por el fabricante. Las baterías viejas se deben eliminar siguiendo las instrucciones del fabricante.

ATTENZIONE: Pericolo di esplosione se la pila viene sostituita scorrettamente. Sostituirla solo con un'altra uguale o di un tipo equivalente consigliato dal fabbricante. Gettare via le pile usate secondo le istruzioni del fabbricante.

ADVERTENCIA: Um Feuergefahr und die Gefahr eines elektrischen Schlagens zu vermeiden, darf das Gerät weder Regen noch Feuchtigkeit ausgesetzt werden. Um einen elektrischen Schlag zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur einem Fachmann.

AVERTISSEMENT: Afin d'éviter tout risque d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité. Afin d'éviter tout risque d'électrocution, garder le coffret fermé. Ne confier l'entretien de l'appareil qu'à un personnel qualifié.

ADVERTENCIA: Para evitar incendios o el riesgo de electrocución, no exponga la unidad a la lluvia ni a la humedad. Para evitar descargas eléctricas, no abra la unidad. En caso de avería, solicite los servicios de personal cualificado.

ATTENZIONE: Per evitare incendi o cortocircuili, l'apparecchio non deve essere esposto alla pioggia o all'umidità. Zur Trennung vom Netz ist der Netzstecker aus der Steckdose zu ziehen, welche sich in der Nähe des Gerätes befinden muß und leicht zugänglich sein soll.

Nota: La toma mural debe estar instalada cerca del equipo y debe accederse a ésta con facilidad. Nota: La presa di corrente deve essere situata vicino all'apparecchio e deve essere facilmente accessibile.

Remarque: La prise doit être près de l'appareil et facile d'accès. Hinweis: Zur Trennung vom Netz ist der Netzstecker aus der Steckdose zu ziehen, welche sich in der Nähe des Gerätes befinden muß und leicht zugänglich sein soll.

Note: The socket-outlet should be installed near the equipment and be easily accessible. Note: Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Pour les utilisateurs au Canada Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Assicurarvi di usare il cavo di alimentazione in dotazione per questo monitor, altrimenti il monitor può non essere conforme alle norme FCC o alla Direttiva CEE/89/336.

WARNING: THIS WARNING IS APPLICABLE FOR USA ONLY.

If used in USA, use the UL LISTED power cord specified below. DO NOT USE ANY OTHER POWER CORD.

Plug Cap	Parallel blade with ground pin (NEMA 5-15P Configuration)
Cord	TPC SJT, three 16 or 18 AWG wires
Length	Less than 2.5 m (8 ft 3 in)
Rating	Minimum 10 A, 125 V

Using this unit at a voltage other than 120V may require the use of a different line cord or attachment plug, or both. To reduce the risk of fire or electric shock, refer servicing to qualified service personnel.

For customers in the USA This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the FCC Rules.

For customers in Canada This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Nota: Utilice sin falta el cable eléctrico que viene con este monitor. de lo contrario el monitor puede no cumplir con los reglamentos de la FCC o de la directiva 89/336/ECC de la Comunidad Europea.

Nota: Pour les utilisateurs au Canada Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Assicurarvi di usare il cavo di alimentazione in dotazione per questo monitor, altrimenti il monitor può non essere conforme alle norme FCC o alla Direttiva CEE/89/336.

Nota: Utilice sin falta el cable eléctrico que viene con este monitor. de lo contrario el monitor puede no cumplir con los reglamentos de la FCC o de la directiva 89/336/ECC de la Comunidad Europea.

Nota: Pour les utilisateurs au Canada Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Assicurarvi di usare il cavo di alimentazione in dotazione per questo monitor, altrimenti il monitor può non essere conforme alle norme FCC o alla Direttiva CEE/89/336.

Nota: Assicurarvi di usare il cavo di alimentazione in dotazione per questo monitor, altrimenti il monitor può non essere conforme alle norme FCC o alla Direttiva CEE/89/336.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

ATTENTION: Il y a un risque d'explosion si la pile est mal insérée. Remplacer la pile uniquement par une pile de même type ou de type équivalent recommandé par le fabricant. Jeter les piles usées conformément aux instructions du fabricant.

VORSICHT: Es besteht Explosionsgefahr, wenn die Batterie inkorrekt eingewechselt wird. Es darf nur eine identische oder eine vom Hersteller empfohlene Batterie des gleichen Typs eingesetzt werden. Es dürfen nur eine identische oder eine vom Hersteller empfohlene Batterie des gleichen Typs eingesetzt werden. Entladene Batterien sind nach den Anweisungen des Herstellers zu entsorgen.

PRECAUCION: Peligro de explosión en caso de haberse instalado incorrectamente la batería. Cambie sólo por una del mismo tipo o especificaciones equivalentes, de entre las recomendadas por el fabricante. Las baterías viejas se deben eliminar siguiendo las instrucciones del fabricante.

ATTENZIONE: Pericolo di esplosione se la pila viene sostituita scorrettamente. Sostituirla solo con un'altra uguale o di un tipo equivalente consigliato dal fabbricante. Gettare via le pile usate secondo le istruzioni del fabbricante.

ADVERTENCIA: Um Feuergefahr und die Gefahr eines elektrischen Schlagens zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur einem Fachmann.

AVERTISSEMENT: Afin d'éviter tout risque d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité. Afin d'éviter tout risque d'électrocution, garder le coffret fermé. Ne confier l'entretien de l'appareil qu'à un personnel qualifié.

ADVERTENCIA: Para evitar incendios o el riesgo de electrocución, no exponga la unidad a la lluvia ni a la humedad. Para evitar descargas eléctricas, no abra la unidad. En caso de avería, solicite los servicios de personal cualificado.

ATTENZIONE: Per evitare incendi o cortocircuili, l'apparecchio non deve essere esposto alla pioggia o all'umidità. Zur Trennung vom Netz ist der Netzstecker aus der Steckdose zu ziehen, welche sich in der Nähe des Gerätes befinden muß und leicht zugänglich sein soll.

Nota: La toma mural debe estar instalada cerca del equipo y debe accederse a ésta con facilidad. Nota: La presa di corrente deve essere situata vicino all'apparecchio e deve essere facilmente accessibile.

Remarque: La prise doit être près de l'appareil et facile d'accès. Hinweis: Zur Trennung vom Netz ist der Netzstecker aus der Steckdose zu ziehen, welche sich in der Nähe des Gerätes befinden muß und leicht zugänglich sein soll.

Note: The socket-outlet should be installed near the equipment and be easily accessible. Note: Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Utilice sin falta el cable eléctrico que viene con este monitor. de lo contrario el monitor puede no cumplir con los reglamentos de la FCC o de la directiva 89/336/ECC de la Comunidad Europea.

Nota: Pour les utilisateurs au Canada Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Assicurarvi di usare il cavo di alimentazione in dotazione per questo monitor, altrimenti il monitor può non essere conforme alle norme FCC o alla Direttiva CEE/89/336.

WARNING: To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

AVERTISSEMENT: Afin d'éviter tout risque d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité.

PRECAUCION: Peligro de explosión en caso de haberse instalado incorrectamente la batería. Cambie sólo por una del mismo tipo o especificaciones equivalentes, de entre las recomendadas por el fabricante. Las baterías viejas se deben eliminar siguiendo las instrucciones del fabricante.

ATTENZIONE: Pericolo di esplosione se la pila viene sostituita scorrettamente. Sostituirla solo con un'altra uguale o di un tipo equivalente consigliato dal fabbricante. Gettare via le pile usate secondo le istruzioni del fabbricante.

ADVERTENCIA: Um Feuergefahr und die Gefahr eines elektrischen Schlagens zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur einem Fachmann.

ADVERTENCIA: Para evitar incendios o el riesgo de electrocución, no exponga la unidad a la lluvia ni a la humedad. Para evitar descargas eléctricas, no abra la unidad. En caso de avería, solicite los servicios de personal cualificado.

ATTENZIONE: Per evitare incendi o cortocircuili, l'apparecchio non deve essere esposto alla pioggia o all'umidità. Zur Trennung vom Netz ist der Netzstecker aus der Steckdose zu ziehen, welche sich in der Nähe des Gerätes befinden muß und leicht zugänglich sein soll.

Nota: La toma mural debe estar instalada cerca del equipo y debe accederse a ésta con facilidad. Nota: La presa di corrente deve essere situata vicino all'apparecchio e deve essere facilmente accessibile.

Remarque: La prise doit être près de l'appareil et facile d'accès. Hinweis: Zur Trennung vom Netz ist der Netzstecker aus der Steckdose zu ziehen, welche sich in der Nähe des Gerätes befinden muß und leicht zugänglich sein soll.

Note: The socket-outlet should be installed near the equipment and be easily accessible. Note: Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Utilice sin falta el cable eléctrico que viene con este monitor. de lo contrario el monitor puede no cumplir con los reglamentos de la FCC o de la directiva 89/336/ECC de la Comunidad Europea.

Nota: Pour les utilisateurs au Canada Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Nota: Assicurarvi di usare il cavo di alimentazione in dotazione per questo monitor, altrimenti il monitor può non essere conforme alle norme FCC o alla Direttiva CEE/89/336.

• BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U • BVM-20E1E/20E1U/20F1E/20F1U

Overview

The BVM-14E1E/14E1U/14F1E/14F1U, BVM-14E5E/14E5U/14F5E/14F5U and BVM-20E1E/20E1U/20F1E/20F1U Trinitron® Color Video Monitors are high-performance 14- and 20-inch color video monitors. They are suitable for television stations or video production houses, where precise image reproduction is required.

1) Trinitron® is a registered trademark of Sony Corporation.

Features

High resolution picture tube
The HR Trinitron picture tube produces a clear, high resolution image.

Model	Aperture grille pitch at the center of the picture	Resolution
BVM-14E1E/14E1U	0.22 mm	900 TV lines
BVM-14E5E/14E5U	0.25 mm	800 TV lines
BVM-14F5E/14F5U	0.25 mm	1000 TV lines
BVM-20E1E/20E1U	0.30 mm	900 TV lines

Separate control unit
Both the BVM-20E1E/20E1U/20F1E/20F1U and BVM-14E1E/14E1U/14F1E/14F1U are controlled by a separate control unit, such as a BKM-10R Monitor Control Unit. Use of a separate control unit reduces the space needed for the equipment. With the BVM-20E1E/20E1U/20F1E/20F1U, it is also possible to attach the BKM-10R with an optional Attachment Kit.

Data exchange between monitors
Up to 32 units of the BVM-20E1E/20E1U/20F1E/20F1U and BVM-14E1E/14E1U/14F1E/14F1U can be connected via serial remote connectors and controlled by a single BKM-10R Monitor Control Unit or by a single BVM-14E5E/14E5U/14F5E/14F5U Color Video Monitor which contains integrated control data. By copying memory card data and transmitting data through the serial remote connector, it is possible to share adjustment and setup condition data between the monitors.

Controlling monitor groups
Up to 32 monitors can be controlled from the BVM-14E5E/14E5U/14F5U/14F5U. First, using the monitor menus, assign a monitor address number to each monitor, divide the monitors into groups, and assign a group number to each group. Then you can use the BVM-14E5E/14E5U/14F5U/14F5U to control individual monitors or monitor groups simply by entering monitor address or group numbers. You can also execute the same operation on all connected monitors, or use the BVM-14E5E/14E5U/14F5U/14F5U to put all connected monitors into the same setup and adjustment state.

Setup and adjustment with the monitor memory card

You can use an optional BKM-12Y Monitor Memory Card to save and load monitor setup and adjustment data. If your system includes more than one monitor, you can use the monitor memory cards to exchange data between monitors. This makes it easy to put all monitors in your system into the same setup and adjustment state.

Standard auto alignment system

Decoder chroma and phase adjustment, as well as color temperature control, may be performed with the auto alignment system. This makes it possible to coordinate settings among multiple monitors.

Expandable input capability

The input connector configuration may be easily modified by simply sliding optional decoder adaptor or input expansion adaptors into input option slots at the rear of the monitor. The BVM-14E5E/14E5U/14F5E/14F5U/20E1E/20E1U/20F1E/20F1U may be fitted with up to four adaptors, and the BVM-14E1E/14E1U/14F1E/14F1U will accept two.

4:3/16:9 dual aspect ratio design

The monitors can be changed to either 4:3 or 16:9 aspect ratios with just a simple switching operation from an optional monitor control unit such as a BKM-10R. The screen can be also changed to 4:3 or 16:9 display by the replacement of a mask (no tools required).

Stable color temperature

The internal beam current feedback circuit maintains a constant color temperature over long periods of time.

Blue-only mode convenient for monitoring

All three CRT cathodes can be driven with a blue signal, producing a monochrome display. This mode is convenient for chroma and phase adjustment, and for monitoring VTR noise.

Menu operation

The monitor's various functions and operating conditions can be set with on-screen menus. Menu operations are performed using an optional monitor control unit such as a BKM-10R.

Other features

- Comparable with the ISR (Interactive Status Reporting) system.
- Has both RS-485 serial remote and relay contact parallel remote control connectors.

- Built-in safe area display and test signal generator for crosshatch, 100% white signal, 20% grey signal, grey scale, and PLUGE (Picture Line Up Generating Equipment).

- Built-in VITC (Vertical Interval Time Code) reader.
- Built-in option vision.

- Built-in cross function for simultaneous checking of the horizontal and vertical synchronization signals. VITS (Vertical Interval Test Signal) checking is also possible.

- Auto and manual degaussing.
- Built-in CRT protection circuit.

Options

- The BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U and BVM-20E1E/20E1U/20F1E/20F1U may be mounted in an EIA-standard 19-inch rack, using an optional BKM-30E20/30E14/31E1 Rack Mount Kit.

For External Control

BKM-10R Monitor Control Unit
External control unit for the BVM-14E1E/14E1U/14F1E/14F1U and BVM-20E1E/20E1U/20F1E/20F1U.

BKM-12Y Monitor Memory Card

Memory cards which can be read and written by the BKM-10R and BVM-14E5E/14E5U/14F5E/14F5U.

Note

When installing the adaptors, be sure to perform the necessary input signal setup with the INPUT CONFIGURATION menu. If the setup is not performed, the adaptors may not function correctly.

Decoder and Input Expansion Adaptors

The input connector panel is configured by sliding optional decoder adaptor and/or input expansion adaptors into input option slots at the rear of the monitor. The BVM-14E5E/14E5U/14F5E/14F5U/20E1E/20E1U/20F1E/20F1U may be fitted with up to four adaptors, and the BVM-14E1E/14E1U/14F1E/14F1U will accept two.

BKM-31E14 Rack Mount Kit
Rack mount kit for mounting the BVM-14E1E/14E1U/14F1E/14F1U in an EIA standard 19-inch rack.

BKM-30E14 Rack Mount Kit
Rack mount kit for mounting the BVM-14E5E/14E5U/14F5E/14F5U in an EIA standard 19-inch rack.

BKM-30E20 Rack Mount Kit
Rack mount kit for mounting the BVM-20E1E/20E1U/20F1E/20F1U in an EIA standard 19-inch rack.

For Installation

BKM-33H14 Monitor 16:9 Mask
Adapts the BVM-14E1E/14E1U/14F1E/14F1U/14E5E/14E5U/14F5E/14F5U screen for 16:9 aspect ratio display.

BKM-33H20 Monitor 16:9 Mask
Adapts the BVM-20E1E/20E1U/20F1E/20F1U screen for 16:9 aspect ratio display.

For Screen

For information about the INPUT CONFIGURATION menu, see "Setting the Input Configuration—INPUT CONFIGURATION Menu".

BKM-200 SDI 4:2:2 Decoder Adaptor
Includes decoders for serial digital component signals (525/625) and input/output connectors for three serial digital channels (component inputs only) and three analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-277 Tri-Standard Decoder Adaptor
Includes decoders for analog composite NTSC, PAL, and SECAM signals and input/output connectors for six analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-21D SDI Multi Decoder Adaptor
Includes decoders for serial digital signals (525/625) and SECAM signals and input/output connectors for three serial digital channels (component inputs) and analog composite and NTSC/PAL composite) and analog composite signals (NTSC and PAL). Input/output connectors for three serial digital channels and three analog channels are equipped. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-24N NTSC Decoder Adaptor
Includes a decoder for analog composite NTSC signals and input/output connectors for six analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-22X SDI Input Expansion Adaptor
Used with decoder adaptors, increases the number of input/output channels. Includes input/output connectors for three serial digital channels and three analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-24N NTSC Decoder Adaptor
Includes a decoder for analog composite NTSC signals and input/output connectors for six analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-25P PAL Decoder Expansion Adaptor
Includes a decoder for analog PAL signals and input/output connectors for six analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-28X Analog Input Expansion Adaptor
Used with decoder adaptors, increases the number of input/output channels. Includes input/output connectors for six analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

BKM-25P PAL Decoder Adaptor
Includes a decoder for analog PAL signals and input/output connectors for six analog channels. The input signal type for each connector is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector panel.

Connector Panel Configuration

The BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U and BVM-20E1E/20E1U/20F1E/20F1U come standard with connectors for one channel of Y/R-Y/B-Y or RGB. By adding optional decoder adaptors and/or input expansion adaptors, the input/output connector panel can be assembled in a wide variety of configurations. The signals that each of the adaptors' connectors supports are given in the table below. The type of signal to be applied to each input/output connector is set with the INPUT CONFIGURATION menu.

Adaptor name	Serial Component 525/625	digital input Composite 525/625	NTSC Composite	PAL Composite	Analog input Composite PAL	NTSC Composite	PAL Composite	NTSC Composite	PAL Composite	SECAM	Y/R-Y/B-Y 525/625	HGB 525/625	V/C NTSC	V/C PAL	V/C PAL-M	Number of digital inputs	Number of analog input
BKM-20D SDI 4:2:2 Decoder Adaptor	⊙															3	3
BKM-21D SDI Multi Decoder Adaptor	⊙															3	3
BKM-24N NTSC Decoder Adaptor													⊙	⊙	⊙	-	6
BKM-25P PAL Decoder Adaptor													⊙	⊙	⊙	-	6
BKM-26M PAL-M Decoder Adaptor													⊙	⊙	⊙	-	6
BKM-27T Tri-Standard Decoder Adaptor													⊙	⊙	⊙	-	6
BKM-22X SDI Input Expansion Adaptor																3	3
BKM-28X Analog Input Expansion Adaptor																-	6

⊙: Independent input possible
⊙: Input possible when used with decoder adaptor

For information about the INPUT CONFIGURATION menu, see "Setting the Input Configuration—INPUT CONFIGURATION Menu."

When the type of input signal determines, each connector of the installed adaptors is connected with the decoder for the corresponding signal over an internal bus. Therefore, if one decoder adaptor for a signal is installed, the signal input from any connector of the installed adaptors can be decoded.

Decoder Adaptor Priority

The table on the right shows which decoder adaptor will be selected preferentially when more than one decoder adaptor which can accept the NTSC or PAL signal format have been installed in the monitor. For example, when a BKM-24N and a BKM-27T are installed and an NTSC signal is selected, the NTSC signal connected to the BKM-24N's input connectors and the NTSC signal connected to the BKM-27T's input connectors are both processed by the decoder on the BKM-24N.


Input signal type and format	Decoder adaptor	
	BKM-24N	BKM-27T
Composite NTSC signal	BKM-25P	BKM-27T
	BKM-25P	BKM-27T
PAL signal	1	3
	1	3
Y/C signal	1	2
	1	2

Numbers in the table show priority.

Location and Function of Parts


BVM-14E1E/14F1E/14F1U/20E1E/20F1E/20F1U

Front Panel

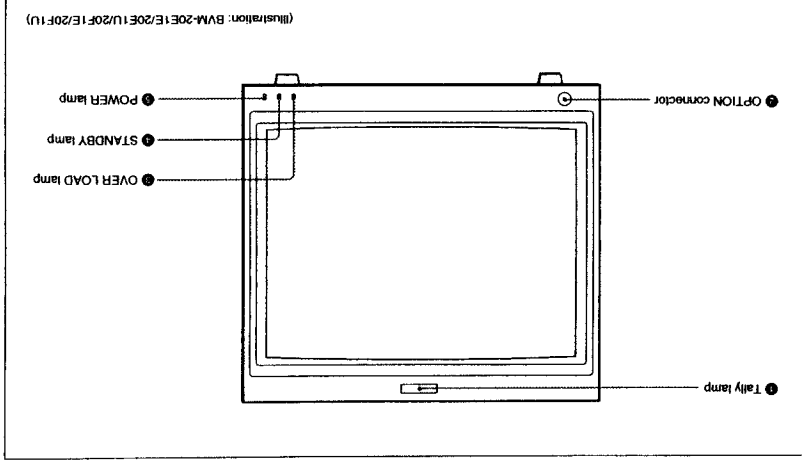

BVM-14E5E/14E5U/14F1E/14F5U

Front Panel

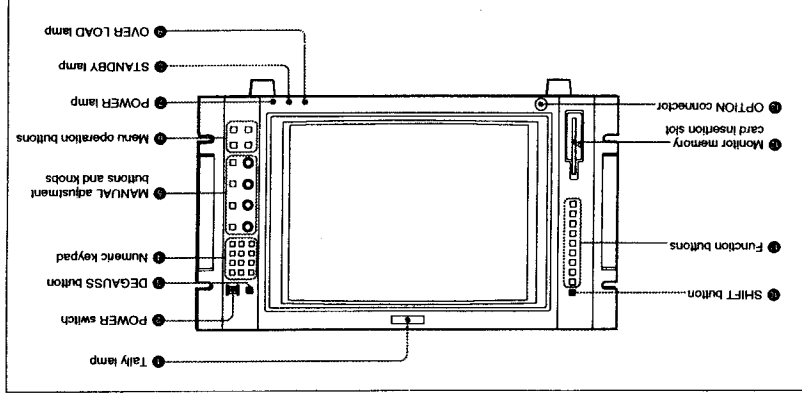

① Tally lamp

With factory settings, the Tally lamp lights when pins No. 3 and No. 8 of the REMOTE 2 connector on the rear panel are connected. By changing the setting in the REMOTE menu, different pins on the remote connector can be used to control the tally lamp.

For information about the REMOTE menu, see "Assigning the Remote Control Functions—REMOTE Menu".

② OPTION connector

(BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)

③ OPTION connector

(BVM-14E5E/14E5U/14F5E/14F5U)

Connector for future expansion.

④ OVER LOAD lamp

(BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)

⑤ OVER LOAD lamp

(BVM-14E5E/14E5U/14F5E/14F5U)

Lights to warn of CRT overload.

⑥ STANDBY lamp

(BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)

⑦ STANDBY lamp

(BVM-14E5E/14E5U/14F5E/14F5U)

Lights when the monitor is in standby mode. The monitor will be in standby mode under the following conditions:

- The MAIN POWER switch (on the rear panel) is turned on; the STANDBY lamp will blink for a few moments after the switch is turned on.
- The monitor is changed from operation mode to standby mode via the monitor control unit such as the BKM-10R.

⑧ POWER lamp

(BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)

⑨ POWER lamp

(BVM-14E5E/14E5U/14F5E/14F5U)

Lights when the monitor is put into operation mode by an optional monitor control unit such as a BKM-10R.

Note

When the STANDBY lamp ⑥ is blinking, the monitor cannot be put into operation mode (internal data initialization is taking place). Wait until the STANDBY lamp ⑥ is steadily lit.

② POWER switch

Press to power the BVM-14E5E/14E5U/14F5E/14F5U on or off. If your system includes more than one monitor, you can use the ADDRESS menu to power a selected monitor on or off, or to power all monitors on or off at once.

For more information about the ADDRESS menu, see "Selecting the Monitor to Control—ADDRESS Menu".

③ DEGAUSS button


(BVM-14E5E/14E5U/14F5E/14F5U)

Press to manually degauss the monitor CRT. When degaussing repeatedly, wait for 5 minutes before pressing the button again. (The monitor CRT is degaussed automatically each time the power is turned on.)

④ Numeric keypad

(BVM-14E5E/14E5U/14F5E/14F5U)

Use the numeric keypad to enter menu settings and channel numbers for signals that you want to input to the monitor.

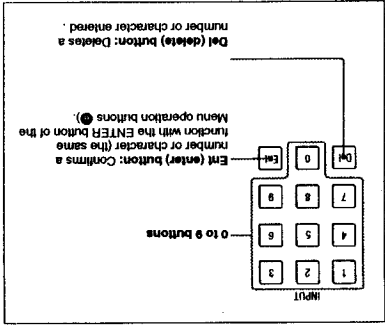

⑤ MANUAL adjustment buttons and knobs

(BVM-14E5E/14E5U/14F5E/14F5U)

Each pass of one of these buttons turns the button's green LED on or off. When the corresponding button is on (iii), you can rotate the knobs to adjust the picture's contrast, brightness (black level), chroma, and phase. These buttons are also used to enter adjustment values from the menu.


You can use the CONTROL.PRESET.ADJ menu to set preset values for each adjustment item.

For more information about the CONTROL.PRESET.ADJ menu, see "Preset Adjustment of the Picture Level Control Knobs—CONTROL.PRESET.ADJ Menu".


Notes on using a SECAM, PAL, D, component, and component digital system.

• The phase of component signals cannot be adjusted.

adjusted.

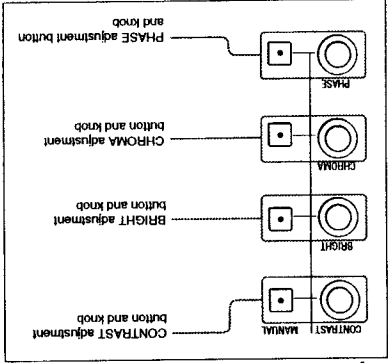

⑥ Menu operation buttons (BVM-14E5E/14E5U/14F5E/14F5U)

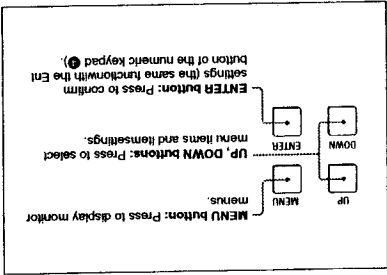

For more information about using monitor menus, see "Basic Menu Operations".

⑦ SHIFT button

(BVM-14E5E/14E5U/14F5E/14F5U)

Each of the Function buttons ⑦ has a Shift On function as well as a Shift Off function. Press this button to select a Shift On or Shift Off function. Each time you press this button, its orange LED lights (Shift On) or goes out (Shift Off).

Shift On: Use the function indicated on the right of the Function button.

Shift Off: Use the function indicated on the left of the Function button.

① **Function buttons (BVM-1414E5E/14E5U/14F5E/14F5U)**
 Use these buttons to control the operation of the monitor.
 Each of these buttons has a Shift On function. Indicated below the button, as well as a Shift Off function, indicated above the button. Press the SHIFT button ② to select the desired function.

② **Shift Off functions (green LED)**

③ **Shift On functions (orange LED)**

④ **16:9**
 Turn to the button on to select a 16:9 aspect ratio. The aspect ratio is 3:4 when the button is off.

⑤ **SYNC**
 Turn the button on to synchronize with the sync signal input to the SYNC connector on the rear panel (EXT SYNC). When the button is off, the sync signal included in the video signal is used (INT SYNC).

Notes

- When selecting INT SYNC, use component or VC signals including a sync signal on the Y signal, and use RGB signals including a sync signal on the G signal.
- To monitor serial digital signals, select INT SYNC.

⑥ **BLUE ONLY**
 Turn the button on to turn the red and green signals off. The blue signal is displayed as an apparent monochrome picture. This facilitates chroma and phase adjustments and observation of VTR noise.

⑦ **MONO**
 Turn the button on to turn the R (red), G (green), and B (blue) beams off.

⑧ **APT**
 Turn the button on to turn the APT (aperture) connection off.

⑨ **COMB**
 Turn the button on to turn the comb filter on and off.

⑩ **F1 and F2**
 These buttons are reserved for future use.

⑪ **SAFE AREA**
 Turn the button on to display the ADDRESS menu on the monitor screen. You can use the ADDRESS menu to set operating parameters for several monitors.

⑫ **ADDRESS**
 Turn the button on to display the ADDRESS menu on the monitor screen. You can use the ADDRESS menu to set operating parameters for several monitors.

⑬ **MONO (monochrome)**
 Turn the button on to display color pictures in monochrome. When the button is off, the monitor switches automatically between color and monochrome mode, depending on the presence or absence of color burst signal.

⑭ **APT (aperture)**
 Turn the button on to perform aperture correction of frequency characteristics. Use the monitor menu to select the amount of correction. This function is available when an optional decoder adaptor such as a BKM-24N is installed.

⑮ **COMB (comb filter)**
 Turn the comb filter on and off. This function is available when an optional decoder adaptor such as a BKM-24N is installed.

⑯ **F1 and F2**
 These buttons are reserved for future use.

⑰ **SAFE AREA**
 Turn the button on to display the ADDRESS menu on the monitor screen. You can use the ADDRESS menu to set operating parameters for several monitors.

⑱ **ADDRESS**
 Turn the button on to display the ADDRESS menu on the monitor screen. You can use the ADDRESS menu to set operating parameters for several monitors.

⑲ **MONO (monochrome)**
 Turn the button on to observe the vertical sync signal. The picture is shifted vertically and the vertical signal is displayed near the center of the screen.

- Picture brightness is adjusted automatically for easy observation.
- Press the button together with the [] button to observe a pulse cross.


⑳ **(vertical delay)**
 Turn the button on to observe the horizontal sync signal near the left quarter of the screen.

- Picture brightness is adjusted automatically for easy observation.
- Press the button together with the [] button to observe a pulse cross.

㉑ **(horizontal delay)**
 Turn the button on to observe the horizontal sync signal near the left quarter of the screen.


- Picture brightness is adjusted automatically for easy observation.
- Press the button together with the [] button to observe a pulse cross.

㉒ **(underscan)**
 Turn the button on for underscanning. The display size is reduced by approximately 3%, so that the four corners of the raster are visible.

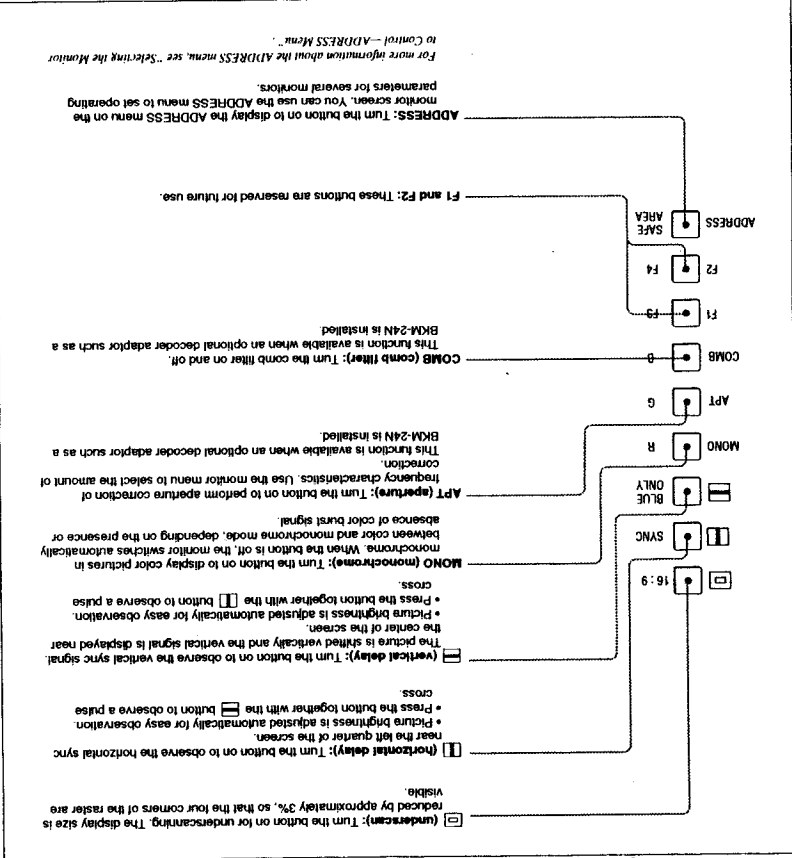

For more information about the ADDRESS menu, see "Selecting the Monitor to Control - ADDRESS Menu".


Shift On functions (Orange LED)

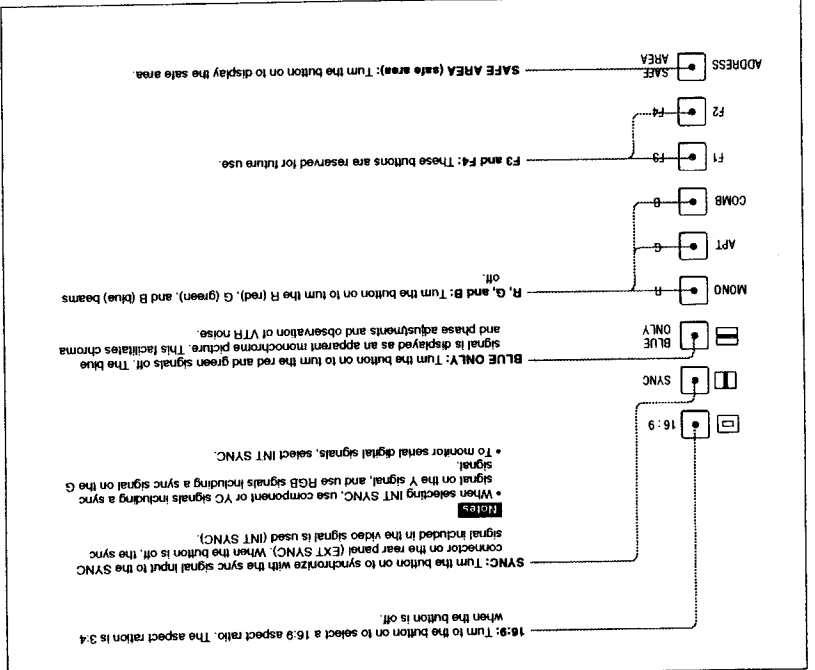

① **Monitor memory card insertion slot (BVM-14E5E/14E5U/14F5E/14F5U)**
 Insert an optional BKM-12Y Monitor Memory Card.


BVM-14E1E/14E1U/14F1U/20E1E/20E1U/20F1E/20F1U

Rear Panel

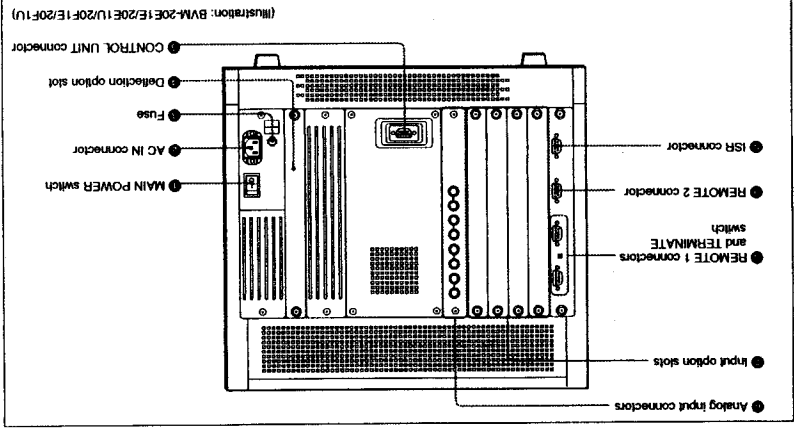

BVM-14E5E/14E5U/14F5E/14F5U

Rear Panel

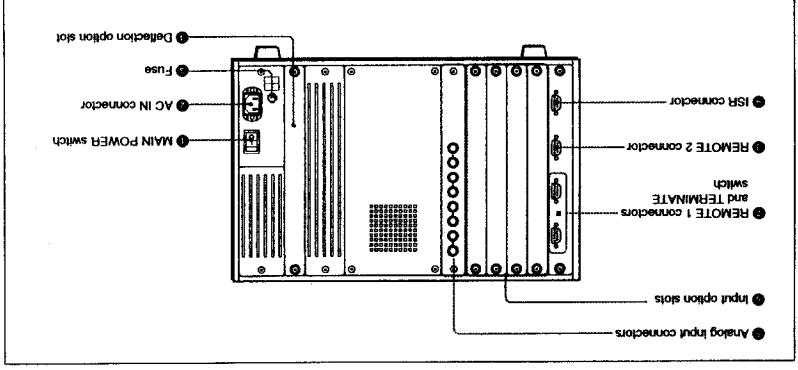


1 MAIN POWER switch

When turned on, the monitor enters standby mode. By a setting in the SYSTEM CONFIGURATION menu, the monitor can also be set to enter operation mode when the MAIN POWER switch is turned on.

For information about the SYSTEM CONFIGURATION menu, see "Setting the Channel Selection Method and Power-Up Conditions—SYSTEM CONFIGURATION Menu".

2 AC IN connector (3-pin)

Connects the monitor to an AC power source, via the supplied AC power cord.

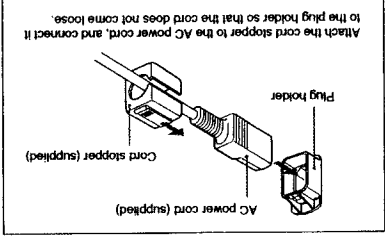


Use a 4 A fuse for 100 to 120 V AC or a T 3.15 A fuse for 220 to 240 V AC.

3 Deflection option slot

Slot for future expansion.


4 CONTROL UNIT connector (female, D-sub 9-pin) (BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)

Connects a monitor control unit such as the BKM-10R using a straight cable with D-sub 9-pin plugs such as an RCC-5G (not supplied) as shown in the figure.

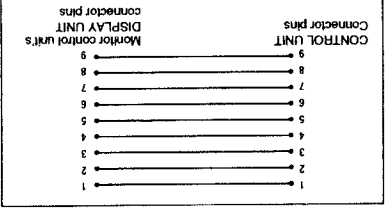

5 Analog input connectors (BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)

5 Analog input connectors (BVM-14E5E/14E5U/14F5E/14F5U)

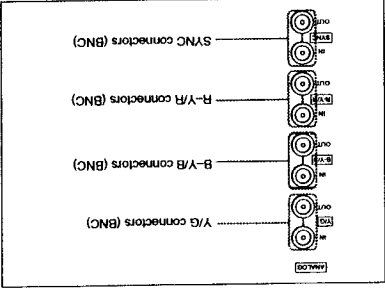

RGB signals, component signals (Y, R-Y, and B-Y), or composite sync signals can be fed in the IN connectors. The type of signal applied to each connector is set with the INPUT CONFIGURATION menu. The OUT connectors are used for loop-through output of the input signal. When not using loop-through, connect a 75-ohm terminator (not supplied) to the OUT connectors.

For information about the INPUT CONFIGURATION menu, see "Setting the Input Configuration—INPUT CONFIGURATION menu".

7 Input option slots (BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)

8 Input option slots (BVM-14E5E/14E5U/14F5E/14F5U)

The BVM-14E5E/14E5U/14F5E/14F5U/20E1E/20E1U/20F1E/20F1U may be fitted with up to four adaptors, and the BVM-14E1E/14E1U/14F1E/14F1U will accept two.


Guidance for Basic Monitor Operations

The following table shows how to use a monitor control unit and menus to perform basic monitor operations.


Menus	Operations	Remote control	Adjusting the screen and signals	Data transfer	Menu operations
<ul style="list-style-type: none"> • INPUT CONFIGURATION menu • SYSTEM CONFIGURATION menu 	<p>Selecting signals to be monitored</p> <p>Specify the channel number with 0 to 9 input signals</p> <p>1 to 90: channel numbers for external input signals</p> <p>91 to 95: channel numbers for signals from the internal test signal generator</p> <p>91: PLUGE (Picture Line UP Generating Equipment)</p> <p>92: 20% gray signal</p> <p>93: 100% white signal</p> <p>94: five-step gray scale</p> <p>95: crosshatch</p>	<ul style="list-style-type: none"> • REMOTE 1 connector • REMOTE 2 connector 	<ul style="list-style-type: none"> • Function buttons • MANUAL adjustment buttons and knobs <p>Refer to the operation manual for the control unit or the built-in control unit monitor on how to use.</p>	<ul style="list-style-type: none"> • REMOTE 1 connector <p>Refer to the operation manual for the control unit or the built-in control unit monitor on how to use.</p>	<ul style="list-style-type: none"> • Menu operation buttons • ADDRESS button of the function buttons • Basic menu operations • PASSWORD menu
<ul style="list-style-type: none"> • CONTROL PRESET ADJ menu • ADDRESS menu • REMOTE menu 	<ul style="list-style-type: none"> • Function buttons <p>Refer to the operation manual for the control unit or the built-in control unit monitor on how to use.</p>	<ul style="list-style-type: none"> • REMOTE 1 connector • KEY PROTECT menu • ON SCREEN SET menu • ALIGNMENT menu • COLOR TEMP ADJ menu • CONTROL PRESET ADJ menu 	<ul style="list-style-type: none"> • MANUAL adjustment buttons and knobs <p>Refer to the operation manual for the control unit or the built-in control unit monitor on how to use.</p>	<ul style="list-style-type: none"> • MEMORY CARD menu • COPY menu 	<ul style="list-style-type: none"> • Menu operation buttons • ADDRESS button of the function buttons • Basic menu operations • PASSWORD menu

Location and Function of Parts


- ① REMOTE 1 connectors (female, D-sub 9-pin) and TERMINATE switch (BVM-14E5E/14E5U/14F5E/14F5U)
- ② REMOTE 2 connectors (female, D-sub 9-pin) and TERMINATE switch (BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)
- ③ REMOTE 1 connectors (female, D-sub 9-pin) and TERMINATE switch (BVM-14E5E/14E5U/14F5E/14F5U)

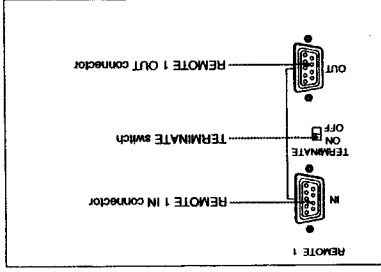

These are RS-485 serial interface connectors, used for connecting two or more BVM-series monitors. The IN and OUT connectors form a loop-through connection. Set the TERMINATE switch to OFF when loop-through is used, to ON when it is not. Connect two monitors using a straight cable with D-sub 9-pin plugs such as an RCC-5G (not supplied) as shown in the figure.

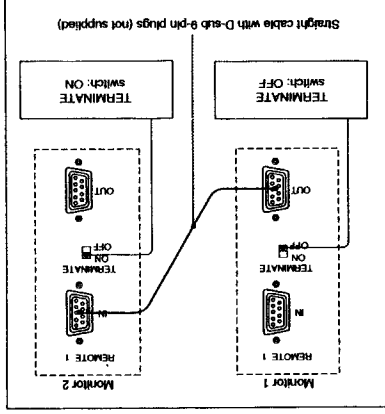

- ④ REMOTE 2 connectors (female, D-sub 9-pin) (BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)
- ⑤ REMOTE 2 connectors (female, D-sub 9-pin) (BVM-14E5E/14E5U/14F5E/14F5U)
- ⑥ Forms a parallel switch and controls the monitor externally. The pin arrangement and factory setting (BVM-14E5E/14E5U/14F5E/14F5U)
- ⑦ REMOTE 1 connectors (female, D-sub 9-pin) and TERMINATE switch (BVM-14E5E/14E5U/14F5E/14F5U)



All pin function assignments can be changed with the REMOTE menu.

For information about the REMOTE menu, see "Assigning the Remote Control Functions—REMOTE Menu".

To switch each function between on and off or between enable and disable, change pin connections in the following way.
 On or enabled: Short each pin and pin 9 together.
 Off or disabled: Leave each pin open.

- ④ ISR (Interactive Status Reporting) connector (female, D-sub 9-pin) (BVM-14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)
- ⑤ ISR (Interactive Status Reporting) connector (female, D-sub 9-pin) (BVM-14E5E/14E5U/14F5E/14F5U)

Connect to the ISR system.


The various functions and operating conditions of the BVM-14E1E/14E1U/14F1E/14F1U or BVM-20E1E/201E/20F1E/20F1U can be set with on-screen menus. Menu operations are performed with an optional control unit such as the BKM-10R Monitor Control Unit or a built-in control unit monitor such as the BKM-10R Monitor.

Herein, the operating procedures for the BKM-10R will be described.

The names of buttons and adjustment knobs may vary depending on the control unit or monitor you use. Consult the operating manual for your control unit or monitor, and use the buttons and knobs with the same functions as those described here.

Displaying the Menus

Press the MENU button.

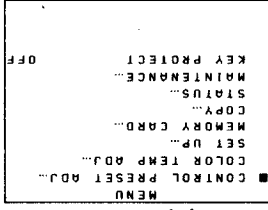

The menu list is displayed on the screen.

Choose the menu for the adjustment or setup you wish to perform. The adjustments and settings which can be made with the menus are described below.

CONTROL PRESET ADJ menu: Sets the preset values for the input signal contrast, brightness, chroma, and phase.

COLOR TEMP ADJ menu: Sets the color temperature.

SET UP menus: A menu group for performing monitor setup, consisting of the following:

- INPUT CONFIGURATION menu:** Sets the input channel.
- REMOTE menu:** Sets the remote control functionality.

PASSWORD menu: Sets passwords for menus.

SYSTEM CONFIGURATION menu: Sets the input channel selection method and power-up conditions.

ON SCREEN SET menu: Sets data about the screen display.

ALIGNMENT menu: Used to adjust the screen convergence and geometry.

MEMORY CARD menu: Operates on data in the memory card.

COPY menu: Copies set-up data to other connected monitors.

STATUS menu: Displays the information about the monitor or options installed in the monitor.

KEY PROTECT: When set to ON, function buttons (typically not used).

OFF, key protection is removed.

To exit the menus

Press the MENU button repeatedly until the menu disappears.

ADDRESS Menu


The ADDRESS menu is used to select the monitor or the monitor group, so that when several monitors are connected together via serial remote ports, the control panel can select which monitor to control.

To display or exit the ADDRESS menu, press the ADDRESS button. The method of choosing menu items and changing settings is the same as with the other menus.

For information about the ADDRESS menu, see "Selecting the Monitor to Control—ADDRESS Menu".


Selecting the Menu

1 Using the UP or DOWN button, move the cursor to the desired item. (Example: move the cursor to the DOWN button to SET UP.)

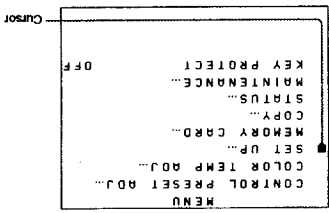


2 Press the ENTER button.

The SET UP menu list is displayed.

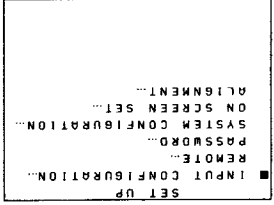


3 Using the UP or DOWN button, move the cursor to the desired item. (Example: select the INPUT CONFIGURATION menu.)

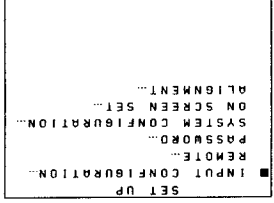

4 Press the ENTER button.

The INPUT CONFIGURATION menu is displayed.

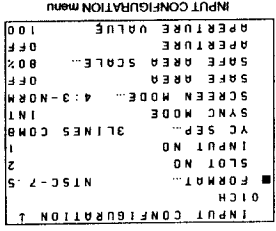

The "↓" to the right of the menu title indicates that the menu continues onto another page. Items which are followed by "...", have sub-lists for settings.


Changing the Settings

The setting procedure differs with different menu items. There are four different types of settings:

- (1) Choosing one of two or more selections on a current setting list (items without "... mark)
- (2) Choosing one of two or more selections using a setting list (items with "... mark")
- (3) Entering a numerical value
- (4) Entering characters


Choosing One of Two or More Selections about Items without "... Mark

Example: changing the SYNC MODE setting in the INPUT CONFIGURATION menu

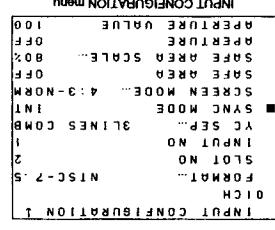

1 Press the ENTER button. INT is displayed in yellow text.

2 By pressing either the UP or DOWN button, INT changes to EXT.

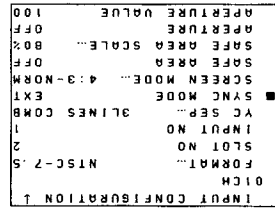


Each time the UP or DOWN button is pressed, the value switches between INT and EXT.

4 When EXT is displayed, press the ENTER button.


The SYNC MODE is set to EXT. (EXT is again displayed in white text.)

Choosing One of Two or More Selections about Items with "... Mark

Example: changing the SCREEN MODE setting in the INPUT CONFIGURATION menu

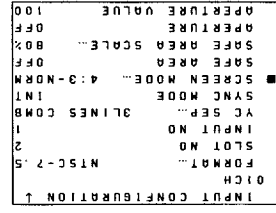

1 Move the cursor to the SCREEN MODE line in the INPUT CONFIGURATION menu.

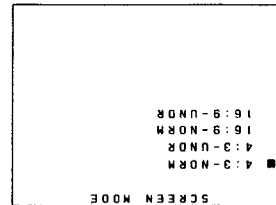

2 Press the ENTER button. The SCREEN MODE setting list is displayed.




2 Press the ENTER button.


The third digit in the value is displayed in yellow text, indicating that it can now be modified.

Choosing One of Two or More Selections about Items without "... Mark


Example: changing the APERTURE VALUE setting in the INPUT CONFIGURATION menu to 85

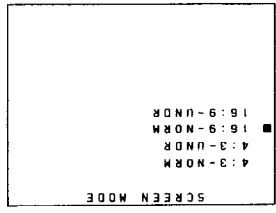

1 Move the cursor to the APERTURE VALUE line in the INPUT CONFIGURATION menu.

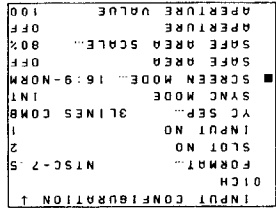


2 Press the ENTER button. The display returns to the INPUT CONFIGURATION menu, and shows SCREEN MODE as the 16:9 - NORM setting.

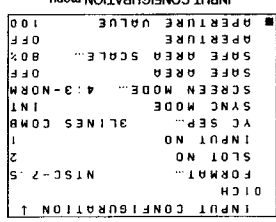

3 By pressing either UP and DOWN buttons, move the cursor to 16:9 - NORM.

Entering a Numerical Value

Example: changing the APERTURE VALUE setting in the INPUT CONFIGURATION menu to 85

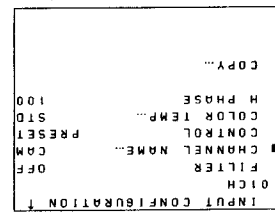

1 Move the cursor to the CHANNEL NAME line in the INPUT CONFIGURATION menu (Z2).

Entering Characters

The PHASE knob or UP and DOWN buttons are used to enter characters.


1 Move the cursor to the CHANNEL NAME line in the INPUT CONFIGURATION menu (Z2).

Entering Characters

The PHASE knob or UP and DOWN buttons are used to enter characters.


1 Move the cursor to the CHANNEL NAME line in the INPUT CONFIGURATION menu (Z2).

3 Using the UP or DOWN button or PHASE knob, enter "?";

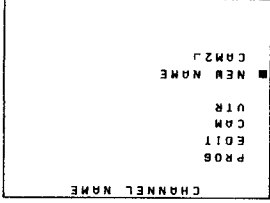

4 Press the ENTER button.

The INPUT CONFIGURATION menu appears, and the CHANNEL NAME is set to "CAM2".

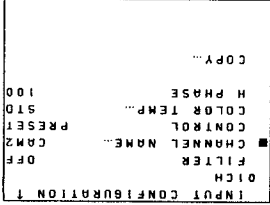

Preset Adjustment of the Picture Level Control Knobs — CONTROL PRESET ADJ Menu


- The preliminary adjustment of contrast, brightness, chroma, and phase are carried out with the CONTROL PRESET ADJ menu to set the preset values to the knobs for the above-mentioned adjustments. Preset values can be set either commonly to all channels or separately for individual channels. Preset values can be set in the following ways:
- (1) Adjustment with the MANUAL knobs
 - (2) Automatic adjustment (An external color bar signal is necessary.)
 - (3) Copying data from other channels, common data, other BVM-series monitors that have been connected via the serial remote connector, or from data stored in monitor memory cards
 - (4) Restoring factory settings.

Structure and Usage of the CONTROL PRESET ADJ Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu. If a setting in each list leads to another list or a monitor operation, the list number or the operation is indicated after the ⇨ mark. (Settings without the ⇨ mark end in a single list.)

Select CONTROL PRESET ADJ from the menu list.

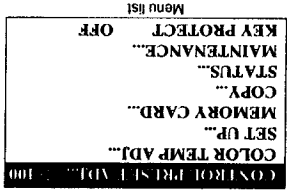

100 CONTROL PRESET ADJ menu: Select either PRESET or CH SET. ⇨ 101

PRESET...: Set common values.
CH SET...: Set values for each individual channel.

101 CONTROL PRESET ADJ (PRESET/xxCH): Select the setting method.

MANUAL...: Set with the MANUAL knobs. ⇨ 110
AUTO...: Set by automatic adjustment. ⇨ 120
COPY...: Copy data from elsewhere. ⇨ 130
RESTORE FACTORY SET: Return values to their factory settings.

Presets Adjustment of the Picture Level Control Knobs — CONTROL PRESET ADJ Menu

110 MANUAL (PRESET/xxCH): Adjust values by turning the PHASE, BRIGHT, CHROMA, and/or CONTRAST knobs.

PHASE: xxxx
CHROMA: xxxx
BRIGHT: xxxx
CONTRAST: xxxx

120 AUTO (PRESET/xxCH): Select the color bar signal to be used for automatic adjustment.
⇒ Adjustment is carried out.

FULL FIELD CB 100: 100% full-field color bar
FULL FIELD CB 75: 75% full-field color bar
SMPTTE CB: SMPTTE standard color bar
EIA CB: EIA standard color bar

130 COPY (PRESET/xxCH): Select the source to be copied from.

OTHER MONITOR...: Copy data from another monitor. ⇒ 133
MEMORY CARD...: Copy data from a memory card. ⇒ 136

131 OTHER VALUE (PRESET/xxCH): Choose either PRESET or CH SET.

PRESET: Copy common data.
CH SET: Copy data set for another channel. Input the number of the channel from which the data will be copied.

133 OTHER MONITOR (PRESET/xxCH): Input the address of the monitor from which the data will be copied. ⇒ 134

MONITOR ADDRESS: Input the address.

134 OTHER MONITOR (PRESET/xxCH): Choose either PRESET or CH SET.
⇒ Copy is carried out.

PRESET: Copy common data.
CH SET: Copy data set for another channel. Input the number of the channel from which the data will be copied.

136 MEMORY CARD (PRESET/xxCH): Select the file name. ⇒ 137

FILE NAME: Select the file name.

137 FILE NAME (PRESET/xxCH): Choose either PRESET or CH SET.
⇒ Copy is carried out.

PRESET: Copy common data.
CH SET: Copy data set for another channel. Input the number of the channel from which the data will be copied.

Adjusting the Color Temperature — COLOR TEMP ADJ Menu

The color temperature is adjusted with the COLOR TEMP ADJ menu. The color temperature can be set either commonly to all channels or individually for each channel.
The adjusted value can then be used as an original value.

(2) Automatic adjustment using a probe
Bias and gain can be adjusted automatically by connecting a color analyzer such as the Minolta CA-100.

(3) Copying other data
Copying data from other channels, common data, other BVM-series monitors that have been connected via the serial remote connector, or from data stored in monitor memory cards

(1) Knob adjustment
Adjust the color temperature with the bias and gain knobs.

(4) Restoring factory settings

Structure and Usage of the COLOR TEMP ADJ Menu

This section explains the setting lists displayed in the menu.
The lists are numbered and shown with indentations to indicate the hierarchy in the menu.
If a setting in each list leads to another list or a monitor operation, the list number or the operation is indicated after the ⇒ mark. (Settings without the ⇒ mark end in a single list.)
Select COLOR TEMP ADJ from the main menu list.

CONTROL PRESET ADJ...
COLOR TEMP ADJ... 200
SET UP...
MEMORY CARD...
COPY...
STATUS...
MAINTENANCE...
KEY PROTECT OFF

Menu list

200 COLOR TEMP ADJ menu: Select STD, COL1, COL2, or CH SET. ⇒ 201

STD: Use common data (factory setting: D65).
COL1: Use common data (factory setting: D65).
COL2: Use common data (factory setting: D93).
CH SET: Use data for each individual channel (factory setting: D65). Use the numeric keypad to select the desired channel.

201 COLOR TEMP ADJ (STD/COL1/COL2/xxCH): Select the adjustment method.

MANUAL...: Set with the MANUAL knob. → 210
PROBE...: Set using a probe. → 220
COPY...: Copy data from elsewhere. → 260
RESTORE FACTORY SET: Return values to their factory settings.
TRIM...: Perform fine adjustments after setting the color temperature. → 280

210 MANUAL (STD/COL1/COL2/xxCH): Set the following data necessary to perform knob adjustment and select ADJUST.

ORIGINAL VALUE...: Set the initial value. → 211

SIGNAL: Select the white signal to be used for adjustment.
INT: Use an internal signal. Simultaneously with the adjustment of the gain and bias, the 100 IRE and 20 IRE signals are automatically switched.

EXT: Use an external input signal. When adjusting the gain and bias, input the proper signal.

ADJUST...: Perform the adjustment with following knobs. → 212

RED: CONTRAST knob (Adjust the R gain or bias with the CONTRAST knob)

GREEN: BRIGHT knob (Adjust the G gain or bias with the BRIGHT knob.)

BLUE: CHROMA knob (Adjust the B gain or bias with the CHROMA knob.)

LUMINANCE: PHASE knob (Adjust luminance with the PHASE knob.)

211 ORIGINAL VALUE: Select STD, COL1, COL2, or CH SET. → 210

STD: Use global data (factory setting: D65).
COL1: Use global data (factory setting: D65).
COL2: Use global data (factory setting: D93).
CH SET: Use data for each individual channel (factory setting: D65). Use the numeric keypad to select the desired channel.

212 ADJUST (STD/COL1/COL2/xxCH) (1/2): Adjust the gain with the proper knob.

GAIN R:xxxx G:xxxx B:xxxx

212 ADJUST (STD/COL1/COL2/xxCH) (2/2): Adjust the bias with the proper knob.

BIAS R:xxxx G:xxxx B:xxxx

220 PROBE (STD/COL1/COL2/xxCH): Select the probe. → 241 (Using a CA-100)

241 CA-100 (STD/COL1/COL2/xxCH): Select either D65 or D93, and enter values for LOWLIGHT and HIGHLIGHT. Rather than selecting D65 or D93, you may instead enter the values of the CIE 1931 color system x and y coordinates.

D65: Use D65
D93: Use D93.
X: Enter the x coordinate.
Y: Enter the y coordinate.
LOW LIGHT (20IRE): Enter the brightness (cd/m²) for low light.
HIGH LIGHT (100IRE): Enter the brightness (cd/m²) for high light.
START: Start adjustment. → 242

242 COLOR TEMP ADJ (STD/COL1/COL2/xxCH): Perform adjustment.

SET PROBE ON CRT:
PRESS ENTER:
 Adjustment starts when the probe is placed against the center of the screen and the ENTER button is pressed.

260 COPY (STD/COL1/COL2/xxCH): Select the source to be copied from.

OTHER VALUE...: Copy data from another channel or from common data. → 261
OTHER MONITOR...: Copy data from another monitor. → 263
MEMORY CARD...: Copy data from a memory card. → 266

261 OTHER VALUE (STD/COL1/COL2/xxCH): Select STD, COL1, COL2, or CH

SET. → Copy is carried out.

STD: Copy common data (factory setting: D65).
COL1: Copy common data (factory setting: D65).
COL2: Copy common data (factory setting: D93).
CH SET: Copy data from a particular channel (factory setting: D65). Enter the number of the channel from which the data will be copied.

263 OTHER MONITOR (STD/COL1/COL2/xxCH): Input the address of the monitor

from which the data will be copied.

MONITOR ADDRESS: Input the address of the monitor from which the data will be copied. → 264

264 OTHER MONITOR (STD/COL1/COL2/xxCH): Select STD, COL1, COL2,

or CH SET. → Copy is carried out.

STD: Copy common data (factory setting: D65).
COL1: Copy common data (factory setting: D65).
COL2: Copy common data (factory setting: D93).
CH SET: Copy data from a particular channel (factory setting: D65). Enter the number of the channel from which the data will be copied.

266 MEMORY CARD (STD/COL1/COL2/xxCH): Select the file name. → 267

267 FILE NAME (STD/COL1/COL2/xxCH): Select STD, COL1, COL2, or CH

SET. → Copy is carried out.

STD: Copy common data (factory setting: D65).
COL1: Copy common data (factory setting: D65).
COL2: Copy common data (factory setting: D93).
CH SET: Copy data from a particular channel (factory setting: D65). Enter the number of the channel from which the data will be copied.

Setting the Input Configuration — INPUT CONFIGURATION Menu

Assigning serial digital signals
It is possible to assign serial digital signals to the serial digital input connectors on the BKM-20D/1D/22X adaptors. However, at least one BKM-21D which includes the decoder for serial digital signals or BKM-20D which includes the decoder for serial digital component signals must be installed.

Assigning analog composite signals

It is possible to assign any composite signal to the analog signal input connectors of the BKM-20D/21D/22X, and any of the connectors of the BKM-24N/25P/26M/77/28X adaptors. However, at least one of the following decoder adaptors must be installed:
To assign NTSC signals: BKM-21D/24N/77
To assign PAL signals: BKM-21D/25P/27T
To assign PAL-M signals: BKM-26M
To assign SECAM signals: BKM-27T

Assigning Y/C signals

It is possible to assign any Y/C signals to the input connectors of the BKM-24N/25P/26M/77/28X adaptors. However, at least one of the following decoder adaptors must be installed:

To assign NTSC signals: BKM-24N/77
To assign PAL signals: BKM-25P/27T
To assign PAL-M signals: BKM-26M

Assigning analog component or RGB signals
Analog component and RGB signals can be assigned to any input connectors except the serial digital signal input connectors on the BKM-20D/1D/22X.

Data pertaining to the input signals are set with the INPUT CONFIGURATION menu.

When a channel number (1 to 90) is entered with the numeric keypad, it is then possible to set which input connector on the rear panel will be assigned to that channel number, and select the type of signal that will be connected. The channel numbers from 91 to 99 are assigned to internal signals.

Assigning Slot and Connector Numbers

Set which input connector on which slot will be assigned to the current channel. The slots are numbered from the left, as seen when facing the rear panel, with the REMOTE connectors slot being number 1, the input option slots numbers 2 to 5, and the analog input connectors slot being number 6. The connectors are numbered 1 to 6 (from the top) for the slot.

Assigning the Signal Type and Format

The signal type and format which can be assigned to each channel number vary, depending on what adaptors are installed in the rear panel.

280 TRIM (STD/COL/1/COL2/xxCH): After setting the necessary items, select ADJUST.

APPLY/NOT APPLY: Select whether to add the fine adjustment to the original setting (APPLY) or not (NOT APPLY)
SIGNAL: Select the white signal to be used for adjustment.
INT: Use an internal signal. Simultaneously with the adjustment of the gain and bias, the 100 IRE and 20 IRE signals are automatically switched.
EXT: Use an external input signal. When adjusting the gain and bias, input the proper signal.
ADJUST...: Perform the adjustment with following knobs: ⇨ 282
RED: CONTRAST knob (Adjust the R gain or bias with the CONTRAST knob.)
GREEN: BRIGHT knob (Adjust the G gain or bias with the BRIGHT knob.)
BLUE: CHROMA knob (Adjust the B gain or bias with the CHROMA knob.)
LUMINANCE: PHASE knob (Adjust luminance with the PHASE knob.)

282 ADJUST (STD/COL/1/COL2/xxCH) (1/2): Adjust the gain with the proper knob.

GAIN R:xxxx G:xxxx B:xxxx

282 ADJUST (STD/COL/1/COL2/xxCH) (2/2): Adjust the bias with the proper knob.

BIAS R:xxxx G:xxxx B:xxxx

Structure and Usage of the INPUT CONFIGURATION Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu.

If a setting in each list leads to another list or a

monitor operation, the list number or the operation is indicated after the \Rightarrow mark. (Settings without the \Rightarrow

mark end in a single list.)

Select SET UP from the main menu list.

CONTROL PRESET ADJ...	Menu list
COLOR TEMP ADJ...	
SET UP	
MEMORY CARD...	
COPY...	
STATUS...	
MAINTENANCE...	
KEY PROTECT	OFF

300 SET UP menu list: Choose the menu for setting the desired items.

INPUT CONFIGURATION menu: Set the input signal combination	301
REMOTE menu	
PASSWORD menu	
SYSTEM CONFIGURATION menu	
ON SCREEN SET menu	
ALIGNMENT menu	

301 INPUT CONFIGURATION menu (1/2): Set input signal data for each channel.

xxCH: Current channel is indicated. Enter a channel number with the numeric keypad if changing the channel. The settings below will be stored as information about the signal to be connected to this channel.

FORMAT...: Select the input signal type. \Rightarrow 310

SLOT NO.: Enter the slot number.

INPUT NO.: Enter the input connector number.

YC SEP...: Select a Y/C separation filter. \Rightarrow 315

SYNC MODE: Select the sync signal.

EXT: Use an external sync signal.

SCREEN MODE...: Select the scan size. \Rightarrow 320

SAFE AREA SCALE...: Select the safe area size. \Rightarrow 322

SAFE AREA: Choose whether or not to display the safe area (OFF or ON).

APERTURE: Choose whether or not to use aperture adjustment (OFF or ON).

APERTURE VALUE: Enter the aperture adjustment value (0 to 200).

301

INPUT CONFIGURATION menu (2/2): Set input signal data for each channel.

xxCH: Current channel is indicated. Enter a channel number with the numeric keypad if changing the channel. The settings below will be stored as information about the signal to be connected to this channel.

FILTER: Switch the filter operation (OFF or ON) when the monochrome display is selected.

CHANNEL NAME...: Give the channel a name. \Rightarrow 326

CONTROL: Select whether to use local ("CH SET") or common ("PRESET") values for contrast, brightness, chroma, and phase.

PRESET: Use common data.

CH SET: Use values set for each channel.

COLOR TEMP...: Set the color temperature. \Rightarrow 328

H PHASE: Set the horizontal picture position (0 to 200).

COPY...: Select a method for copying data from elsewhere. \Rightarrow 330

310

FORMAT (xxCH): Select the signal format.

Note

If there is no input connector or decoder corresponding to a format, that format will not be selectable (the cursor will skip over that item).

COMPOSITE...: Composite signal. \Rightarrow 311

YC...: Y/C signal. \Rightarrow 311

COMPONENT...: Component or RGB signal. \Rightarrow 312

SDI...: Serial digital signal. \Rightarrow 313

311

COMPOSITE (xxCH): Select the format of a composite or Y/C signal.

Notes

• Even when selecting AUTO, also select the NTSC, PAL, or PAL-M format.

• If there is no input connector or decoder corresponding to a format, that format will not be selectable (the cursor will skip over that entry).

AUTO: The format of the input signal is detected and switched automatically.

NTSC: SETUP 7.5 or 0.

PAL: S (simple) or D (delay).

SECAM

312 COMPONENT (xxCH): Select the component signal format, or RGB.

YUV SMPTE/EBU-N10

YUV BTACAM: SETUP 7.5 or 0.

RGB

313 SDI (xxCH): Select the format of the serial digital signal.

AUTO: The format of the input signal is detected and switched automatically.

NTSC: SETUP 7.5 or 0

PAL: S (simple) or D (delay)

4:2:2

315 VC SRP (xxCH): Select a Y/C separation filter.

TRAP/BPF
2 LINES COMB
3 LINES COMB

320 SCREEN MODE (xxCH): Select the scan size.

4:3-NORM: Over-scanned 4:3 aspect ratio.
4:3-UNDR: Under-scanned 4:3 aspect ratio.
16:9-NORM: Over-scanned 16:9 aspect ratio.
16:9-UNDR: Under-scanned 16:9 aspect ratio.

322 SAFE AREA (xxCH): Select the type of screen. → 323

4:3 OR 16:9: Display the screen and safe area in 4:3 or 16:9 aspect ratio.
16:9 IN 4:3: Display a 16:9 aspect ratio safe area in a 4:3 aspect ratio screen.
4:3 IN 16:9: Display a 4:3 aspect ratio safe area in a 16:9 aspect ratio screen.

323 4:3 OR 16:9 (xxCH): Select the size of the safe area.

80%
90%
100%

326 CHANNEL NAME (xxCH): Give the channel a name. Select a preset name, or enter a new one.

PROG: Program signal
EDIT: Signal from an editor
CAM: Camera signal
VTR: Signal from a VTR
NEW NAME: Enter a new name. (Up to 20 characters can be entered and up to six characters from the head of the name are displayed in the INPUT CONFIGURATION menu (301, 2/2).)

328 COLOR TEMP (xxCH): Select STD, COL1, COL2, or CH SET.

STD: Use common data (factory setting: D65).
COL1: Use common data (factory setting: D65).
COL2: Use common data (factory setting: D93).
CH SET: Use data for the current channel (factory setting: D65).

330 COPY (xxCH): Select the source to be copied from.

OTHER CH: Copy data from another channel. Enter the channel number.
OTHER MONITOR...: Copy data from another monitor. → 332
MEMORY CARD...: Copy data from a memory card. → 334

332 OTHER MONITOR (xxCH): Enter the address of the monitor from which to copy data.

MONITOR ADDRESS: Enter the address of the monitor from which to copy data. → 333
--

333 OTHER MONITOR (xxCH): Select which channel of the chosen monitor from which to copy data. → Copy is carried out.

CH NO: Enter the channel number.

334 MEMORY CARD (xxCH): Select the file name. → 335

335 MEMORY CARD (xxCH): Select which channel of the chosen file from which to copy data. → Copy is carried out.

CH NO: Enter the channel number.

Assigning the Remote Control Functions — REMOTE Menu

The remote control functions are set with the

REMOTE menu. With this monitor, both serial control (REMOTE 1) and parallel remote control (REMOTE 2) are possible. It is

possible to simultaneously use the BKM-10R, REMOTE 1, and REMOTE 2 for control, but

14F5U are able to control up to 32 monitors connected via serial remote connector (using the REMOTE 1

commands from REMOTE 2 have priority. Therefore,

change items set by REMOTE 1 to REMOTE 1 to

There is no priority order between commands from REMOTE 1 and the BKM-10R; it is possible to set

APERTURE to ON from REMOTE 1 and then set it to

OFF with a control panel operation.

About Monitor Address and Group Numbers

The monitor control unit BKM-10R or the integrated

control unit monitors BVM-14E5E/14E5U/14F5E/

14F5U are able to control up to 32 monitors connected

via serial remote connector (using the REMOTE 1

connector). By giving each monitor a monitor address

and group number, it is possible to control just a

specific monitor or monitor group.

With the REMOTE menu, each monitor can be set

with a monitor address and group number, between 1

and 99. The ADDRESS menu is used to select a

particular monitor or group by entering a monitor

number or group number.

For information about the ADDRESS menu, see "Selecting the Monitor to Control—ADDRESS Menu."

Structure and Usage of the REMOTE Menu

This section explains the settings lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu.

If a setting in each list leads to another list or a

monitor operation, the list number or the operation is

indicated after the ⇒ mark. (Settings without the ⇒

mark end in a single list.)

Select SET UP from the menu list.

CONTROL PRESET ADJ...	Menu list
SET UP 300	
COLOR TEMP ADJ...	
MEMORY CARD...	
COPY...	
STATUS...	
MAINTENANCE...	
KEY PROTECT OFF	

300 SET UP menu list: Choose the menu for setting the desired items.

INPUT CONFIGURATION menu
REMOTE menu: Set the remote control pin number. ⇒ 340
PASSWORD menu
SYSTEM CONFIGURATION menu
ON SCREEN SET menu
ALIGNMENT menu

340 REMOTE menu: Select the type of remote control.

PARA REMOTE CONFIG...: Select whether or not parallel remote control will be used (ON or OFF).
connector. ⇒ 341

SERI REMOTE CONFIG...: Set the address and group number of the monitor controlled via the REMOTE 1 (serial remote control) connector. ⇒ 343

341 PARA REMOTE CONFIG: Select the REMOTE 2 connector pins for which you want to change the function. The factory settings for each pin are given below. ⇨ 342

1 PIN...: CH01
2 PIN...: CH02
3 PIN...: EXT SYNC
4 PIN...: MONO
5 PIN...: SAFE AREA
6 PIN...: unused
7 PIN...: unused
8 PIN...: TALLY

342 1-8 PIN (1/2): Assign a function to the selected pin.

CH: Select a channel number. Enter the desired channel number with the numeric keypad.

----: Set to unused.

UNDERRSCAN: Set underrscan on or off.

16:9: Set a 16:9 aspect ratio on or off.

H DELAY: Set the horizontal sync display on or off.

V DELAY: Set the vertical sync display on or off.

EXT SYNC: Set the synchronization to external sync signals enabled or disabled.

COMB: Set the comb filter on or off.

APERTURE: Set the correction of frequency characteristics enabled or disabled.

MONO: Set monochrome display on or off.

342 1-8 PIN (2/2): Assign a function to the selected pin.

BLUE ONLY: Set the blue signal pictures display (monochrome) on or off.

R OFF: Set cutting red beams enabled or disabled.

G OFF: Set cutting green beams enabled or disabled.

B OFF: Set cutting blue beams enabled or disabled.

VITC ON: Set the VITC display on or off.

SAFE AREA ON: Set the safe area display on or off.

CAPTION VISION: Set the caption vision on or off.

TALLY ON: Set tally signals on or off.

DEGAUSS ON: Set degaussing on or off.

POWER ON: Set the monitor power on or off.

343 SERI REMOTE CONFIG: Set the monitor address and group number of the monitor currently connected directly to the control unit. The monitors to be assigned addresses and group numbers must be directly connected to the control unit and set one at a time.

MONITOR ADDRESS: Enter a number.
GROUP ADDRESS: Enter a number.

Setting the Password — PASSWORD Menu

A four-digit password can be specified and applied to desired menu options to prohibit the menu settings from being changed without permission. The password is set with the PASSWORD menu. If an incorrect password is entered, or if nothing is entered within about five seconds from when the message is displayed, the message "INCORRECT ENTRY" is displayed, and the menus disappear from the screen.

A password is always assigned to the PASSWORD menu (factory setting: 9999). When a new password is created, it is automatically applied to the PASSWORD menu.

Use of the Password

The message "PLEASE ENTER PASSWORD" is displayed when an attempt is made to select a menu item for which the password has been applied. The correct password must be entered with the numeric keypad within about five seconds.

Structure and Usage of the PASSWORD Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu.

If a setting in each list leads to another list or a monitor operation, the list number or the operation is indicated after the ⇨ mark. (Settings without the ⇨ mark end in a single list.)

Select SET UP from the menu list.

CONTROL PRESET ADJ...
SLIP
MEMORY CARD...
COPY...
STATUS...
MAINTENANCE...
KEY PROTECT OFF

Menu list

300 SET UP menu list: Choose the menu for setting the desired items.

INPUT CONFIGURATION menu
REMOTE menu
PASSWORD menu: SET the password - 400
SYSTEM CONFIGURATION menu
ON SCREEN SET menu
ALIGNMENT menu

Setting the Channel Selection Method and Power-Up Conditions — SYSTEM CONFIGURATION Menu

- The SYSTEM CONFIGURATION menu is used for the following settings:
- (3) **Power-up Input channel**
LAST: Set the channel to the channel that was selected at the time the power was last turned off.
CH xx: Set the channel to a specific channel number.
- (4) **Time from power-up until degauss**
 If several monitors are turned on at the same time and all start degaussing at the same time, there will be a very large current draw on the power supply for a few moments. To prevent this, the delay time between power-up and degaussing can be set for each monitor independently.
- (5) **AFC time constant**
BKM-24N/25P
 It is possible to detect residual subcarrier signals from phase change by setting the adaptor's residual subcarrier switch on.
- (6) **Residual subcarrier detection (when using the BKM-24N/25P)**
BKM-27T
 (7) **Auto chroma control (ACC) (when using the BKM-27T)**
- (2) **Power-up condition**
 This menu sets the condition of the monitor when the main power switch on the rear panel is switched on.
ON: Standby mode
OFF: Operation mode

400 PASSWORD menu: Enter the password for the PASSWORD menu.

ENTER PASSWORD...: Enter the password (factory setting: 9999). ⇐ **401**

401 PASSWORD: Choose what action to perform with the password.

CHANGE PASSWORD...: Change the password. ⇐ **402**

APPLY PASSWORD...: Assign the password to a menu item. ⇐ **404**

402 ENTER NEW PASSWORD: Create a new password.

ENTER NEW PASSWORD: Enter a password. ⇐ **403**

RE-ENTER PASSWORD

TO CONFIRM

Enter the new password again and press the ENTER button. ⇐ The password is recorded.

To change it, press the MENU button. ⇐ Return to the PASSWORD (401).

404 APPLY PASSWORD: Choose whether or not to apply the password to each menu.

CONTROL, PRESET ADJ.: YES or NO

CONTROL TEMP ADJ.: YES or NO

SET UP: YES or NO

MEMORY CARD: YES or NO

Setting the Screen Display — ON SCREEN SET Menu

IDA (Internal Device Error Already): Indicates the occurrence of a non-transmission error.

UES (Unknown Error Status): Indicates the occurrence of a different error.

When an EDH error occurs in the signal being displayed by the monitor, the message "EDH ERROR" is displayed on the screen. The details of the error can be confirmed with the error flags mentioned above.

EDH (Error Detection and Handling) Information (when using the BKM-20D/21D)
EDH is an error detection system which inserts Error Status Packets (ESP) into the serial digital signal. Using the data in these packets, it is possible to detect transmission errors.

The ON SCREEN SET menu is used to select the type of information that will be displayed. The types of information that can be set are given below.

(1) The VITC or user bit from the input signal

(2) **EDH (Error Detection and Handling) Information (when using the BKM-20D/21D)**
With EDH, errors in the SDI signal's three data fields (Ancillary Data, Active Picture Data, and Full Field Data) can be detected, using five types of error flag (EDH, EDA, IDH, IDA, and UES). The flags make a distinction between errors caused by a certain device (EDH, IDH) and those that were caused earlier by some other equipment connected to that device (EDA/IDA).

EDH (Error Detected Here): Indicates the occurrence of a transmission error.

EDA (Error Detected Already): Indicates the occurrence of a transmission error.

IDH (Internal Device Error Here): Indicates the occurrence of a transmission error.

occurrence of a non-transmission error.

(5) Channel number and name

(4) SDI signal ancillary data blanking (when using the BKM-20D/21D)

(3) Caption vision

WATCH MODE: Check status in real time. displayed.

ANALYZE MODE: Preserve the status when it is status in the menus.

The following two modes can be used to display the

Setting the Channel Selection Method and Power-Up Conditions — SYSTEM CONFIGURATION Menu

Structure and Usage of the SYSTEM CONFIGURATION Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu.
If a setting in each list leads to another list or a monitor operation, the list number or the operation is indicated after the → mark. (Settings without the → mark end in a single list.)

Select SET UP from the menu list.

CONTROL, PRESET ADJ...	SET UP
COLOR TEMP ADJ...	MEMORY CARD...
STATUS...	COPY...
MAINTENANCE...	KEY PROTECT
OFF	

300 SET UP menu list: Choose the menu for setting the desired items.

INPUT CONFIGURATION menu
REMOTE menu
PASSWD menu
SYSTEM CONTROL menu
ON SCREEN SET menu
ALIGNMENT menu

500 SYSTEM CONFIGURATION menu: Set each of the various items.

INPUT SELECT: Select the channel number selection method (DIRECT or 10KEY).

STANDBY MODE: Select the power-up condition (OFF or ON).

DEFAULT CH: Select the power-up input channel (LAST or CH xx).

DEGAUSS DELAY: Set the time between power-up and the beginning of degaussing. Enter the desired time (in seconds).

AFC TIME: Select the AFC time constant (0.5 or 2 ms).

RESIDUAL SC SW (BKM-24N): Switch the residual switch on the BKM-24N (OFF or ON).

RESIDUAL SC SW (BKM-25P): Switch the residual switch on the BKM-25P (OFF or ON).

ACC SW (BKM-27T): Switch the ACC switch on the BKM-27T (OFF or ON).

Structure and Usage of the ON SCREEN SET MENU

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu.

If a setting in each list leads to another list or a

monitor operation, the list number or the operation is indicated after the ⇨ mark. (Settings without the ⇨

mark end in a single list.)

Select SET UP from the menu list.

CONTROL PRESET ADJ...
COLOR TEMP ADJ...
SLIP
MEMORY CARD...
COPY...
STATUS...
MAINTENANCE...
KEY PROTECT OFF

300 SET UP menu list: Choose the menu for setting the desired items.

INPUT CONFIGURATION menu
REMOTE menu
PASSWORD menu
SYSTEM CONFIGURATION menu
ON SCREEN SET menu
ALIGNMENT menu

600 ON SCREEN SET menu: Select items to be displayed on the screen.

VITC...: Select whether or not to display the VITC or user bit data contained in the input signal. ⇨
601
EDH...: Select whether or not to display the EDH error messages. ⇨ 610
CAPTION VISION...: Select whether or not to display the caption, and select the display mode. ⇨
620
ANCILLARY DATA: Select whether or not to display the ancillary data in the serial digital signal (OFF or ON).
CH NO...: Select the display mode of the channel number. ⇨ 625
CH NAME...: Select the display mode of the channel name. ⇨ 625
VITC POSITION...: Select the display position for the VITC data. ⇨ 630
EDH POSITION...: Select the display position for the EDH error messages. ⇨ 630
CH NO POSITION...: Select the display position for the channel number. ⇨ 630
CH NAME POSITION...: Select the display position for the channel name. ⇨ 630

601 VITC: Select whether or not to display the VITC and/or user bit.

VITC: OFF or ON
USER BIT: OFF or ON

610 EDH: Select whether or not to display the EDH error messages. If they are to be displayed, select either ANALYZE MODE or WATCH MODE.

ERROR WARNING: OFF or ON
ANALYZE MODE: ⇨ 611
WATCH MODE: ⇨ 615

611 ANALYZE MODE: Detection results for each item is displayed. Select the items for which you want to see the flag conditions.

EDH: The result whether the input signal accommodates EDH (FOUND) or not (INVALID)
ACTIVE PICT: Results will be displayed (ERROR or NO ERROR). ⇨ 612
FULL FIELD: Results will be displayed (ERROR or NO ERROR). ⇨ 613
ANCI DATA: Results will be displayed (ERROR or NO ERROR). ⇨ 614

612 ACTIVE PICT: Flag condition is displayed.

AP EDH: ERROR or NO ERROR
AP EDA: ERROR or NO ERROR
AP IDH: ERROR or NO ERROR
AP IDA: ERROR or NO ERROR
AP UES: ERROR or NO ERROR

613 FULL FIELD: Flag condition is displayed.

FF EDH: ERROR or NO ERROR
FF EDA: ERROR or NO ERROR
FF IDH: ERROR or NO ERROR
FF IDA: ERROR or NO ERROR
FF UES: ERROR or NO ERROR

614 ANCI DATA: Flag condition is displayed.

ANC EDH: ERROR or NO ERROR
ANC EDA: ERROR or NO ERROR
ANC IDH: ERROR or NO ERROR
ANC IDA: ERROR or NO ERROR
ANC UES: ERROR or NO ERROR

615 WATCH MODE: Detection results for each item is displayed. Select the items for which you want to see the flag conditions.

EDH: The result whether the input signal accommodates EDH (FOUND) or not (INVALID).
ACTIVE PICT: Results will be displayed (ERROR or NOERROR). ⇔ **616**
FULL FIELD: Results will be displayed (ERROR or NOERROR). ⇔ **617**
ANCI DATA: Results will be displayed (ERROR or NO ERROR). ⇔ **618**

616 ACTIVE PICT: Flag condition is displayed.

AP EDH: ERROR or NO ERROR
 AP EDA: ERROR or NO ERROR
 AP IDH: ERROR or NO ERROR
 AP IDA: ERROR or NO ERROR
 AP US: ERROR or NO ERROR

617 FULL FIELD: Flag condition is displayed.

FF EDH: ERROR or NO ERROR
 FF EDA: ERROR or NO ERROR
 FF IDH: ERROR or NO ERROR
 FF IDA: ERROR or NO ERROR
 FF US: ERROR or NO ERROR

618 ANCI DATA: Flag condition is displayed.

ANC EDH: ERROR or NO ERROR
 ANC EDA: ERROR or NO ERROR
 ANC IDH: ERROR or NO ERROR
 ANC IDA: ERROR or NO ERROR
 ANC US: ERROR or NO ERROR

620 CAPTION VISION: Select the caption display mode.

CAPTION 1
 CAPTION 2
 TEXT 1
 TEXT 2
 OFF

625 CH NO or CH NAME: Select the channel number and channel name display mode.

AUTO: Disappear after displayed for a while.
 ON: Displayed
 OFF: Not displayed.

630 POSITION: Select the display position.

TL: Top left
 TC: Top center
 TR: Top right
 BL: Bottom left
 BC: Bottom center
 BR: Bottom right

Convergence Adjustments — ALIGNMENT Menu

The ALIGNMENT menu is used for adjusting convergence and geometry.

Structure and Usage of the ALIGNMENT Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu. If a setting in each list leads to another list or a monitor operation, the list number or the operation is indicated after the ⇨ mark. (Settings without the ⇨ mark end in a single list.)

Select SET UP from the menu list.

CONTROL PRESET ADJ...
COLOR TEMP ADJ...
SET UP... 300
MEMORY CARD...
COPY...
STATUS...
MAINTENANCE...
KEY PROTECT OFF

Menu list

300 SET UP menu list: Choose the menu for setting the desired items.

INPUT CONFIGURATION menu
REMOTE menu
PASSWORD menu
SYSTEM CONFIGURATION menu
ON SCREEN SET menu
ALIGNMENT menu (factory geometry and geometry adjustment) 700

700 ALIGNMENT menu (1Z): Adjust each item with the UP and DOWN buttons or PHASE knob, or return to factory settings.

FACTORY SET: Return values to their factory settings.
ROTATION: Compensates for the screen rotation which occurs when the monitor is installed facing north or south.
H CENTER: Adjust the horizontal picture position.
V CENTER: Adjust the vertical picture position.
H SIZE: Adjust the width of the picture.
V SIZE: Adjust the height of the picture.
V BLANKING: Adjust the vertical blanking of the screen.
H PIN: Correct the side pincushion distortion.
H KEY: Correct the trapezoid distortion.

700 ALIGNMENT menu (2Z): Adjust each item with the UP and DOWN buttons or PHASE knob, or return to factory settings.

H STATIC CONV: Adjust the horizontal static convergence.
V STATIC CONV: Adjust the vertical static convergence.

Monitor Memory Card Data Operations — MEMORY CARD MENU

Operations on monitor memory card data are performed with the MEMORY CARD menu.

On how to handle the monitor memory card, refer to the operation manual for the control unit or the built-in control unit monitor.

Structure and Usage of the MEMORY CARD Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu.
If a setting in each list leads to another list or a monitor operation, the list number or the operation is indicated after the ⇨ mark. (Settings without the ⇨ mark end in a single list.)
Select MEMORY CARD from the menu list.

CONTROL PRESET ADJ..	
COLOR TEMP ADJ...	
SET UP...	
MEMORY CARD...	800
COPY...	
STATUS...	
MAINTENANCE...	
KEY PROTECT	OFF
	Menu list

800 MEMORY CARD menu: Select the operation to perform.

SAVE: Write data to a monitor memory card. ⇨ 801
LOAD: Read data from a monitor memory card. ⇨ 803
FORMAT: Format a monitor memory card. ⇨ 805

801 SAVE: Select the name of the file to which to write data, or create a new file name. ⇨ 802

NEW NAME: Enter a new name (max. 20 characters).

802 SELECTED OR CREATED FILE NAME: Confirm the data write.

OVERWRITE THIS FILE?
OK: ENTER KEY
CANCEL: MENU KEY
 To overwrite the file, press ENTER. ⇨ The data write is performed.
 To cancel the write, press MENU. ⇨ Return to the SAVE (801).

803 LOAD: Select the name of the file from which to read data. ⇨ 804

804 SELECTED FILE NAME: Select the data to read.

ALL: Read data for all menu settings.
CONTROL PRESET: Read the data for the CONTROL PRESET ADJ menu settings.
COLOR TEMP: Read the data for the COLOR TEMP ADJ menu settings.
SET UP: Read the data for the SET UP menu settings.

805 FORMAT: Confirm the format operation.

ALL FILES WILL BE DELETED!
ARE YOU SURE?
OK: ENTER KEY
CANCEL: MENU KEY
 To continue, press the ENTER button. ⇨ The format is performed.
 To cancel, press the MENU button. ⇨ Return to the MEMORY CARD menu (800).

Displaying Information About the Monitor — STATUS Menu

The STATUS menu is used to view general data about the monitor and information about signals assigned to the slots in the rear panel.

Structure and Usage of the STATUS Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to indicate the hierarchy in the menu.

If a setting in each list leads to another list or a

monitor operation, the list number or the operation is indicated after the \Rightarrow mark. (Settings without the \Rightarrow

mark end in a single list.)

Select STATUS from the menu list.

CONTROL PRESET ADJ...	
COLOR TEMP ADJ...	
SET UP...	
MEMORY CARD...	
COPY...	
STATUS...	900
MAINTENANCE...	
KEY PROTECT	OFF

Menu list

900 STATUS menu (1/3): Data about the current channel is displayed.

CH: channel number

SI: slot number

IN: input connector number

FORMAT: format of the input signal

NAME: channel name

900 STATUS menu (2/3): Data about the monitor is displayed.

MODEL NAME: model name
SERIAL NO: serial number
OPERATION TIME: operation time (in hours)
SOFTWARE VERSION: software version

Monitor-to-Monitor Data Copy — COPY Menu

When multiple monitors are connected via their serial remote ports, data can be shared between the monitors by data copy. The data copy from one monitor to another is accomplished with the COPY menu.

Structure and Usage of the COPY Menu

This section explains the setting lists displayed in the menu.

The lists are numbered and shown with indentations to

indicate the hierarchy in the menu.

If a setting in each list leads to another list or a

monitor operation, the list number or the operation is indicated after the \Rightarrow mark. (Settings without the \Rightarrow

mark end in a single list.)

Select COPY from the menu list.

CONTROL PRESET ADJ...	
COLOR TEMP ADJ...	
SET UP...	
MEMORY CARD...	
COPY...	850
STATUS...	
MAINTENANCE...	
KEY PROTECT	OFF

Menu list

850 COPY menu: Select the copy source monitor.

MONITOR ADDRESS: Enter the address number. \Rightarrow 851

851 COPY: Select the data to be copied. \Rightarrow Copy is carried out.

ALL: Copy data for all menu settings.

CONTROL PRESET: Copy the data for the CONTROL PRESET ADJ menu settings.

COLOR TEMP: Copy the data for the COLOR TEMP menu settings.

SET UP: Copy the data for the SET UP menu settings.

Selecting the Monitor to Control — ADDRESS Menu

The settings for each of the items are as follows:

SINGLE: Control only a particular monitor. Enter the address (32 of the numbers from 01 to 99 may be selected).

GROUP: Control only a particular monitor group. Enter the group number (32 of the numbers from 01 to 99 may be selected).

ALL: Control all monitors.

ALL POWER ON: When this is selected, all connected monitors will be turned on.

ALL POWER OFF: When this is selected, all connected monitors will be turned off.


To exit the ADDRESS menu
Press the ADDRESS button.

When multiple monitors are connected by a serial remote connection, they can be controlled with a monitor control unit BKM-10R or a built-in control unit monitor, such as the BVM-14ESE/14ESU/14FSE/14FSU. The ADDRESS menu is used to choose whether one particular monitor or monitor group will be controlled, or whether operations are to be performed on all monitors together.

Structure and Usage of the ADDRESS Menu

Press the ADDRESS button on the control panel of the BKM-10R or the BVM-14ESE/14ESU/14FSE/14FSU.

The ADDRESS button lights, and the ADDRESS menu is displayed on the screen.

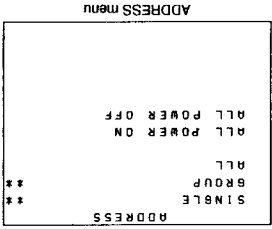

900 STATUS menu (3/3): Data about signals assigned to each slot in the rear panel is displayed.

SLOT1
SLOT2
SLOT3
SLOT4
SLOT5
SLOT6
SLOT7
SLOT8
SLOT9

Displaying Information About the Monitor — STATUS Menu

Specifications

General

525 lines, 60 fields per second

interlaced

625 lines, 50 fields per second

interlaced

Super fine pitch Trinitron

20F1U

BVM-20E1E/20E1U/20F1E/

(BVM-20F1E/20F1U)

Aperture grille pitch: 0.3 mm,

Aperture grille pitch: 0.25 mm,

(BVM-20E1E/20E1U)

90 degree deflection, 30.6 mm

diameter in-line gun,

Effective picture size:

386 x 291 mm (15 1/4 x 11 1/2

inches) (w/h)

482 mm (19 inches) (diagonal

size)

CRT protection: EHT (extremely

high tension) protection type

Warm-up time: approx. 30 minutes

Anode voltage: 27 kV with no

beam current

Nominal chromaticity coordinates:

Y	X
R	G
0.630	0.595
0.340	0.310
B	0.155
Error: less than ±0.005	

Y	X
R	G
0.640	0.600
0.330	0.290
B	0.150
Error: less than ±0.005	

BVM-41E1E/14E1U/14E5E/14F5E/14F1E/14F1U/14F5E/14F5U
Aperture grille pitch: 0.25 mm
(BVM-14F1E/14F1U/14F5E/14F5U)
Aperture grille pitch: 0.22 mm
(BVM-14E1E/14E1U/14E5E/14E5U)
90-degree deflection, 29.4 mm diameter in-line gun.

CRT

Effective picture size:

268 x 201 mm (10 1/4 x 8 inches)

(w/h)

332 mm (13 1/8 inches) (diagonal

size)

CRT protection: EHT (extremely

high tension) protection type

Warm-up time: approx. 30 minutes

Anode voltage: 25 kV with no

beam current

Nominal chromaticity coordinates:

Y	X
R	G
0.630	0.595
0.340	0.310
B	0.155
Error: less than ±0.005	

Y	X
R	G
0.640	0.600
0.330	0.290
B	0.150
Error: less than ±0.005	

Power requirements

100 to 240 V AC, ±10%, 50/60 Hz

BVM-20E1E/20E1U/20F1E/

20F1U: 120 W

BVM-14E1E/14E1U/14E5E/

14F5E/14F1E/14F1U/14F5E/

14F5U: 110 W

BVM-20E1E/20E1U/20F1E/

20F1U: 444 x 414 x 570 mm

(17 1/4 x 16 3/4 x 22 1/2

inches) (w/h/d)

BVM-14E5E/14E5U/14F5E/

14F5U: 482 x 280 x 580 mm

(19 x 11 1/4 x 20 7/8 inches)

(w/h/d)

BVM-14E1E/14E1U/14F1E/

14F1U: 346 x 280 x 530 mm

(13 1/4 x 11 1/4 x 20 7/8 inches)

(w/h/d)

BVM-14E1E/14E1U/14E5E/

14F5E/14F1E/14F1U/14F5E/

14F5U: 482 x 280 x 580 mm

(19 x 11 1/4 x 20 7/8 inches)

(w/h/d)

BVM-14E1E/14E1U/14E5E/

14F5E/14F1E/14F1U/14F5E/

14F5U: 482 x 280 x 580 mm

(19 x 11 1/4 x 20 7/8 inches)

(w/h/d)

BVM-14E1E/14E1U/14E5E/

14F5E/14F1E/14F1U/14F5E/

14F5U: 482 x 280 x 580 mm

(19 x 11 1/4 x 20 7/8 inches)

(w/h/d)

Dimensional drawing

BVM-20E1E/20E1U/20F1E/20F1U

444 (17 1/2)

410 (16 1/4)

90.3 (3 5/8)

414 (16 3/8)

287 (10 1/4)

51.7 (2 1/4)

15 (5/8)

26 (1 1/4)

26 (1 1/4)

26 (1 1/4)

30 (1 3/16)

30 (1 3/16)

26 (1 1/4)

330 (13)

BVM-14E1E/14E1U/14F1E/14F1U

280 (11 1/2)

266 (10 1/2)

257 (10 1/8)

41 (1 5/8)

390 (15 3/8)

Unit: mm (inches)

Mass

BVM-20E1E/20E1U/20F1E/

20F1U: approx. 37 kg (81 lb

9 oz)

BVM-14E5E/14E5U/14F5E/

14F5U: approx. 25 kg (55 lb

1 oz)

BVM-14E1E/14E1U/14F1E/

14F1U: approx. 22 kg (48 lb

8 oz)

Input/output Connectors

Video input

BNC type, 3 (with three loop-

through outputs)

R/G/B: 1 Vp-p ±6 dB, positive,

high impedance

Y: 1 Vp-p ±6 dB, positive, high

impedance

R-Y/B-Y: 0.7 Vp-p ±6 dB,

positive, high impedance

Horizontal blanking time

Less than 10 μs

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

APC time Constant

0.5 ms (fast mode)

2 ms (normal mode)

Line pull range/line hold range

Greater than ±500 Hz (with 0.5 ms

APC time constant)

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

Horizontal blanking time

Less than 10 μs

Synchronization

APC time Constant

0.5 ms (fast mode)

2 ms (normal mode)

Line pull range/line hold range

Greater than ±500 Hz (with 0.5 ms

APC time constant)

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

Horizontal blanking time

Less than 10 μs

R-Y/B-Y: 0.7 Vp-p ±6 dB,

positive, high impedance

Y: 1 Vp-p ±6 dB, positive, high

impedance

R/G/B: 1 Vp-p ±6 dB, positive,

high impedance

BNC type, 3 (with three loop-

through outputs)

R-Y/B-Y: 0.7 Vp-p ±6 dB,

positive, high impedance

Horizontal blanking time

Less than 10 μs

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

Horizontal blanking time

Less than 10 μs

Remote control

OPTION

ohm termination

Mini-DIN 8-pin, 1

CONTROL UNIT

D-sub 9-pin, 1

REMOTE 1

D-sub 9-pin, 1 (with loop-

through output)

REMOTE 2

D-sub 9-pin, 1 (with loop-

through output), RS-485 serial

interface

ISR

D-sub 9-pin, 1

Video Signal

Differential gain

Less than 2% (for luminance from

0 to 100 cd/m²)

Differential phase

Less than 2° (for luminance from 0

to 100 cd/m²)

Frequency response

100 Hz to 10 MHz, ±1 dB

DC restoration

Back porch type

Black level fluctuation: less than

1% for 10 to 90% APL input

signal variation.

Synchronization

APC time Constant

0.5 ms (fast mode)

2 ms (normal mode)

Line pull range/line hold range

Greater than ±500 Hz (with 0.5 ms

APC time constant)

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

Horizontal blanking time

Less than 10 μs

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

Horizontal blanking time

Less than 10 μs

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

Horizontal blanking time

Less than 10 μs

Vertical blanking time

Normal: less than 1 ms.

Underscan: less than 0.8 ms

Horizontal blanking time

Less than 10 μs

Specifications



Picture Performance	Environmental Conditions	Accessories Supplied
Normal scan 5% overscan of CRT effective screen area (adjustable range greater than $\pm 15\%$)	Operating temperature 0°C to 40°C (32°F to 104°F)	AC power cord (1) Cord stopper (1) Tally plate (1) Operation manual (1) Fuse (2) Design and specifications are subject to change without notice.
Underscan 3% underscan of CRT effective screen area (adjustable range greater than $\pm 15\%$)	Optimum operating temperature 20°C to 30°C (68°F to 86°F)	
Linearity Within a central area bounded by a circle with a diameter equal to the picture height, less than 0.5% of the picture height, and outside the same area, about 1% of the picture height	Operating humidity 0% to 90% (no condensation)	
Color temperature D65, D93 (adjustable to other color temperatures)		
Convergence error Within a central area bounded by a circle with a diameter equal to the picture height: Less than 0.4 mm (BVM-20E1E/20E1U/20F1E/20F1U) Less than 0.3 mm (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U) Quiet area of the above-mentioned circle: Less than 0.7 mm (BVM-20E1E/20E1U/20F1E/20F1U) Less than 0.6 mm (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)		
Standard luminance 100 cd/m ² (at standard 1 V-p-p 100% white signal)		
Raster size stability Less than 1% of picture height (at 100 cd/m ² peak luminance, 10 to 90% APL)		
Scan delay Horizontal: Approx. 1/4 line Vertical: Approx. 1/3 field Resolution (at screen center, 100 cd/m ² luminance) BVM-14E1E/14E1U/14E5E/14E5U: 900 TV lines BVM-14F1E/14F1U/14F5E/14F5U: 800 TV lines BVM-20E1E/20E1U: 1000 TV lines BVM-20F1E/20F1U: 900 TV lines		

Overview

The BKM-30E20 Rack Mount Kit is a rack mount kit for mounting a Sony BVM series 20-inch monitor in an EIA standard 19-inch rack.

Components

The BKM-30E20 consists of the following components. Check to make sure that you have all the components before beginning assembly.

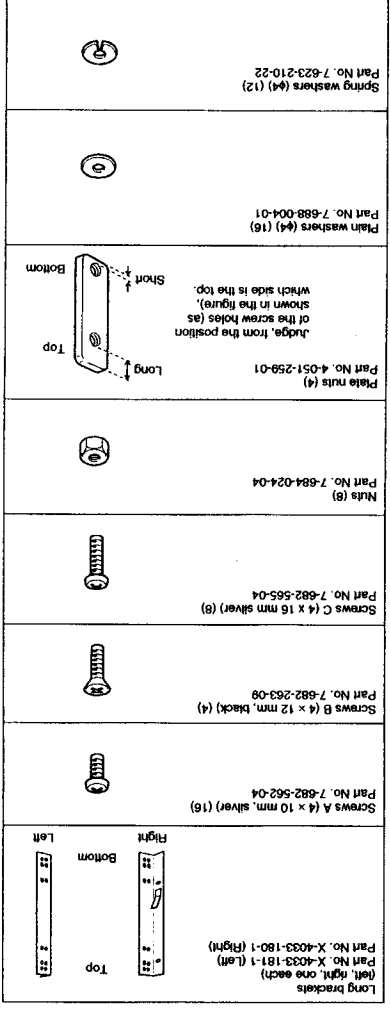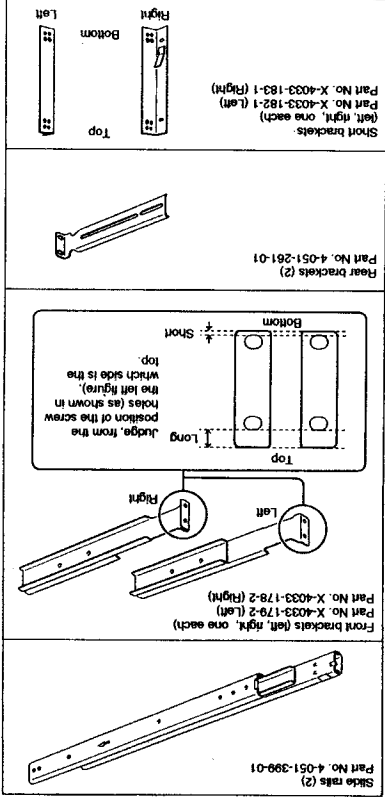


Assembly


1 Remove the left and right side plates from the bottom part of the monitor.

For a monitor joined to a monitor control unit to attach the short side covers for rack mounting to the monitor and the monitor control unit.

See step 11 of "Assembly" in the *Installation Manual for the BKM-32H Monitor Control Unit Attachment Kit* on how to attach them.

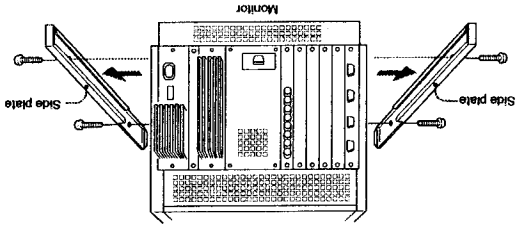

2 Remove the four feet from the bottom of the monitor (six feet if the monitor is joined to a monitor control unit).

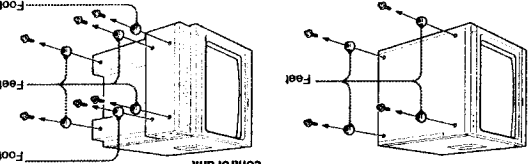


3 Separate the inner rail of the slide rail from the outer rail.


Note

Take care not to get your fingers caught in the slide rail.


Hold the plate spring with your finger and pull out.

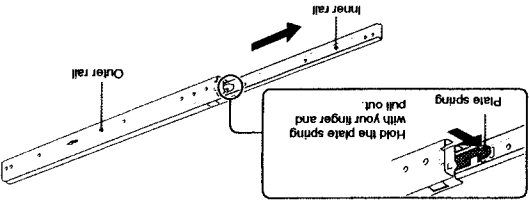


4 Attach the inner rail to the monitor using four screws A (4 x 10 mm).

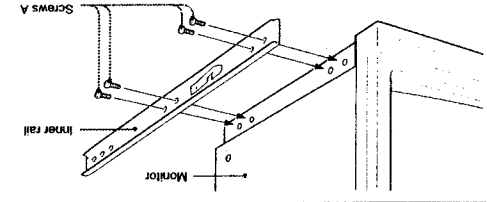


(continued)

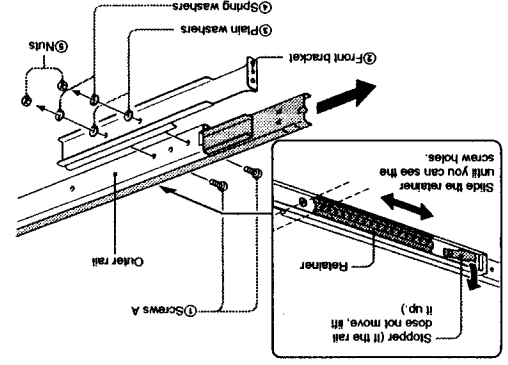

5 Attach the front bracket to the outer rail using two screws A (4 x 10 mm), two spring washers (φ4), and two nuts.

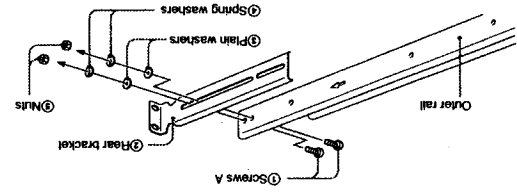

6 Attach the rear bracket to the outer rail using two screws A (4 x 10 mm).

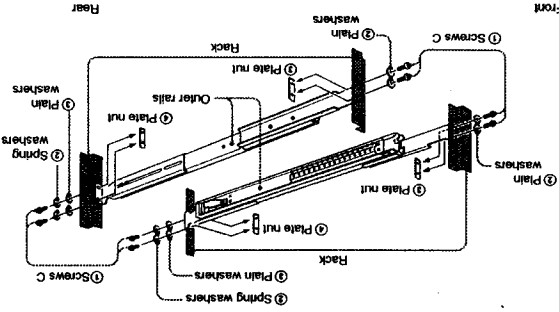




7 Attach the outer rails to the rack using four screws A (4 x 10 mm) for each rail.

8 Attach the short brackets (or joined to a monitor control unit) to a monitor using two screws B (4 x 12 mm) for each bracket.

For a monitor joined to a monitor control unit


Select the front or rear screw holes of the long brackets. To mount the monitor so that it fits exactly inside the rack, use the screw holes at the rear of the long brackets (see Fig. A). In this case, the monitor control unit is recessed slightly from the front of the rack.

To mount the monitor so that it protrudes slightly from the rack, use the screw holes at the front of the long brackets (see Fig. B). In this case, the monitor control unit is even with the front of the rack.

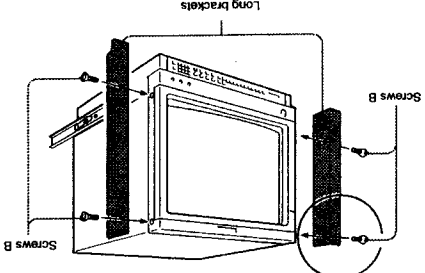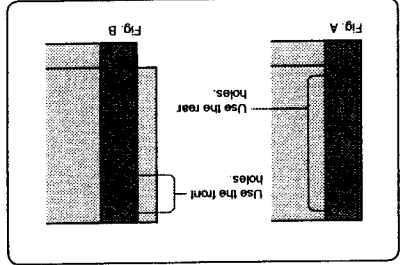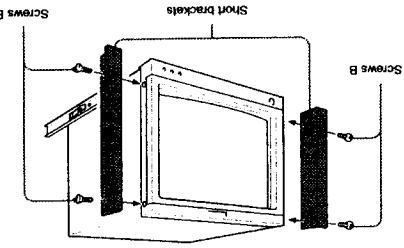

(continued)

9 Attach the monitor to the rack.

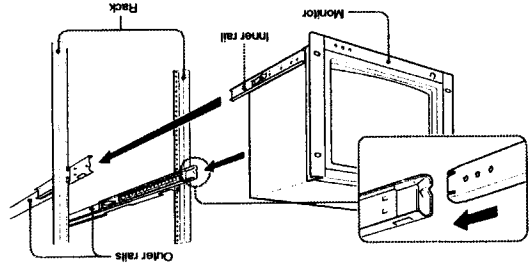


Push the monitor all the way into the rack, without releasing your grip until you hear an audible click as the plate springs of the slide rails are fixed in place. Unless they are fixed in place, there is a danger that the monitor might fall out of the rack.

Note


Using the four oval holes in the brackets, screw the monitor to the rack. Use screws appropriate for the rack's screw holes.

Note

When you are tightening the screws, the plate spring works to push the monitor toward the front of the rack. Always ask someone to assist you when you mount the monitor. One person should tighten the screws while the other person holds the monitor in place with both hands.

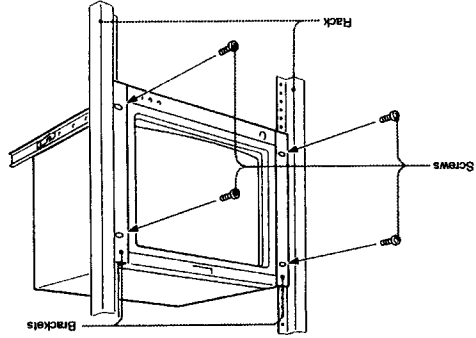

10 Removing the Monitor From the Rack

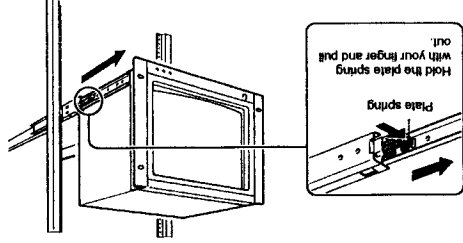

BKM-30E14

Overview


The BKM-30E14 is a rack mount kit for mounting a Sony BVM series 14-inch stand-alone monitor in an EIA standard 19-inch rack.

The BKM-30E14 consists of the following components. Check to make sure that you have all the components before beginning assembly. The circled letters A to I in the table below correspond to those in the illustrations on the subsequent pages.


Part	Qty	Part no.
Ⓐ Rail A	2	2-378-217-02 (Shipped with rail A inserted in rail B.)
Ⓑ Rail B	2	
Ⓒ Front bracket	2	4-051-611-01
Ⓓ Rear bracket	2	4-051-612-01
Ⓔ Plate nut	4	4-051-259-01
Ⓕ Judge, from the position of the screw holes (as shown in the figure), which side is the top.		
Ⓖ Screw ⓄM4x6	4	7-682-160-01
Ⓗ Screw ⓄPSW4x20	8	7-682-966-01
Ⓖ Screw ⓄM4x10	4	7-682-162-01
Ⓖ Flange nut M4	4	4-304-749-01

Components


Assembly

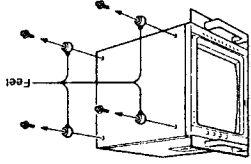


1 Remove the four feet from the bottom of the monitor.

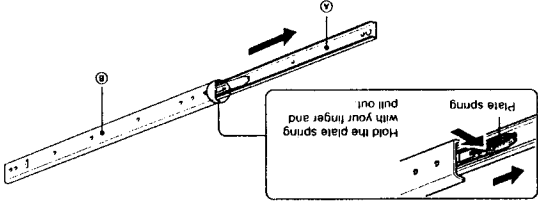

2 Pull out rail A from rail B.
Note
Take care not to get your fingers caught between the rails.

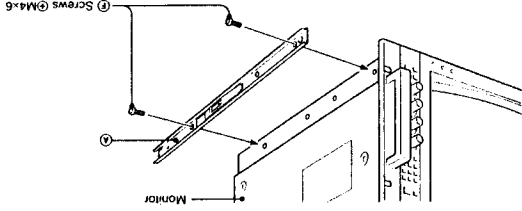


3 Attach rail A to the monitor.

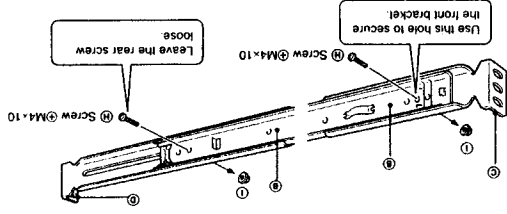


4 Attach the front bracket and rear bracket to rail B.

(continued)

5 Attach rails B to the rack.

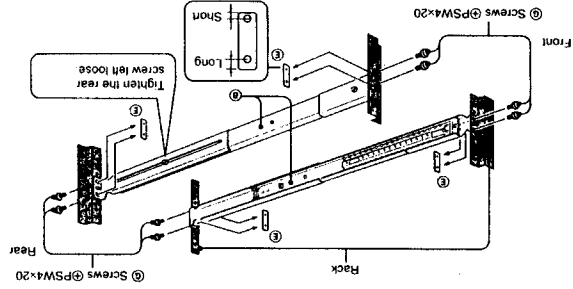


6 Insert rails A attached to the monitor into rails B.

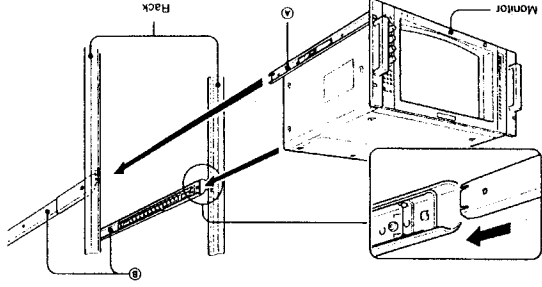


Note
Push the monitor all the way into the rack, without releasing your grip until you hear an audible click as the plate springs of rails A are fixed in place. Unless they are fixed in place, there is a danger that the monitor might fall out of the rack.

7 Using screws appropriate for the rack's screw holes, secure the monitor to the rack.

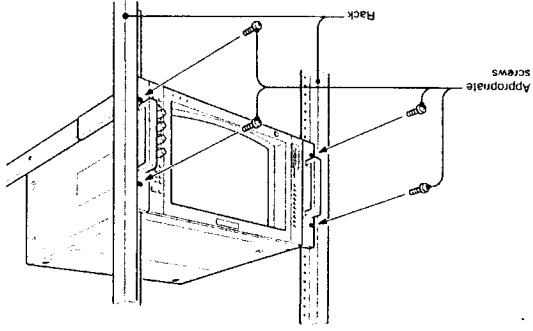

Removing the monitor from the rack

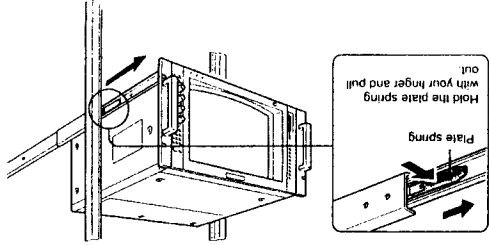

• BKM-31E14

Overview

The BKM-31E14 is a rack mount kit for mounting a Sony BVM series 14-inch monitors (BVM-14P1/14E1 series) in an EIA standard 19-inch rack.

Components


The BKM-31E14 consists of the following components before beginning assembly. The circled letters (A) to (E) in the table below correspond to those in the illustrations on the subsequent pages.

Part	Qty	Part no.
(A) Rail A	2	2-378-217-02 (Shipped with rail A inserted in rail B.)
(B) Rail B	2	
(C) Front bracket	2	4-051-611-01
(D) Rear bracket	2	4-051-612-01
(E) Plate nut	4	4-051-259-01
(F) Screw (PSW4x8)	16	7-682-961-01
(G) Screw (PSW4x20)	8	7-682-966-01
(H) Screw (M4x10)	8	7-682-162-01


Part	Qty	Part no.
(I) Flange nut M4	4	4-304-749-01
(J) Bracket	4	4-052-059-01
(K) Wide flange	2	4-052-060-01
(L) Handle	2	4-337-212-12
(M) Spring washer	4	7-623-212-22
(N) Screw (MSx14)	4	7-682-177-01
(O) Screw (PSW4x12)	6	7-682-963-09

Assembly


1 Remove the four feet from the bottom of the monitor.

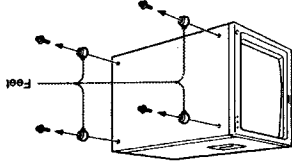


2 Attach the handle to the wide flange.

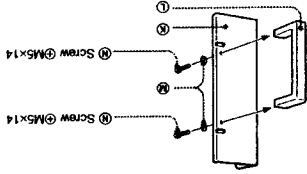

3 Attach the wide flanges to the monitor.

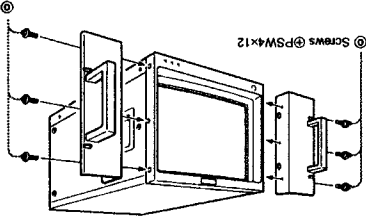


4 Attach the brackets to the monitor.

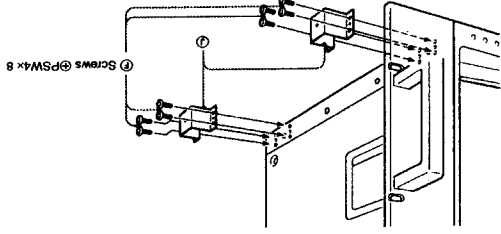


(continued)

5 Pull out rail A from rail B.

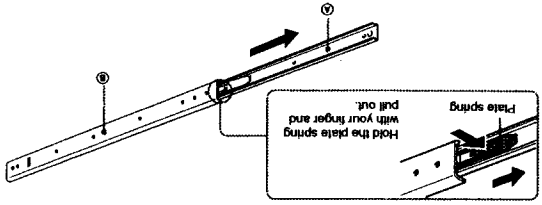


Note: Take care not to get your fingers caught between the rails. Hold the plate spring with your finger and pull out.


6 Attach rail A to the monitor.

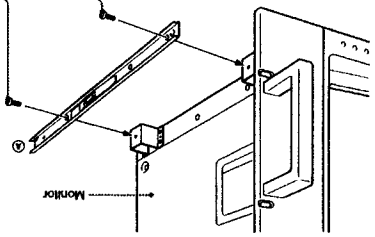


7 Attach the front bracket and rear bracket to rail B.

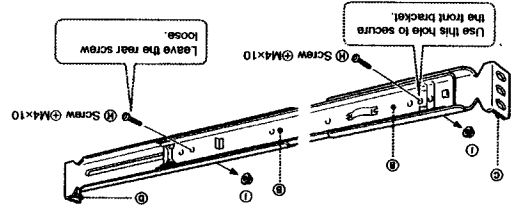

8 Attach rails B to the rack.

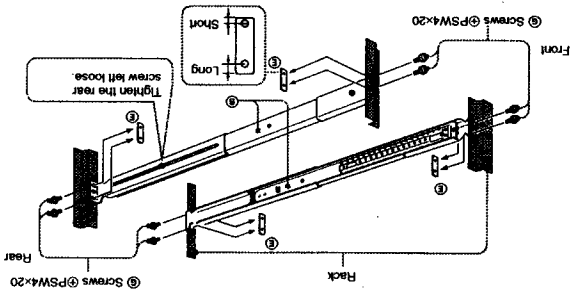


9 Insert rails A attached to the monitor into rails B.

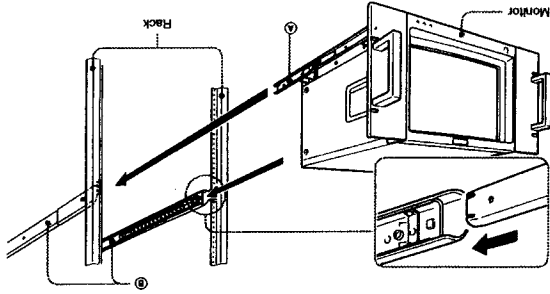


Note: Push the monitor all the way into the rack, without releasing your grip until you hear an audible click as the plate springs of rails A are fixed in place. Unless they are fixed in place, there is a danger that the monitor might fall out of the rack.

10 Using screws appropriate for the rack's screw holes, secure the monitor to the rack.

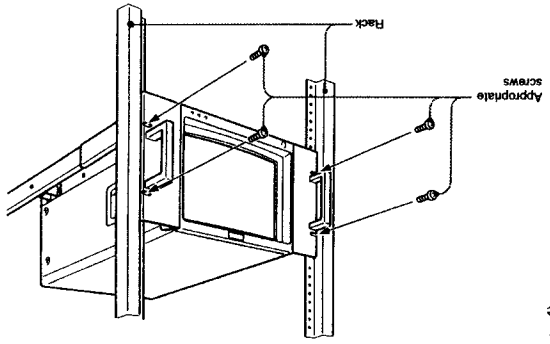

Removing the monitor from the rack

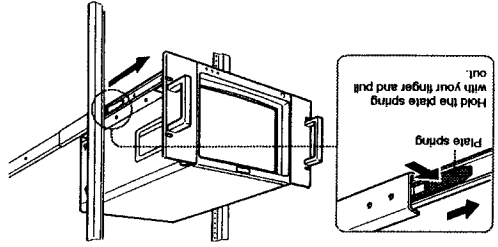

• BKM-32H

Overview

The BKM-32H Monitor Control Unit Attachment Kit is an assembly kit for joining a Sony BVM series 20-inch monitor to a BKM-10R Monitor Control Unit.


Components

The BKM-32H consists of the following components. Check to make sure that you have all the components before beginning assembly.


	Part No. 4-051-257-01
	Part No. 4-051-256-02
	Part No. 4-051-095-01
	Part No. 4-364-745-01
	Part No. 4-051-254-01
	Part No. 4-051-255-01

	Part No. 4-051-252-01
	Part No. 4-051-253-01
	Part No. 4-051-251-01
	Part No. X-4033-117-1
	Part No. 7-682-566-04
	Part No. 3-703-354-11
	Part No. 7-682-561-09
	Part No. 7-682-665-09
	Part No. 1-558-883-11


Assembly

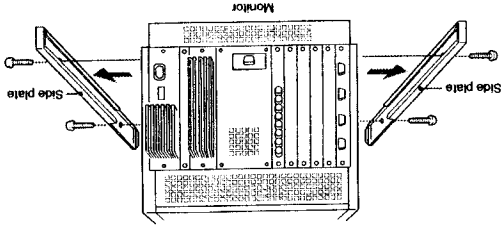


1 Remove the left and right side plates from the bottom part of the monitor.

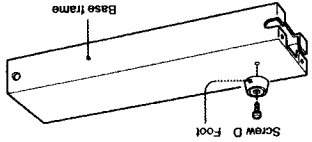

2 Attach the feet to the undersides of the two base frames using screws D (PS 4 x 16 mm).




3 There are four screws at the rear of the BKM-10R. Loosen the two underside screws.




4 Attach the stay to the rear of the BKM-10R. (Place the two cut-outs in the stay on the two loosened underside screws at the rear of the BKM-10R, fitting the heads of the two topside screws in the round holes in the stay, then tighten the underside screws.)


5 Connect one end of the supplied 9-pin remote control cable to the DISPLAY UNIT connector at the rear of the BKM-10R.

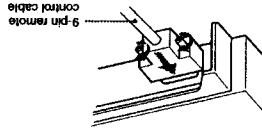


6 Assemble the base frames to the two ends of the stay, then screw them together using screws C (4 x 8 mm, black).

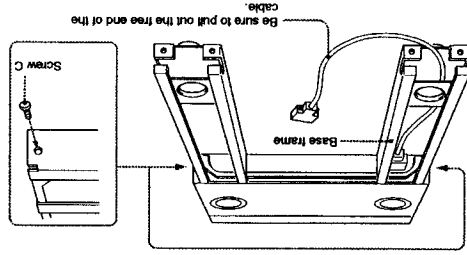

7 Fasten a bushing approx. 25 cm (9 7/8 inches) from the free end of the cable pulled out through the base frame in step 6.

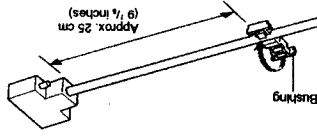


8 Press the bushing into the inner side cut-out in the end of the base frame.

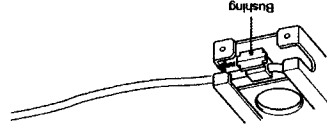

(Continued)


9 Press the cable into the base frame (as shown in the figure) so that it is not pushed out of the base frame.

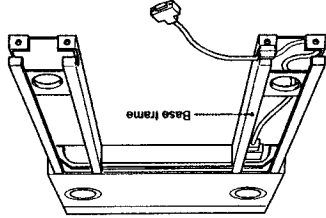

10 Place the monitor on the BKM-10R so that the four feet of the monitor go into the two indentations on the upper surface of the BKM-10R and the two round holes in the topsides of the base frames.

NOTE


Before proceeding to the next step, check to be sure that the feet of the monitor are seated in the round indentations and in the round holes, as shown in the figure.

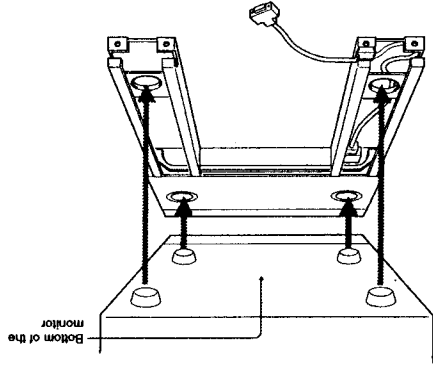


11 Attach the inner plates to the respective side covers, then screw them to the bottom part of the monitor and the BKM-10R sides. Use screws A (4 x 20 mm) and screws B (4 x 8 mm, silver) as shown in the figures.

- Use long side covers for desk-top monitors.
- Use short side covers for rack-mounted monitors.

Be sure to attach the both side covers properly to join the monitor and the BKM-10R firmly.

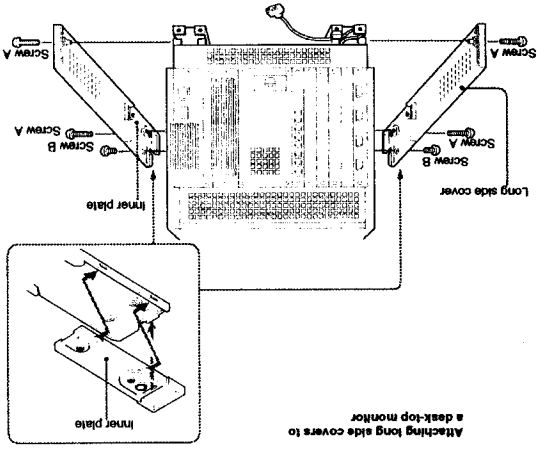


Attaching long side covers to a desk-top monitor

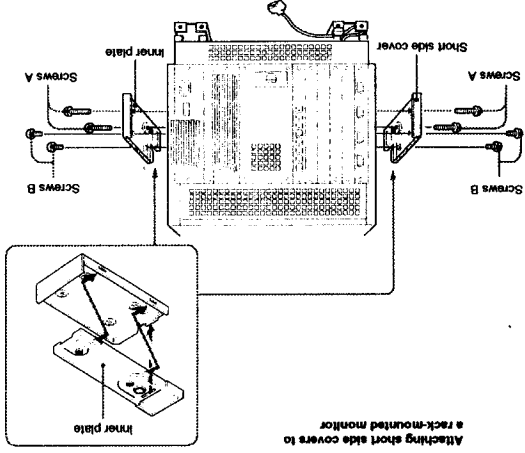


Attaching short side covers to a rack-mounted monitor

(Continued)

13 Connect the cable to the monitor control unit connector at the rear of the monitor, and fasten the screws of the cable connector.

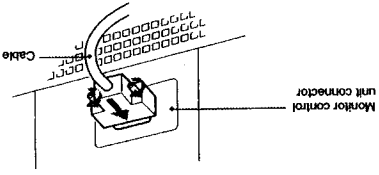

12 Attach the joint covers and slide and insert the joint cover along the groove in the bushing. Use two screws C (4 x 8 mm, black) for each cover.

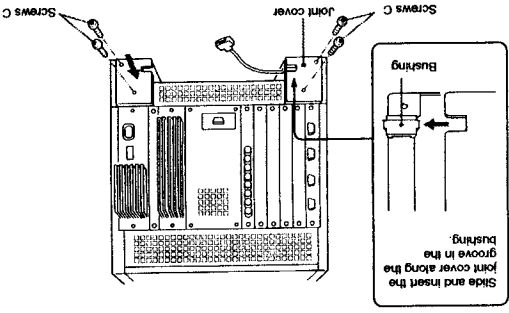

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.
To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

For customers in Canada

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Pour les utilisateurs au Canada
Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Für Kunden in Deutschland
Dieses Produkt kann im kommerziellen und in begrenztem Maße auch im industriellen Bereich eingesetzt werden. Dies ist eine Einmischung, welche die Funk-Einstörung nach Klasse B besitzt.

1-41

The BKM-10R Monitor Control Unit is a control unit for Sony BVM-series color video monitors. Use it to power monitors on and off, perform menu operations, and carry out monitor setup and adjustment.


Controlling monitor groups
You can control up to 32 monitors from the BKM-10R. First, using the monitor menus, assign an address number to each monitor, divide the monitors into groups, and assign a group number to each group.

Then you can use the BKM-10R to control individual monitors or monitor groups simply by entering monitor address or group numbers. You can also execute the same operation on all connected monitors, or use the BKM-10R to put all connected monitors into the same setup and adjustment state.

Attach to 20-inch monitors
You can use an optional BKM-32H Monitor Control Unit Attachment Kit to attach the BKM-10R to the BVM-20F1U/20F1E and other BVM-series color video monitors.


Rack Mounting
You can use an supplied rack mount attachment screws and an optional MB-510 Rack Mount Kit to mount the BKM-10R in an EIA standard 19-inch rack.

Location and Function of Parts

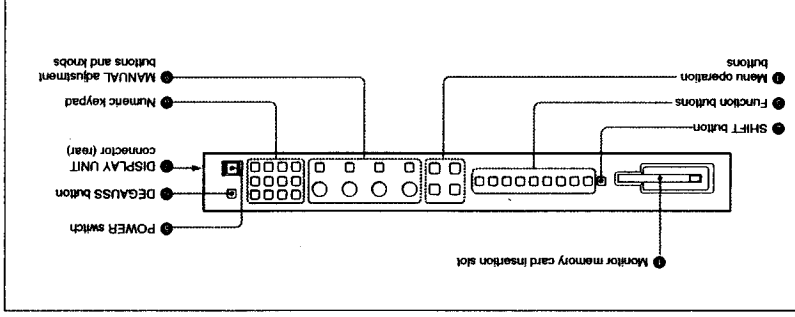

- 1 Monitor memory card insertion slot
Insert an optional BKM-12Y Monitor Memory Card.
- 2 SHIFT button
Each of the Function buttons has a Shift On button to select Shift On or Shift Off functions. Each time you press this button, its orange LED lights (Shift On) or goes out (Shift Off).

Shift On: Use the function indicated below the Function button.
Shift Off: Use the function indicated above the Function button.

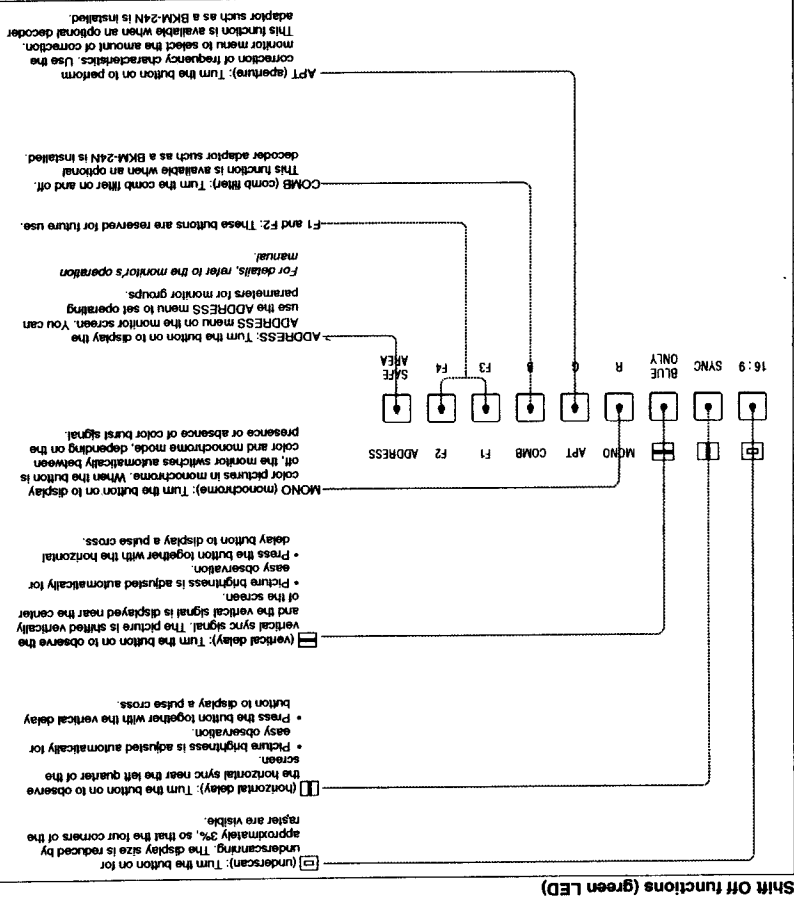



3 Function buttons

Use these buttons to control the operation of the monitor.

Each of these buttons has a Shift On function, indicated below the button, as well as a Shift Off function, indicated above the button. Press the SHIFT button 2 to select the desired function.

For Shift On functions: Orange LED
For Shift Off functions: Green LED

The LED color change whether you select Shift Off lights or goes out and the function of the button selected with the SHIFT button 2 is turned on or off. Each time you press one of these buttons, its LED

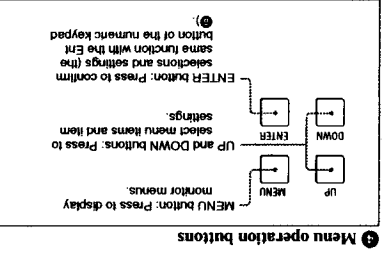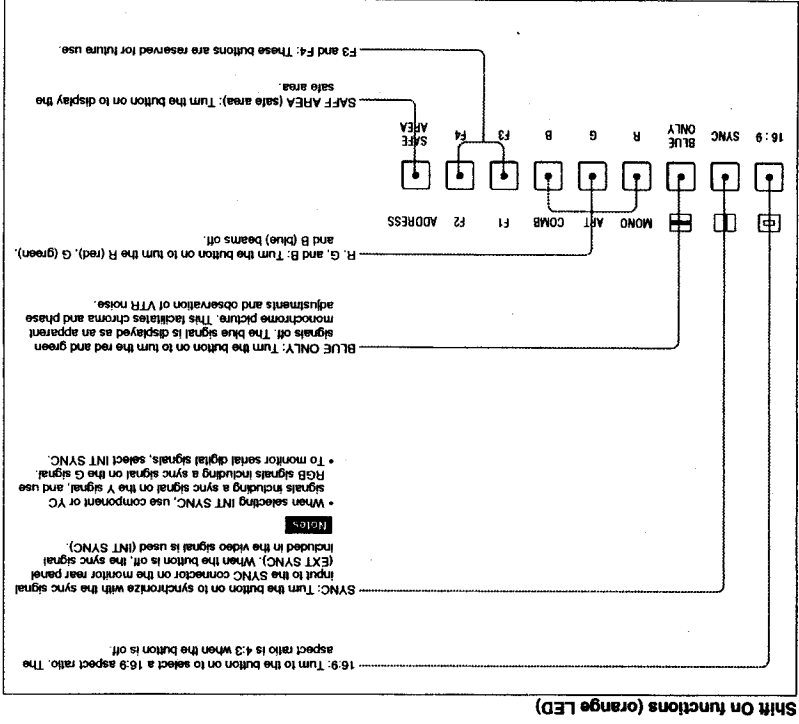

For more information about using monitor menus, refer to the monitor's operation manual.

POWER switch

Press to power the monitor on or off. If your system includes more than one monitor, you can use the ADDRESS menu to power all monitors on or off at once.


For information about the ADDRESS menu, refer to the monitor's operation manual.

DEGAUSS button


Press to manually degauss the monitor CRT. When pressing the button again, (The monitor CRT is degaussed automatically each time the power is turned on.)

DISPLAY UNIT connector (rear)

Connect to the CONTROL UNIT connector of a monitor designed for use with a separate control panel such as a BV-M-20F1U/20F1E/14F1U/14F1E, using a straight cable with D-sub 9-pin plugs (not supplied) as shown in the figure below.

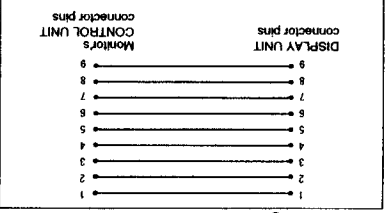

This connector is used to exchange control signals and to supply power from the monitor to the BKM-10R.

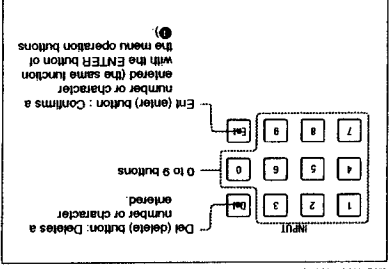


Use the numeric keypad to enter menu settings and channel numbers for signals that you want to input to the monitor.

Numeric keypad

Notes on using a SECAM PAL D component and component digital system

- The phase of component signals cannot be adjusted.
- The phase and chroma of RGB signals cannot be adjusted.

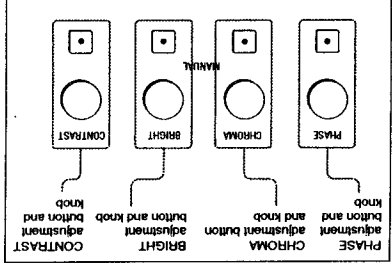


This connector is used to exchange control signals and to supply power from the monitor to the BKM-10R.

Inserting and Ejecting the Monitor Memory Card


Proceed as follows to insert and eject an optional BKM-12Y Monitor Memory Card.

For information about using data on the monitor memory card, refer to the monitor's operation manual.

Inserting the monitor memory card

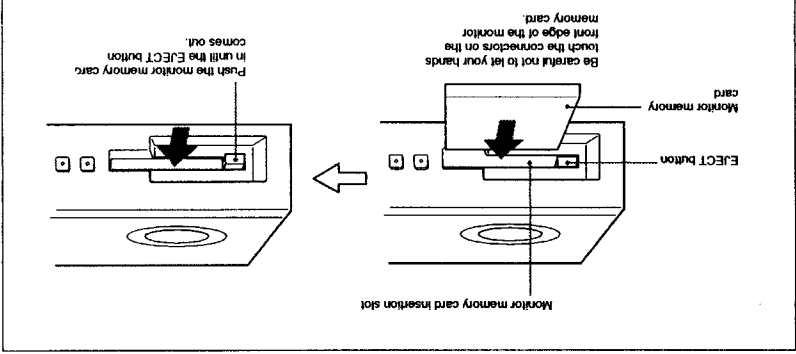

Ejecting the monitor memory card

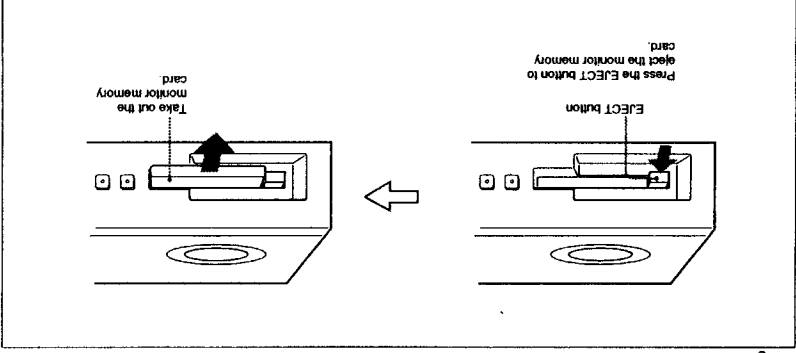

NOTE
Do not eject the monitor memory card while data is being saved or loaded.


Mounting the Unit in a Rack

To mount the BKM-10R in an EIA standard 19-inch rack, an optional MB-510 Rack Mount Kit is required.


Proceed as follows to mount the unit in the rack.

1 Remove the four feet from the bottom of the BKM-10R.

2 Use the rack mount attachment screws supplied with the BKM-10R to attach the rack mount brackets of the optional MB-510 Rack Mount Kit to each side of this unit.

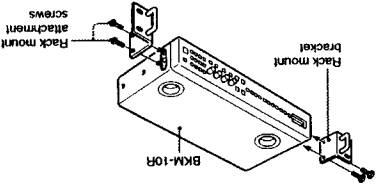

3 Screw the rack mount brackets to the rack to mount the BKM-10R in the rack. Use screws that match the size of the rack's screw holes.

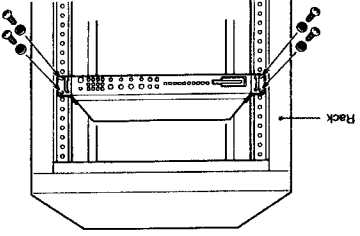


Specifications


General	DISPLAY UNIT D-sub 9-pin, x 1
Power requirements	5 V DC (supplied from the connected monitor)
Power consumption	0.5 W
	0.7 W max.
Maximum dimensions (w/h/d)	424 x 44 x 157 mm (16 3/4 x 1 3/4 x 6 1/4 inches)
Mass	1.4 kg (3 lb 1 oz)
Operating temperature	0°C to 40°C (32°F to 104°F)
Recommended working temperature	20°C to 30°C (68°F to 86°F)
Operating humidity	0% to 90% (no condensation)
Control connectors	
Related equipment	BVM-20F1U/20F1E/14F1U/14F1E Color Video Monitor
Accessories not supplied	BKM-12Y Monitor Memory Card MB-510 Rack Mount Kit
Accessories supplied	Rack mount attachment screws (4) Operation Manual (1)
	Design and specifications are subject to change without notice.

SECTION 2 DISASSEMBLY


2-1-1. CABINET REMOVAL (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)

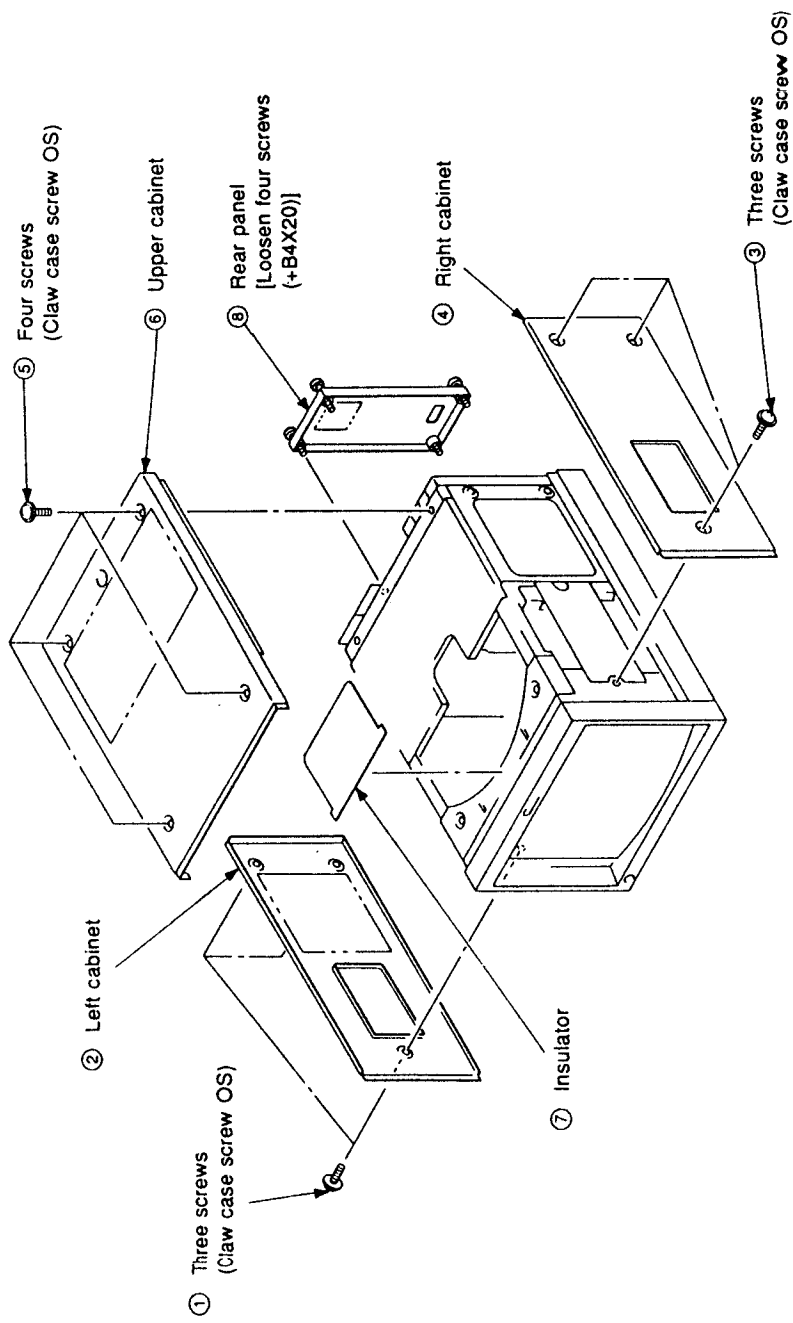


2-1-2. CABINET REMOVAL (BVM-20E1E/20E1U/20F1E/20F1U)

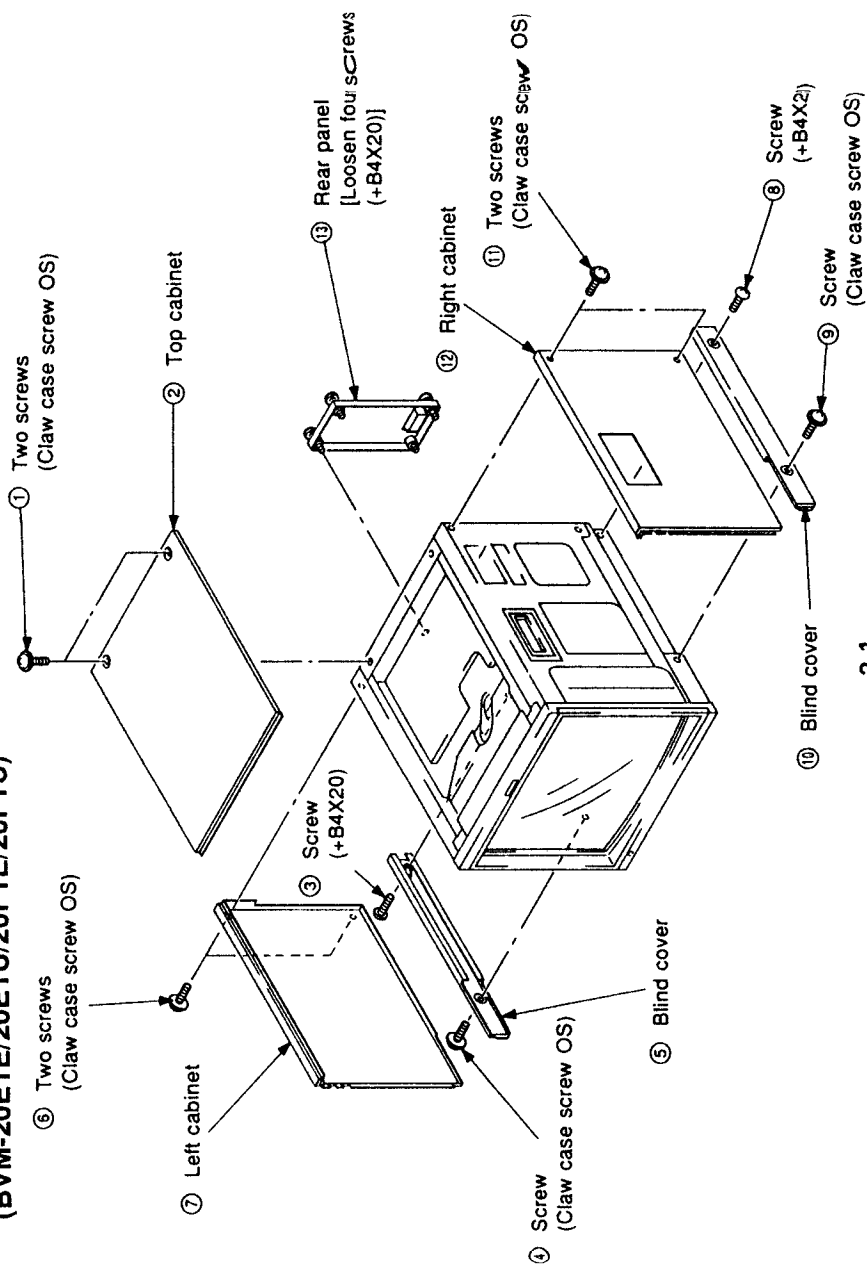


2-2-1. PA BOARD REMOVAL
(BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)

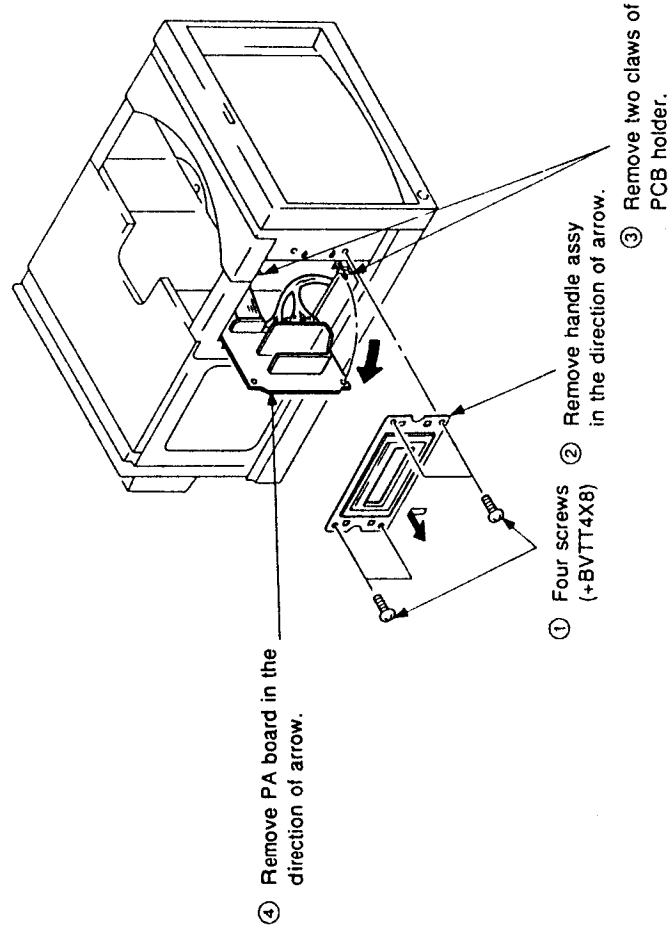


2-2-2. PA BOARD REMOVAL
(BVM-20E1E/20E1U/20F1E/20F1U)

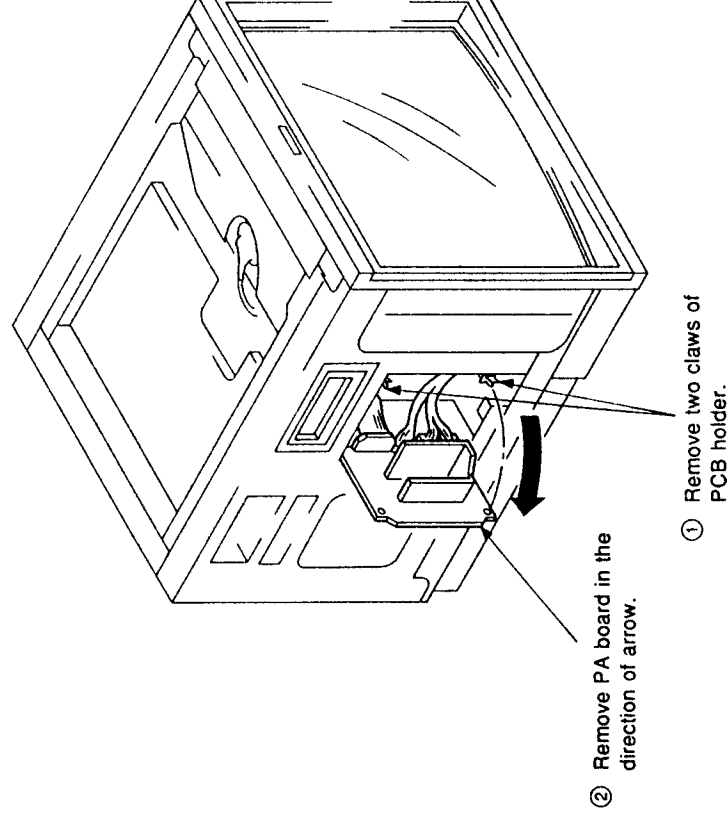

**2-3-1. PC BOARD REMOVAL
(BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)**

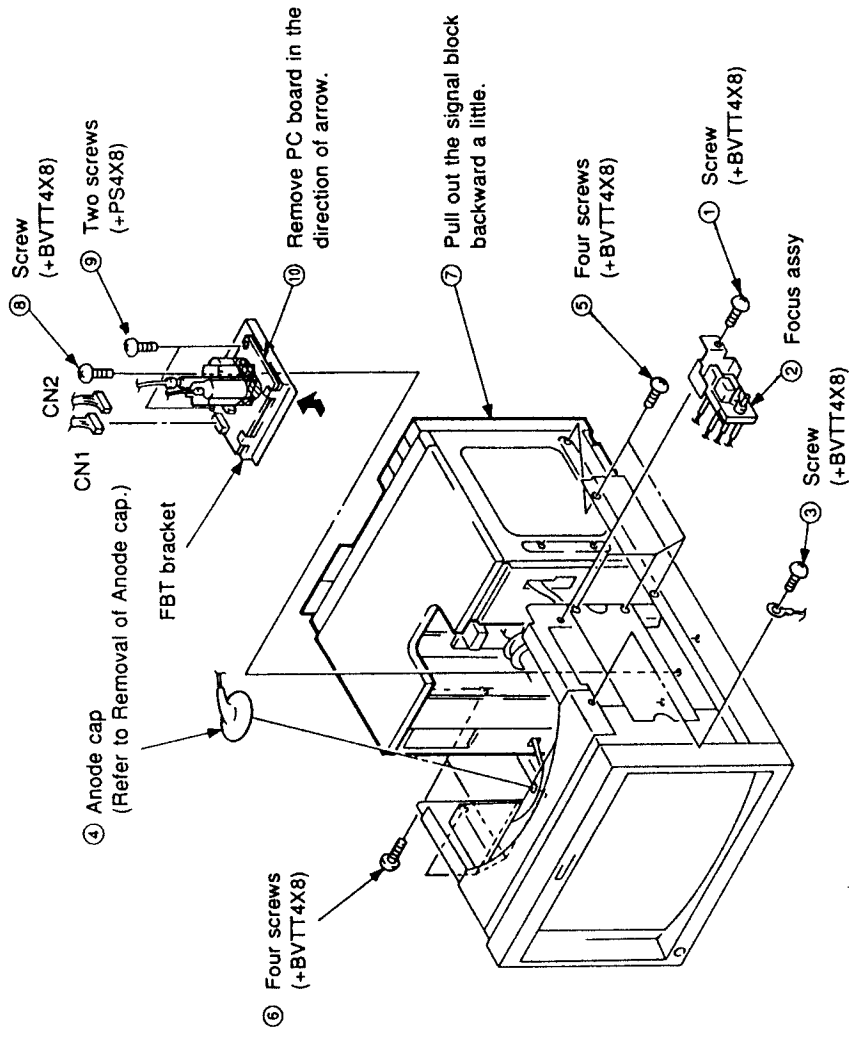


**2-3-2. PC BOARD REMOVAL
(BVM-20E1E/20E1U/20F1E/20F1U)**

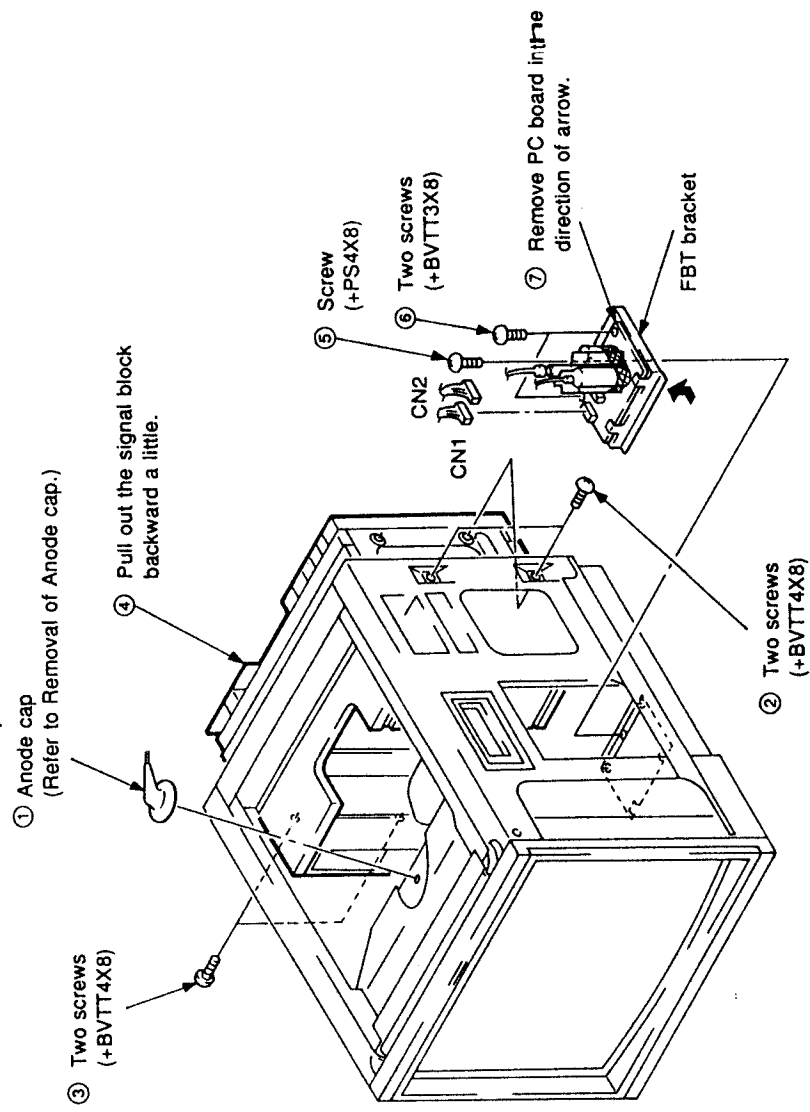


2-4. E AND G BOARDS REMOVAL AND CHECK

Note: The G board can be checked in the same way of the E board.

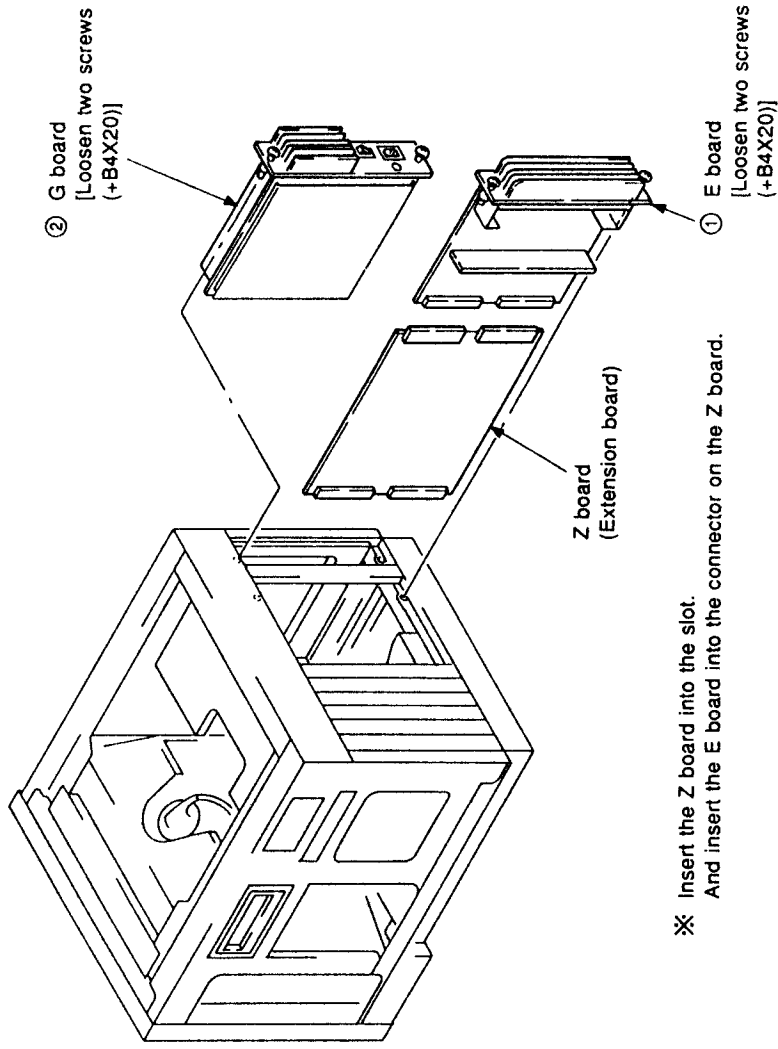

2-5. BC AND BK BOARDS REMOVAL AND CHECK


Note: The BC board can be checked in the same way of the BK board.

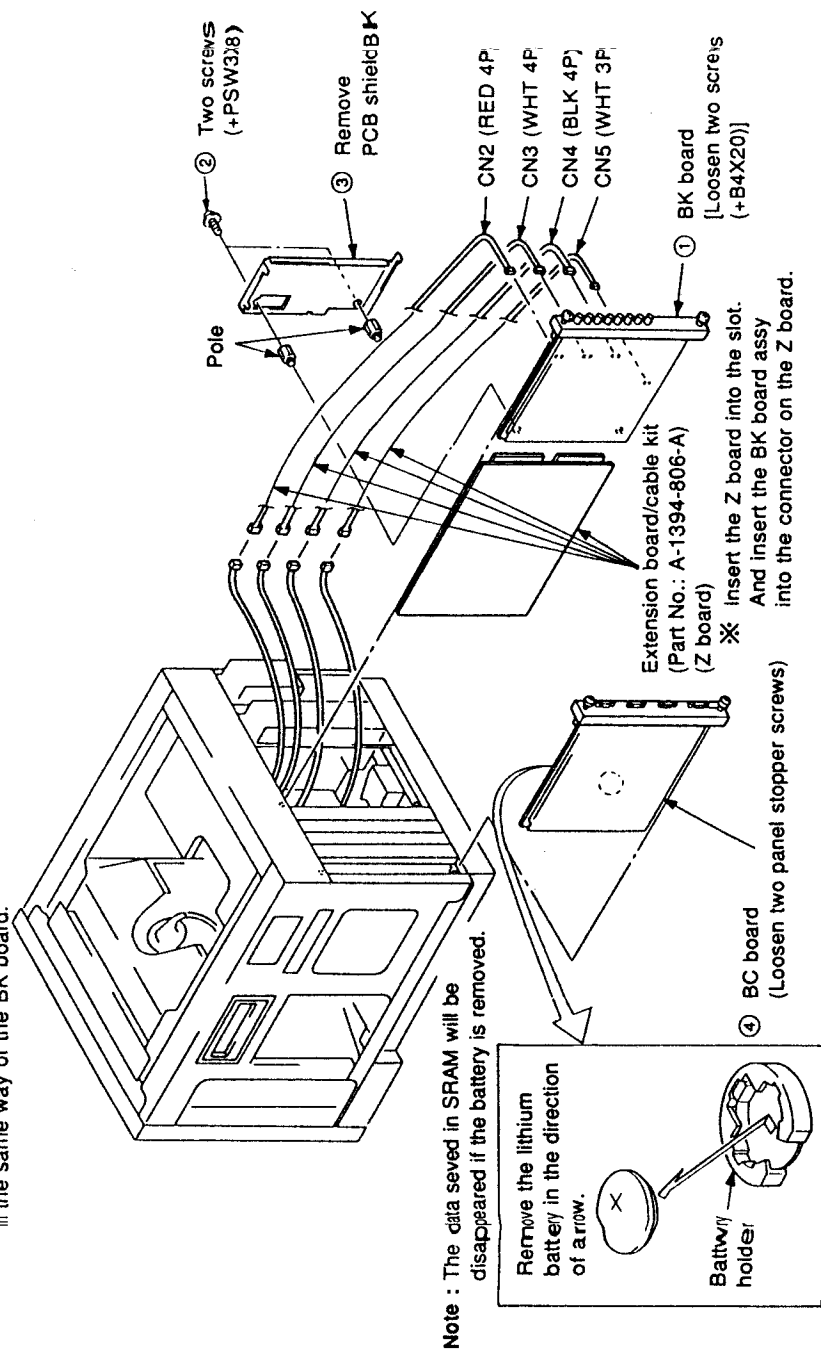


Note: The data saved in SRAM will be disappeared if the battery is removed.

Removal of Lithium Battery


2-6-1. SLOT CARD ASSY REMOVAL
(BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)

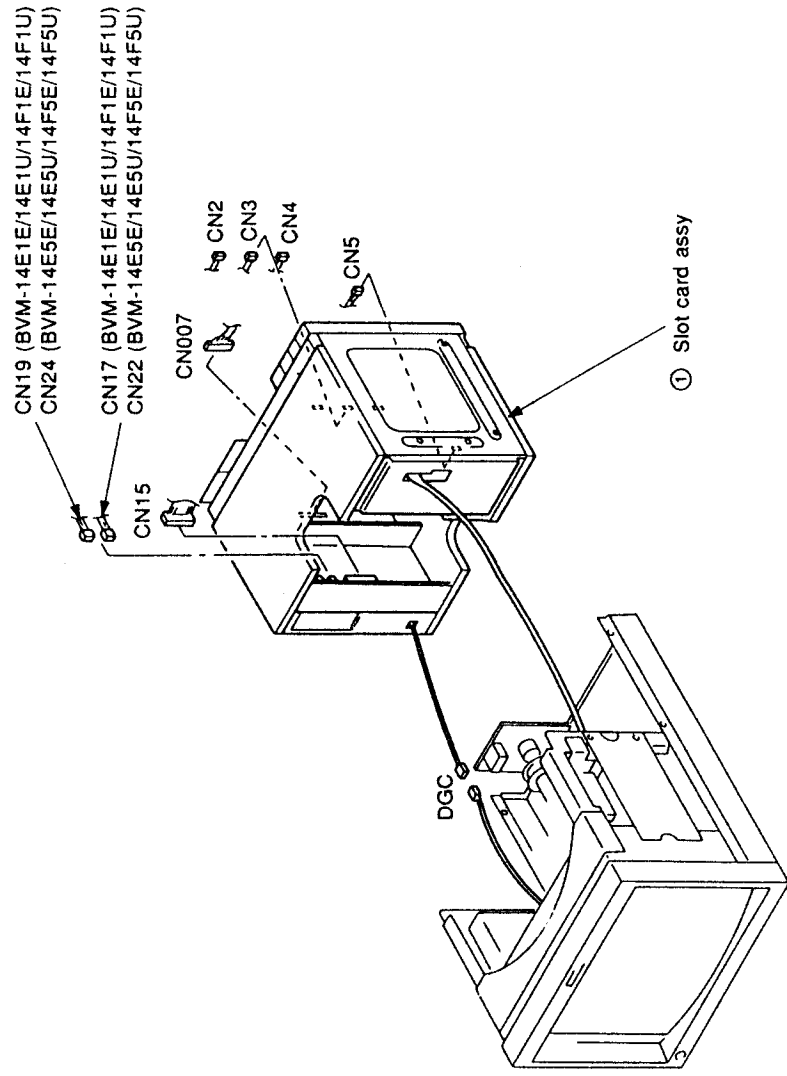


2-6-2. SLOT CARD ASSY REMOVAL
(BVM-20E1E/20E1U/20F1E/20F1U)

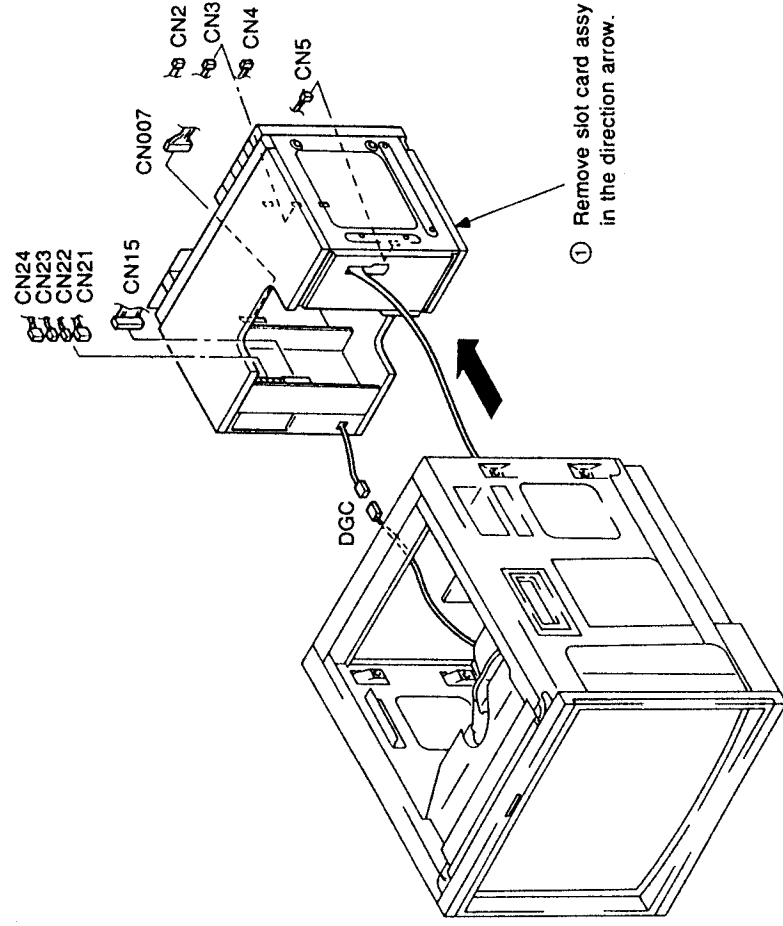


2-7. TA AND TB BOARDS REMOVAL

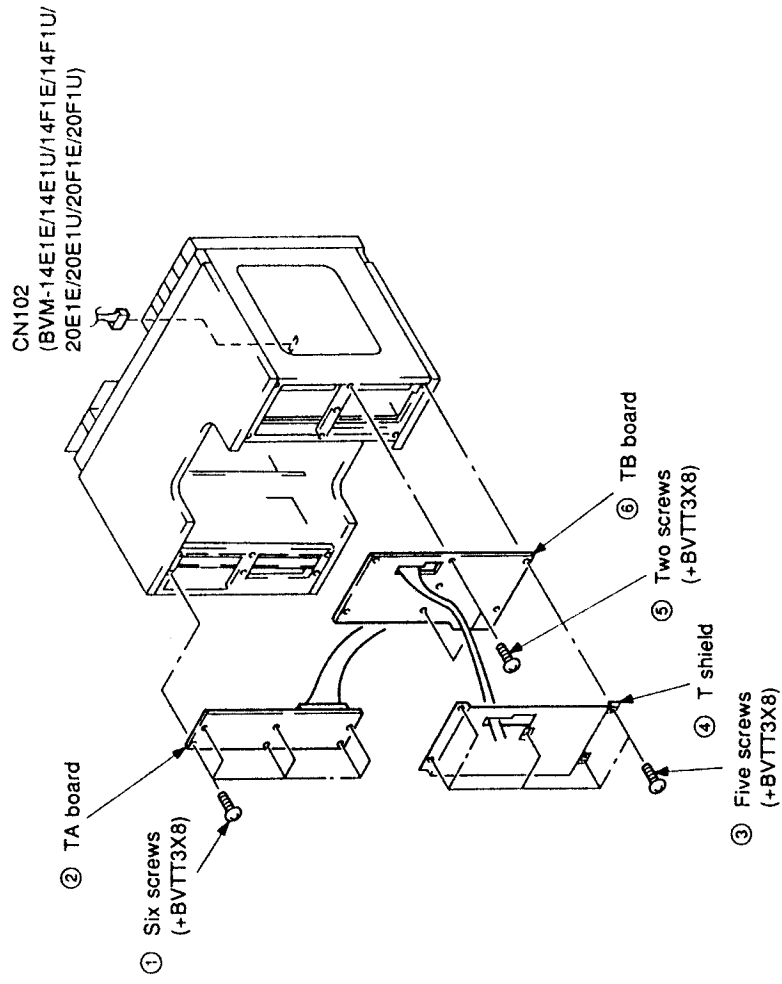


2-8-1-1. YA, YB AND YC BOARDS REMOVAL (BVM-14E1E/14E1U/14F1E/14F1U)

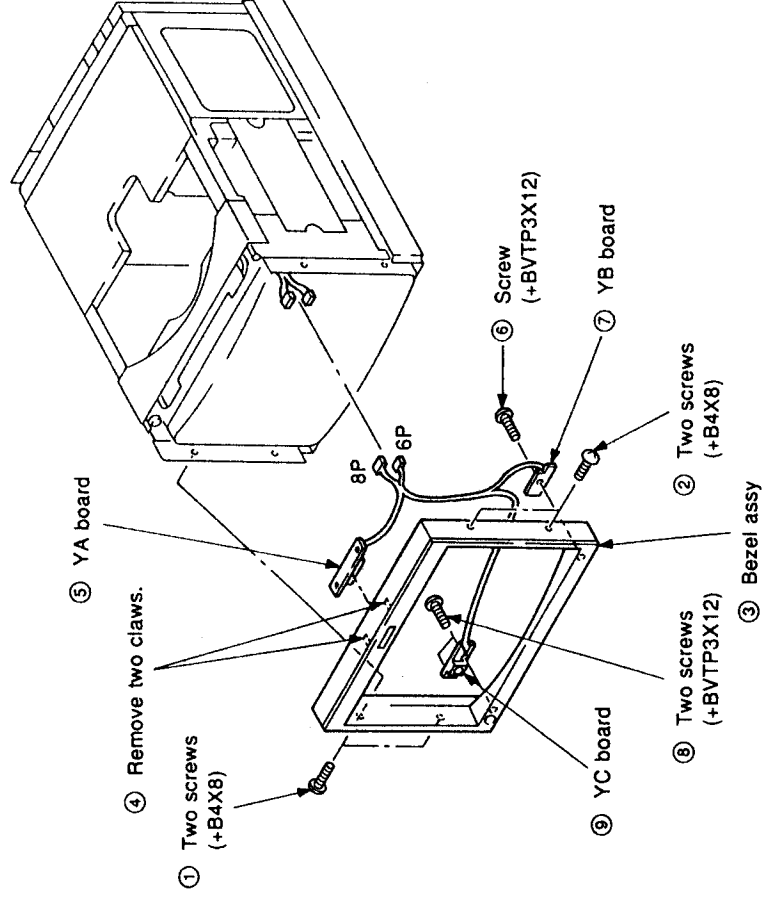


**2-8-1-2. BEZEL ASSY REMOVAL
(BVM-14E5E/14E5U/14F5E/14F5U)**

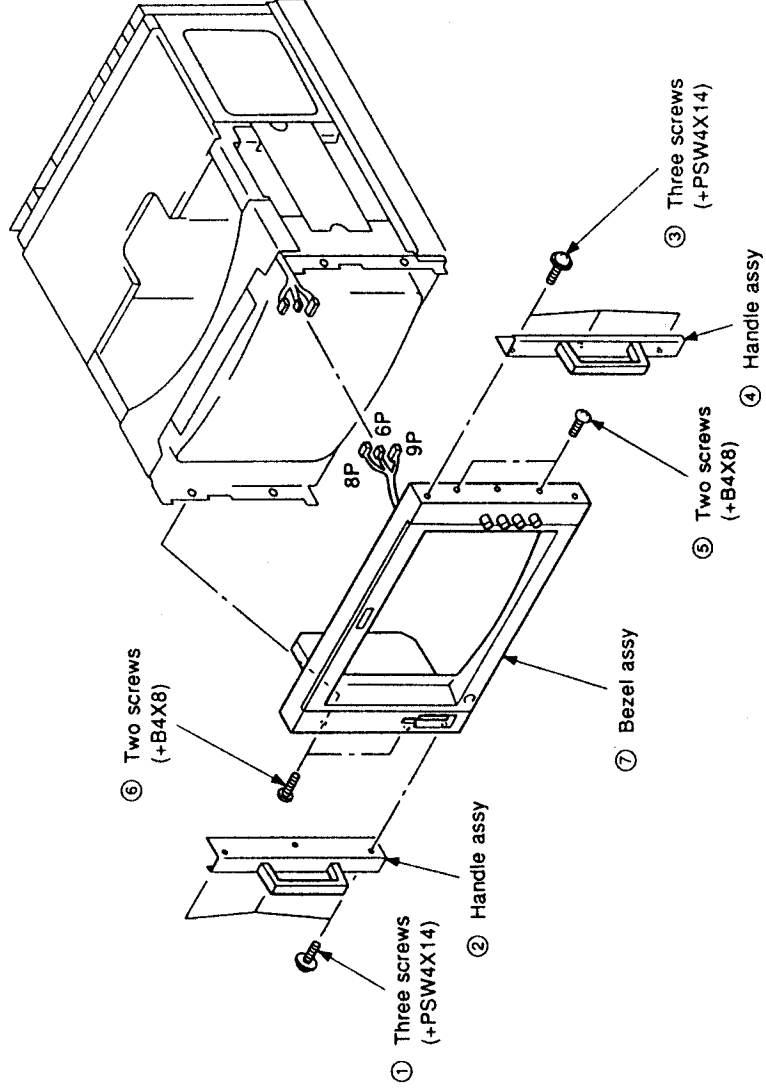


**2-8-1-3. HA, HB, YA, YB AND YC BOARDS REMOVAL
(BVM-14E5E/14E5U/14F5E/14F5U)**

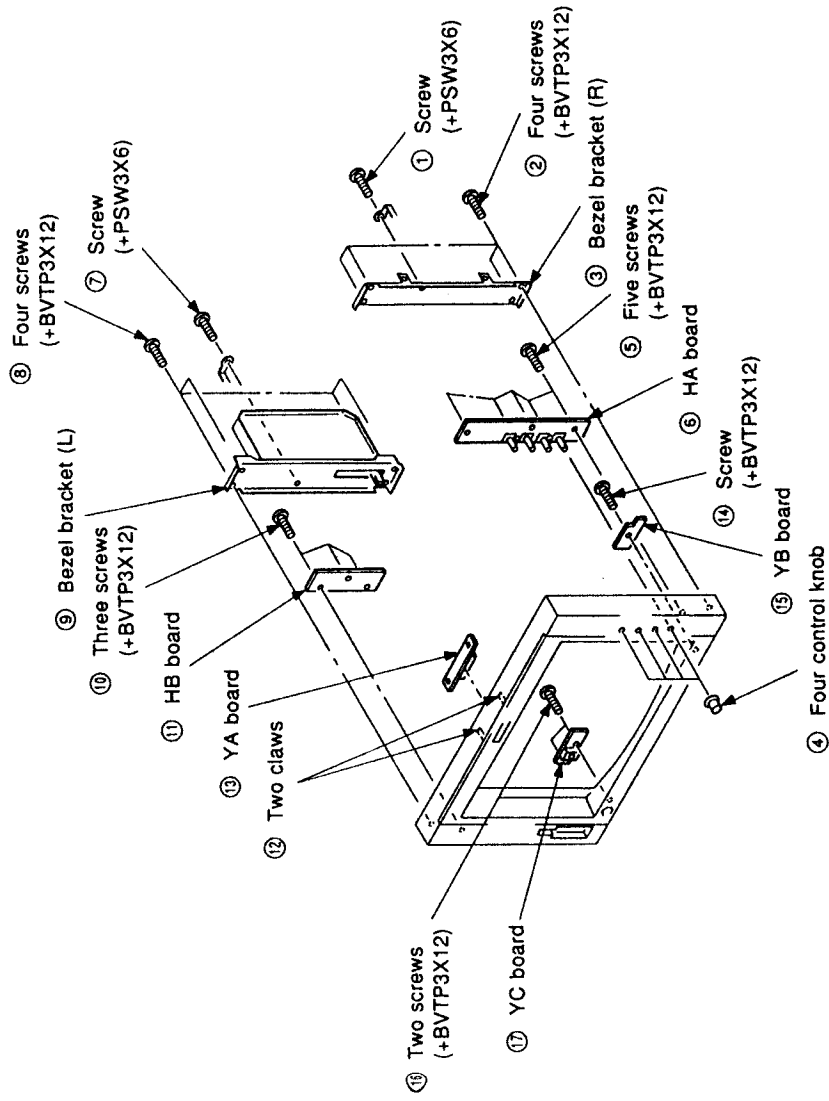


**2-8-2. YA, YB AND YC BOARDS REMOVAL
(BVM-20E1E/20E1U/20F1E/20F1U)**

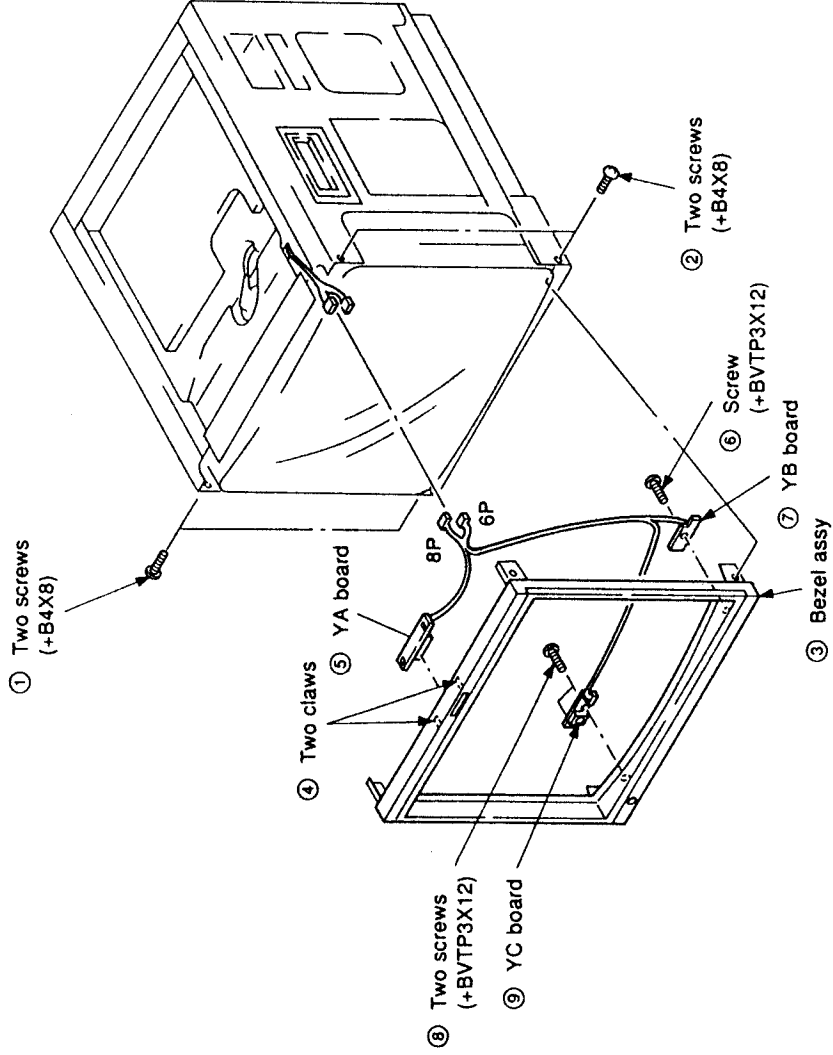

**2-9-1. PICTURE TUBE REMOVAL
(BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)**

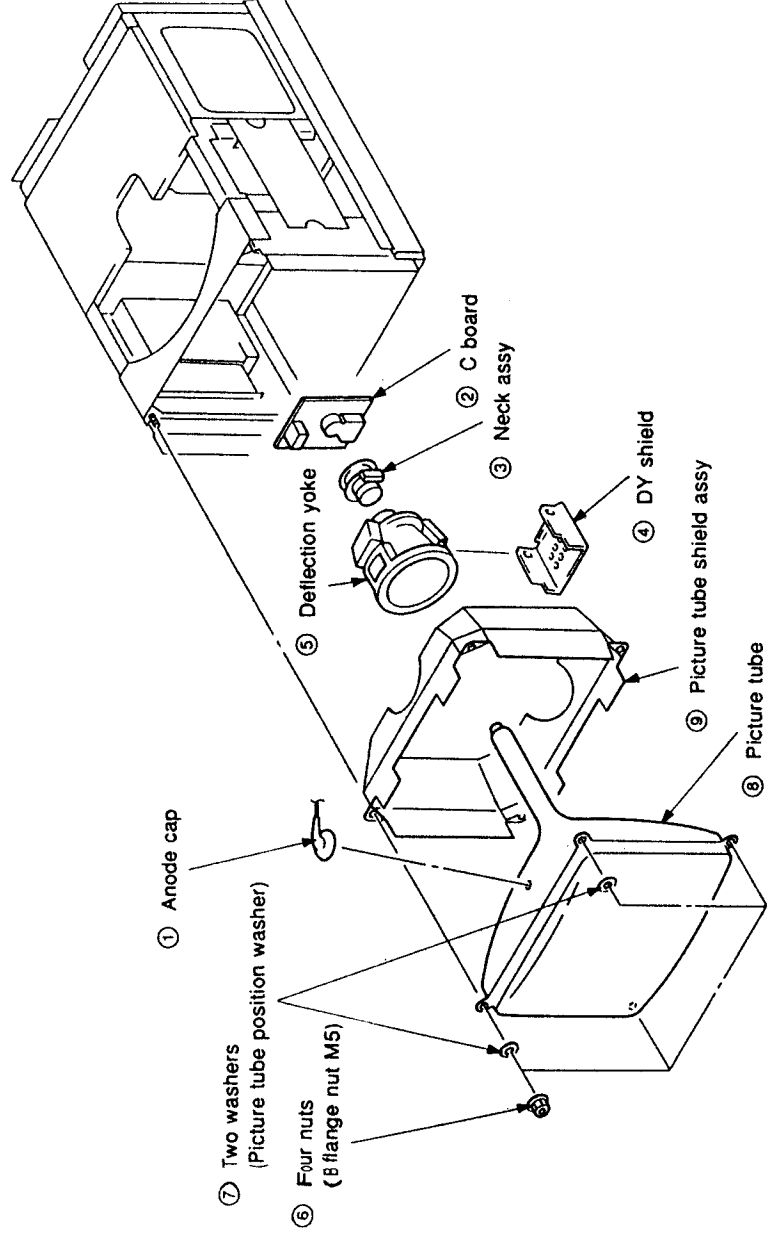


2-9-2. PICTURE TUBE REMOVAL (BVM-20E1E/20E1U/20F1E/20F1U)

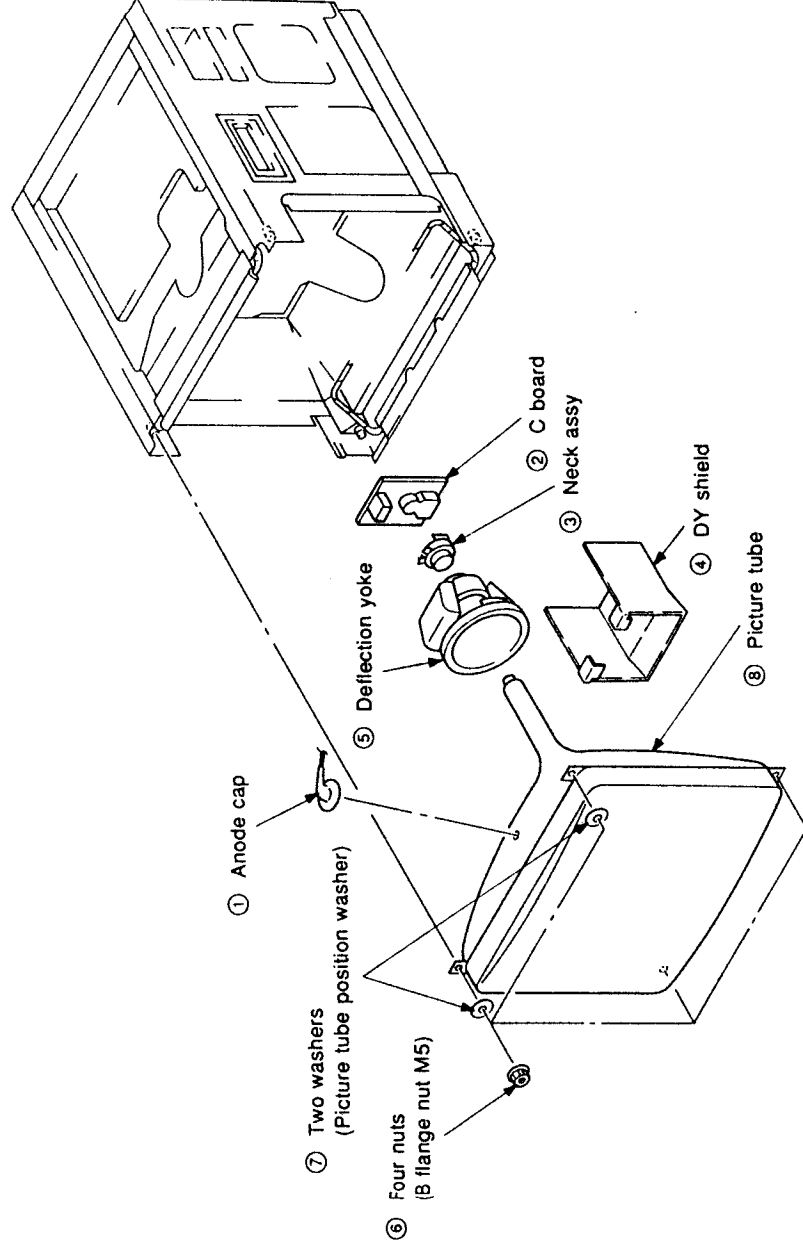

• REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, picture tube shield or carbon painted on the picture tube, after removing the anode.

• REMOVING PROCEDURES

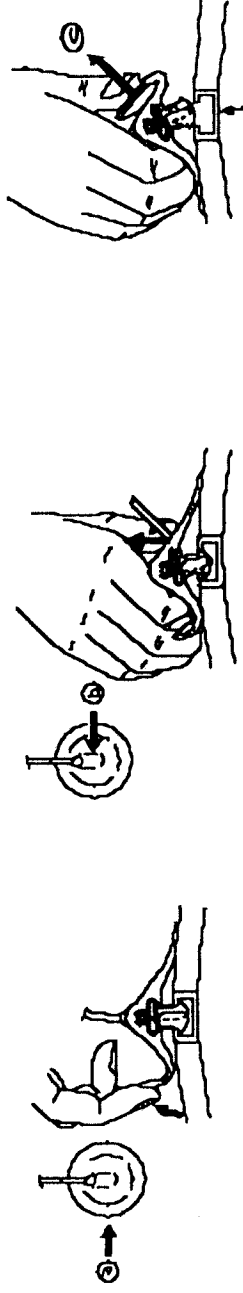


1. Turn up one side of the rubber cap in the direction indicated by the arrow ①.

2. Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②.


3. When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ③.

• HOW TO HANDLE AN ANODE-CAP


1. Don't hurt the surface of anode-caps with sharp shaped material!
2. Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
3. Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

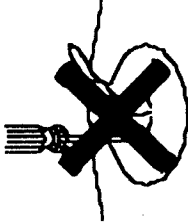


**2-10. UPPER COVER REMOVAL
(BKM-10R)**

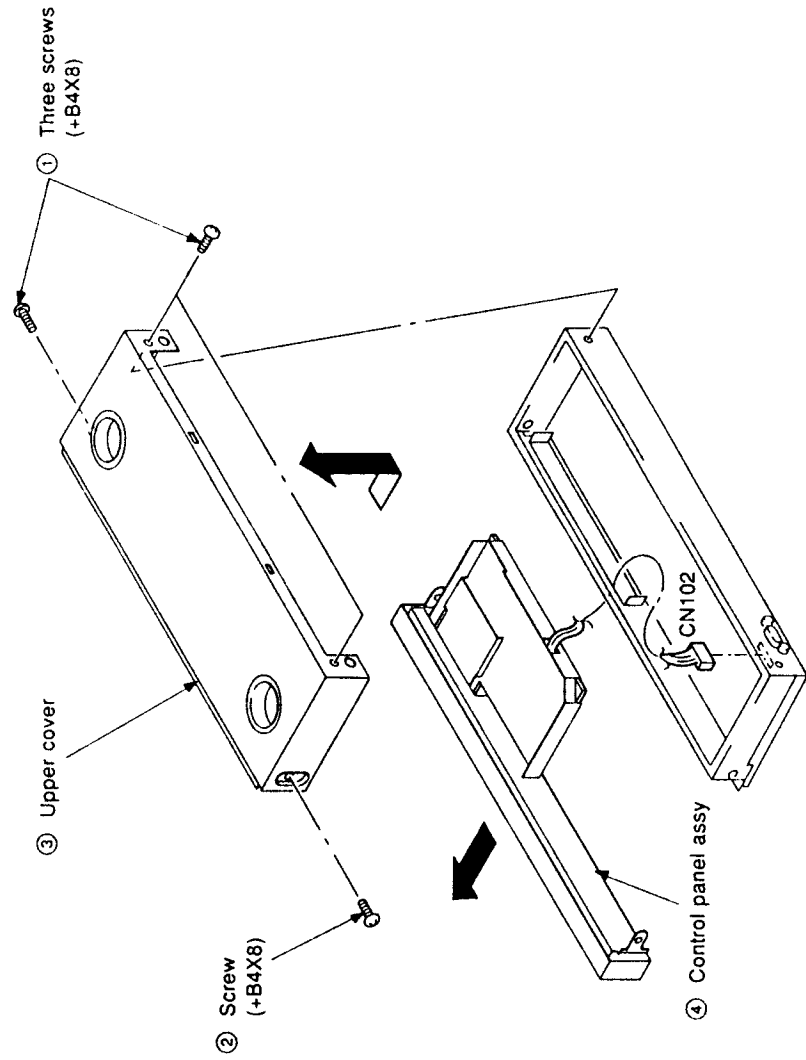


**2-11. HA AND HB BOARDS REMOVAL
(BKM-10R)**

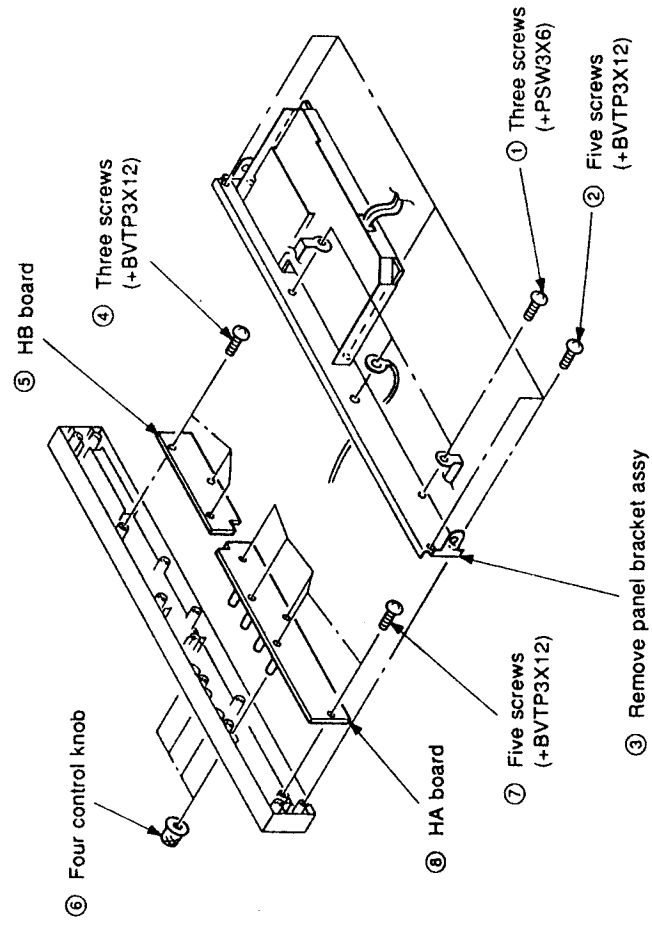

2-12. HC BOARD REMOVAL (BKM-10R)

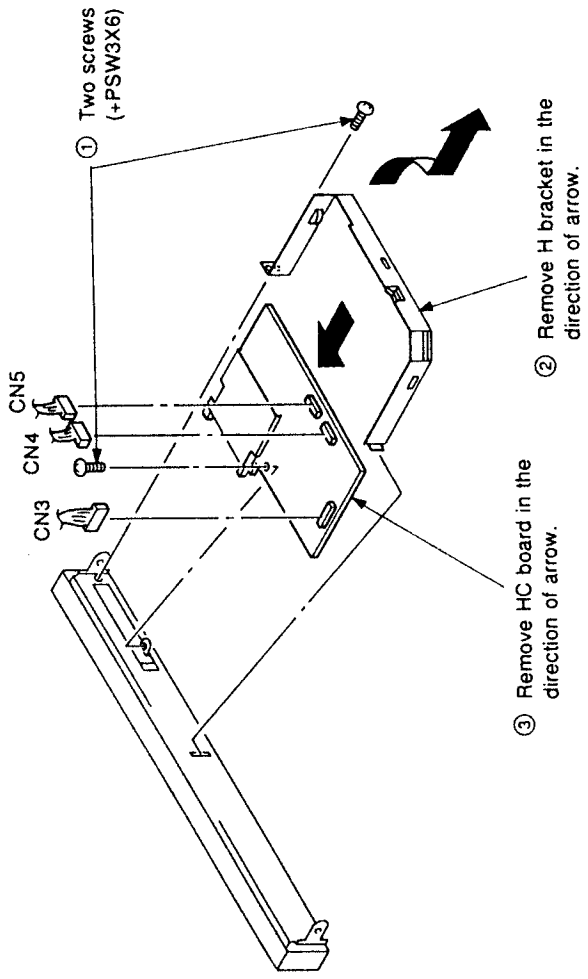

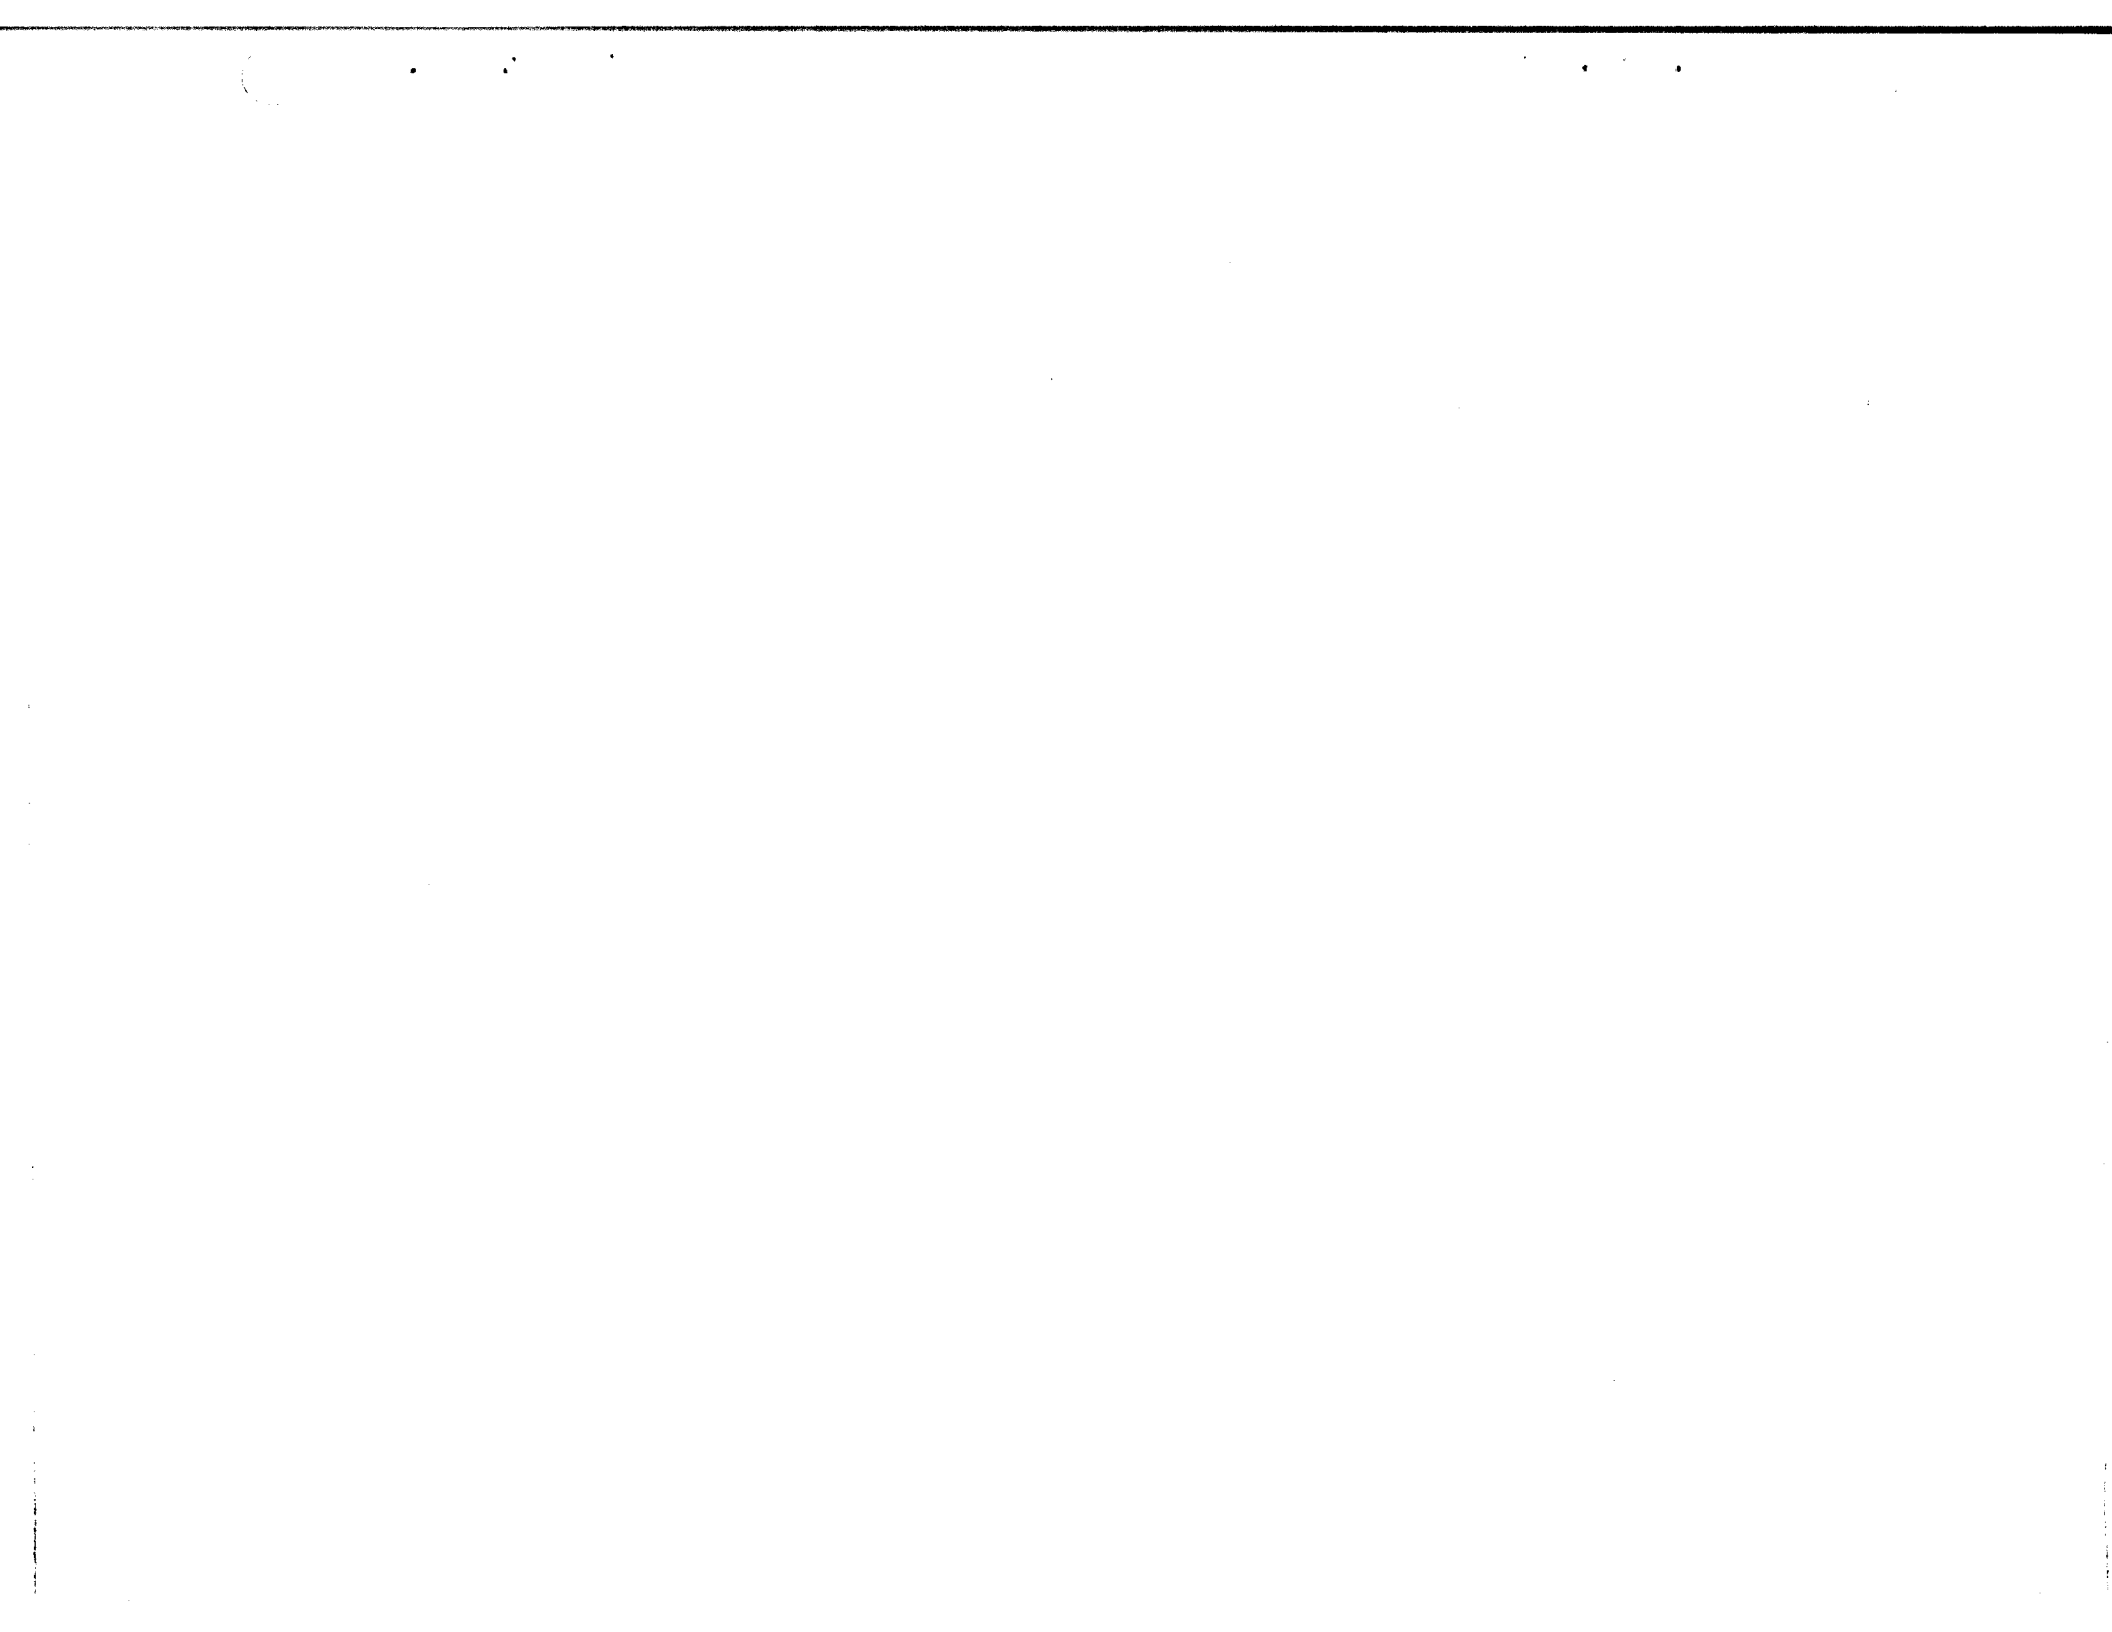

SECTION 3 CIRCUIT DESCRIPTIONS

3-1. BK Board Descriptions

1-1. BK Select Switch

When the BK SELECT signal is LOW, the Y/G signal input to the Y/G terminal (TB1) is input to IC101 via the buffer amplifier (Q100 and Q102). When HIGH, the Y/G signal input to the (11B) terminal of CN2 is input to IC101.

At IC101, the 2Y/2G signal input to the (12B) terminal of CN2 is switched.

The same is performed for the PB/B signal and PR/R signal.

1-2. Clamp Circuit (1)

The analog switch (IC101) turns on according to the Y-CLP-P pulse. As a result, the pedestal voltage of the Y/G signal is sample-held. At IC102 (1/2), this voltage and the reference voltage (0 Vdc) are compared, the bias current of the Y/G signal clamp amplifier (Q103 to Q105) is controlled so that the pedestal voltage of the Y/G signal becomes 0 Vdc. The same is performed for the PB/B signal and PR/R signal. However, the PR signal (R-Y signal) and PB signal (B-Y signal) are clamped by the C-CLP-P pulse.

1-3. W B INSERT Pulse Insertion Circuit

To adjust the level of the R-Y signal and B-Y signal, the WHITE pulse and BLACK pulse are alternately inserted in the horizontal blanking period of the signals. For the Y/G signal, at IC101 (3/3), the voltage in the period where the WHITE and BLACK pulses are inserted is made 0 Vdc. For the R-Y signal, the WHITE and BLACK pulses are inserted at IC301 (3/3). The level of the WHITE pulse is set by the R-Y PULSE LEVEL voltage. The level of the BLACK pulse is set by the R-Y CLAMP OFFSET voltage. These two voltages are switched by the WHITE INSERT P at IC500 (2/3), voltages are switched by the WHITE INSERT P at IC500 (2/3), passed through IC300 (1/2), and input to IC301 (3/3). The same is performed for the B-Y signal.

1-4. Chroma Level Adjustment Circuit

The R-Y signal is level-adjusted by IC303 (gain control amplifier). The R-Y signal output from IC303 is input to IC304 (1/3) and the voltage of the WHITE pulse is sample-held. At IC302 (2/2), this voltage and the CHROMA voltage are compared, and the gain of IC303 is controlled. As a result, the WHITE pulse voltage becomes equal to the CHROMA voltage. Consequently, by varying the CHROMA voltage, the chroma level can be adjusted. The R-Y signal output from IC303 is also input to IC325. Here, the voltage of the BLACK pulse is sample-held. At IC320 (2/2), this voltage and the GND level is compared to control the DC bias of IC303. As a result, the pedestal level of the R-Y signal is fixed at the GND level. The same is performed for the B-Y signal.

1-5. Matrix Circuit

The R, G, and B signals are created by inputting the Y, R-Y, and B-Y signals to the matrix circuit.

- **R signal matrix circuit**

At Q140, the Y signal and R-Y signal are added to create the R signal.

- **G signal matrix circuit**

At Q306, the R-Y signal which had passed through IC305 (gain control amplifier) is added with the B-Y signal. This signal is inverted, amplified, and added to the Y signal at Q350 to create the G signal. The mixing rate is determined by R332, R333, and R338. The R-Y, and B-Y GAIN is finely adjusted.

- **B signal matrix circuit**

At Q540, the Y signal and B-Y signal are added to create the B signal.

1-6. RGB switch

The RGB signal and R, G, and B signals are switched after the matrix circuit.

1-7. Clamp Circuit (2)

The voltage of the BLACK pulse of the R signal is sample-held by IC107. At IC106 (1/2), this voltage and the GND level are compared and the DC bias of the R signal amplifier Q142 to Q144) is controlled. As a result, the pedestal level of the R signal is fixed at the GND level.

The same is performed for the G and B signals.

1-8. Half Blanking Switch

The character is half-blanked by the CHAR BLK signal.

1-9. 100 IRE Pulse, SET UP Pulse Insertion Circuit

To adjust the contrast, the 100 IRE pulse and SET UP pulse are alternately inserted in the horizontal blanking period of the R, G, and B signals.

For the R signal, at IC110 (1/3), the 100 IRE pulse and SET UP pulse are inserted. The level of the 100 IRE pulse is set by the R 100 IRE voltage. The level of the SET UP pulse is set by the R SET UP voltage. These two voltages are switched by WHITE INSERT P by IC113 (3/3), and input to IC110 (1/3). The same is performed for the G and B signals.

1-10. Blue-Only Switch

In the blue-only mode, the B signal is output instead of the R signal at IC110 (3/3), and the B signal is output instead of the G signal at IC310 (3/3).

1-11. Contrast, Bright Adjustment Circuit

The R signal is contrast-adjusted by IC112 (gain control amplifier). The R signal output from IC112 and amplified by Q167 to Q169, input to IC113 (1/3), and the voltage of the 100 IRE pulse is sample-held. At IC114 (1/2), this voltage and the CONT voltage are compared, and the IC112 gain is controlled. As a result, the 100 IRE pulse and CONT voltage becomes equal. Consequently, by varying the CONT voltage, the contrast level can be adjusted. The R signal output from Q167 to Q169 is also input to IC113 (2/3). Here, the voltage of the SET UP pulse is sample-held. At IC114 (2/2), this voltage and the GND level is compared to control the DC bias of IC112. As a result, the pedestal level of the R signal is fixed at the GND level. The DC bias of the R signal amplifier (Q167 to Q169) is controlled by the BRT voltage to adjust BRIGHT. At IC701 (1/3), the BRT voltage is created by switching the BRIGHT voltage and BRT CENTER voltage in the period inserted with the pulse (100IRE pulse, and SET UP pulse) and in other periods.

The same is performed for the B and G signals.

1-12. Pulse Insertion Circuit

At IC116, The BIAS REF pulse, DRIVE REF pulse, and character pulse are inserted in the R signal. The level of the BIAS REF pulse is set by the BIAS REF voltage. The level of the DRIVE REF pulse is set by the DRIVE REF voltage. The same is performed for the B and G signals.

1-13. Drive Control Amplifier

To prevent the drive current of the CRT cathode from exceeding the reference value, and the drive voltage from exceeding the reference value, the levels of the R, G, and B signals are controlled.

The drive current of the CRT cathode is detected by the current of Pin ③ of the VIDEO OUT amplifier (IC119). The current of Pin ⑤ is clamped, 1/V-converted by IC123 (2/2), sampled by IC126 (2/3), and compared with the reference voltage (R DRIVE IK) at IC127 (2/2). When the drive current exceeds the reference value, the signal output from IC127 (2/2) is passed through IC117 (3/3), Q170 to Q172, and input to IC115 (R drive control amplifier) to lower its gain.

The drive voltage of the CRT cathode is detected by the voltage of Pin ④ of the VIDEO OUT amplifier (IC119). The voltage of Pin ⑥ is clamped by IC121 (1/2), sampled by IC126 (1/3), and compared with the reference voltage (R DRIVE V) at IC127 (1/2). When the drive voltage exceeds the reference value, the signal output from IC127 (1/2) is passed through IC117 (3/3) and Q170 to Q172 and input to IC115 (R drive control amplifier) to lower its gain.

The SUB CPU (IC902) sets whether to control the drive amount based on the drive current (current mode) or control the drive amount according to the drive voltage (voltage mode) (IK/V SW). Normally, the SUB CPU operates in the voltage mode and sets into the current mode during WB adjustment. The DRIVE COMP is used for converting the data of DRIVE V in the voltage mode, and the data of DRIVE IK in the current mode.

1-14. Clamp Circuit (3)

The voltage of the BLACK pulse of the R signal is sample-held by IC117 (2/3). At IC118 (1/2), this voltage and the GND level are compared and the DC bias of the R signal amplifier (Q174 to Q176) is controlled. As a result, the pedestal level of the R signal is fixed at the GND level.

The same is performed for the G and B signals.

1-15. Cut-Off Switch

At IC117 (1/3), the VIDEO TIMING pulse is used to switch between the R signal and cut-off voltage (-0.3 Vdc). The same is performed for the G and B signals.

1-16. VIDEO OUT Amplifier

IC119 is used to drive the R signal cathode of the CRT.

The same is performed for the G and B signals.

1-17. G2 Control

Of the G2 R signal, G2 G signal, and G2 B signal, the signal with the lowest voltage is input to IC705 (1/2), compared with the reference voltage (G2 REF) to become the G2 CONTROL signal, and output from Pin ⑩ of CN1 to the PA board to control the G2 voltage of the CRT.


2. ABL, Overload Detection

At IC901 (1/2), the ABL voltage and reference voltage (-1 Vdc) are compared. Normally, the ABL voltage is above -1 Vdc and therefore the output level of IC901 (1/2) is HIGH. If the ABL voltage goes down and it becomes less than -1 Vdc, the CONT. BRT will be therefore controlled so that this voltage will become -1 Vdc (constant). The output level of IC901 (1/2) is set to lower than the CONTRAST voltage and therefore the OVERLOAD signal and therefore the OVERLOAD signal output from IC904 (1/2) becomes HIGH.

3. Control Circuit

The sub CPU (IC902) performs serial communication with system controller using the three signals MISO, MOSI, and SCLK, and outputs the control signal according to the instructions of the system controller.

This IC also reads the adjustment data of the EEPROM (IC905) and outputs the adjustment voltage from the D/A converter (IC906 to IC911).

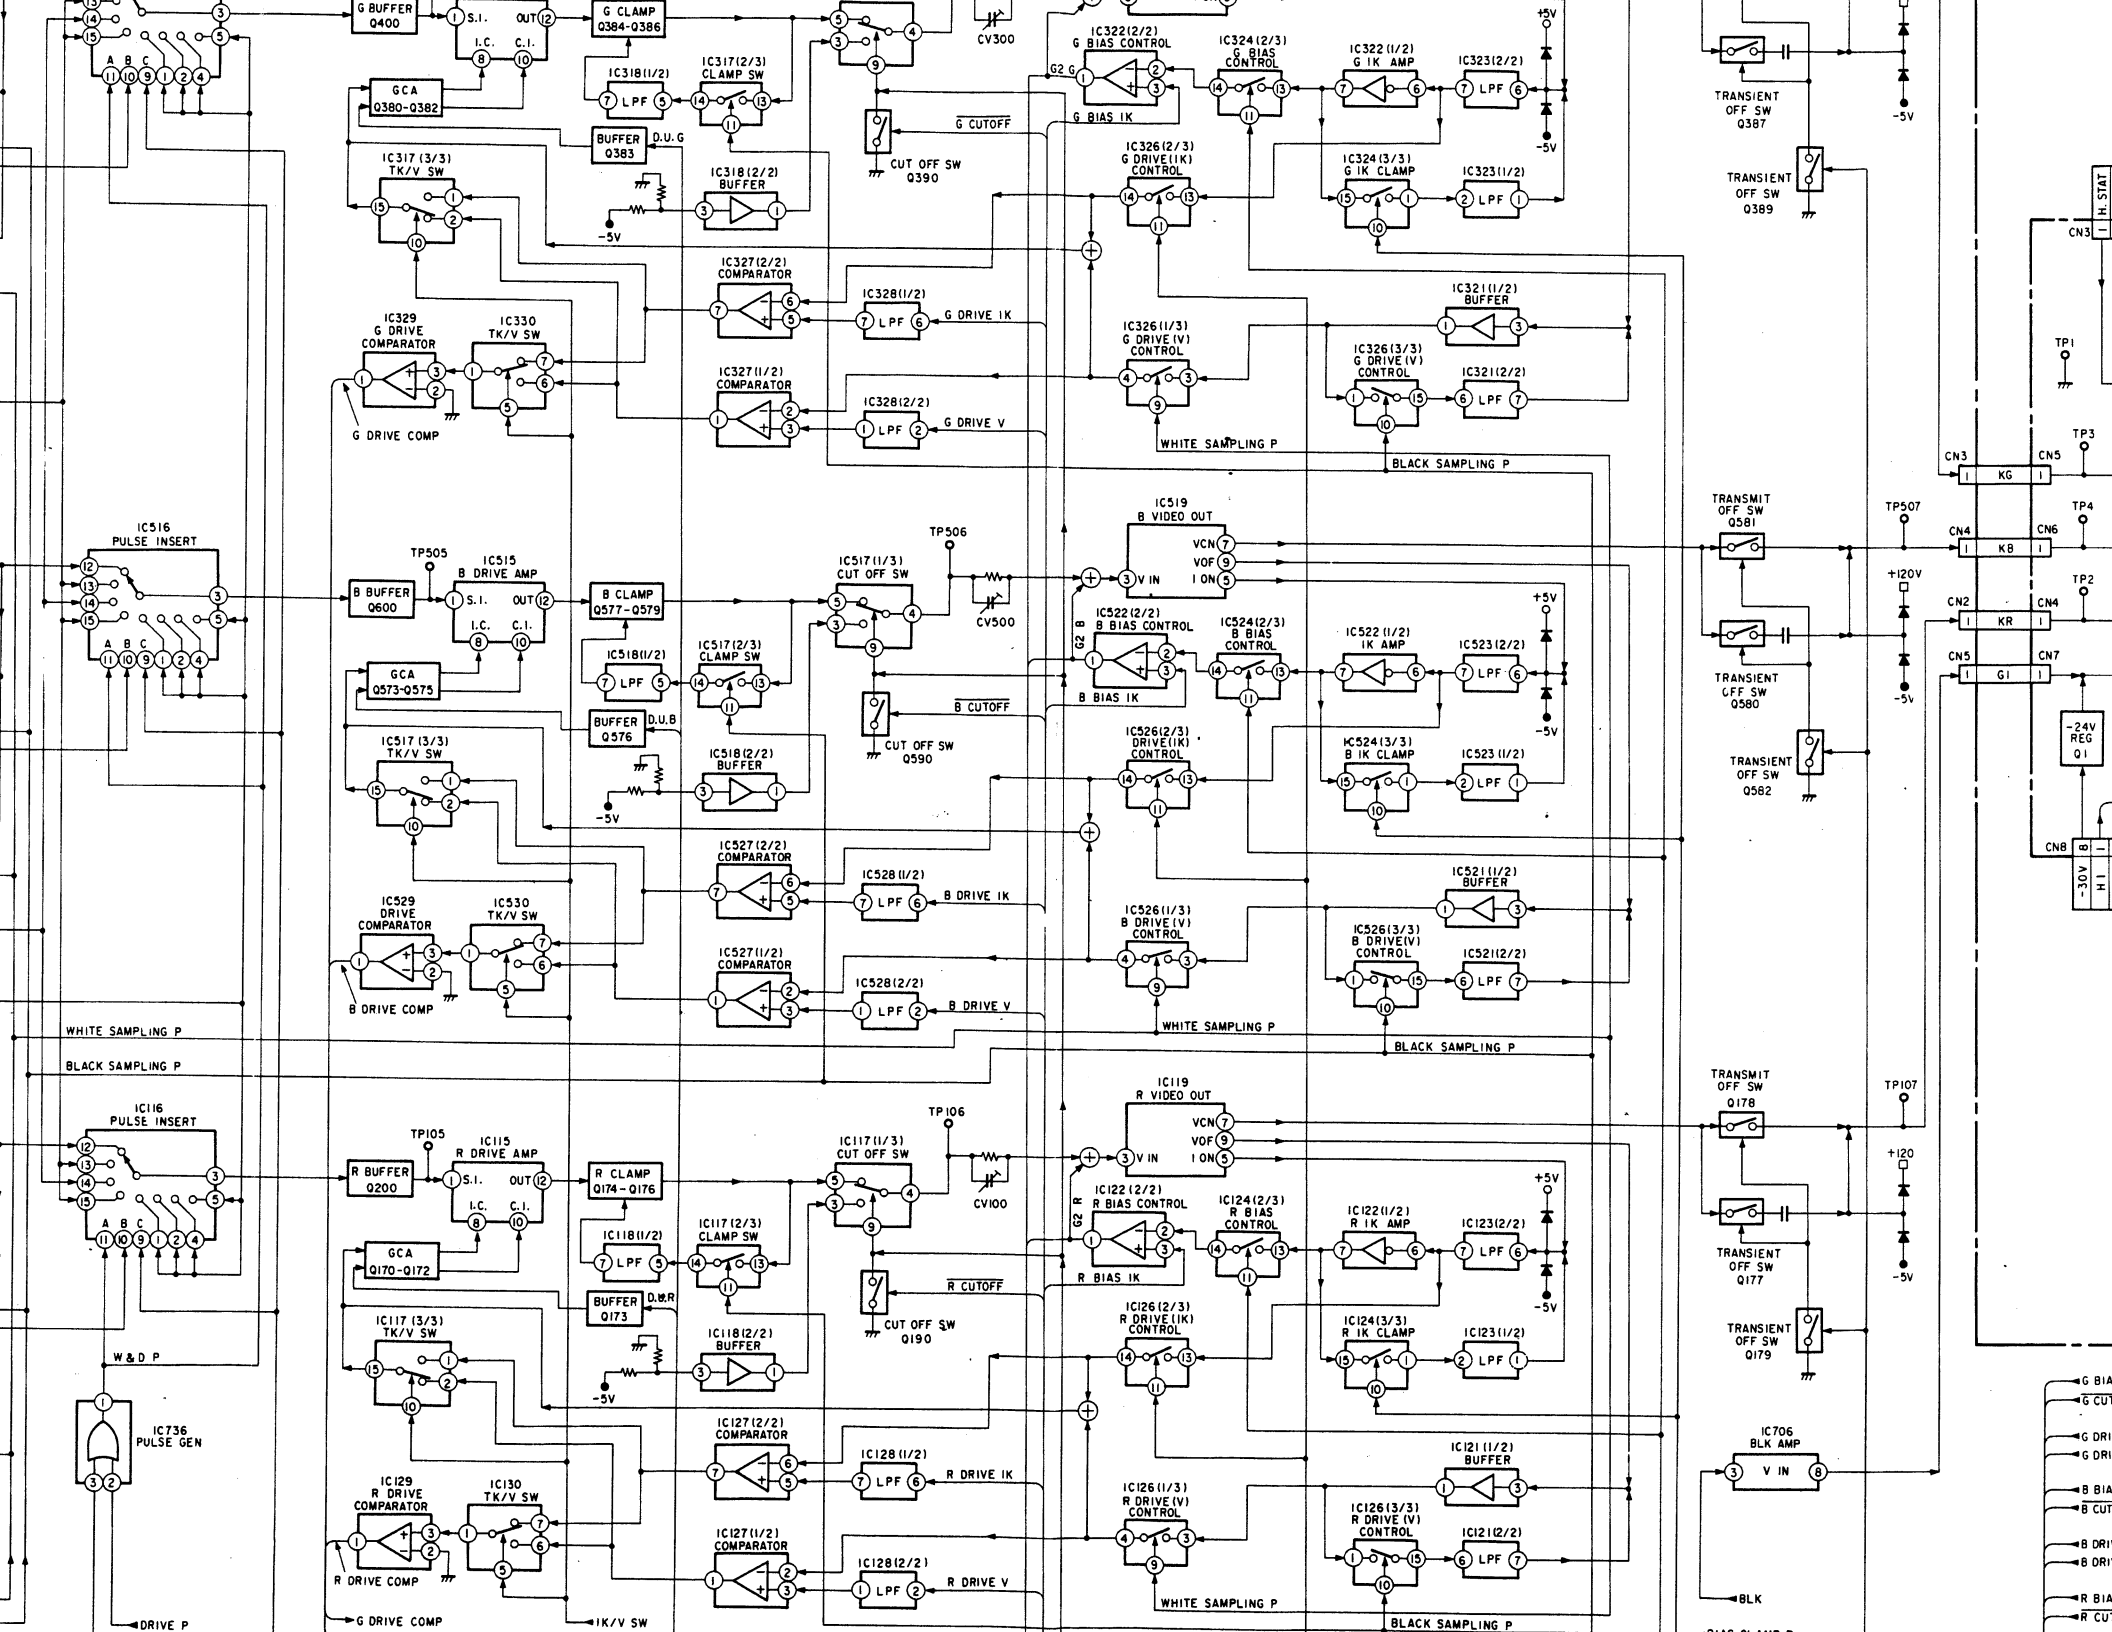

1. Serial Communication with Boards

The system control CPU (IC1) carries out serial communication with the sub CPU of each board inserted in the slots using the 4 signals-MISO, MOSI, SLCK, and SLOT NO. It regularly receives abnormal detection signals from the power supply circuit and deflection circuit, and information (KILLER) for discriminating between color and black/white for signals input from each input adapter. It chooses who to communicate with using the signals SLOT-0 to SLOT-7.

2. Internal Signal Generation

IC104 to IC110 generates internal signals (PLUGE, 5STEP, WHITE, GRAY, CROSS HATCH). The clock generated by IC121 (525 mode:14.3181 MHz, 625 mode:14.1875 MHz) is input to IC120 (sync generator) to generate the sync signal.

3. VITC Reading

The Y/G signal is input to IC102, IC103, and IC126, and the VITC signal is read and input to the CPU and to display the IC7 (character generator).

The Y/G signal is input to IC124 to display the closed caption signal.

4. Character Generator

IC7 (character generator) is controlled to display the menu, etc.

5. Parallel Remote Control

The input signal of CN5 (parallel remote control terminal) is read by IC5 (I/O PORT EXPANDER).

6. ISR Terminal


The CPU (IC1) carries out communication with the ISR devices via IC23 (serial control unit) and IC27 and IC28 (RS232C transceiver).



7. Serial Remote Terminal


The CPU (IC1) carries out communication with the remote devices via IC22 (serial control unit) and IC25 and IC26 (RS485 transceiver).


8. Communication with Control Block (HC Board)

The CPU (IC1) carries out communication with the control block (HC board) via IC14 (RS422 transceiver), receives key input information and the memory card reading data, and transmits LED light information and the memory card writing data.

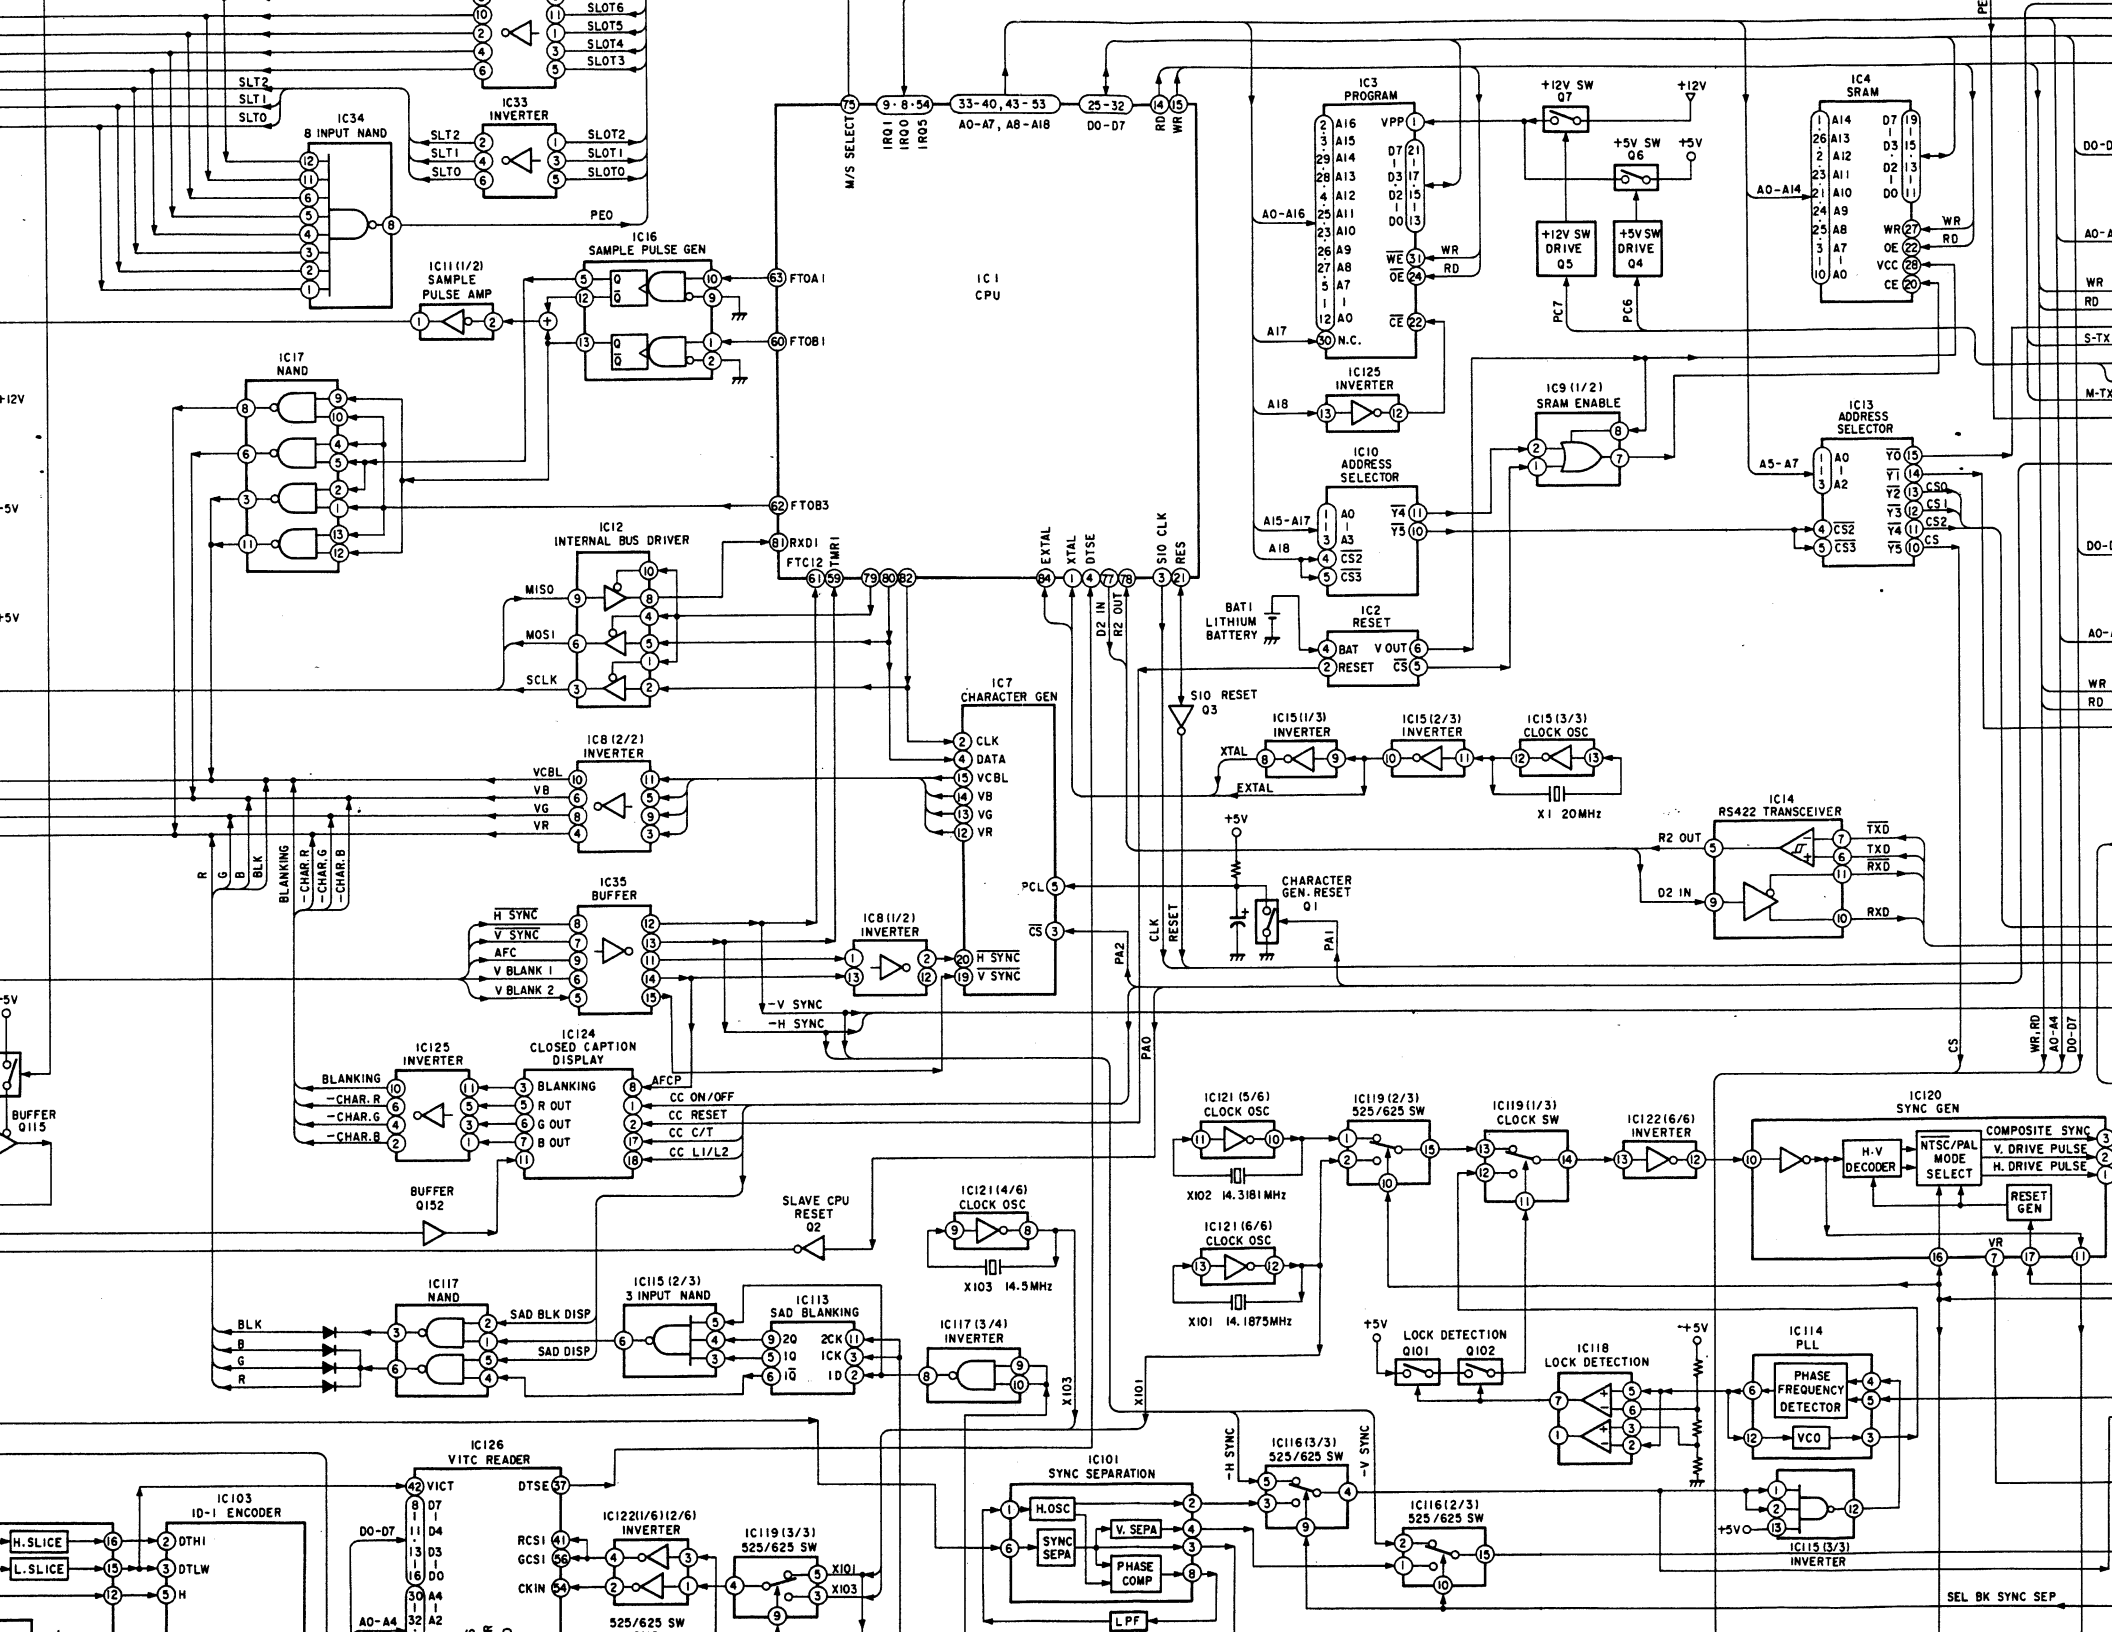

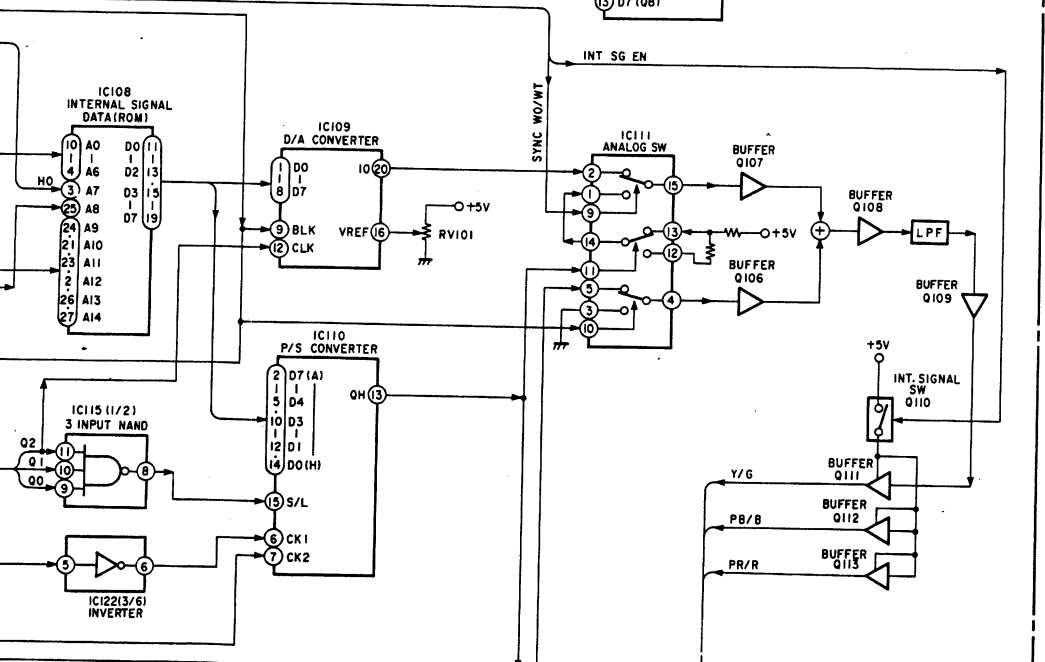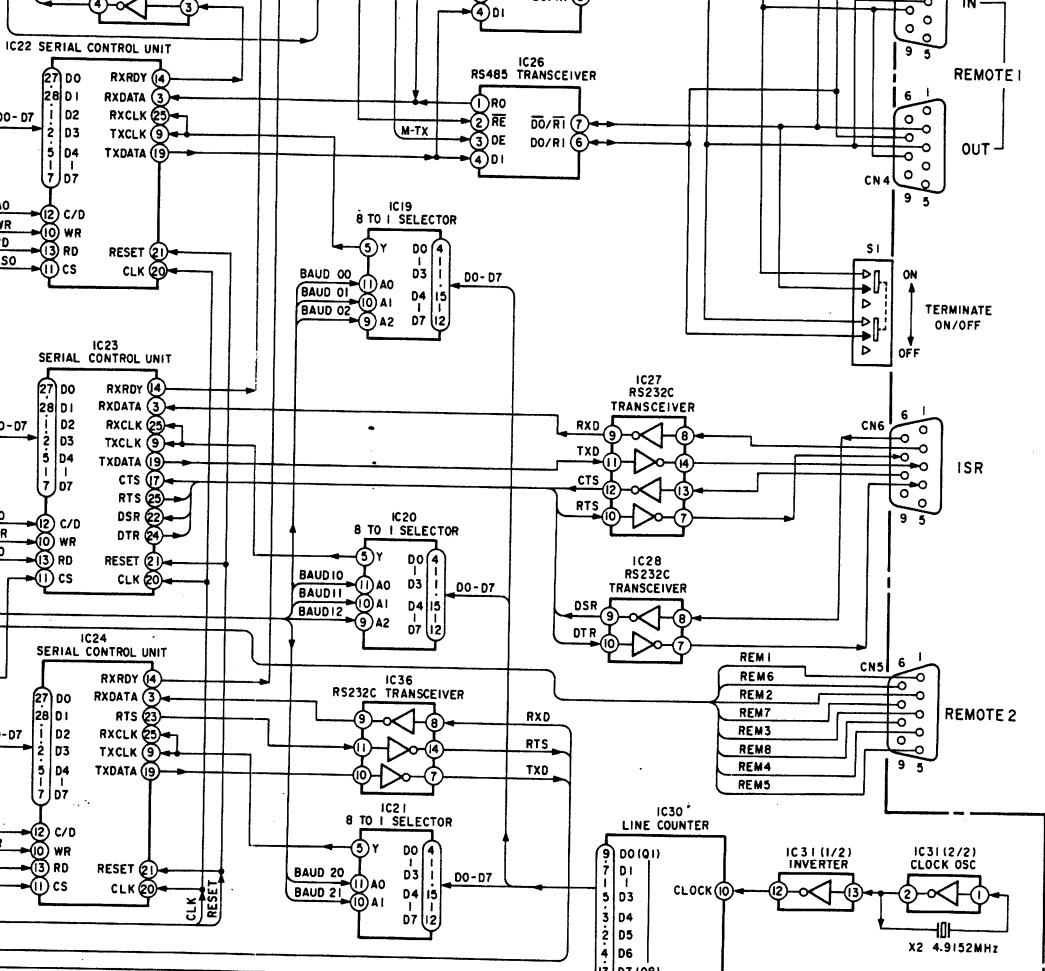

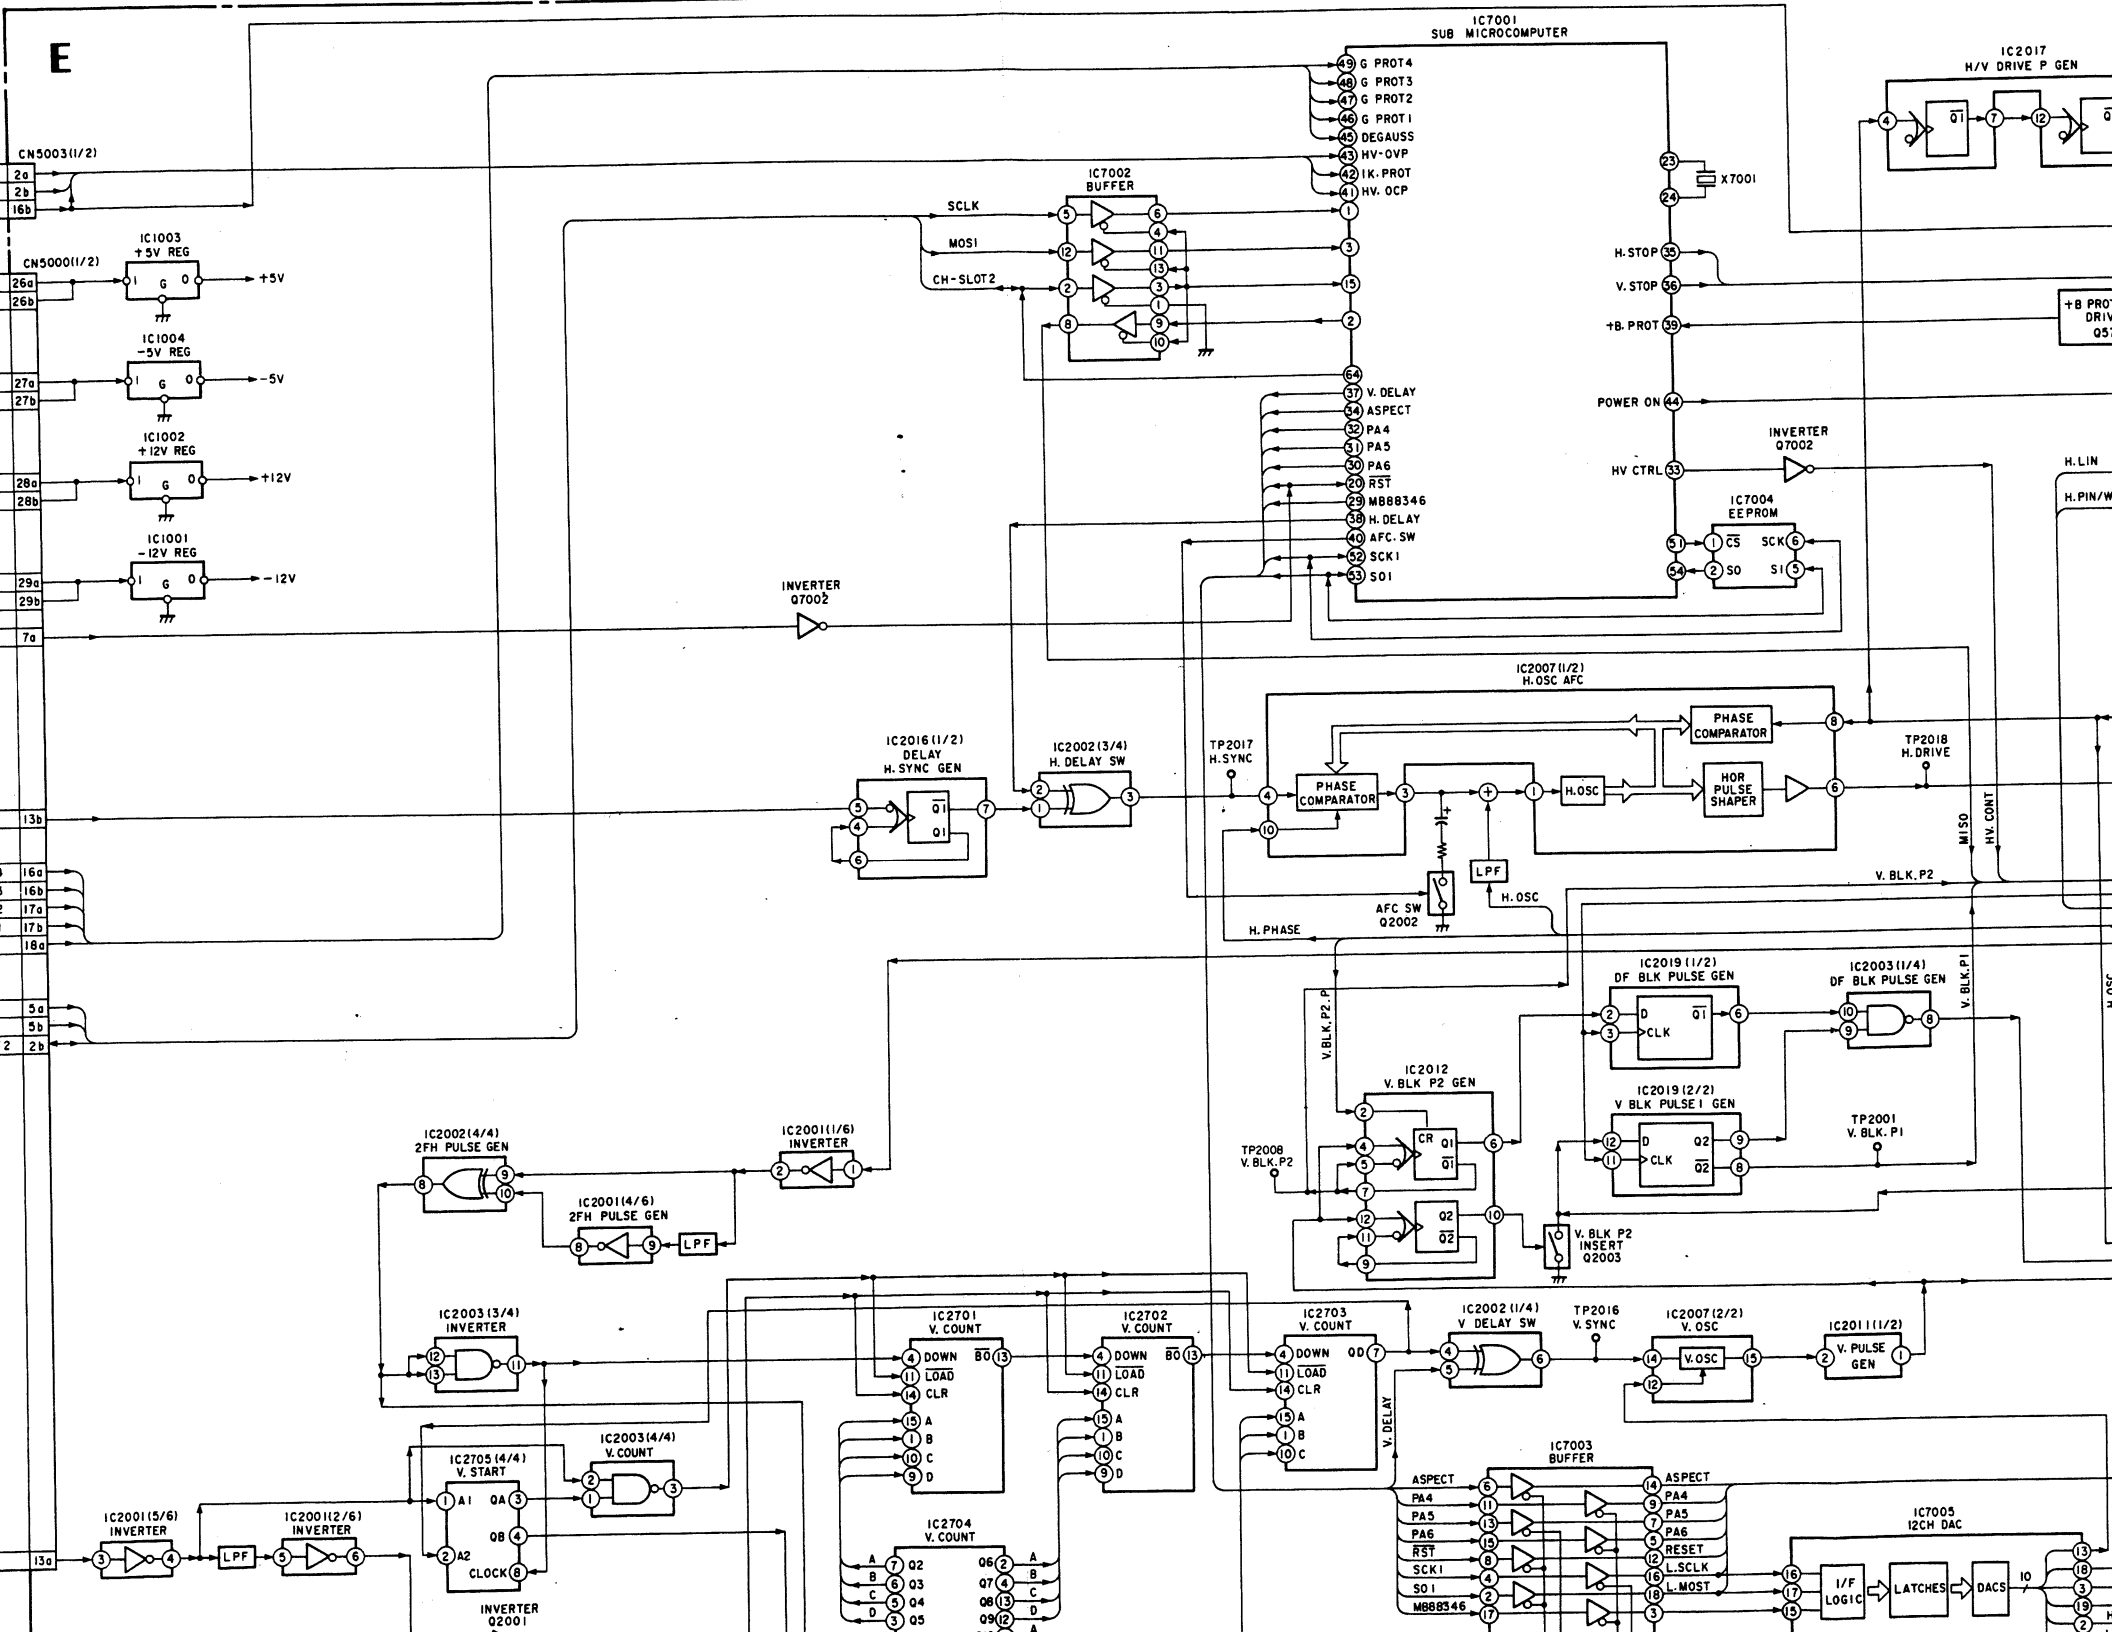E

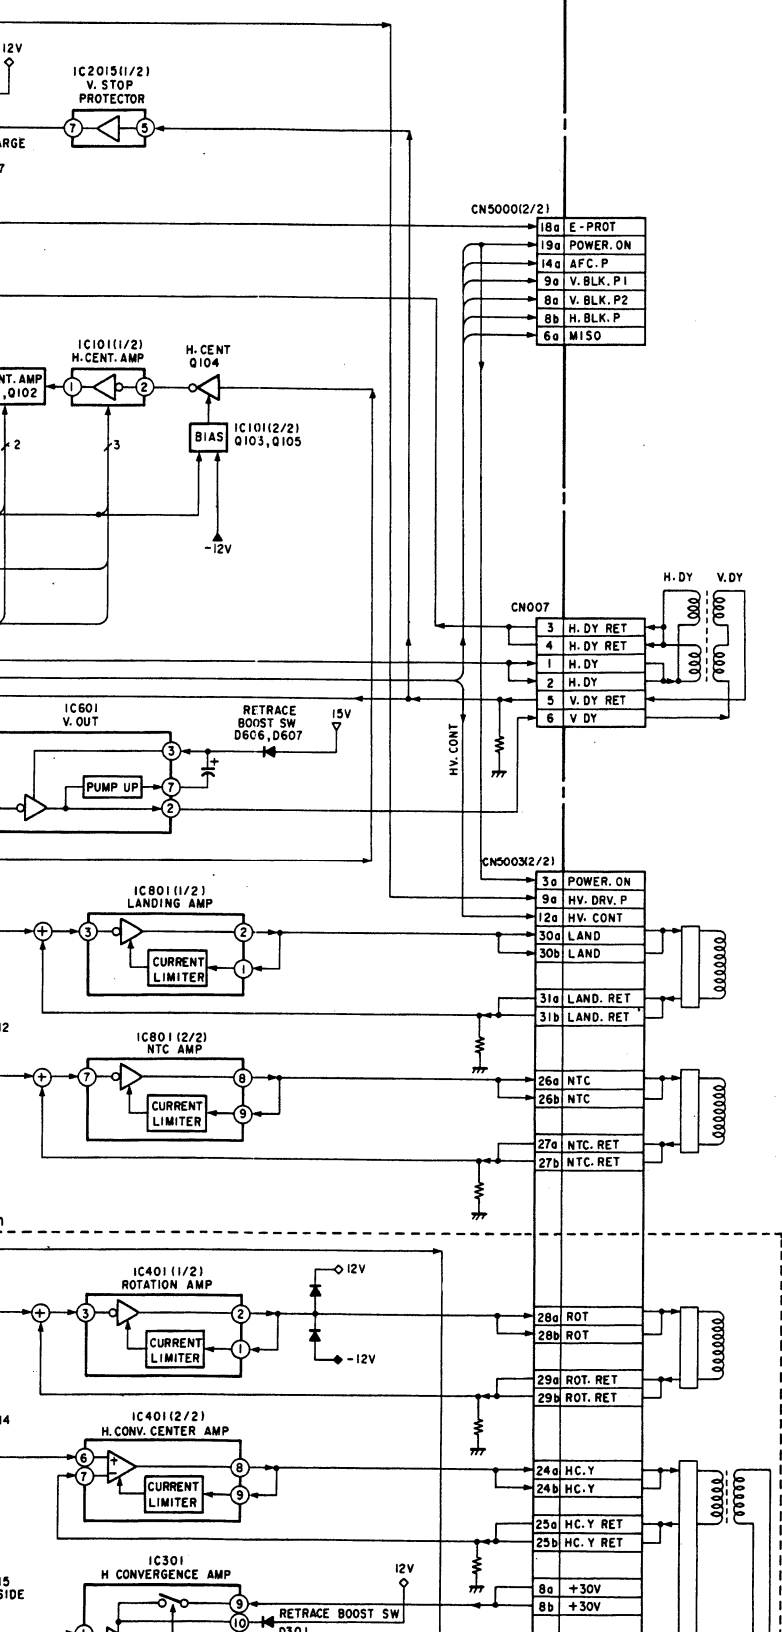

1. Horizontal System

1-1. H DELAY Circuit

Negative pulses are generated at IC2016 with the H SYNC falling edge as the trigger. In the normal mode, these pulses are passed through IC2002 as they are and input to the AFC circuit. In the H DELAY mode, they are inverted by IC2002 and input to the AFC circuit.

In the AFC circuit, as the falling edge of the input pulse is taken as the reference signal for phase comparison, the reference signal only delays the width of the negative pulses in the H DELAY mode.

1-2. AFC Circuit

In IC2007 the H SYNC input to Pin ④ and the H.OSC signal inside the IC are phase-compared, output to Pin ③, and passed through the low pass filter to control the H.OSC of Pin ①. The freerunning frequency of H.OSC is set by the H.OSC output from the D/A converter (IC7005). The H.PHASE voltage is input to Pin ⑩ to set the oscillation phase of H.OSC. The H.BAL signal from IC115 of the D board is added to the H.PHASE voltage to correct the H.PIN.BAL, H KEY.BAL. The H.PULSE generated by T5002 (HOT:Horizontal output transformer) is waveform-shaped by Q25 to Q28 and input to Pin ⑧ of IC2007. Inside the IC, it is phase-compared with H.OSC to control the H.DRIVE pulse output from Pin ⑥.

1-3. Horizontal Deflection Circuit

The H.DRIVE pulse is passed through Q1, T500 (HDT), supplied to Q2 (H.OUT) to switch Q2 and drive T5002 (HOT) and H.DY.

The power supply of the horizontal output circuit is generated by IC701 (RWM control) by switching Q51 to improve the power efficiency. The H PIN/W voltage from IC114 of the D board is input to IC701 to control the power voltage.

1-4. H Center Circuit

Positive and negative power supplies from the secondary side output of T5002 (HOT:Horizontal output transformer) are generated as the power supply of the H center circuit. In the H center circuit (IC101, Q101 to Q105), the DC current flowing through the H.DY is controlled by the H.CENT signal from IC115 of the D board.

1-5. Landing Circuit

The LANDING voltage output from the D/A converter IC 7005 is input to IC801 to control the current flowing through the LANDING coil.

1-6. NTC Drive Circuit

The NTC signal output from IC108 of the D board is amplified to drive the NTC.

1-7. H Linearity Circuit

The H.LIN signal output from the D board is amplified by Q151 to Q159, T5002 to generate the linearity compensation current is input to the H.DY.

1-8. Rotation Circuit (20-In)

The ROTATION voltage output from the D board is input to IC401 to drive the rotation converter is input to IC401 to drive the rotation coil through the ROTATION coil.

1-9. H Convergence Circuit

The H.CONV.C signal output from the D board is amplified by IC401 to drive the H convergence coil. The H.CONT.S signal output from the D board is amplified by IC301 to drive the H convergence coil.

2. Vertical System

2-1. V Counter

The H.SQ signal input to Pin ⑭ of IC2007 is used to create the 2FH signal, which is input to the V counter. The V counter is reset by the H.DY signal (⑬A) of CN5000. Consequently, the V counter synchronizes with the H.DY signal. The V pulse output from the V counter is used to delay the falling edge of the H.DY pulse.

2-2. V.OSC Circuit

IC2007 synchronizes with the H.DY signal and oscillates, and generates the V pulse. The V pulse sawtooth waveform is compared with the H.DY signal by IC2011 to create the V.PULSE. V.OSC is set by the V.OSC voltage from the D board. The V.PULSE signal is input to the D board to generate the V.DRIVE signal. The V.DRIVE signal is used for correction signals.

2-3. Vertical Deflection Circuit

The V.DRIVE signal output from the D board is amplified by IC601 to drive the V deflection coil.

and L101 by the H.DY drive voltage obtained is input to Pin ①. The reference voltage (6 Vdc) and the V.DY signal are input, the voltage of Pin ③ is set to the reference voltage so that the H.STOP signal becomes LOW.

When the V.DY drive current is output from the output pin Q507. Consequently, while the V.DY signal is HIGH, Q507 discharges electricity. As a result, the V.DY signal of IC501 does not reach the output pin ⑤ and when no more pulses are output, the V.DY signal exceeds the reference voltage of the V.DY signal output from Pin ⑦.

When the V.DY signal becomes LOW, Q502 is turned ON and the HV.DRV. pulse output is output from Q501. Also, Q54 to Q56 are turned ON, Q54 to Q56 becomes HIGH, and the power supply becomes HIGH, and the power supply becomes LOW to indicate that a sub

Protection Circuit for Power Supply

The horizontal deflection circuit power supply is turned ON. As a result, the V.DY signal becomes HIGH, and the V.DY signal becomes LOW.

When the system communication with the CPU board using the three signals is completed, the control signals are output from the CPU SW, H.DELAY, V.DELAY, and the system control CPU (BC) outputs the adjustment data of the EEPROM. The adjustment voltage from the D/A converter, it also controls the waveform and IC118 of the D board. The control signals are transmitted to the system control CPU.

PROT, HV_OVP
PROT1-4

1-1. Signal Generator (IC105)

The deflection correction waveform is generated.

Based on the V.PULSE obtained by waveform-shaping the V.SAW waveform output from IC2007 of the E board at IC2011, the V period deflection correction signals (V4TH, VSIN, VPARA, and VSAW) are generated. Based on the AFC.PULSE waveform-shaped by IC2001 (Q25 to Q28) of the E board, the H period deflection correction signals (HSAW, HPARA, and HSQ) are generated.

1-2. DEFLECTION Generator

Based on the VSIN, V.PARA+, and VSAW+ signals output from the signal generator (IC105), the following signals are generated. The signal level and waveform can be varied using the serial data from the system control circuit.

H. STAT. C, V. DRIVE, V. CONV T & B,
H. BAL, H. CENT, V. CONV. C, H. LIN. GAIN,

1-3. H. CONVER Generator

Based on the VSIN, V.PARA+, V.PARA-, and VSAW+ signals output from the signal generator (IC105), the following H convergence correction signals are generated. The signal level and waveform can be varied using the serial data from the system control circuit.

H. CONV. C, STAT, V. STAT, H. C. L, H. C. R

1-4. D/A Converter

Based on the V4TH, V.PARA+, and VSAW+ signals output from the signal generator (IC105), the D/A conversion reference voltage is modulated and the following signals are generated. The signal level can be varied using the serial data from the system control circuit.

The adjustment voltage is also output.

- Modulated by V4TH signal
CORNER PIN
- Modulated by VPARA+ signal
H. MID. PIN, H. CENTER. PIN,
DFY, T&B, DFY. SIDE
- Modulated by VSAW+ signal.
DFY. PHASE
- Adjustment voltage
DFX. CENTER, DFX. PHASE

1-5. NTC Signal Generation

The V.CONV.T&B signal output from IC115 (DEFLECTION GEN) and the V.STAT signal generated by IC112 (H.CONVER GEN) are added and inverted by IC108 to create the NTC signal. The adjusting points are the following three.

V.STAT
V.CONV. TOP
V.CONV. BOT

IC108 modulates the H.C.L signal or H.C.R signal generated by IC112 (H.CONVER GEN) using the H.PARA+ signal output by IC105 (signal generator) to create the H.CONV.S signal. As for the HSQ signal, the H.C.L signal is selected at the left side of the screen, while the H.C.R signal is selected at the right side of the screen.

There are 5 adjusting points on the left and right sides each.

1-7. H.LIN Signal Generation

IC203, IC108, and IC119 modulate and add the H.PARA— signal and H.SAW signal output by IC105 (signal generator) using the H.LIN GAIN signal and H.LIN BAL signal output by IC115 (DEFLECTION GEN), and H.MID.PIN signal and H.CENT.PIN signal output by IC118 (D/A converter) to create the H.LIN signal.

1-8. D.F.X. Signal, D.F.Y. Signal Generation

IC301 modulates and adds the H.SAW+ signal and H.PARA— signal output by IC105 (signal generator) using the DFX.PHASE signal, DFX SIDE signal, DFX CENTER voltage output by IC118 (D/A converter) and V.PARA— signal output by IC105 to create the D.F.X signal.

IC111 (2/2) adds the DFY.PHASE signal and DFY.T&B signal output by IC118 (D/A converter) with the V.PARA+ signal output by IC105 (signal generator) to create the D.F. YX signal.

Circuit

uses a DC converter type power consumption. The detection of the high voltage

is obtained by resistance-dividing the detection resistance HVR. The IC801 (2/2) buffer and the reference voltage inside (reference amplification) and is PWM-modulated and the voltage supplied to the FBT (1 FBT) is controlled by the can be adjusted by changing

The HV detection voltage also of IC501 works to expand the FET.

is passed through the regulator is synchronized by the current of the FET output depends on the ON period. The ON period of Q102 increases, the pulse is generated by the and FBT and the resonance of secondary side of the FBT to

Circuit

the HV.PROT winding, the \ominus input terminal of IC502 composed of D802, R808, and

error, fault, etc., the HV.PROT voltage of the \ominus input terminal voltage, the operation output becomes LOW, and

the high voltage converter is stopped.

1-3. High Voltage Current Protector, ABL Circuit

The high voltage current protector holds down the high voltage regulator when the current I_k flowing through the CRT exceeds the setting value in errors and malfunctions.

The voltage obtained by resistance-dividing at R514 and R515 the difference between V_z (D901 Zener voltage) and the V_{ABL1} obtained by voltage-converting the current flowing through the FBT secondary winding at R6 is supplied to the \oplus terminal of the comparator, and the operating point voltage V_{ref} is supplied to the \ominus pin of the comparator.

The \oplus terminal voltage of the comparator is normally higher than the \ominus terminal voltage. When the CRT beam current increases, the V_{ABL1} voltage decreases and consequently the \oplus terminal voltage of the comparator also decreases. Therefore when the beam current, which makes the \oplus terminal voltage drop below the \ominus terminal voltage, flows through the CRT, the protector operates and shuts down the PWM control IC DRIVE, and holds down the high voltage regulator.

The ABL circuit serves to protect the CRT by preventing the beam current from exceeding the reference value.


The beam current flowing through the CRT flows to R3. V_{ABL2} is obtained by converting this current to voltage. V_{ABL2} is supplied to the \oplus terminal of IC901, and when it drops below the reference voltage of the \ominus terminal, ABL operates and makes the luminance consistent. Consequently, even if BRIGHT and CONTRAST are rotated, DRIVE is increased or the terminating resistor is removed so that the CRT beam current does not change.

1-4. Screen (G2) Voltage Regulator


The drain pulse voltage of Q109 is rectified by the diode D201. The regulator is composed of Q201, Q202, and IC401 (2/2). The G2 voltage is supplied to be optimum the CRT cathode with the G2 CTRL voltage from the BK board.


1-5. DF Drive Circuit

The DFX and DFY signal from the D board is amplified by Q301 to Q305 and T301 (DFX), and DFY is amplified by Q321 and Q322 to modulate the G4 and GM voltage of the CRT.

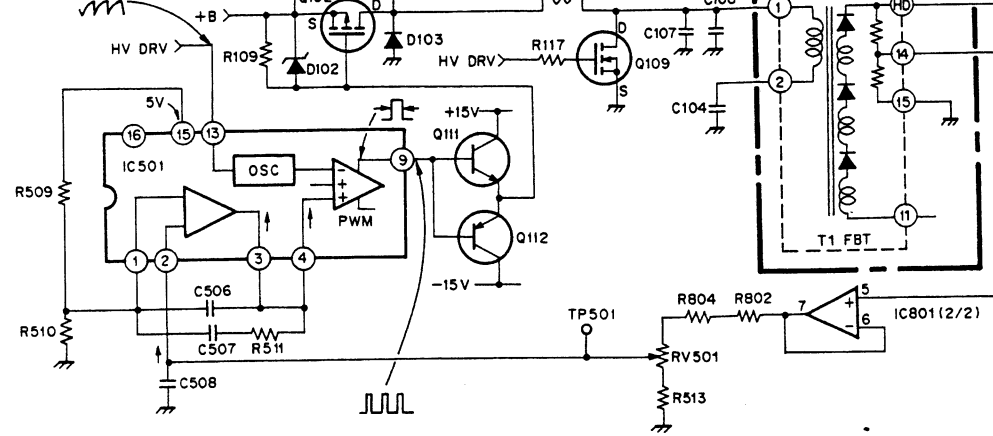

• PA, PC Board Block Diagrams

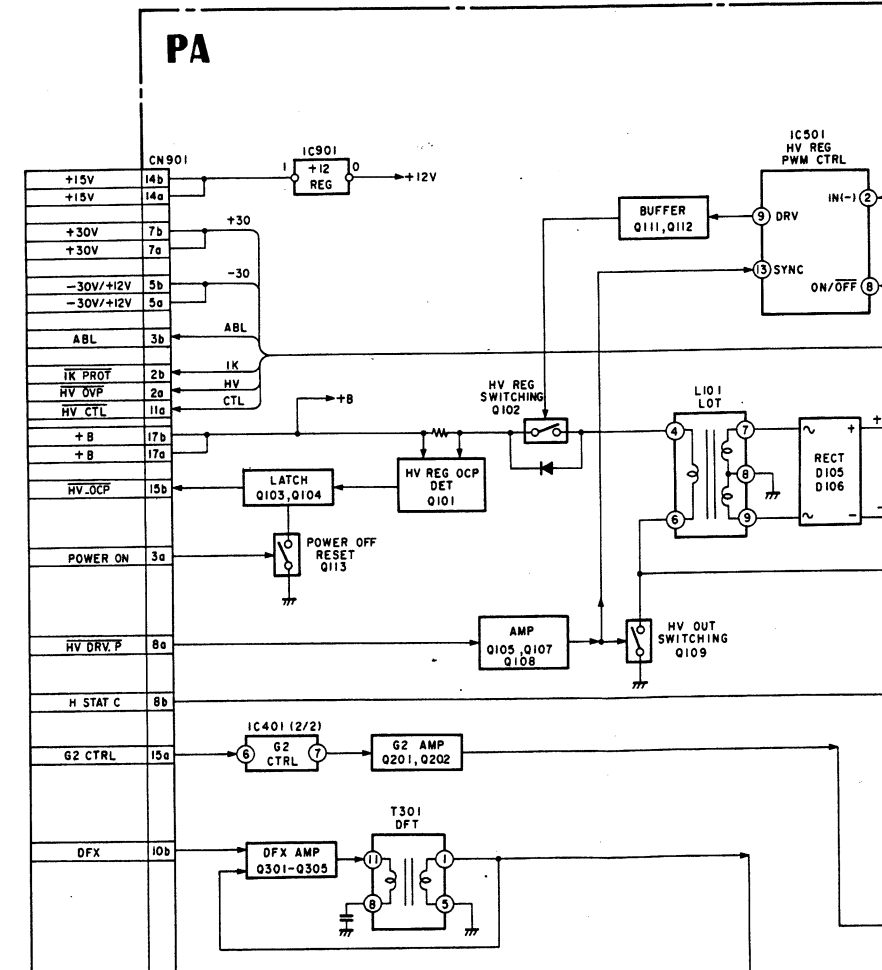

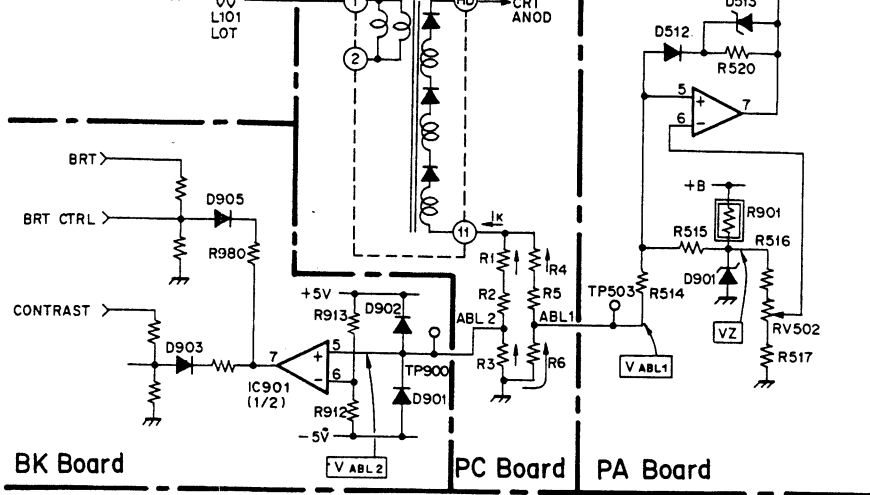

GC Board

1. RCC Switching Regulator (IC4 and T5)

The blocking oscillator is composed of IC4 and T5 (SRT). Immediately after the Main Power switch at the rear is turned on, first the regulator starts up because IC4 operates and generates the 5V voltage for DIGITAL, +12V voltage, and -12V voltage at the secondary side of T5. At the same time, the 18V voltage (For PFC CTRL IC) and 15V voltage (For half bridge switching regulator) are generated at the primary side of T5.

2. PFC Switching Regulator

The power factor improvement circuit is composed of IC1, Q5, D10, T3, C28 of the G board, the GC board, and related parts. The power factor improvement circuit (referred to as PFC hereafter) of this power supply adopts the boost PWM control method. As it basically operates as the boost switching regulator in continuous current operation, the output voltage V_{pfc} is always higher than the peak value of the input power supply voltage. As the input voltage is a sine wave, in addition to voltage control, it controls current in proportion to the input voltage.

IC1 not only keeps the V_{pfc} voltage constant but also PWM-controls Q5 so that the current flowing to T3, that is the main power supply current is similar to the input voltage waveform. As a result, the power factor is improved because the input current and input voltage waveforms are similar. The GC board is composed of IC1, Q1, and the output voltage detection resistor. It creates a control signal which varies V_{pfc} in proportion to the input power supply voltage, and supplies them to IC1. This reduces the loss of Q5 and T3.

3. PFC OVP Circuit

The comparator of IC2 (1/2) is an OVP circuit for protection when the V_{pfc} rises abnormally in the malfunction of the feedback system of the PFC CTRL.

Normally, the output of this comparator is "LOW". It becomes "HIGH" when OVP operates. Consequently, Pin ⑩ of IC1 (ENABLE pin) becomes "LOW" via the latch of Q3 and Q4 to stop the PFC switching. At the same time, D21 (red LED) is lit to inform of the error.

4. Half Bridge Switching Regulator (Q6, Q7, T4, GA Board IC101, IC102)

The voltage obtained by dividing the PFC output voltage by two at C29 and C30 is used as the power supply of T5. The +B feedback voltage from IC101 of the G Board is given to IC102 of the GA board which is passed through isolator PC1. The PWM pulse generated at IC102 of the GA board is passed through the DRIVER IC (IC101) to switch between Q6 and Q7 alternately. As the result, +6V, -6V, +15V, -15V, and +B

switching regulator operate. In the signal from the sub CPU (IC7 "LOW", Q104 goes OFF, the LE up, and the photo-resistor turns current protection resistor R2 is of PC2 becomes "LOW", Q10 IC101 oscillates, and H.B operat

6. PFC Failure Detection

The circuit which monitors if normally is composed of IC106, parts.

The pulse generated at the sec rectified by D113 and D114, in comparator (IC106 (2/2)), and voltage. When PFC is not oper (PFC FAILURE) becomes "LO terminal voltage cannot reach the D112 (green LED) is operated carried out normally.

7. OVP (Over voltage protection) Circuit

The voltage of each power supply reference voltage by the compar over voltage.

The output of each comparat becomes "HIGH" when errors oc

• OCP (Over current protection) Circuit

Over current is detected by sup when the current detection resis supply line and current is passe comparator of the GB board.

The output of each comparat becomes "HIGH" when errors oc





8. SHUT DOWN Circuit (Q301 to Q312 of GB Board)



When the PFC FAILURE signal OVP or OCP signal works so th becomes HIGH, Q105 of the operations of the half bridge swi circuit, the OVP and OCP signal encoder.

9. Encoder (GB Board)

A total of 11 signals (5 OVP sig PFC FAILURE signal) are encode the sub CPU (IC902) of the E bo

6

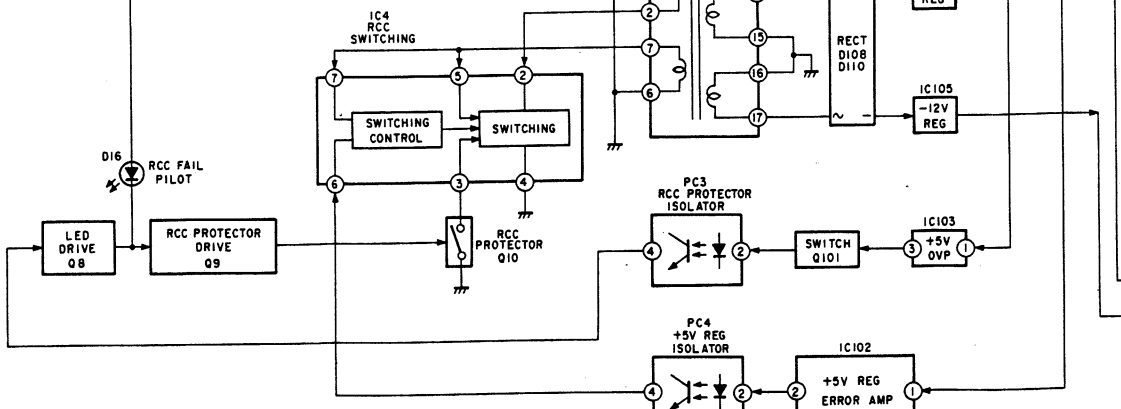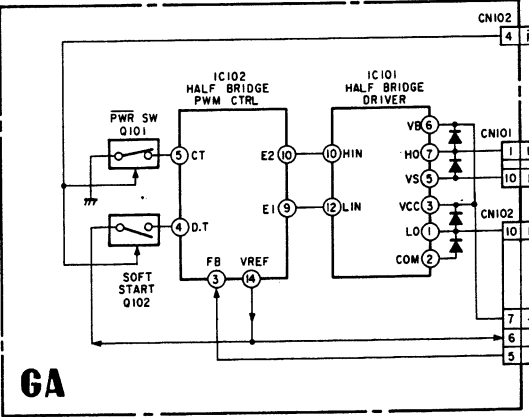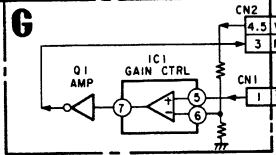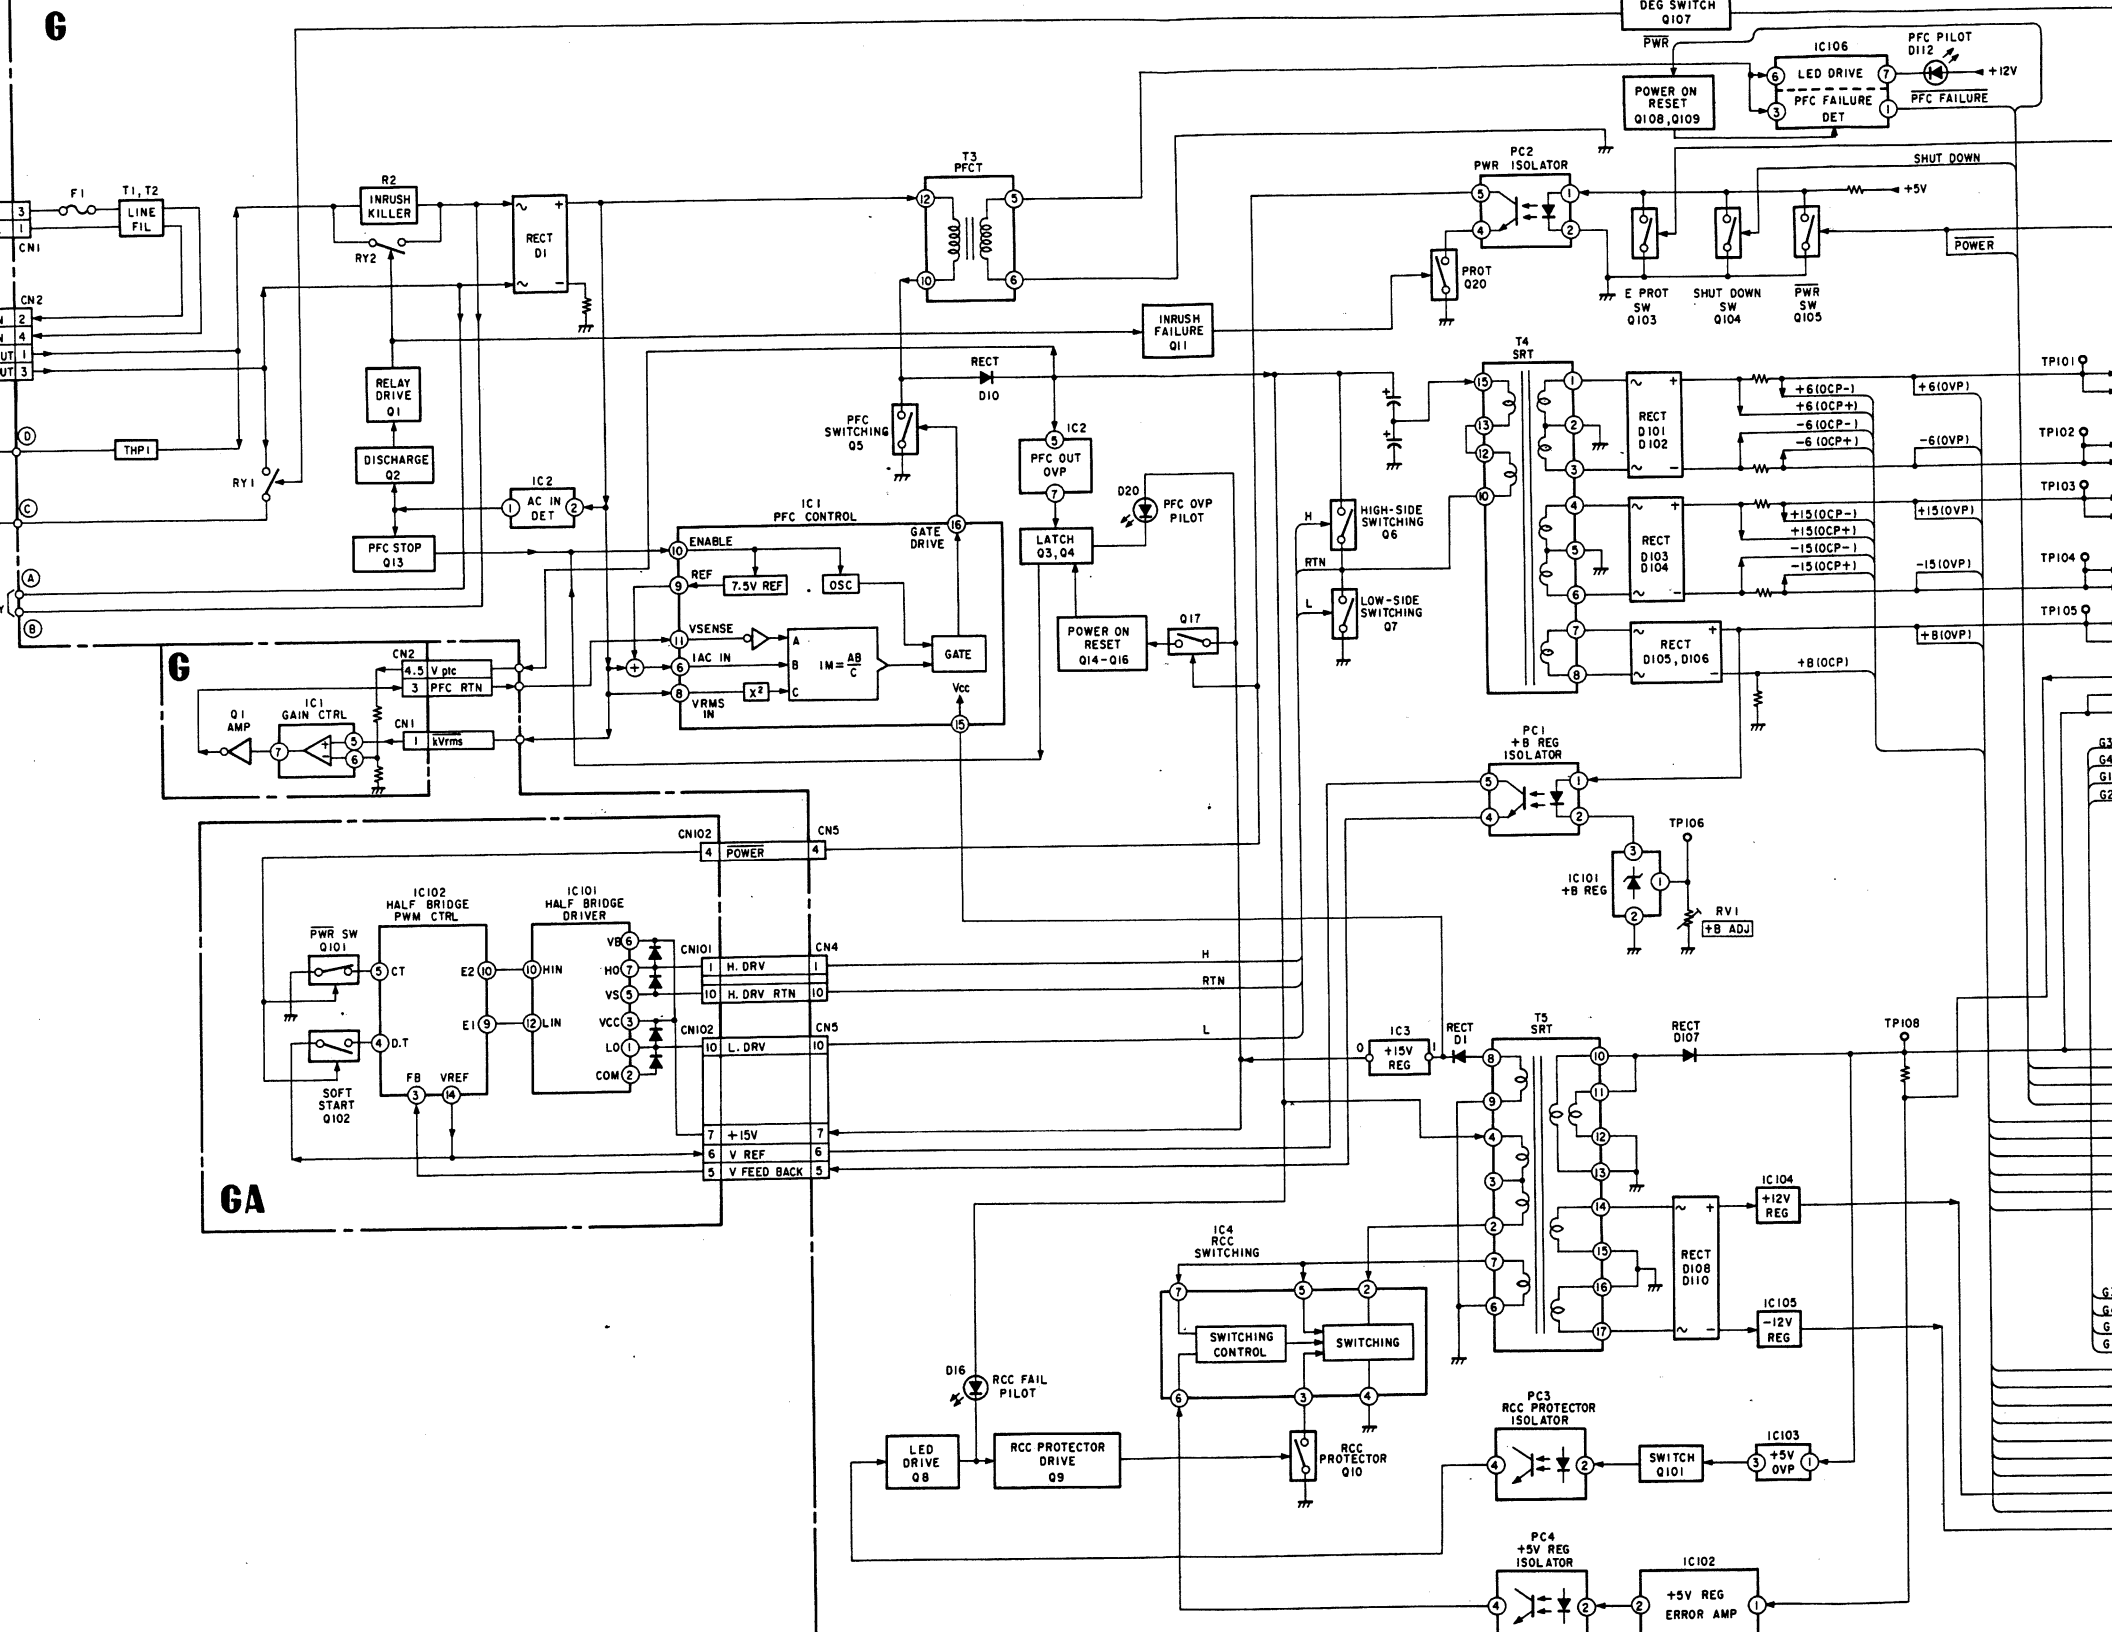

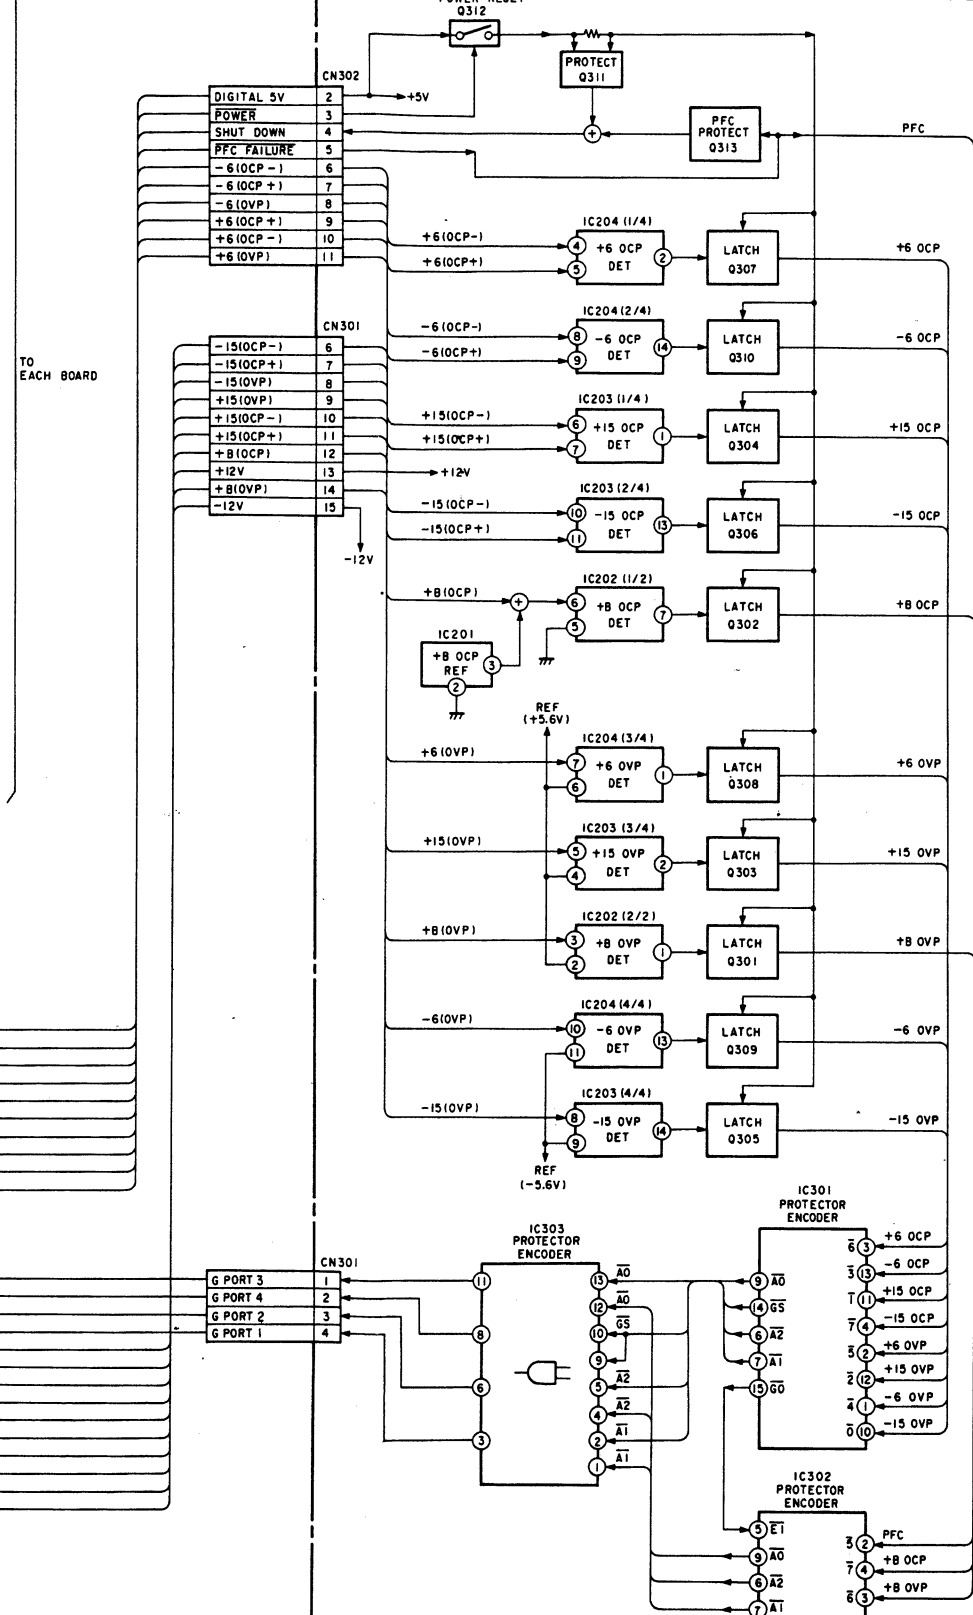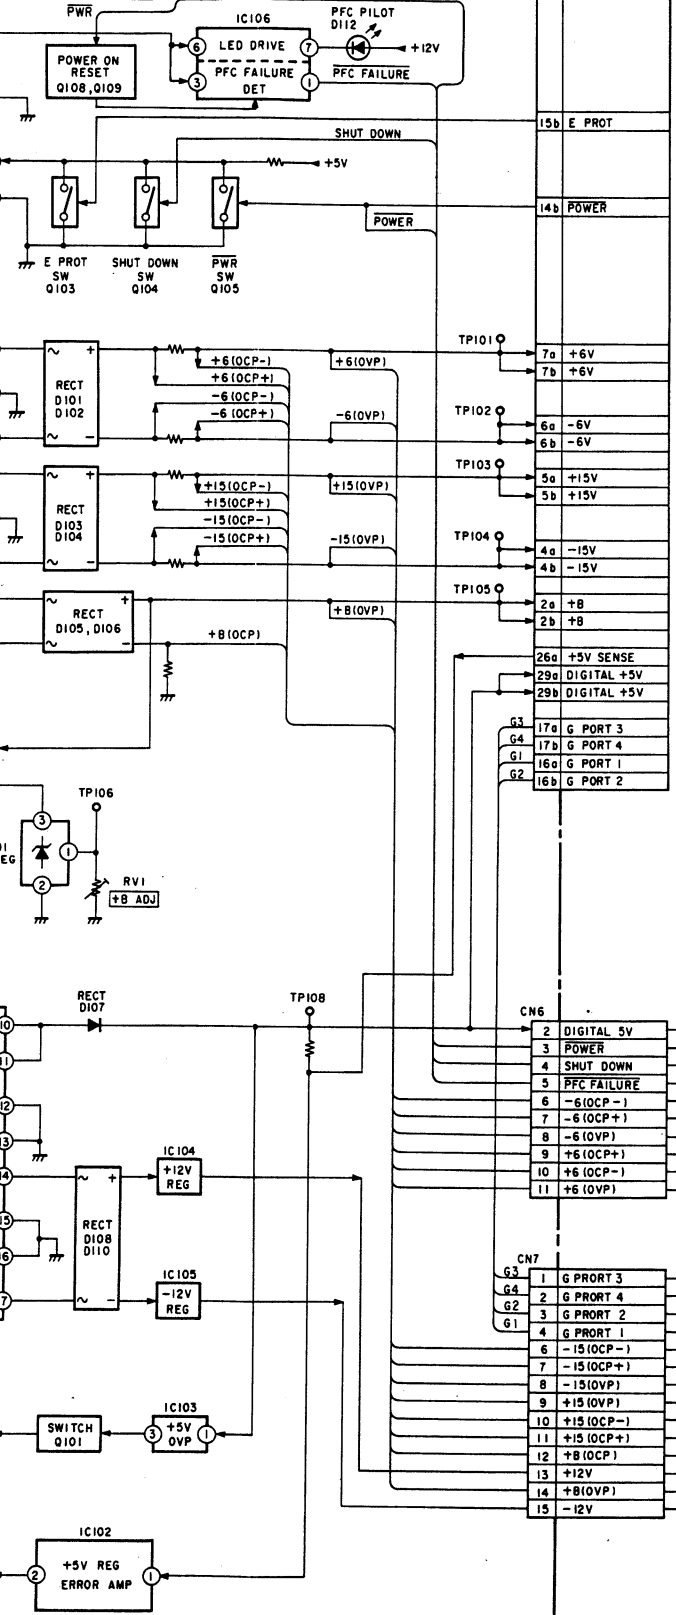

TO EACH BOARD




• **HC Board**

1. Key Scan, LED Lighting

The sub CPU (IC1) transmits the LED lighting signal and key scanning output signal to the HA board and HB board using the serial signals (MISO, MOSI, SCLK), and receives the key scanning input signals.

2. Memory Card

The sub CPU (IC1) reads/writes the data (adjustment data, etc.) from/on the memory card connected to CN1.

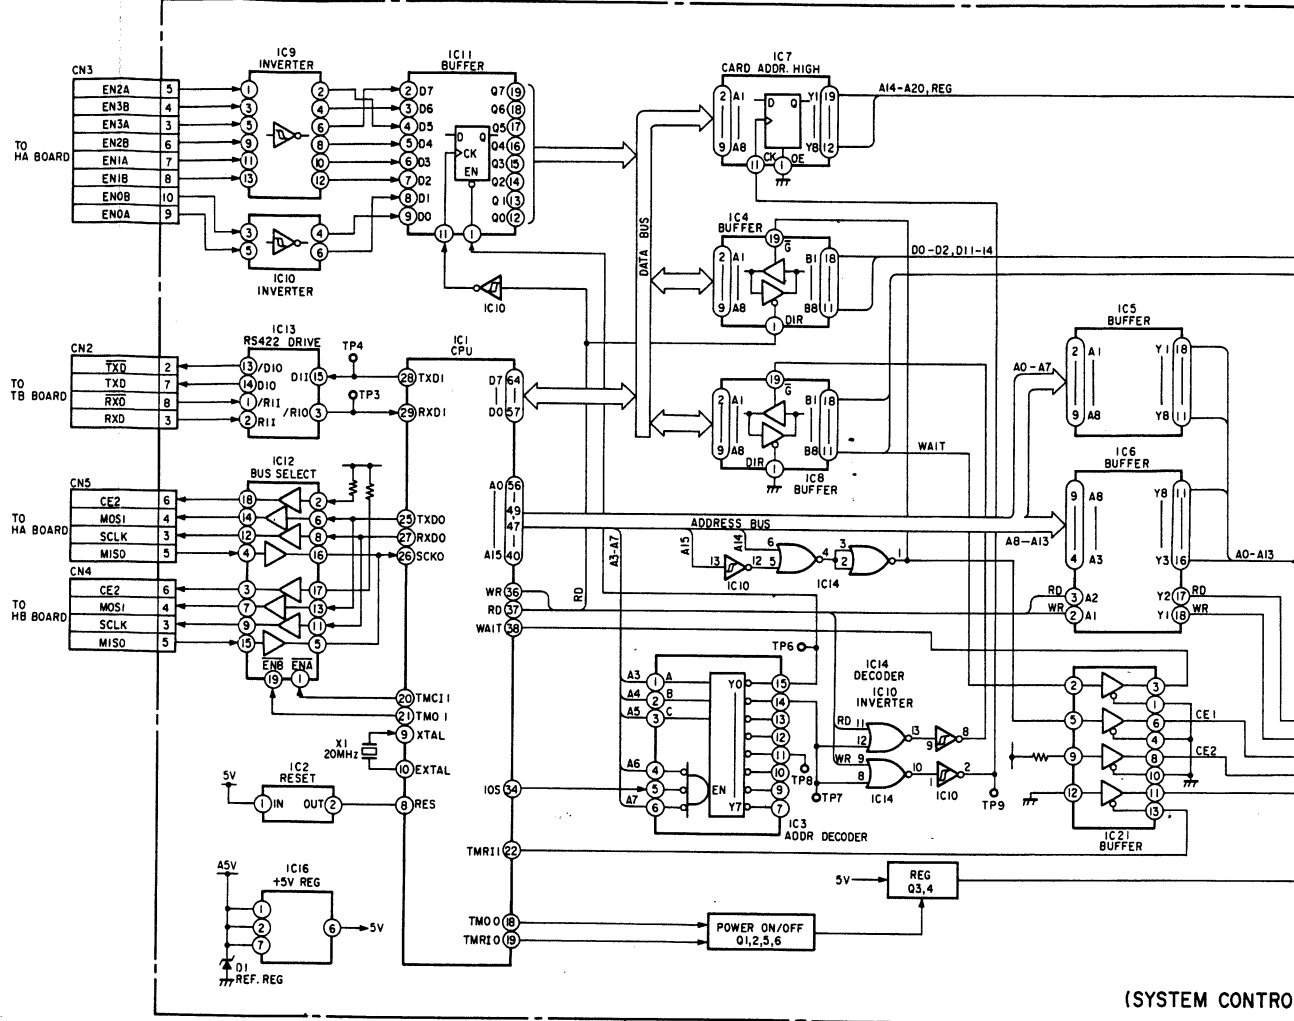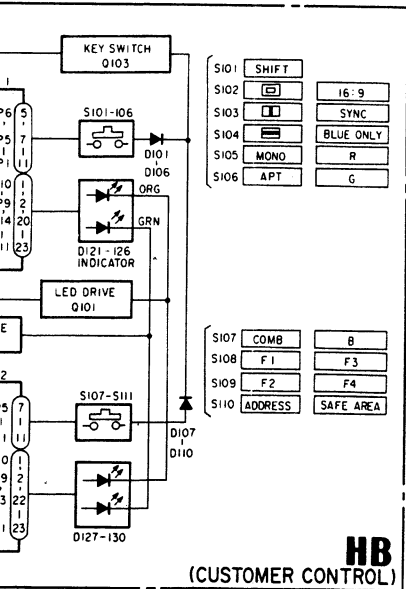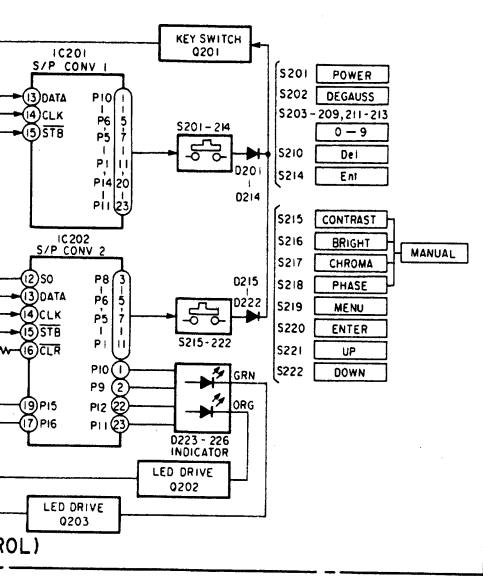

(SYSTEM CONTROL)

HB
 (CUSTOMER CONTROL)

SECTION 4 ELECTRICAL ADJUSTMENTS

4-1. Basic Adjustments in Replacement of CRT

Perform the following adjustments when replacing the CRT.

[Required Tools and Measuring Instruments]

1. Signal generator
2. Oscilloscope
3. Color analyzer (MINOLUTA CA-100)
4. Following specified cables for connecting RS-232C pin of CA-100 and OPTION pin of monitor.

[Setting of INPUT CONFIGURATION Menu]

Unless specified otherwise, set the INPUT CONFIGURATION menu of the SETUP menu as follows.

FORMAT COMPONENT YUV SMPTE/
EBU N-10

SLOT NO 6

SYNC MODE INT


SCREEN MODE 4 : 3 NORM

CONTROL CH SET


COLOR TEMP STD

H PHASE 00


BVM Option connector side CA-100 RS-232C connector side

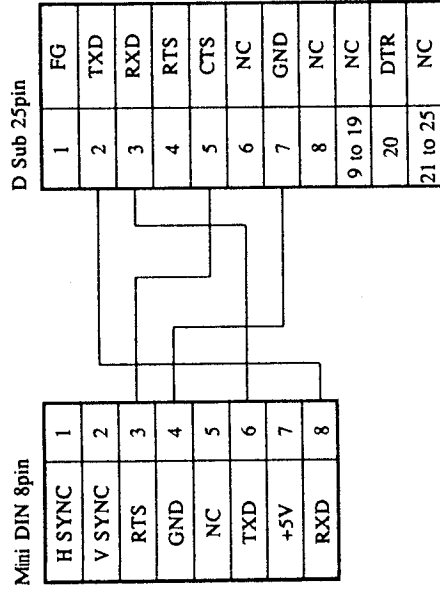

• CONNECT

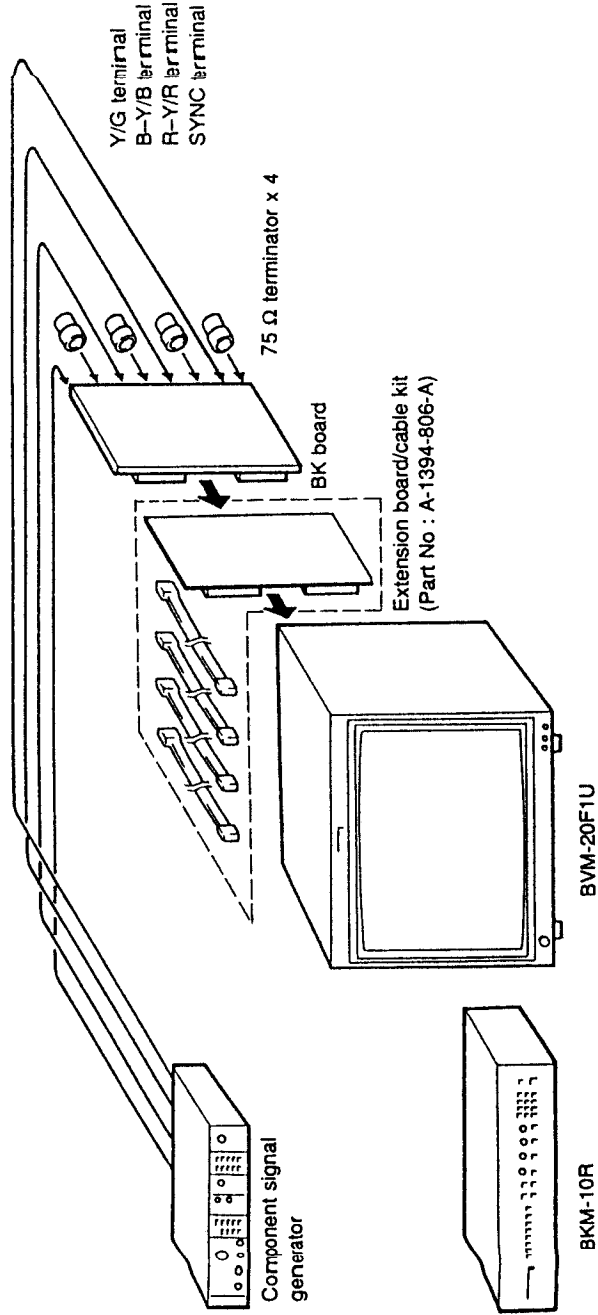

Front Panel of BKM-10R

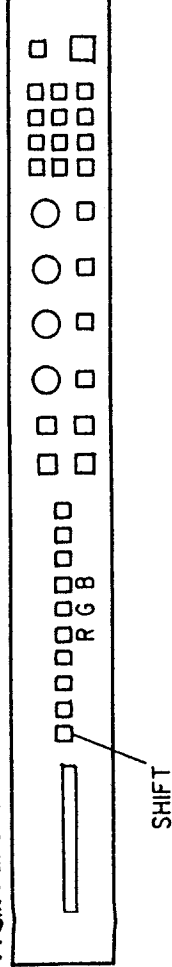

[Focus Adjustment]

1. Input the dot signal or cross hatch signal.
2. Set the following DF adjustment data to the center value (128).

DF SIDE

DF CORNER

DF SIDE PHASE

DF T&B PHASE

DF T&B

Note: The above adjustment menu is under the E BOARD menu of the MAINTENANCE menu.

3. Adjust the center of the screen to the optimum focus using the FOCUS 1 VR (vertical focus adjustment) and FOCUS 2 VR (horizontal focus adjustment).
4. Input the cross hatch signal.
5. Adjust the following DF adjustment data so that the cross hatch lines at the ends of the screen become the same thickness as those at the center of the screen.

DF SIDE
DF CORNER
DF SIDE PHASE
DF T&B PHASE
DF T&B

DF SIDE

DF CORNER

DF SIDE PHASE

DF T&B PHASE

DF T&B

6. Adjust the DF data in the same way in the following modes.

4 : 3 UNDERSCAN mode

16 : 9 NORMAL SCAN mode

16 : 9 UNDER SCAN mode


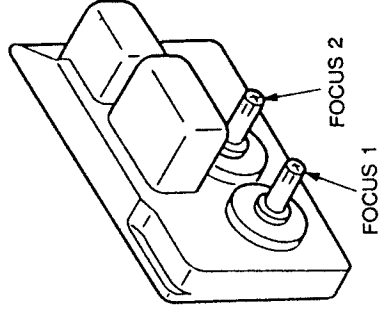


Fig. 1-1.

[Landing Adjustment]

1. Input the white signal.
2. Press the BRIGHTNESS VR and CONTRAST VR buttons to the preset condition. (The LEDs (green) on the buttons go off.)
3. Face the CRT screen towards the east (west) and press the DEGAUSS button.
4. Set the Purity knob to the mechanical center.

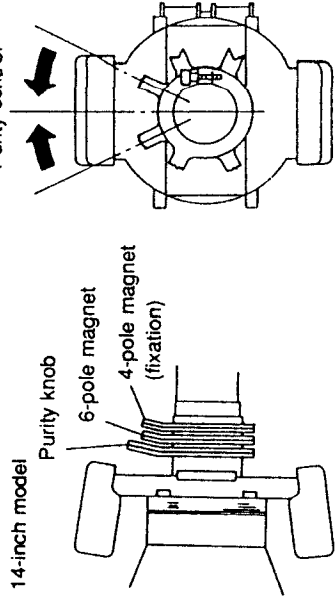

14-inch model

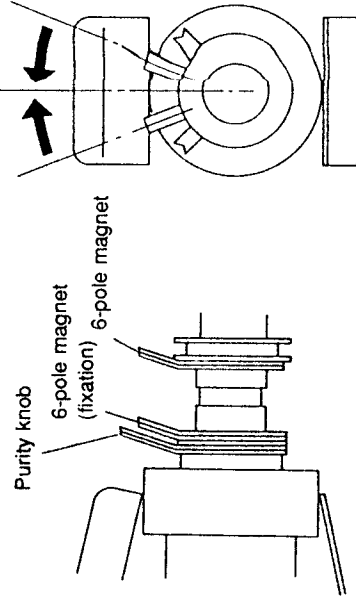


Fig. 1-2.

5. Push the DY (deflection yolk) to the front as much as possible.
6. Secure the neck assembly in the position shown in Fig. 1-3.

20-inch model

14-inch model

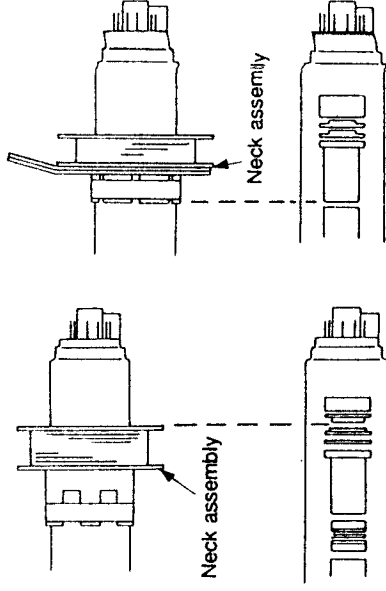


Fig. 1-3.

7. Set the color of the screen to green only (Turn on the SHIFT button (LED lights up in orange), and turn on the R button or B button (LED lights up).)
8. Rotate the Purity knob, and adjust so that the green comes to the center of the screen as shown in Fig. 1-4.

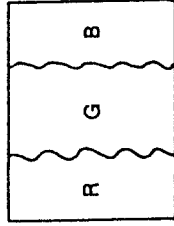


Fig. 1-4.

9. Move DY backwards, and adjust so that the color of the whole screen becomes green only.
10. Adjust the tilt of DY at cross hatch signal and tighten the screw of DY.
11. Secure the deflection yoke with four (20 Inch), three (14 Inch) spacers.

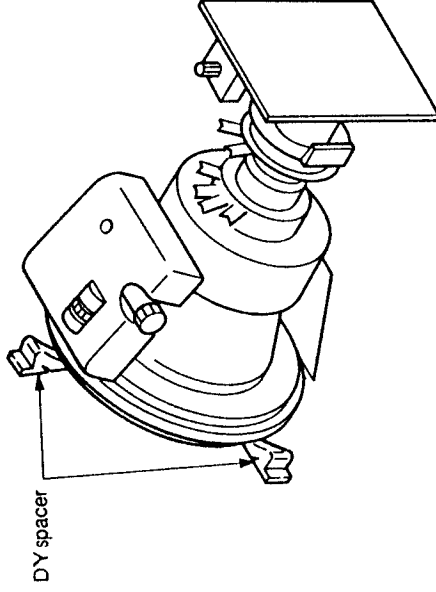


Fig. 1-5.

- Final check
After adjusting, check that there is no misalignment when the unit is faced in all four directions, north, south, east, west.

[H Blanking Adjustment]

• Preparations

1. Connect the signal generator and input the monoscope signal.
 2. Increase BRIGHT until the blanking can be seen.
- Note:** The following adjustment menus are under the E BOARD menu of the MAINTENANCE menu.

H BLK WIDTH
H BLK PHASE
H CENTER
H PHASE
H SIZE

• 4 : 3 NORMAL SCAN Mode H Blanking Adjustment

1. Set the SCREEN MODE to 4 : 3 NORM at the INPUT CONFIGURATION menu of the SETUP menu.
2. Decrease the H SIZE so that the whole left and right edges of the luster can be seen.
3. Maximize (255) the H BLK WIDTH data and H BLK PHASE data.
4. Adjust the H CENTER data so that the luster comes to the center of the screen (so that $A \approx B$).
Write down the H CENTER data at this time.
5. Adjust the H PHASE data so that the monoscope screen comes to the center of the luster (so that $C \approx D$).
Write down the H PHASE data.

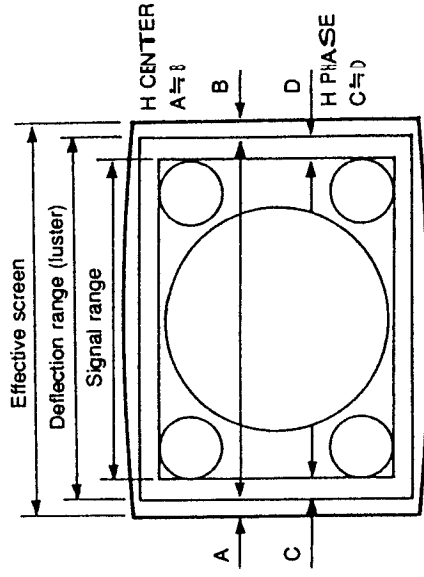


Fig. 1-6.

6. Adjust the H BLK PHASE data so that the outer right edge of the monoscope signal range is slightly chipped, and then adjust the data until the whole edge can be seen.
7. Set the H BLK PHASE data to +20.
8. Adjust the H BLK WIDTH data so that the outer left edge of the monoscope signal range is slightly chipped, and then adjust the data until the whole edge can be seen.
9. Set the H BLK WIDTH data to +20.
10. Set the original H SIZE.

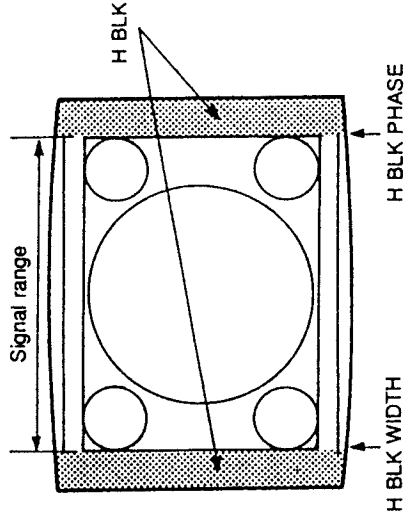


Fig. 1-7.

- 4 : 3 UNDER SCAN Mode H Blanking Adjustment

 1. Set the SCREEN MODE to 4 : 3 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
 2. Set the H CENTER data to the same value as the 4 : 3 NORMAL SCAN mode.
 3. Set the H PHASE data to the same value as the 4 : 3 NORMAL SCAN mode.
 4. Adjust the H BLK PHASE data until the blanking at the right side of the screen just disappears outside the effective screen.
 5. Set the H BLK PHASE data to +20.
 6. Adjust the H BLK WIDTH data until the blanking at the left side of the screen just disappears outside the effective screen.
 7. Set the H BLK WIDTH data to +20.

- 16 : 9 NORMAL SCAN Mode H Blanking Adjustment

 1. Set the SCREEN MODE to 16 : 9 NORM at the INPUT CONFIGURATION menu of the SETUP menu.
 2. Set the H CENTER data to the same value as the 4 : 3 NORMAL SCAN mode.
 3. Set the H PHASE data to the same value as the 4 : 3 NORMAL SCAN mode.
 4. Adjust the H BLK PHASE data until the blanking at the right side of the screen just disappears outside the effective screen.
 5. Set the H BLK PHASE data to +20.
 6. Adjust the H BLK WIDTH data until the blanking at the left side of the screen just disappears outside the effective screen.
 7. Set the H BLK WIDTH data to +20.

 - 16 : 9 UNDER SCAN Mode H Blanking Adjustment

 1. Set the SCREEN MODE to 16 : 9 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
 2. Set the H CENTER data to the same value as the 4 : 3 NORMAL SCAN mode.
 3. Set the H PHASE data to the same value as the 4 : 3 NORMAL SCAN mode.
 4. Adjust the H BLK PHASE data until the blanking at the right side of the screen just disappears outside the effective screen.
 5. Set the H BLK PHASE data to +20.
 6. Adjust the H BLK WIDTH data until the blanking at the left side of the screen just disappears outside the effective screen.
 7. Set the H BLK WIDTH data to +20.

[V Blanking Adjustment]

• Preparations

1. Connect the signal generator and input the monoscope signal.
2. Set the H DELAY mode and increase BRIGHT.

Note:The following adjustment menus are under the E BOARD menu of the MAINTENANCE menu.

V BLK TOP
V BLK BOT
V ITS BLK

• 4 : 3 NORMAL SCAN Mode V Blanking Adjustment

1. Set the SCREEN MODE to 4 : 3 NORM at the INPUT CONFIGURATION menu of the SETUP menu.
2. Adjust the V BLK TOP data until the blanking at the top of the screen just disappears outside the effective screen.
3. Set the V BLK TOP data to +30.
4. Adjust the V BLK BOTTOM data until the blanking at the bottom of the screen just disappears outside the effective screen.
5. Set the V BLK BOTTOM data to -30.
6. Set the V BLK P POS data to 255.

• 4 : 3 UNDER SCAN Mode V Blanking Adjustment

1. Set the SCREEN MODE to 4 : 3 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the V BLK TOP data to the same value as the 4 : 3 NORMAL SCAN mode.
3. Set the V BLK BOTTOM data to the same value as the 4 : 3 NORMAL SCAN mode.
4. Adjust the V BLK POS data to 255.

• 16 : 9 NORMAL SCAN Mode V Blanking Adjustment

1. Set the SCREEN MODE to 16 : 9 NORM at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the V BLK TOP data to 255.
3. Set the V BLK BOTTOM data to 00.
4. Set the V BLK P POS data to 255.

• 16 : 9 UNDER SCAN Mode V Blanking Adjustment

1. Set the SCREEN MODE to 16 : 9 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the V BLK TOP data to 255.
3. Set the V BLK BOTTOM data to 00.
4. Set the V BLK P POS data to 255.

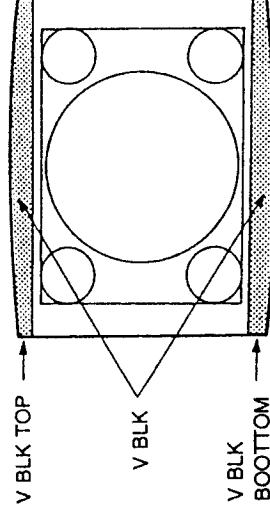


Fig. 1-8.

[Linearity Adjustment]

Note: The following adjustment menus are under the E BOARD menu of the MAINTENANCE menu.

- H PHASE
- V CENTER
- H LIN BAL
- H LIN
- V LIN BAL
- V LIN AMP
- H KEY BAL
- H KEY
- H PIN BAL
- H PIN
- H CENTER PIN
- H MID PIN
- H CORNER PIN

1. Input the cross hatch signal.
2. Check that the image is not tilting, and there is no top and bottom PIN distortion nor horizontal trapezoid distortion.

Tilt : Adjust the DY tilt.

Top/bottom Pin distortion : Adjust the top and bottom DY head swing

Horizontal trapezoid distortion : Adjust using the DY TLV VR (take note that the convergence may be disrupted.)

3. Input the monoscope signal.
4. Set the SCREEN MODE to 4 : 3 NORM at the INPUT CONFIGURATION menu.
5. Adjust the H PHASE data, and adjust the horizontal center of the image.
6. Adjust the vertical center of the image.
7. Input the cross hatch signal.
8. Adjust the V SIZE, V LIN BAL, and V LIN data as shown in Fig. 1-9.
9. Adjust the H SIZE, H LIN BAL, and H LIN data as shown in Fig. 1-10.

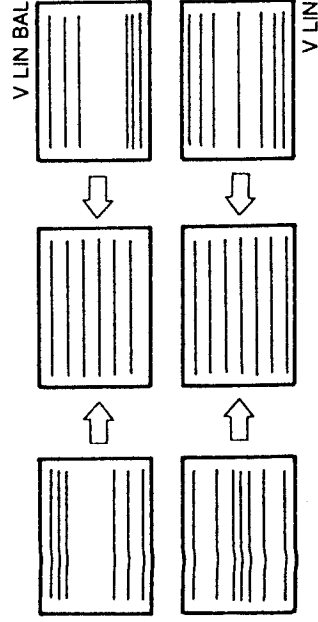


Fig. 1-9.

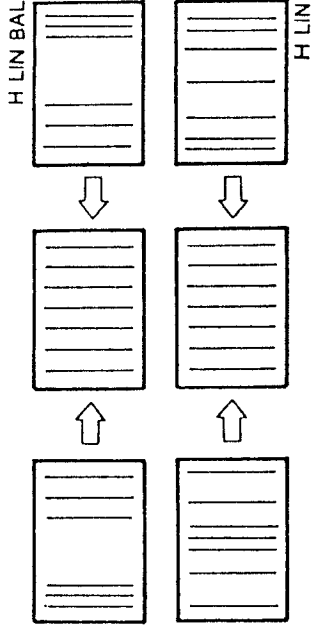


Fig. 1-10.

10. Adjust the H KEY BAL, H KEY, H PIN BAL, and H PIN data so that there is no side trapezoid distortion and PIN distortion as shown in Fig. 1-11.
11. Adjust the H CENTER PIN, H MID PIN, and H CORNER PIN data as shown in Fig. 1-12.
12. Repeat the above adjustment to optimize the horizontal and vertical linearity.
13. Adjust in the same way in the following modes.

- 4 : 3 UNDER SCAN mode
- 16 : 0 NORMAL SCAN mode
- 16 : 9 UNDER SCAN mode

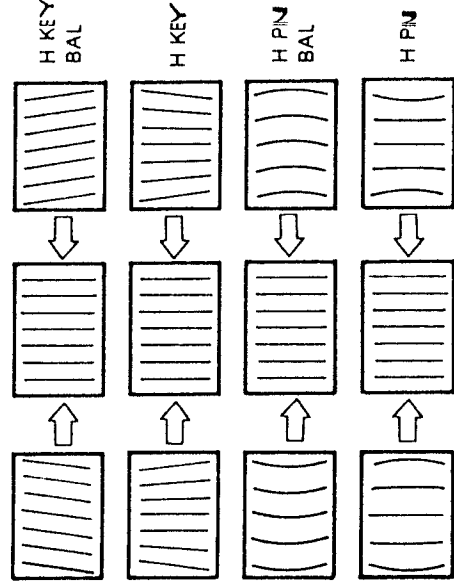


Fig. 1-11.

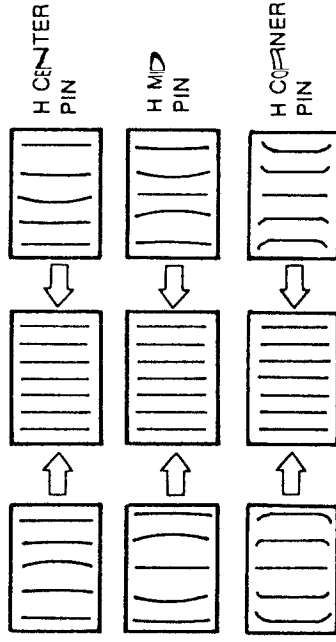


Fig. 1-12.

[Convergence Adjustment]

- Preparation

1. Set the SCREEN MODE to 4:3 NORM at the INPUT CONFIGURATION menu.
2. Input the cross hatch signal.
3. Check that the H STAT data is the center value (128).

Note : The H STAT adjustment menu is under the E BOARD menu of the MAINTENANCE menu.

4. For the 14 inch model, set the 4-pole magnet of the DY to the OFFSET state.
5. For the 20 inch model, set the 6-pole magnet of the DY to the OFFSET state.

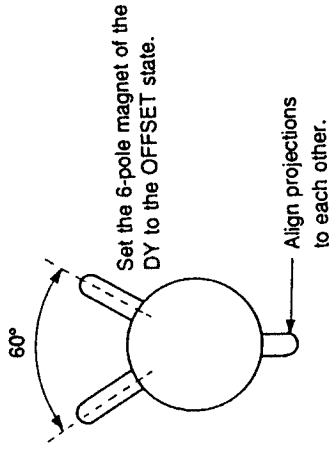


Fig. 1-13.

[Static Convergence Adjustment]

- Horizontal Static Convergence

1. Adjust RV1 (H STAT) of the C board so that the red and green dots coincide in the horizontal direction at the screen center.
2. If the blue dot is out of convergence from the red and green dots:
 - For the 14-inch model:
 - Perform HMC (horizontal misconvergence) correction using the 6-pole magnet of the DY (See Fig. 1-2.).
 - (The 4-pole magnet of the DY is not used. Set to the OFFSET state.)
 - For the 20-inch model:
 - Perform HMC (horizontal misconvergence) correction using the 6-pole magnet of the NTC (See Fig. 1-2.).
 - (The 6-pole magnet of the DY is not used. Set to the OFFSET state.)

- Vertical Static Convergence

1. Adjust the V STATIC CONV data so that the red and green dots coincide in the vertical direction at the screen center.
Note: The V STATIC CONV adjustment menu is under the E BOARD menu of the MAINTENANCE menu.
2. If the blue dot is out of convergence from the red and green dots:

- For the 14-inch model:

Perform VMC (vertical misconvergence) correction using the 6-pole magnet of the DY (See Fig. 1-2.).

(The 4-pole magnet of the DY is not used. Set to the OFFSET state.)

- For the 20-inch model:

Perform VMC correction using the 6-pole magnet of the NTC (See Fig. 1-2.).

(The 6-pole magnet of the DY is not used. Set to the OFFSET state.)

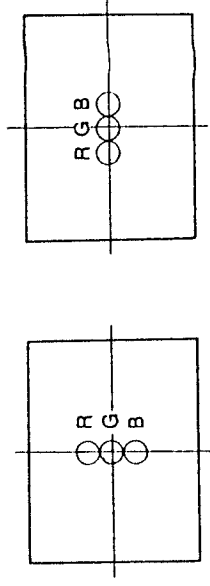


Fig. 1-14.



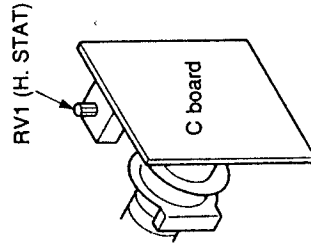


Fig. 1-15.

14-inch model

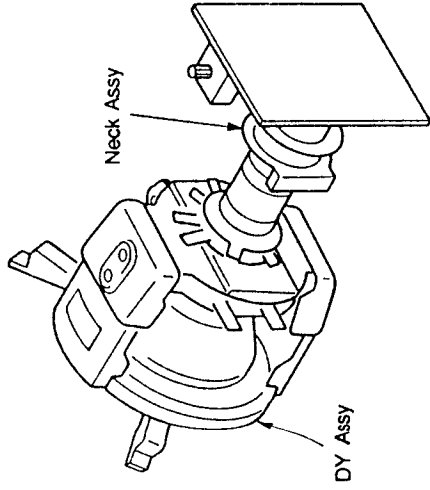

20-inch model

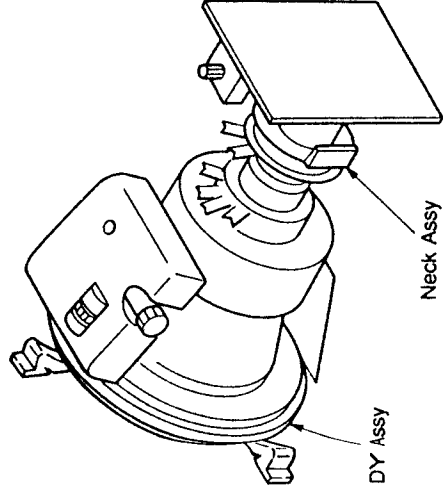

[20-inch Model Convergence Adjustment]

• Preparation

1. Set the SCREEN MODE to 4 : 3 NORM at the INPUT CONFIGURATION menu.
2. Input the cross hatch signal.

• Vertical Convergence Adjustment

1. Minimize the vertical misconvergence at the center of the left side of the screen and the center of the right side of the screen using the DY correction reactors XBV and XCV.
2. Minimize the vertical misconvergence at the top and bottom of the screen using the DY correction reactor TLV.
3. Adjust the V CONV TOP data and V CONV BOT data so that the vertical misconvergence at the top and bottom of the screen becomes minimum.

Note: The V CONV TOP and V CONV BOT adjustment menu is under the E BOARD menu of the MAINTENANCE menu.

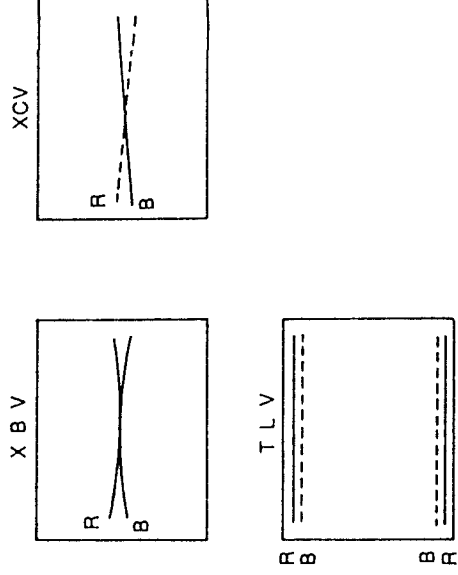


Fig. 1-16.

• HMC and VMC correction with 6-pole magnet

1. HMC (horizontal misconvergence) correction of 6-pole magnet and movement of electron beam.

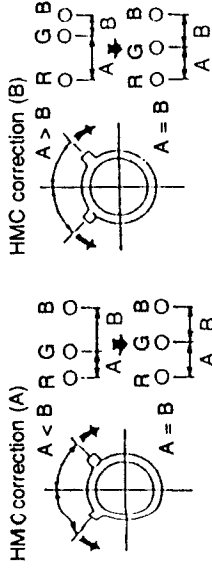


Fig. 1-17.

2. VMC (vertical misconvergence) correction of 6-pole magnet and movement of electron beam.

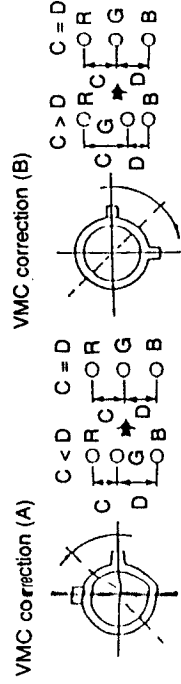


Fig. 1-18.

Fig. 1-19.

• Horizontal Convergence Adjustment

1. Adjust the horizontal convergence adjustment data (H CONV data) in the following order so that the red, green, and blue dots coincide on the whole screen.

Note: The horizontal convergence adjustment menu is under the E BOARD menu of the MAINTENANCE menu.

1. HCONV C T
2. HCONV C B
3. HCV C M T
4. HCV C M B
5. HCV L C
6. HCV L T
7. HCV L B
8. HCV L M T
9. HCV L M B
10. HCV R C
11. HCV R T
12. HCV R B
13. HCV R M T
14. HCV R M B

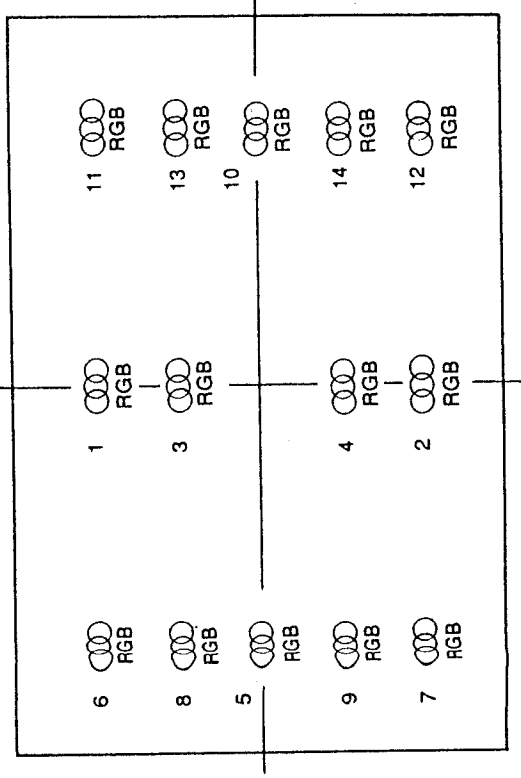
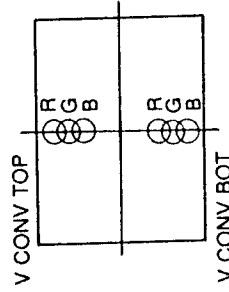


Fig. 1-20.

• 4 : 3 UNDER SCAN Mode Convergence Adjustment

1. Set the SCREEN MODE to 4 : 3 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the vertical convergence adjustment data (V CONV data) and horizontal convergence adjustment data (H CONV data) to the same value as the 4 : 3 NORMAL SCAN mode.
3. Check the horizontal and vertical convergence, and if there is misconvergence, adjust again.

• 16 : 9 NORMAL SCAN Mode Convergence Adjustment

1. Set the SCREEN MODE to 16 : 9 NORM at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the vertical convergence adjustment data (V CONV data) and horizontal convergence adjustment data (H CONV data) to the same value as the 4 : 3 NORMAL SCAN mode.
3. Check the horizontal and vertical convergence, and if there is misconvergence, adjust again.

• 16 : 9 UNDER SCAN Mode Convergence Adjustment

1. Set the SCREEN MODE to 16 : 9 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the vertical convergence adjustment data (V CONV data) and horizontal convergence adjustment data (H CONV data) to the same value as the 4 : 3 NORMAL SCAN mode.
3. Check the horizontal and vertical convergence, and if there is misconvergence, adjust again.

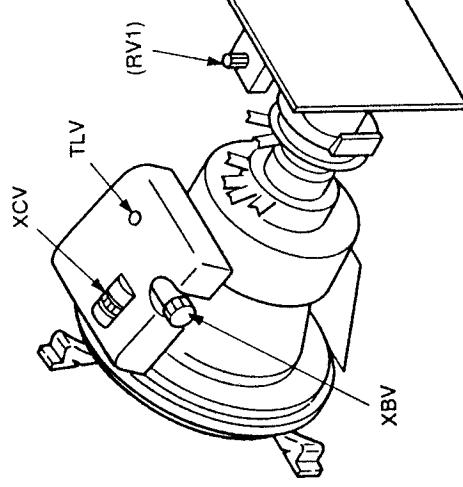


Fig. 1-21.

[14-inch Model Convergence Adjustment]

- Preparation

1. Set the SCREEN MODE to 4 : 3 NORM at the INPUT CONFIGURATION menu.
2. Input the cross hatch signal.

- Convergence Adjustment

1. Minimize the vertical misconvergence at the center of the left side of the screen and the center of the right side of the screen using the DY correction reactor XCV (TH).
2. Minimize the vertical misconvergence at the top and bottom of the screen using the DY correction reactor TLV.
3. Adjust the V CONV TOP data and V CONV BOT data so that the vertical misconvergence at the top and bottom of the screen becomes minimum.
(Do not change the value of the H STAT data and H CONV data (128).)

Note:The V CONV TOP and V CONV BOT adjustment menus are under the E BOARD menu of the MAINTENANCE menu.

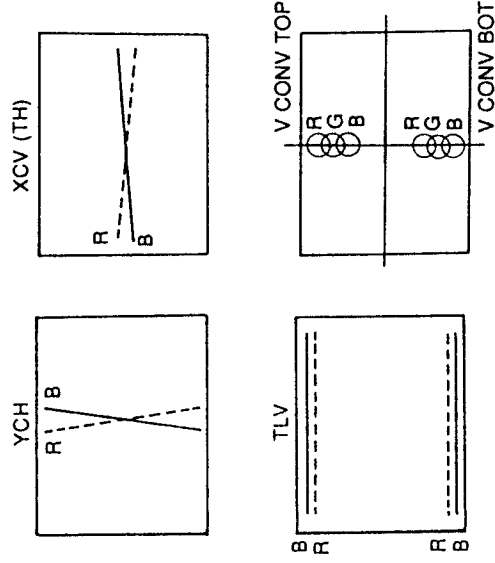


Fig. 1-22.

- 4 : 3 UNDER SCAN Mode Convergence Adjustment

1. Set the SCREEN MODE to 4 : 3 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the vertical convergence adjustment data (V CONV data) to the same value as the 4 : 3 NORMAL SCAN mode.
3. Check the horizontal and vertical convergence, and if there is misconvergence, adjust again.

- 16 : 9 NORMAL SCAN Mode Convergence Adjustment

1. Set the SCREEN MODE to 16 : 9 NORM at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the vertical convergence adjustment data (V CONV data) to the same value as the 4 : 3 NORMAL SCAN mode.
3. Check the horizontal and vertical convergence, and if there is misconvergence, adjust again.

- 16 : 9 UNDER SCAN Mode Convergence Adjustment

1. Set the SCREEN MODE to 16 : 9 UNDER at the INPUT CONFIGURATION menu of the SETUP menu.
2. Set the vertical convergence adjustment data (V CONV data) to the same value as the 4 : 3 NORMAL SCAN mode.
3. Check the horizontal and vertical convergence, and if there is misconvergence, adjust again.

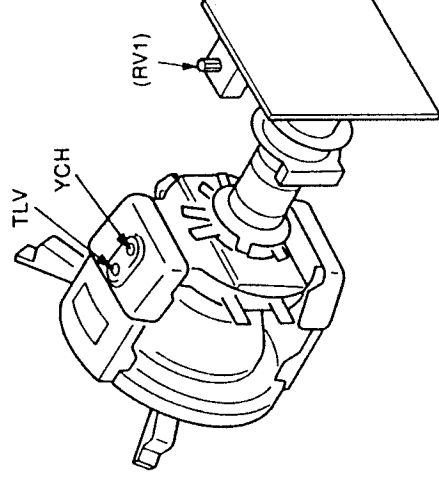


Fig. 1-23.

[G2 Adjustment]

Note: The G2 REF Adjustment menu is under the BK BOARD menu of the MAINTENANCE menu.

1. Input the color bar signal.
2. Connect the R, G, and B cathodes of the C board to the probes of the oscilloscope, and check the DC voltage of the color bar signal pedestal.
(20V/Div)
3. Connect the cathode with the highest pedestal DC voltage to the probe of the oscilloscope.
4. Adjust the G2 REF data so that the pedestal DC voltage becomes 97.5V.

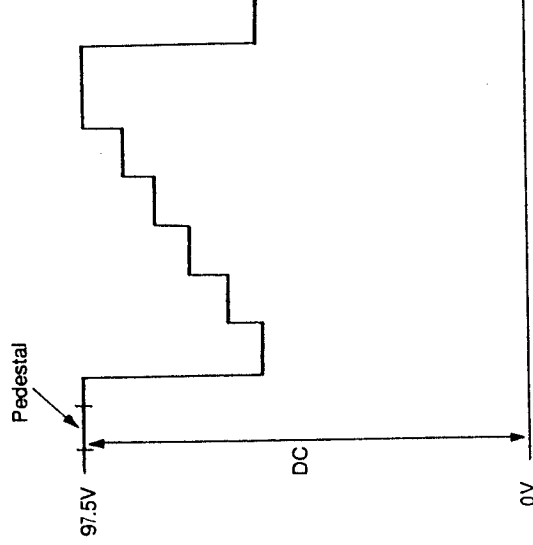


Fig. 1-24.

— C Board — (Conductor side)

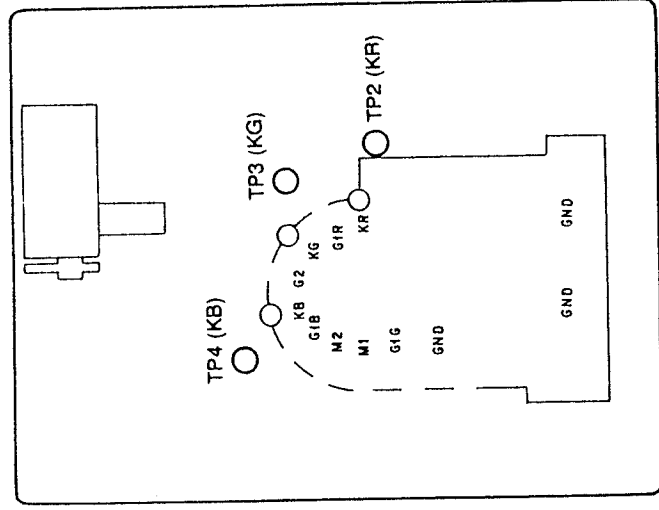



Fig. 1-25.

[White Balance Adjustment]


1. Outline of Adjustments and Calibration of Color Analyzer
Use for Adjustments

Perform the following adjustments.

- 1.1 Creating the parameters used for converting the CRT RGB drive voltage into color temperature coordinates
This monitor is equipped with a function for copying color temperature between several monitors.
Because the CRT drive voltage depends on the CRT, the same color temperature will not be attained amongst several monitors even if the same drive voltage has been supplied.
For this reason, to copy a color temperature between several monitors, it is necessary to send the required data using parameters which do not depend on the CRT such as the xyY color temperature coordinates.
Select and execute the SYSTEM/COLOR TEMP/FACTORY ADJ menu on the MAINTENANCE menu. The D93 color temperature will automatically be adjusted and at the same time, the drive voltage and color temperature coordinates conversion parameter will be created.
Use this parameter for copying the color temperature to other monitors and for copying the color temperature to the memory card.

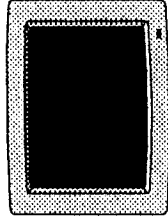

CRT drive voltage ↓

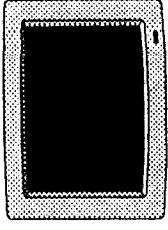

CRT drive voltage ↑

Color temperature coordinates

→ Transmission of data

Color temperature coordinates

Fig. 1-26.

1.2 D65/D56 Color Temperature Adjustment

Perform the D56 adjustment only for BVM-14E1U/14E5U/14F1U/14F5U/20E1U/20F1U.

1.3 Copying Color Temperature Data D65/D93/D56 to Color Temperature STD, COLOR1, COLOR2, AUX

Calibration of Color Analyzer

Generally, to measure the color temperature of a monitor using several color analyzers, these color analyzers will show different values. The values measured by the color analyzer will also change with time. For this reason, color analyzers used for this adjustment should be calibrated first so that they will show the correct values for the following color temperature coordinates.

	x	y	Y (cd/m ²)
D65	0.313	0.329	1.7
	0.313	0.329	100
D93	0.284	0.298	1.7
	0.284	0.298	100
D56	0.331	0.346	1.7
	0.331	0.346	100

4-2. SAFETY RELATED ADJUSTMENTS

2. Adjustment Standard

2.1 Input the following signal to the G/Y input terminal of the BK board to display it on the screen.

For BVM-14E1U/14E5U/14F1U/14F5U/20E1U/20F1U : NTSC signal
For BVM-14E1E/14E5E/14F1E/14F5E/20E1E/20F1E : PAL signal

2.2 Connect the RS-232C terminal of the CA-100 with the OPTION terminal of the monitor using the cable shown in "Required Tools and Measuring Instruments 5".

2.3 Set the CA-100 as shown below, and connect the measuring probe of the CA-100 at the center of the CRT screen.

Display mode : xyY mode

Baud Rate : 9600

3. Select the SYSTEM/COLOR TEMP menu on the MAINTENANCE menu.

4. Select D93 of COLOR TEMP, cover the CRT screen with a black cloth, select FACTORY ADJ, and start automatic adjustments.

5. Select D65 of COLOR TEMP, and select the PROBE/MINOLTA CA-100 menu. After selecting D65, cover the CRT screen with a black cloth, and select START to start automatic operations.

6. Execute this adjustment only for BVM-14E1U/14E5U/14F1U/14F5U/20E1U/20F1U.

Select AUX of COLOR TEMP, and select the PROBE/MINOLTA CA-100 menu.

After setting X=0.331, Y=0.346, LOWLIGHT=2.7, and HIGHLIGHT=100, cover the CRT screen with a black cloth, and select START to start automatic operations.

7. Select the SYSTEM/COLOR TEMP/COPY/OTHER VALUE menu on the MAINTENANCE menu.

8. Select STD of COLOR TEMP, perform the following "D65", and copy the color temperature data to STD.

9. Select COLOR1 of COLOR TEMP, perform the following "D93", and copy the color temperature data to COLOR1.

10. Select COLOR2 of COLOR TEMP, perform the following step, and copy the color temperature data to COLOR2.

For BVM-14E1U/14E5U/14F1U/14F5U/20E1U/20F1U : Select AUX

For BVM-14E1E/14E5E/14F1E/14F5E/20E1E/20F1E : Select D65

11. Execute this adjustment only for BVM-14E1E/14E5E/14F1E/14F5E/20E1E/20F1E.

Select AUX of COLOR TEMP, perform the following "D65", and copy the color temperature data to AUX.

+B (120V) Voltage Adjustment (RV101)

Perform the following checks/adjustments when replacing the following components (marked \blacksquare on the schematic diagram).

\blacksquare G boardRV101, R115, R116, R119, R120, R121, R122, IC101, PC1
GA boardR111, IC102

1. Connect a digital voltmeter to TP105 of the G board. (GND : TP107 of G board)
 - Digital voltmeter : More than 4 digits
2. Input the cross hatch signal.
3. Set the BRIGHTNESS VR and CONTRAST VR buttons to the preset condition. (The LEDs (green) on the buttons go off.)
4. Rotate RV101 of the G board in the clockwise direction to maximize the TP105 voltage.
Check that the TP105 voltage is $126.0 \text{ V} \pm 6.0 \text{ V}$.
5. Adjust the TP105 voltage to $120.0 \text{ V} \pm 0.5 \text{ V}$ using RV101 of the G board.

High Voltage Regulator Check/Adjustment

(RV501)

Perform the following checks/adjustments when replacing the following components (marked \bullet on the schematic diagram).

\blacksquare PA boardRV501, IC501, R509, R510, R513, R801, R802, R804

1. Turn off the power.
2. Connect a static voltmeter to the CRT anode cap.
 - Static voltmeter : Whose input impedance calibrated to above $2 \times 10^9 \Omega$.
(Example : Singer's ESH-27X or ESH-23X)
3. Turn on the power.
4. Input the monoscope signal.
5. Set the BRIGHTNESS VR and CONTRAST VR buttons to the preset condition. (The LEDs (green) on the buttons go off.)
4. Check that the voltage value is within the following ranges.
20-inch model : $27.00 \text{ kV} \pm 0.15 \text{ kV}$
14-inch model : $25.00 \text{ kV} \pm 0.15 \text{ kV}$
5. If step 4 is not satisfied, replace RV501 of the PA board, adjust RV501 so that the specification is satisfied.
6. If replacing RV501 in step 5, after adjusting the RV, reCure RV501 using epoxy resin (DP-190 3M).

(RV503)

Perform the following checks/adjustments when replacing the following components (marked **■** on the schematic diagram).

■PA boardRV503, IC502, R524, R525, R526, R527, R530, R808


1. Turn off the power.
2. Connect the static voltmeter to the CRT anode cap.
 - Static voltmeter : Whose input impedance calibrated to above $2 \times 10^9 \Omega$.
(Example : Singer's ESH-27X or ESH-23X)
3. Connect a 200 k Ω variable resistor between TP501 and GND of the PA board.
(Maximize the resistance of the 200 k Ω variable resistor.)
4. Turn on the power.
5. Input the cross hatch signal.
6. Set the BRIGHTNESS VR and CONTRAST VR buttons to the preset condition. (The LEDs (green) on the buttons go off.)
7. Cut-off R, G, and B. (Turn on the SHIFT button (LED lights up in orange), and turn on the R, G, and B buttons (LEDS light up).)
8. Check that when the resistance of the 200 k Ω variable resistor connected to TP501 is gradually reduced, the high voltage drops rapidly at the following values.
 - 20-inch model : 30.00 kV \pm 0.50 kV
 - 14-inch model : 27.00 kV \pm 0.50 kV
9. If step 8 is not satisfied, replace RV503 of the PA board, and adjust RV503 so that the specification is satisfied.
10. Disconnect the 200 k Ω variable resistor.
11. Check that the high voltage satisfies the following values.
 - 20-inch model : 27.00 kV \pm 0.15 kV
 - 14-inch model : 25.00 kV \pm 0.15 kV
12. Disconnect the static voltmeter.
13. If replacing RV503 in step 9, after adjusting the RV, secure RV503 using epoxy resin (DP-190 3M).

(RV502)



Perform the following checks, following components (marked **■** on the schematic diagram).

■PA boardRV502, IC502,
PC boardR1, R2, R3, R4
BK boardR912, R913, IC


1. Turn off the power.
2. Disconnect the CN3 connector from the PC board.
3. Connect a DC ammeter between the PC board.
4. Short-circuit Pin ③ and ④.
5. Short-circuit TP502 and using a jumper.
6. Turn on the power.
7. Input the 100% all-white signal.
8. Set the BRIGHTNESS VR to the preset condition and set the MANUAL adjustment on the buttons light up.)
9. Gradually rotate the BRIGHTNESS VR from MIN to MAX, and check the operating current. The operating current is as follows.
 - 20-inch model : 2.0 mA
 - 14-inch model : 1.5 mA
10. Replace RV502 if step 9 is not satisfied. The specification is as follows.
11. Disconnect the jumper between the PC board.
12. Turn on the power again.
13. Check that when the BRIGHTNESS VR buttons are rotated from the preset condition (the reading of the ammeter is as follows)
 - 20-inch model : Below 2.0 mA
 - 14-inch model : Below 1.5 mA
14. Disconnect the DC ammeter from the PC board.
15. Disconnect the jumper between the PC board.
16. Connect the CN3 connector from the PC board.
17. If RV502 is replaced at step 10, after adjusting the RV, secure it with epoxy resin (DP-190 3M).

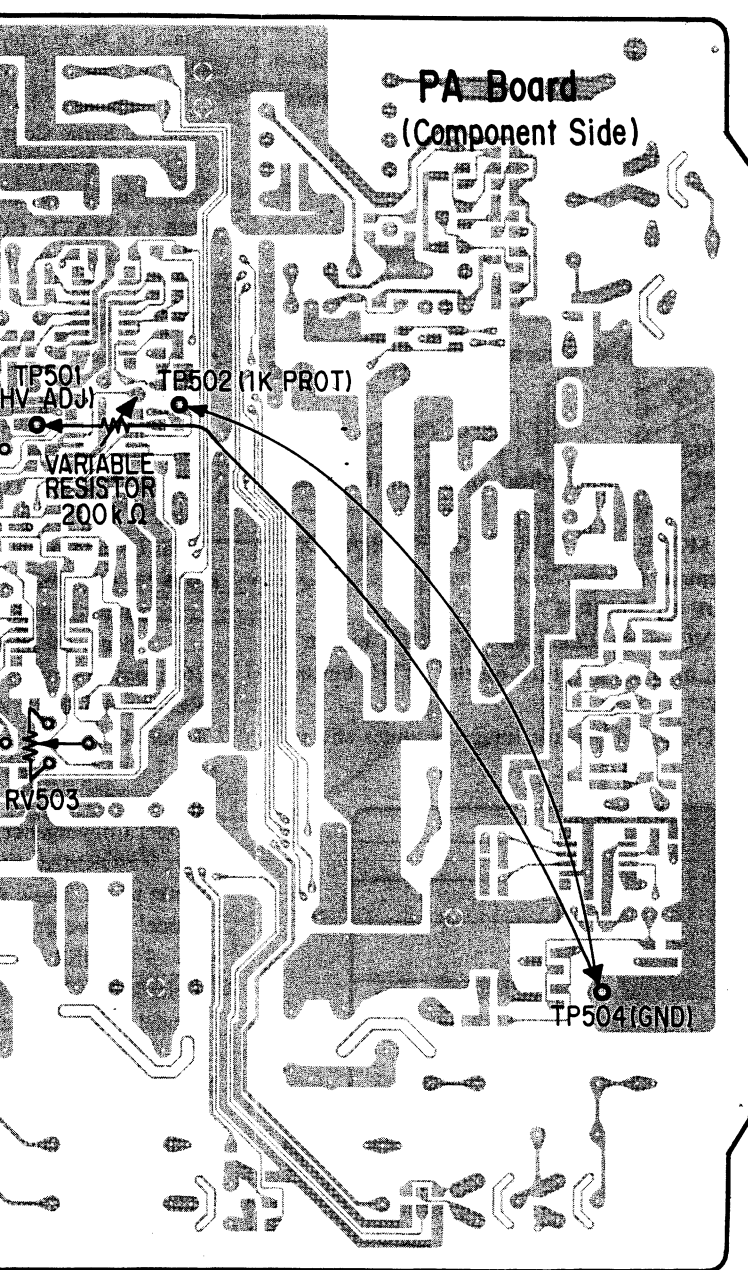

Digital Volt meter

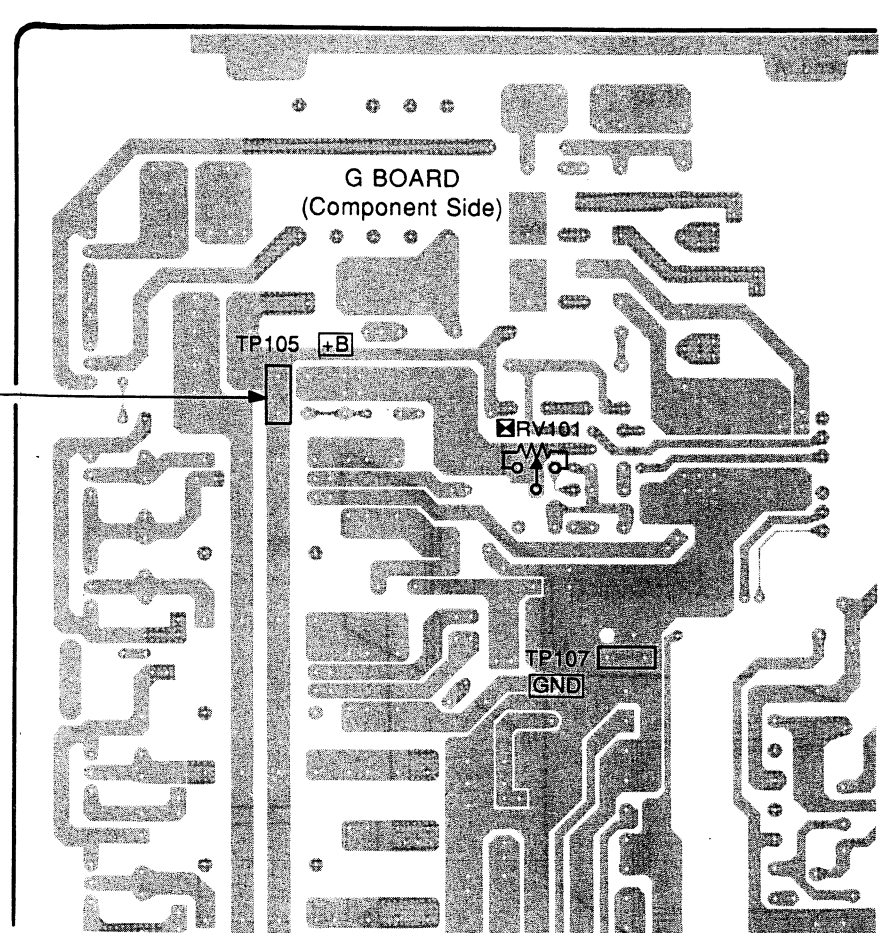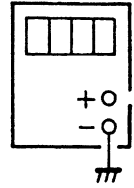

Ampere meter

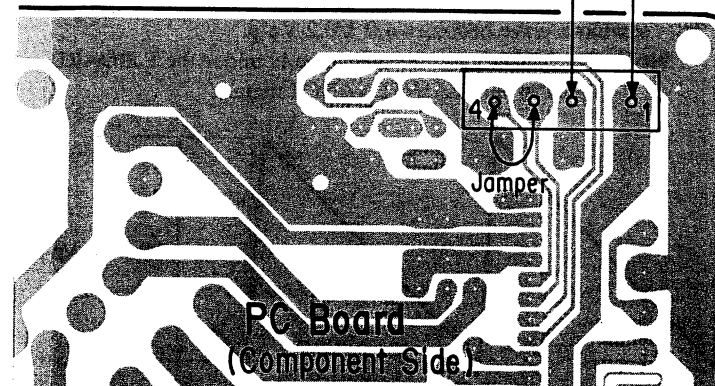

CONFIGURATION menu of the SETUP menu.
 ... COMPONENT YUV SMPTE/EBU N-10
 ... 6
 ... INT

LOAD from E BOARD menu of MAINTENANCE menu and execute.

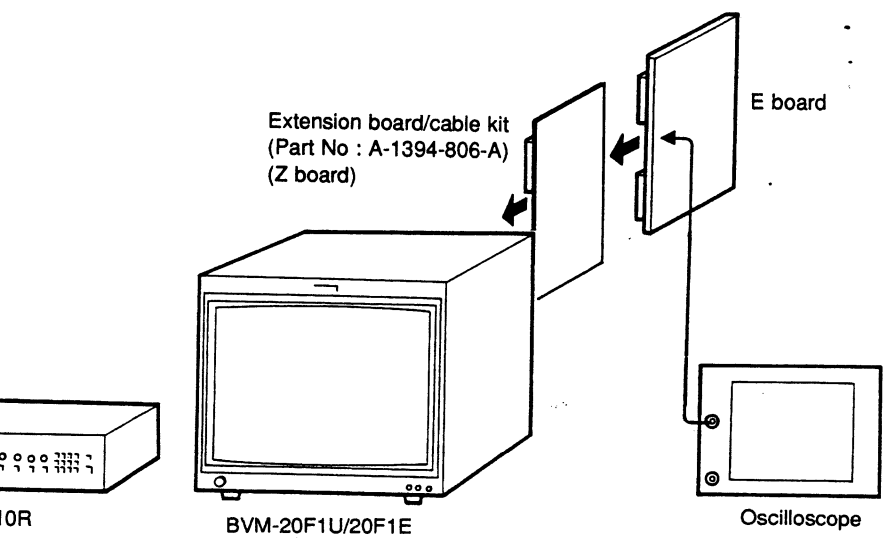


Fig. 1-1.

Parts for Adjustment


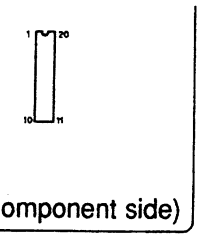


Fig. 1-2.

1-2. V OSC Adjustment

1. Connect an oscilloscope to Pin ⑬ of IC2007 of the E board.
2. Adjust the V OSC data so that the amplitude of the V sawtooth wave becomes 4.0 ± 0.2 Vp-p.

Note: The V OSC adjustment menu is under the E BOARD menu of the MAINTENANCE menu.

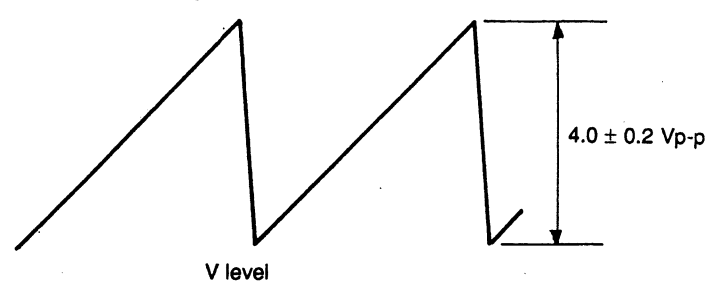


• NTSC H OSC Adjustment

1. Connect the NTSC signal generator, and input the cross hatch signal.
2. Set the SCREEN MODE as follows at the INPUT CONFIGURATION menu of the SETUP menu.
SCREEN MODE 4 : 3 NORM
3. Set the EXT SYNC mode. (Turn on the SHIFT button (LED lights up in orange) and turn on the SYNC button (LED lights up).)
4. Adjust the H OSC data so that the image becomes still or flows slowly.

• PAL H OSC Adjustment

1. Connect the NTSC signal generator, and input the cross hatch signal.
2. Set the SCREEN MODE of the INPUT CONFIGURATION of the SETUP menu as follows.
SCREEN MODE 4 : 3 NORM
3. Set the EXT SYNC mode. (Turn on the SHIFT button (LED lights up in orange) and turn on the SYNC button (LED lights up).)
4. Adjust the H OSC data so that the image becomes still or flows slowly.

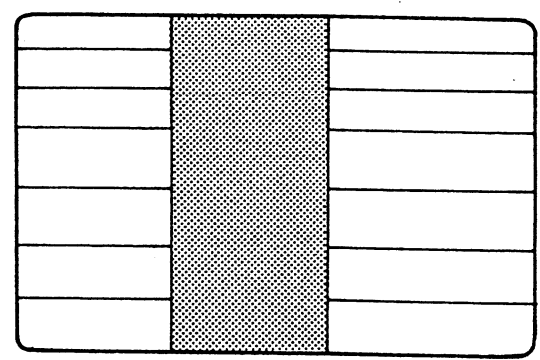

* Adjust so that the image becomes still or flows slowly.

Fig. 1-4.

1-4. H Blanking Adjustment

Refer to 4-1. Basic Adjustment for CRT Replacement [H Blanking Adjustment] (Page 4-3).

1-5. V Blanking Adjustment

Refer to 4-1. Basic Adjustment for CRT Replacement [V Blanking Adjustment] (Page 4-5).

1-6. Linearity Adjustment

Refer to 4-1. Basic Adjustment for CRT Replacement [Linearity Adjustment] (Page 4-6).

match in the horizontal
Note : H STATIC C
 menu of MA
 • Vertical Static Cor
 Adjust V STATIG
 match in the horizontal
Note : V STATIC C
 menu of MA

1-9. Convergence

• Preparation
 Refer to 4-1. Basic
 Model Convergence
 • Vertical convergence
 Adjust V CONV T
 vertical mis-conver
 areas of the screen.
Note : V CONV TO
 menu is und
 menu. (See F
 • Horizontal converg
 Refer to 4-1. Basic
 Model Convergence
 • 4 : 3 UNDER SCA
 Refer to 4-1. Basic
 Model Convergence
 • 16 : 9 NORMAL S
 Refer to 4-1. Basic
 Model Convergence
 • 16 : 9 UNDER SC
 Refer to 4-1. Basic
 Model Convergence

1-10. Convergence

• Preparation
 Refer to 4-1. Basic
 Model Convergence
 • Convergence adjust
 Adjust V CONV T
 vertical mis-conver
 areas of the screen.
Note : V CONV TO
 menu is und
 menu. (See F
 • 4 : 3 UNDER SCA
 Refer to 4-1. Basic
 Model Convergence
 • 16 : 9 NORMAL S
 Refer to 4-1. Basic
 Model Convergence
 • 16 : 9 UNDER SC
 Refer to 4-1. Basic

Set as follows at the INPUT CONFIGURATION menu of the SETUP menu.

FORMAT..... COMPONENT YUV SMPTE/EBU N-10

SLOT NO 6

SYNC MODE INT

Select BK BOARD DATA LOAD from BK BOARD menu of MAINTENANCE menu and execute.

• Connection


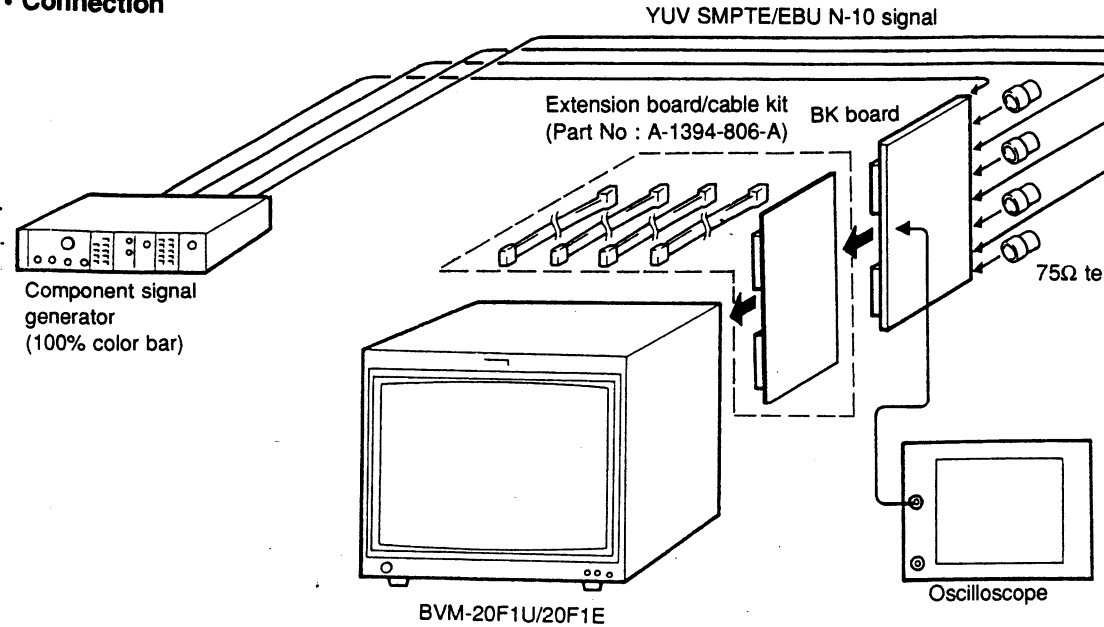


Fig. 2-1.

• Arrangement Diagram for Adjustment Parts

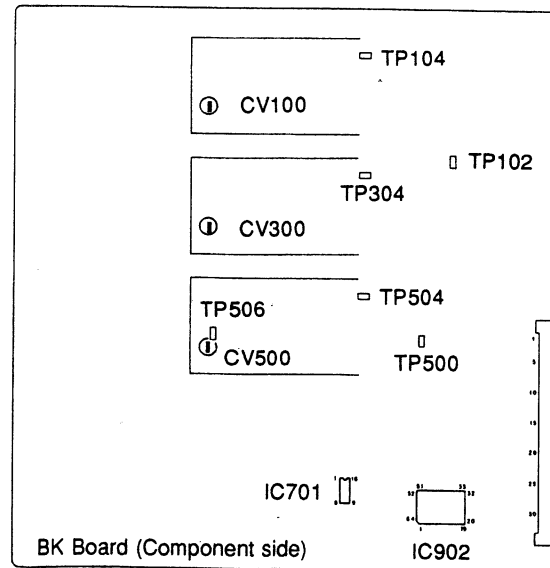

2-2. Bright Center Adjustment

1. Input the component color bar signal (YUV SMPTE/EBU N-10).
2. Set the BRIGHT data to 800 using the BRIGHT menu.
3. Connect an oscilloscope to Pin ⑮ of IC902.
4. As shown in Fig. 2-3, adjust the BRIGHT data until the waveform becomes flat.

Note: The BRT CENTER adjustment is performed in the BK BOARD menu of the MAINTENANCE menu.

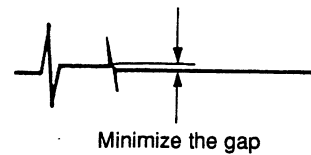


Fig. 2-3.

2-3. Clamp Level Adjustment

Note: The following adjustment menus are under the BK BOARD menu of the MAINTENANCE menu.

- R-Y CLAMP OFFSET
- B-Y CLAMP OFFSET

1. Input the component color bar signal (YUV SMPTE/EBU-N10).
2. Connect the oscilloscope to TP102.
3. As shown in Fig. 2-4, adjust the R-Y CLAMP OFFSET data so that the pedestal and clamp offset pulse level becomes equal.
4. Connect the oscilloscope to TP502.
5. As shown in Fig. 2-5, adjust the B-Y CLAMP OFFSET data so that the pedestal and clamp offset pulse level becomes equal.

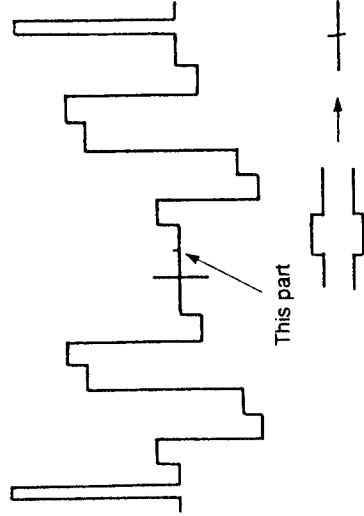


Fig. 2-4.

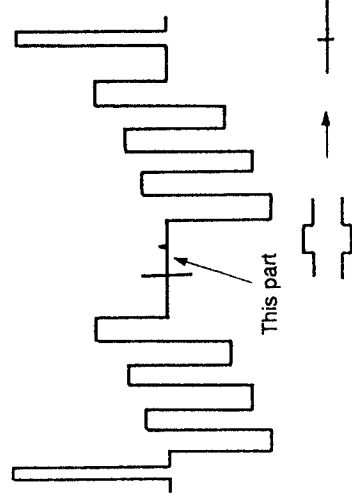


Fig. 2-5.

2-4. Adjustment Preparations 2

Perform the following adjustments for each of the following five input signals.

Set the settings required for each signal at the INPUT CONFIGURATION of the SETUP menu. When inputting the composite signal, insert the NTSC input adapter BKM-24N into the empty slot of the unit.

1. COMPONENT SMPTE/EBU-N10
 - 100% color bar signal
 - All white peak 700 mV
 - B-Y 700 mVp-p
 - R-Y 700 mVp-p
 - 100 IRE all white signal
 - All white peak 700 mV
 - 20 IRE all white signal
 - All white peak 140 mV
2. COMPONENT BETACAM SETUP 7.5
 - 75% color bar signal
 - All white peak 714.29 mV
 - B-Y 700 mVp-p
 - R-Y 700 mVp-p
 - 100 IRE all white signal
 - All white peak 714.29 mV
 - 20 IRE all white signal
 - All white peak 142.86 mV
3. COMPOSITE NTSC SETUP 7.5
 - 100% color bar signal
 - All white peak 714 mV
4. COMPOSITE NTSC SETUP 0
 - 75% color bar signal
 - All white peak 714 mV
5. COMPOSITE NTSC SETUP 0
 - 100% color bar signal
 - All white peak 714 mV

Set as follows at the INPUT CONFIGURATION menu of the SETUP menu.

FORMAT Set according to the input signal

SLOT NO When component signal is input: 6

When composite signal is input: Slot no. when BKM-24N is mounted.

SYNC MODE INT

Configuration when Component Signal is Input

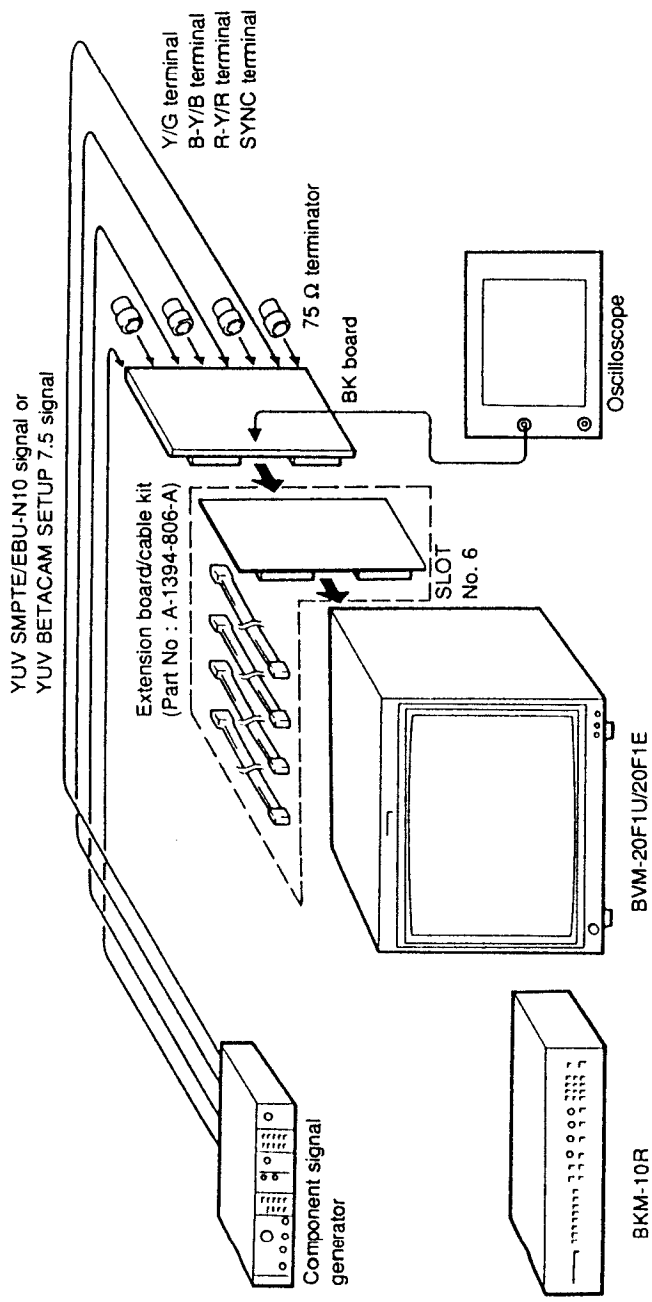


Fig. 2-6.

Configuration when Composite Signal is Input

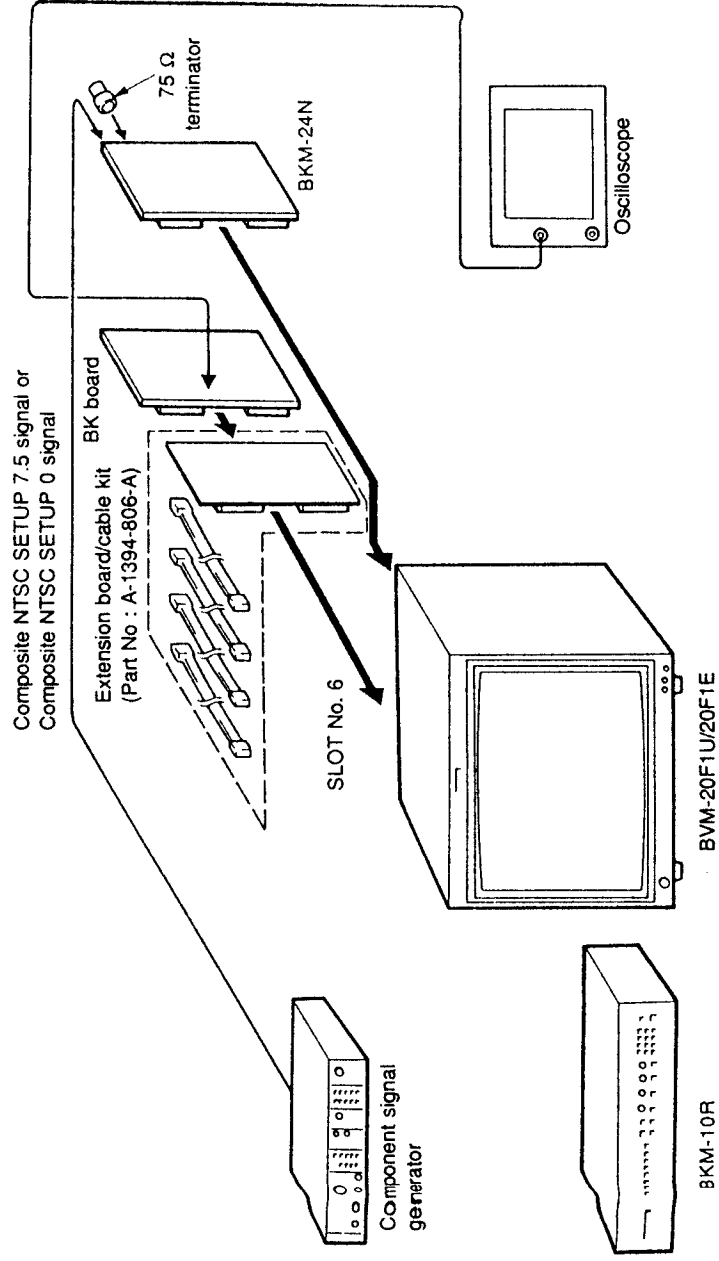


Fig. 2-7.

2-5. Pulse Level Adjustment

Note: The following adjustment menus are under the BK BOARD menu of the MAINTENANCE menu.

B-Y PULSE LEVEL
R-Y PULSE LEVEL

1. Input the color bar signal.
2. Set the CHROMA data to 500 using the CHROMA knob.
3. Connect the oscilloscope to TP504.
4. As shown in Fig. 2-8, adjust the B-Y PULSE LEVEL data so that the BLUE waveform becomes flat.

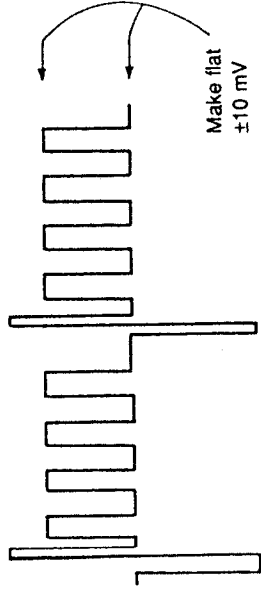


Fig. 2-8.

5. Connect the oscilloscope to TP104.
6. As shown in Fig. 2-9, adjust the R-Y PULSE LEVEL data so that the RED waveform becomes flat.

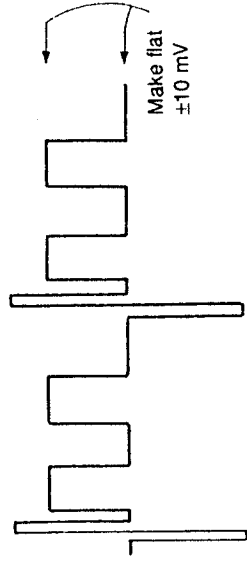


Fig. 2-9.

2-6. R-Y Gain, B-Y Gain Adjustment

Note: The following adjustment menus are under the BK BOARD menu of the MAINTENANCE menu.

B-Y GAIN
R-Y GAIN

1. Input the color bar signal.
2. Set the CHROMA data to 500 using the CHROMA knob.
3. Connect the oscilloscope to TP304.
4. As shown in Fig. 2-10, adjust the R-Y GAIN data and B-Y GAIN data so that the GREEN waveform becomes flat.

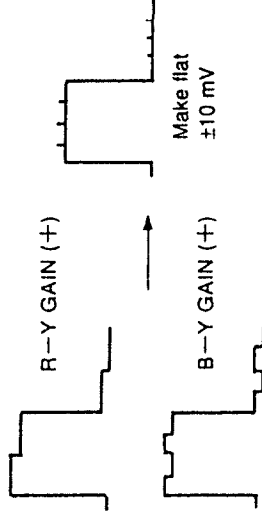


Fig. 2-10.


2-7. 0% Setup Adjustment

Note: The following adjustment menus are under the BK BOARD menu of the MAINTENANCE menu.

R SETUP
G SETUP
B SETUP

1. Input only the Y signal of the color bar signal (Turn off the R-Y signal and B-Y signal).
2. Connect the oscilloscope to TP104.
3. As shown in Fig. 2-11, adjust the R SETUP data so that the black level and setup signal level becomes equal.
4. Connect the oscilloscope to TB304.
5. As shown in Fig. 2-11, adjust the G SETUP data so that the black signal level and setup signal level become equal.
6. Connect the oscilloscope to TP504.
7. As shown in Fig. 2-11, adjust the B SETUP data so that the black signal level and setup signal level become equal.

When SETUP 0% signal is input

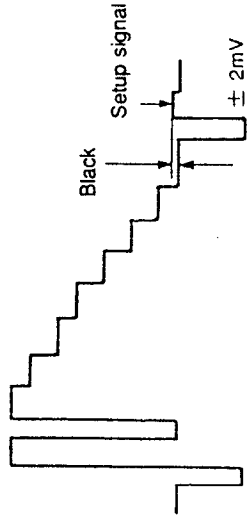

When SETUP 7.5% signal is input

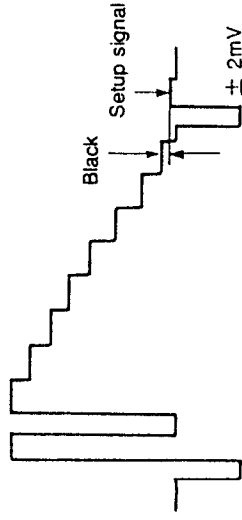


Fig. 2-11.

2-8. 100 IRE Adjustment

Note: The following adjustment menus are under the BK BOARD menu of the MAINTENANCE menu.

R 100 IRE
G 100 IRE
B 100 IRE

1. Input only the Y signal of the color bar signal (Turn off the R-Y signal and B-Y signal).
2. Connect the oscilloscope to TP104.
3. As shown in Fig. 2-12, adjust the R 100 IRE data so that the 100 IRE level and 100 IRE pulse level of the signal become equal.
4. Connect the oscilloscope to TB304.
5. As shown in Fig. 2-12, adjust the G 100 IRE data so that the 100 IRE level and 100 IRE pulse level of the signal become equal.
6. Connect the oscilloscope to TB504.
7. As shown in Fig. 2-12, adjust the B 100 IRE data so that the 100 IRE level and 100 IRE pulse level of the signal become equal.

Minimize the level difference. ± 2 mV

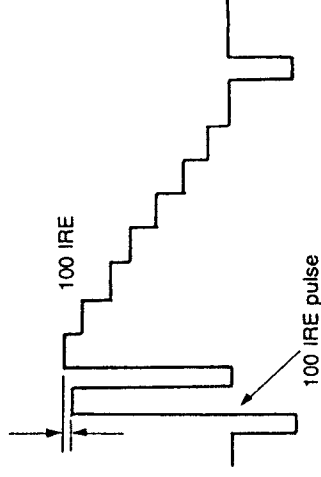


Fig. 2-12.

2-9. BIAS REF Adjustment

Note: The following adjustment menu is under the BK BOARD menu of the MAINTENANCE menu.

BIAS REF

1. Input the 20 IRE all-white signal.
2. Connect the oscilloscope to TP506.
3. As shown in Fig. 2-13, adjust the BIAS REF data so that the all white peak level and BIAS REF pulse level of the signal become equal.

(Oscilloscope is V period)

Minimize the level difference. ± 5 mV

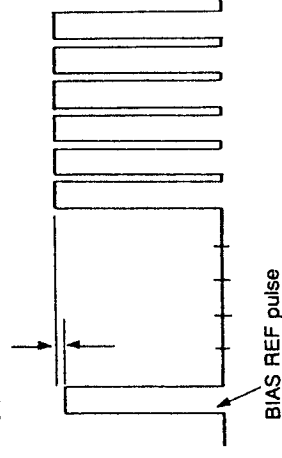


Fig. 2-13.

2-10. DRIVE REF Adjustment

Note: The following adjustment menu is under the BK BOARD menu of the MAINTENANCE menu.
DRIVE REF

1. Input the 100 IRE all-white signal.
2. Connect the oscilloscope to TP506.
3. As shown in Fig. 2-14, adjust the DRIVE REF data so that the all white peak level and DRIVE REF pulse level of the signal become equal.

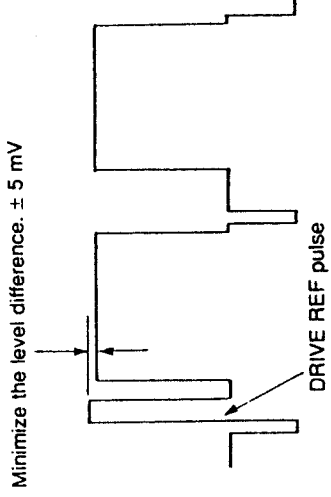


Fig. 2-14.

2-11. Adjustment Preparation 3

Perform the following adjustments using the RGB input signals. Set as follows at the INPUT CONFIGURATION menu of the SETUP menu.

FORMAT COMPONENT RGB
SLOT NO 6
SYNC MODE INT

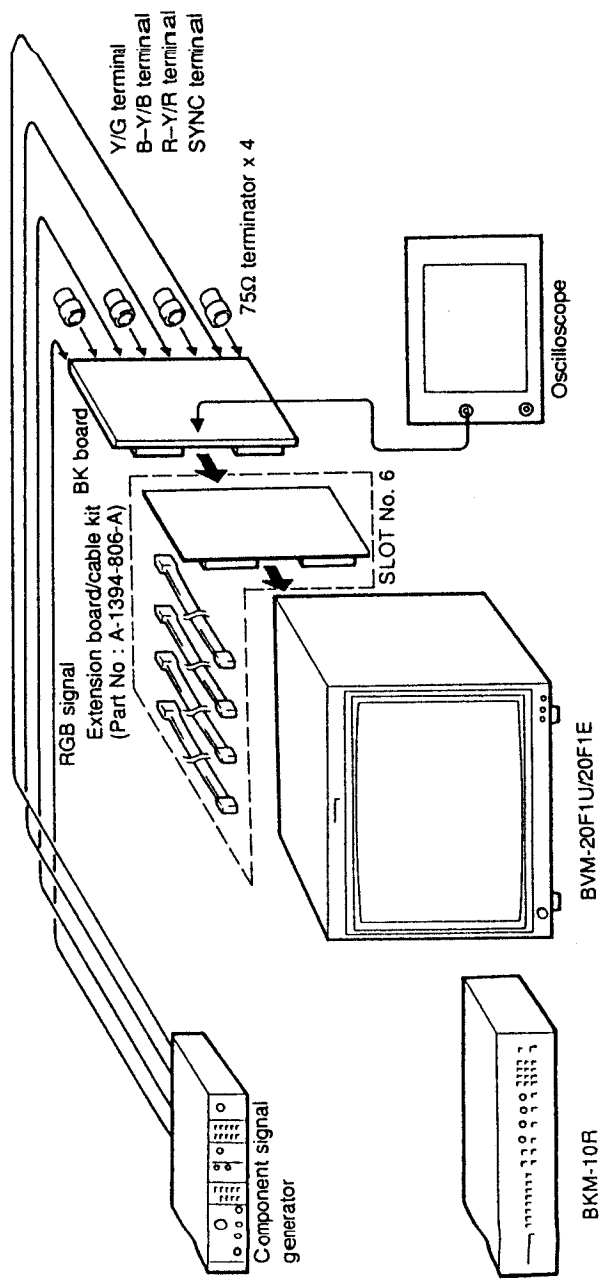


Fig. 2-15.

2-12. RGB Signal SETUP Adjustment

Note: The following adjustment menus are under the BK BOARD menu of the MAINTENANCE menu.

R SETUP
G SETUP
B SETUP

1. Input 100 IRE RGB signal.
2. Connect the oscilloscope to TP104.
3. Adjust the R SETUP data so that the black level and setup signal level become equal.
4. Connect the oscilloscope to TP304.
5. Adjust the G SETUP data so that the black signal level and setup signal level become equal.
6. Connect the oscilloscope to TP504.
7. Adjust the B SETUP data so that the black signal level and setup signal level become equal.

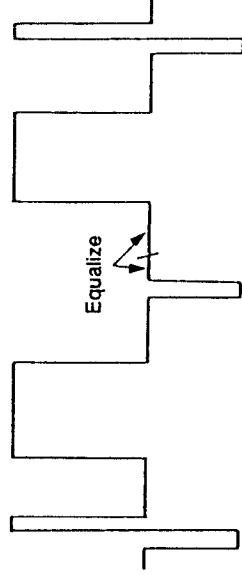


Fig. 2-16.

2-13. RGB Signal 100 IRE Adjustment

Note: The following adjustment menus are under the BK BOARD menu of the MAINTENANCE menu.

R 100 IRE
G 100 IRE
B 100 IRE

1. Input the 100 IRE RGB signal.
2. Connect the oscilloscope to TP104.
3. Adjust the R 100 IRE data so that the 100 IRE level and 100 IRE pulse level of the signal become equal.
4. Connect the oscilloscope to TP304.
5. Adjust the G 100 IRE data so that the 100 IRE level and 100 IRE pulse level of the signal become equal.
6. Connect the oscilloscope to TP504.
7. Adjust the B 100 IRE data so that the 100 IRE level and 100 IRE pulse level of the signal become equal.

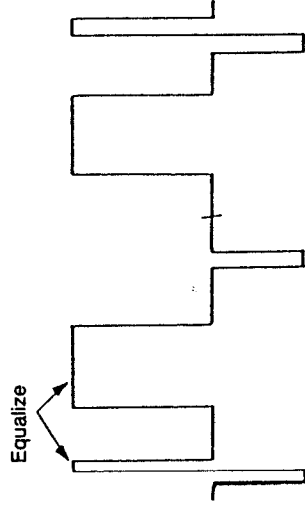


Fig. 2-17.

2-14. Characteristics Adjustment

1. Input the 0 to 10 MHz sweep signal to the R-Y/R terminal.
2. Connect the oscilloscope to TP2 (RK) of the C board.
3. Adjust CV100 of the BK board so that the 0 to 10 MHz range of the waveform becomes flat.
4. Input the 0 to 10 MHz sweep signal to the Y/G terminal.
5. Connect TP3 (GK) of the C board to the oscilloscope.
6. Adjust CV300 of the BK board so that the 0 to 10 MHz range of the waveform becomes flat.
7. Input the 0 to 10 MHz sweep signal to the B-Y/B terminal.
8. Connect TP4 (BK) of the C board to the oscilloscope.
9. Adjust CV500 of the BK board so that the 0 to 10 MHz range of the waveform becomes flat.

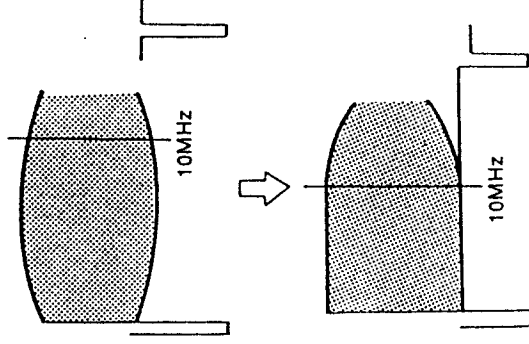


Fig. 2-18.

2-15. White Balance Adjustment

Refer to 4-1. Basic Adjustment for CRT Replacement [White Balance Adjustment] (Page 4-11).

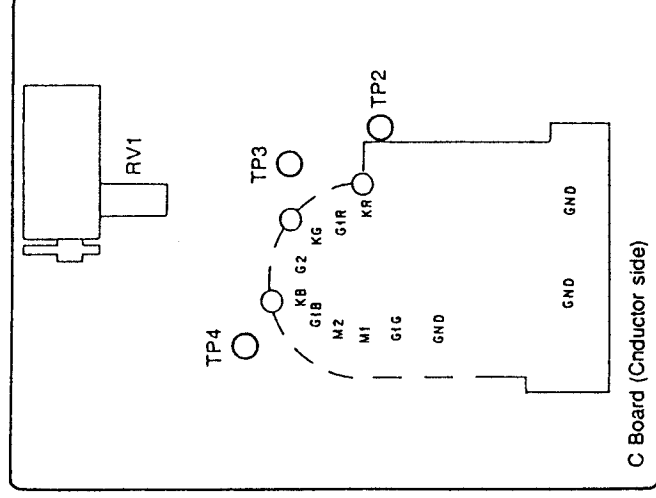


Fig. 2-19.

3. BC Board Adjustment

3-1. Adjust Preparation

Set 1CH as follows using INPUT CONFIGURATION menu of SETUP menu.

FORMAT COMPONENT YUV SMPTE/EBU N-10
 SLOT NO 6
 SYNC MODE INT

• Connection

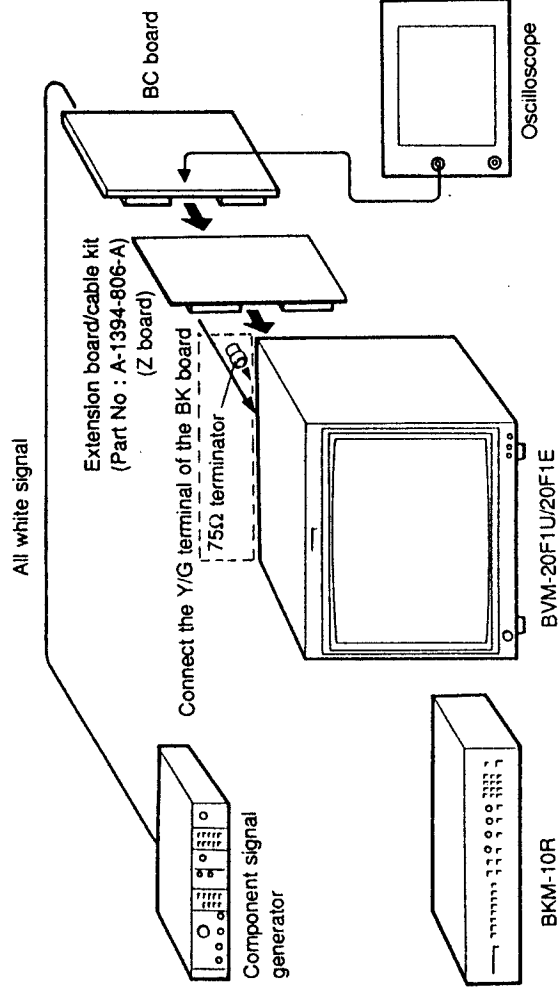


Fig. 3-1.

• Arrangement Diagram for Adjustment Parts

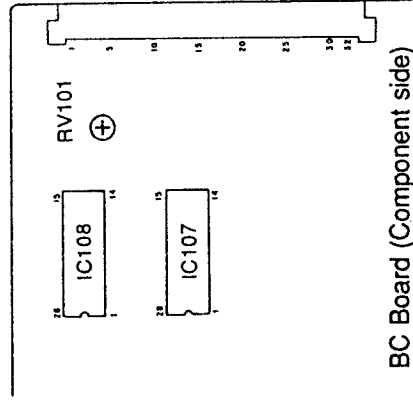


Fig. 3-2.

3-2. Built-in Signal Level Adjustment

1. Input the all-white signal to the Y/G terminal of the BK board.
2. Connect the oscilloscope to Pin (B10) of CN1 of the BC board.
3. Select 1CH and measure and all-white signal level of Y/G terminal input signal.
4. Select 93CH and select an internal white signal.
5. Adjust RV101 of the BC board so that the internal white signal level becomes the same as (measured level in step 3.) the all-white signal of the Y/G terminal input.













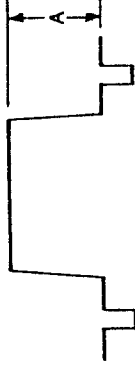


Fig. 3-3.

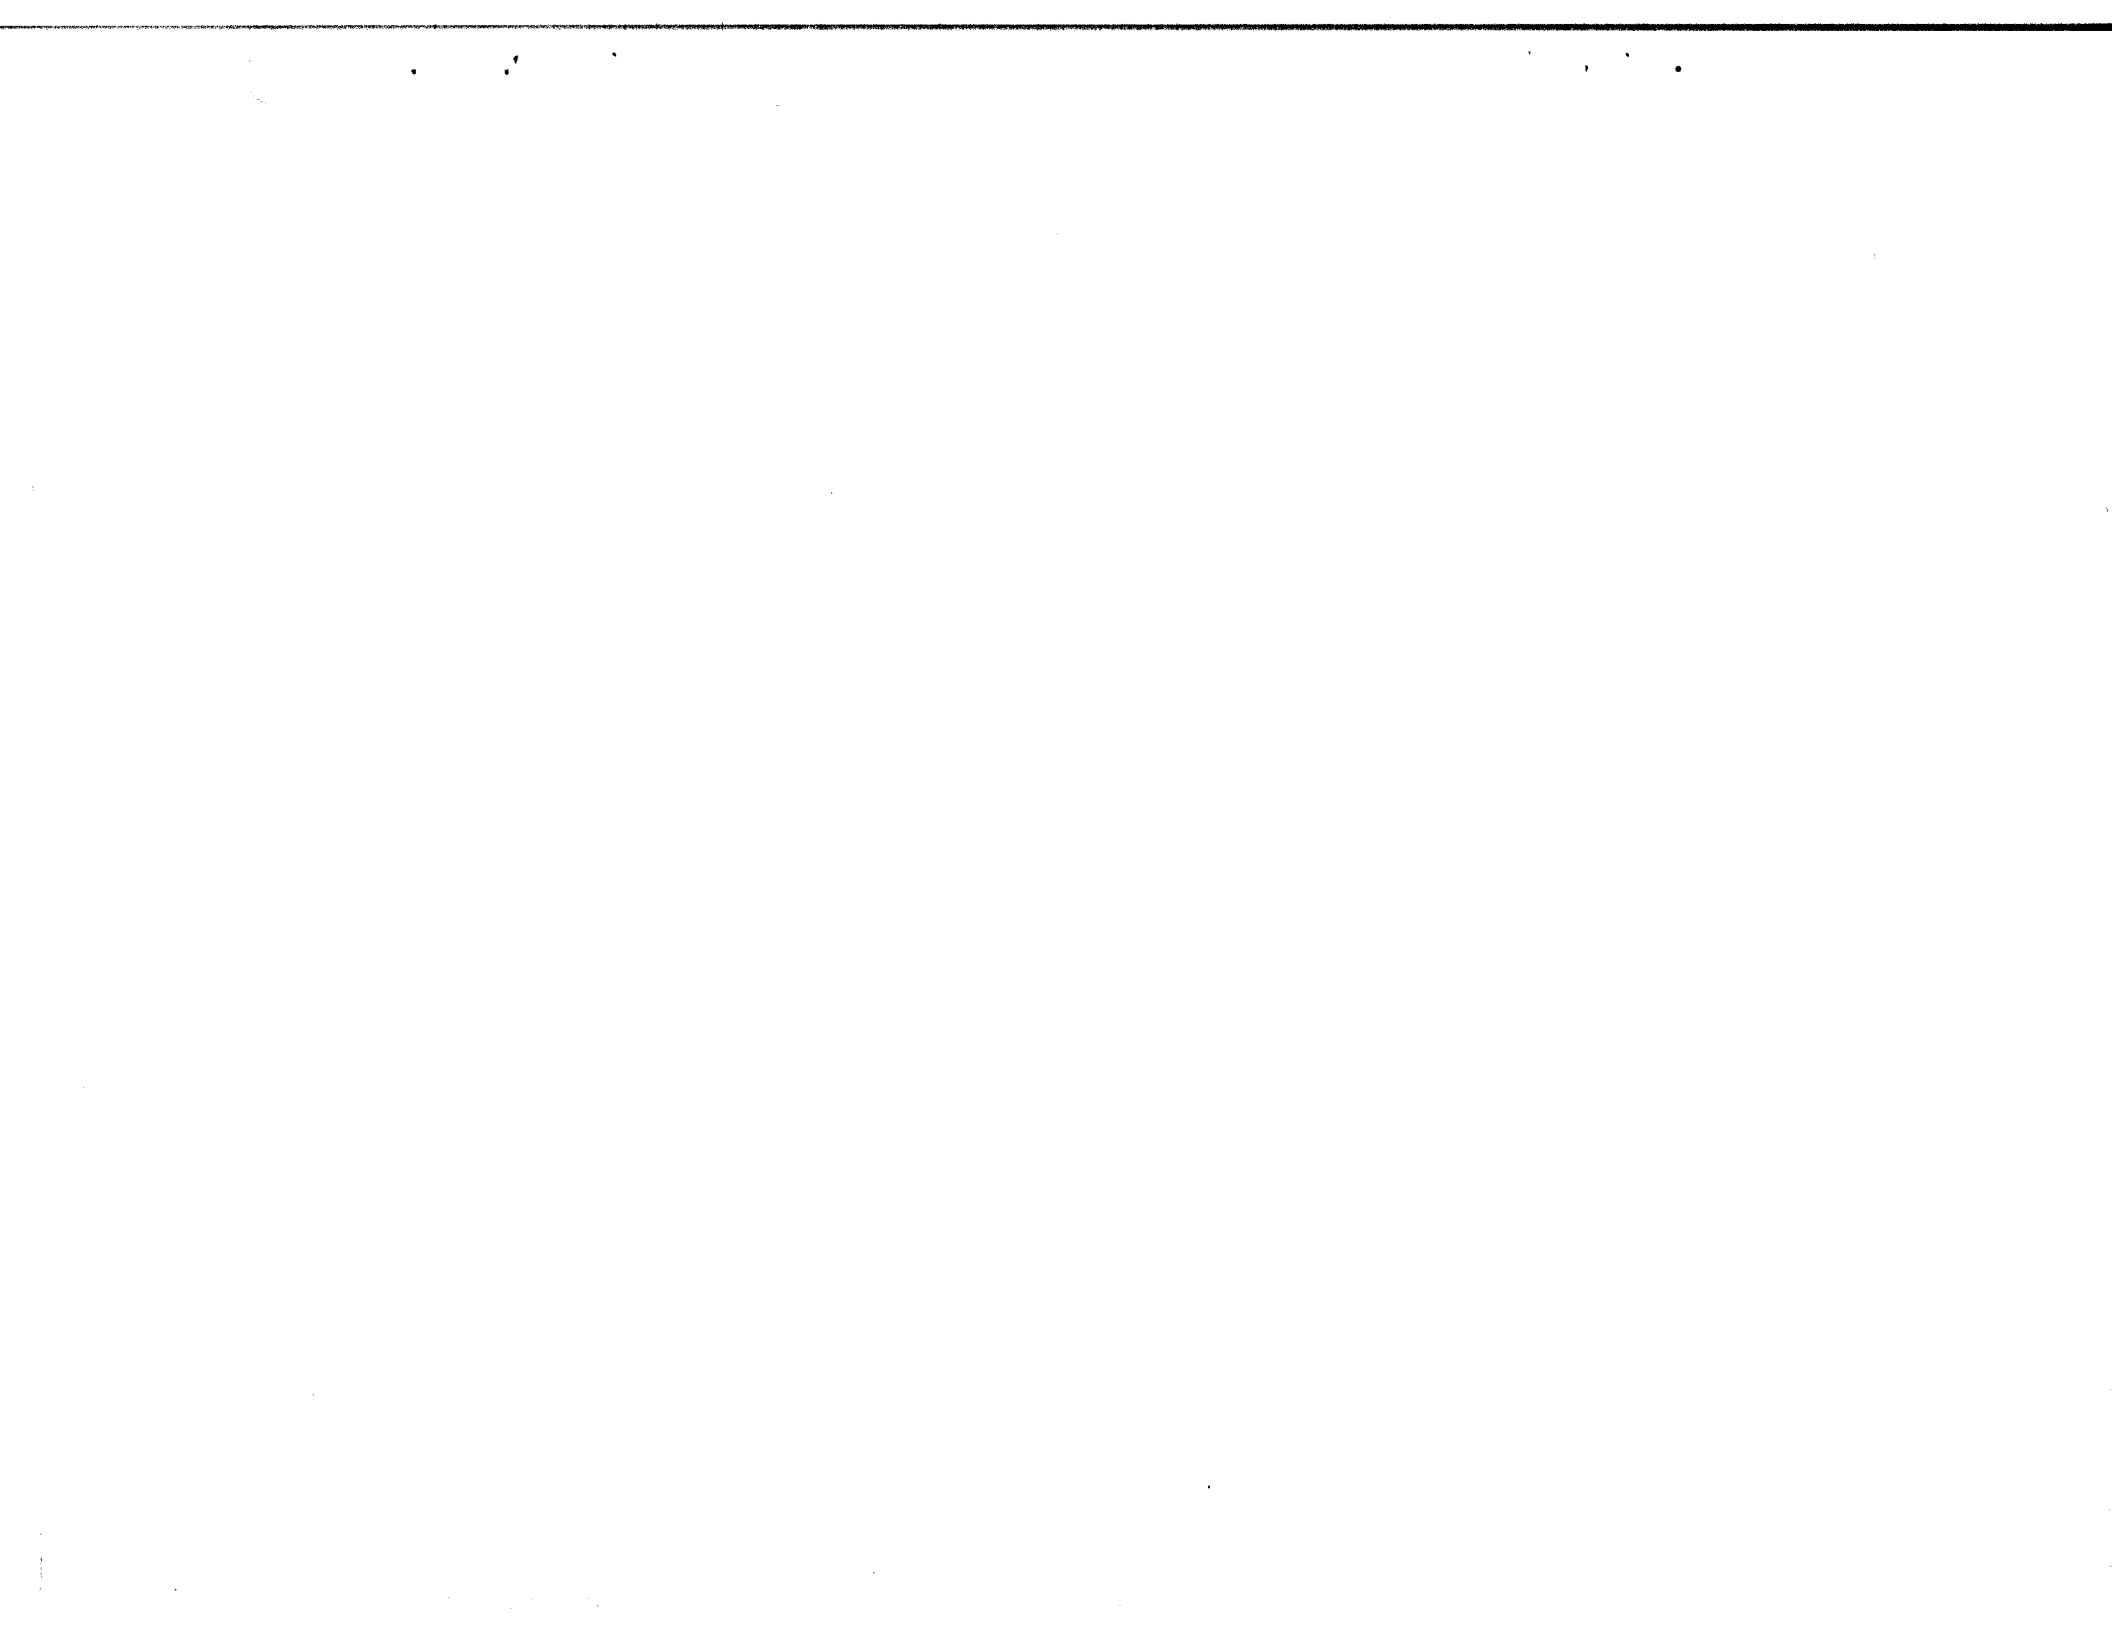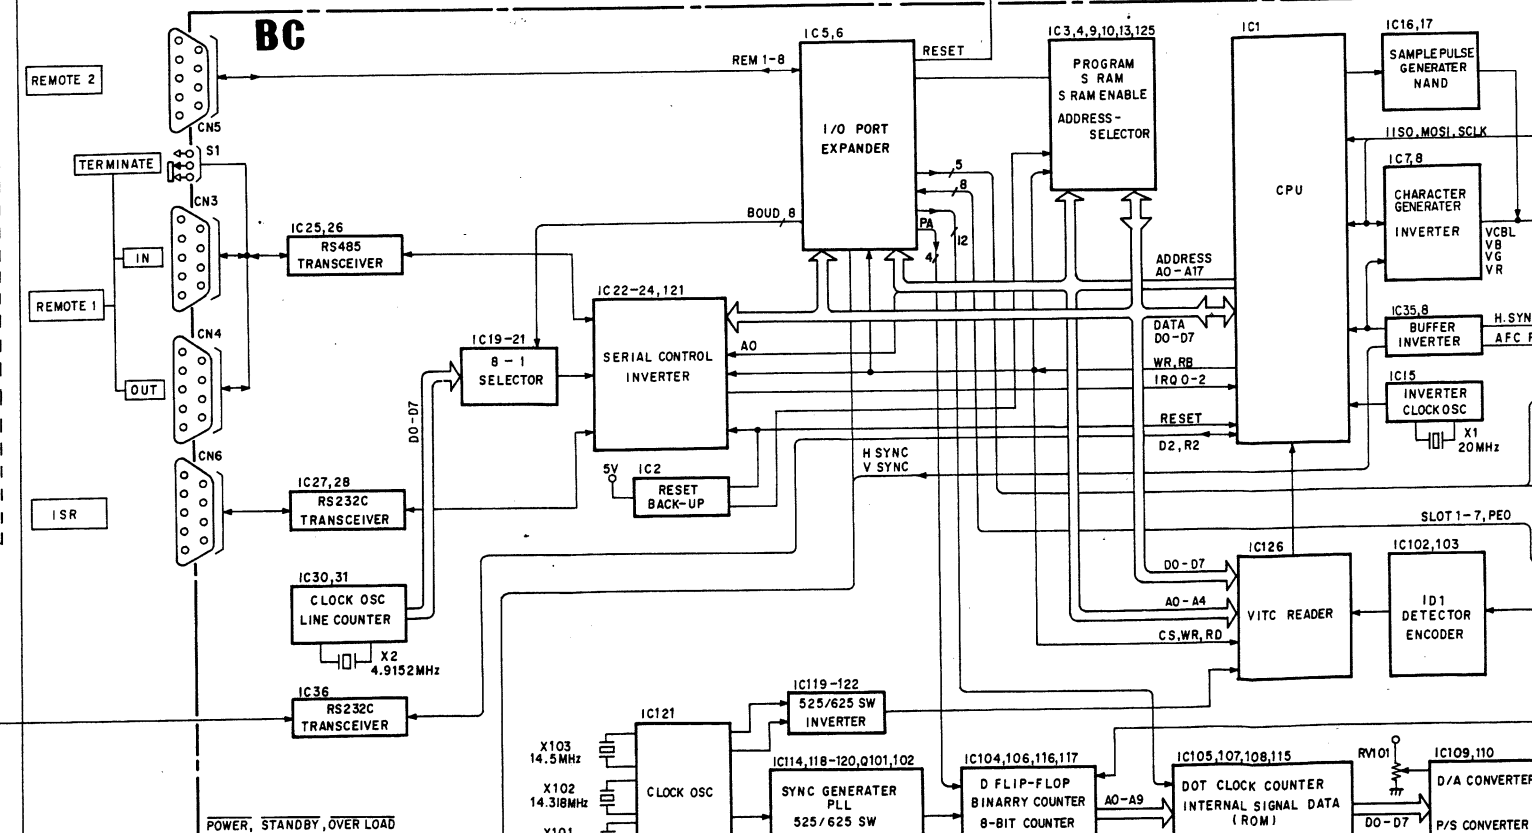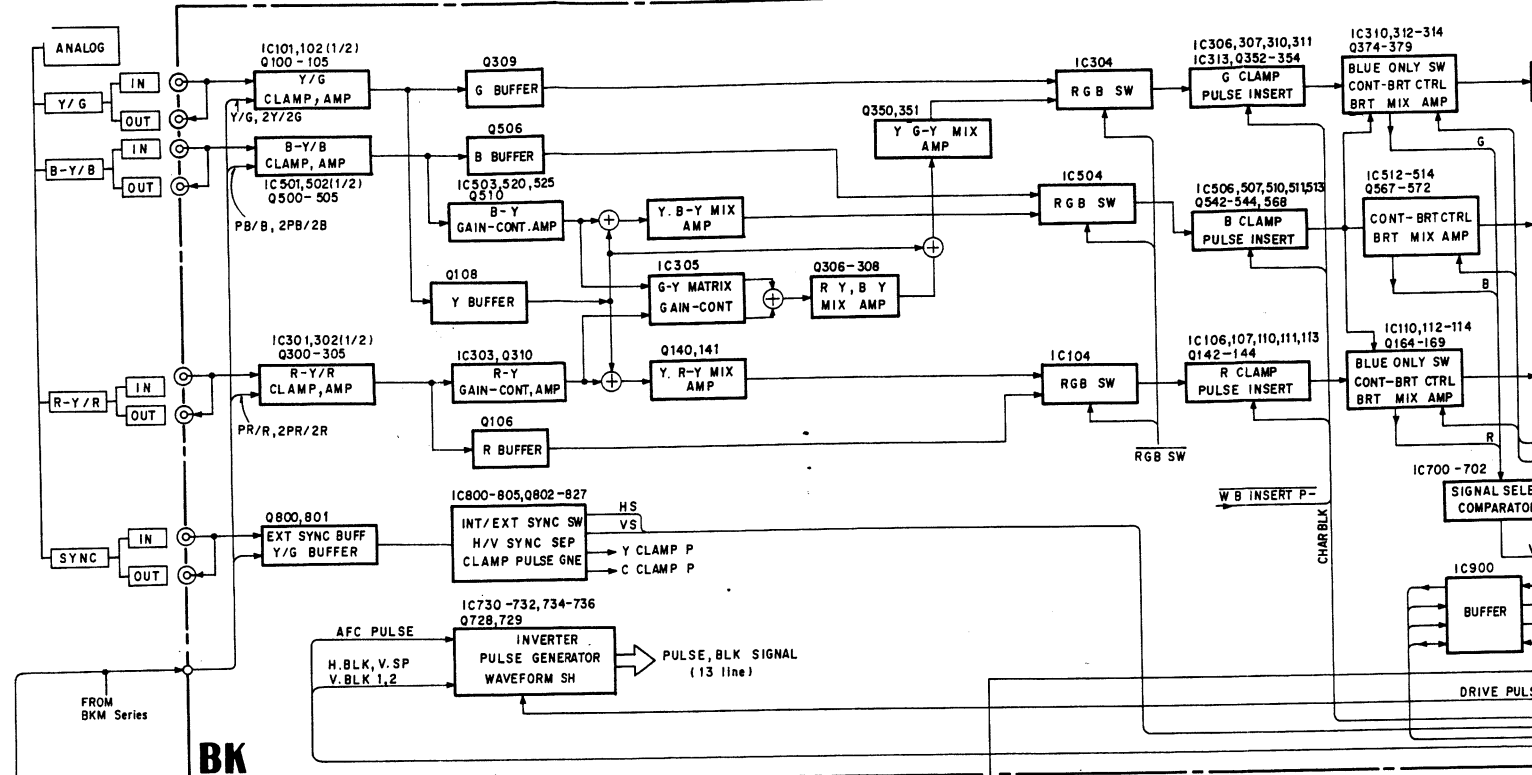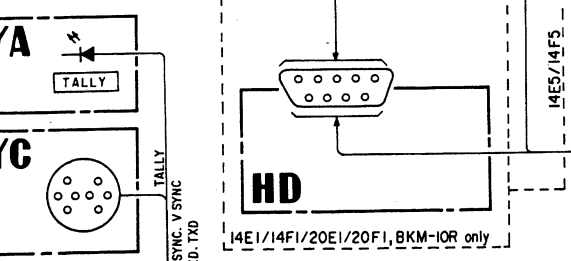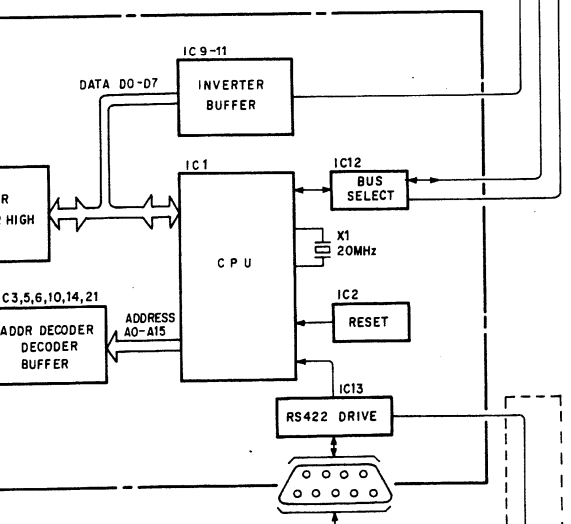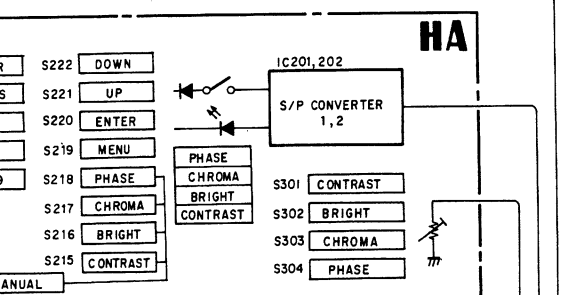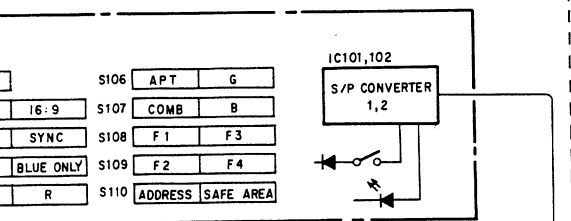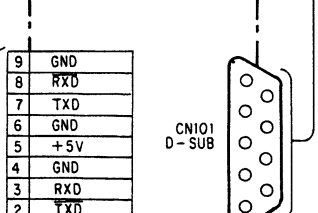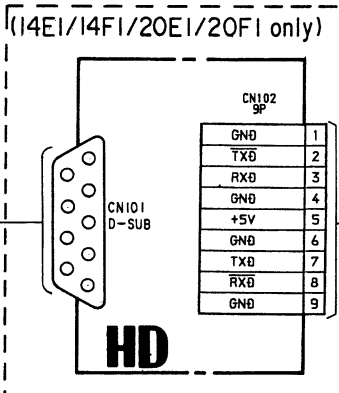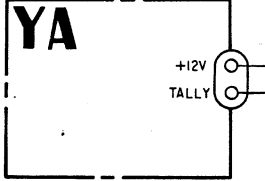

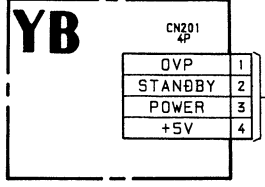

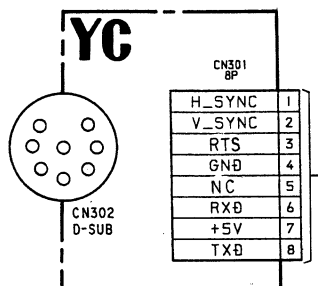

TB

1a	+12V
1b	_TALLY
2a	+5V
2b	_STANDBY
3a	_POWER
3b	_OVERLOAD
4a	_H_SYNC
4b	_V_SYNC
5a	RTS
5b	GND
6a	NC
6b	RXD
7a	+5V
7b	+6V
7c	TXD
8a	GND
8b	_TXD
9a	RXD
9b	GND
10a	+5V
10b	GND
11c	TXD
11b	_RXD
12a	GND
12c	NC
13a	NC
13b	NC

26P
CN14 (14E5/14F5/20E1/20F1)
CN10 (14E1/14F1)

BK BOARD

A1	GND	GND	A1
B1	GND	GND	B1
A2	+B	PCK	A2
B2	+B	DIGITAL.GND	B2
A3	GND	DIGITAL.GND	A3
B3	GND	00	B3
A4	-15V	DIGITAL.GND	A4
B4	-15V	01	B4
A5	+15V	DIGITAL.GND	A5
B5	+15V	02	B5
A6	-6V	DIGITAL.GND	A6
B6	-6V	03	B6
A7	+6V	DIGITAL.GND	A7
B7	+6V	04	B7
A8	DUG	DIGITAL.GND	A8
B8	DUB	05	B8
A9	DUR	DIGITAL.GND	A9
B9	VSP	06	B9
A10	ABL	DIGITAL.GND	A10
B10	G2.CONTROL	07	B10
A11	GND	DIGITAL.GND	A11
B11	Y/G	08	B11
A12	GND	DIGITAL.GND	A12
B12	2Y/2G	09	B12
A13	GND	DIGITAL.GND	A13
B13	PB/B	0PR	B13
A14	GND	NC	A14
B14	2PB/2B	NC	B14
A15	GND	NC	A15
B15	PR/R	NC	B15
A16	GND	NC	A16
B16	2PR/2R	NC	B16
A17	GND	NC	A17
B17	_CHAR.BLK	NC	B17
A18	_CHAR.G	NC	A18
B18	_CHAR.B	NC	B18
A19	_CHAR.R	NC	A19
B19	AFC.PULSE	NC	B19
A20	_HS	NC	A20
B20	_VS	NC	B20
A21	_2HS	NC	A21
B21	_2VS	NC	B21
A22	NC22A	NC	A22
B22	NC22B	NC	B22
A23	NC23A	NC	A23
B23	NC23B	NC	B23
A24	NC24A	NC	A24
B24	V.BLK1	NC	B24
A25	H.BLK	NC	A25
B25	V.BLK2	NC	B25
A26	+5V.SENSE	NC	A26
B26	RESET	NC	B26
A27	S.PULSE	NC	A27
B27	MISO	NC	B27
A28	MOS1	NC	A28
B28	SCLK	NC	B28
A29	DIGITAL+5V	NC	A29
B29	DIGITAL+5V	NC	B29
A30	DIGITAL.GND	NC	A30
B30	DIGITAL.GND	NC	B30
A31	_CH.SLOT3	NC	A31
B31	INTERNAL.SIG	NC	B31
A32	GND	GND	A32
B32	GND	GND	B32

64P
CN6
(14E5/14F5/)

64P
CN12
(14E5/14F5/)

(14E5/14F5/20E1/20F1 only)

OPTION 4

A1	GND	GND	A1
B1	GND	GND	B1
A2	+B	PCK	A2
B2	+B	DIGITAL.GND	B2
A3	GND	DIGITAL.GND	A3
B3	GND	00	B3
A4	-15V	DIGITAL.GND	A4
B4	-15V	01	B4
A5	+15V	DIGITAL.GND	A5
B5	+15V	02	B5
A6	-6V	DIGITAL.GND	A6
B6	-6V	03	B6
A7	+6V	DIGITAL.GND	A7
B7	+6V	04	B7
A8	GND	DIGITAL.GND	A8
B8	VIDEO	05	B8
A9	GND	DIGITAL.GND	A9
B9	PY	06	B9
A10	GND	DIGITAL.GND	A10
B10	PC	07	B10
A11	GND	DIGITAL.GND	A11
B11	Y/G	08	B11
A12	GND	DIGITAL.GND	A12
B12	2Y/2G	09	B12
A13	GND	DIGITAL.GND	A13
B13	PB/B	0PR	B13
A14	GND	NC	A14
B14	2PB/2B	NC	B14
A15	GND	NC	A15
B15	PR/R	NC	B15
A16	GND	NC	A16
B16	2PR/2R	NC	B16
A17	GND	NC	A17
B17	_CHAR.BLK	NC	B17
A18	_CHAR.G	NC	A18
B18	_CHAR.B	NC	B18
A19	_CHAR.R	NC	A19
B19	AFC.PULSE	NC	B19
A20	_HS	NC	A20
B20	_VS	NC	B20
A21	_2HS	NC	A21
B21	_2VS	NC	B21
A22	NC22A	NC	A22
B22	NC22B	NC	B22
A23	NC23A	NC	A23
B23	NC23B	NC	B23
A24	NC24A	NC	A24
B24	V.BLK1	NC	B24
A25	H.BLK	NC	A25
B25	V.BLK2	NC	B25
A26	+5V.SENSE	NC	A26
B26	RESET	NC	B26
A27	S.PULSE	NC	A27
B27	MISO	NC	B27
A28	MOS1	NC	A28
B28	SCLK	NC	B28
A29	DIGITAL+5V	NC	A29
B29	DIGITAL+5V	NC	B29
A30	DIGITAL.GND	NC	A30
B30	DIGITAL.GND	NC	B30
A31	_CH.SLOT4	NC	A31
B31	INTERNAL.SIG	NC	B31
A32	GND	GND	A32
B32	GND	GND	B32

64P
CN5

64P
CN11

OPTION 3

A1	GND	GND	A1
B1	GND	GND	B1
A2	+B	PCK	A2
B2	+B	DIGITAL.GND	B2
A3	GND	DIGITAL.GND	A3
B3	GND	00	B3
A4	-15V	DIGITAL.GND	A4
B4	-15V	01	B4
A5	+15V	DIGITAL.GND	A5
B5	+15V	02	B5
A6	-6V	DIGITAL.GND	A6
B6	-6V	03	B6
A7	+6V	DIGITAL.GND	A7
B7	+6V	04	B7
A8	GND	DIGITAL.GND	A8
B8	VIDEO	05	B8
A9	GND	DIGITAL.GND	A9
B9	PY	06	B9
A10	GND	DIGITAL.GND	A10
B10	PC	07	B10
A11	GND	DIGITAL.GND	A11
B11	Y/G	08	B11
A12	GND	DIGITAL.GND	A12
B12	2Y/2G	09	B12
A13	GND	DIGITAL.GND	A13
B13	PB/B	0PR	B13
A14	GND	NC	A14
B14	2PB/2B	NC	B14
A15	GND	NC	A15
B15	PR/R	NC	B15
A16	GND	NC	A16
B16	2PR/2R	NC	B16
A17	GND	NC	A17
B17	_CHAR.BLK	NC	B17
A18	_CHAR.G	NC	A18
B18	_CHAR.B	NC	B18
A19	_CHAR.R	NC	A19
B19	AFC.PULSE	NC	B19
A20	_HS	NC	A20
B20	_VS	NC	B20
A21	_2HS	NC	A21
B21	_2VS	NC	B21
A22	NC22A	NC	A22
B22	NC22B	NC	B22
A23	NC23A	NC	A23
B23	NC23B	NC	B23
A24	NC24A	NC	A24
B24	V.BLK1	NC	B24
A25	H.BLK	NC	A25
B25	V.BLK2	NC	B25
A26	+5V.SENSE	NC	A26
B26	RESET	NC	B26
A27	S.PULSE	NC	A27
B27	MISO	NC	B27
A28	MOS1	NC	A28
B28	SCLK	NC	B28
A29	DIGITAL+5V	NC	A29
B29	DIGITAL+5V	NC	B29
A30	DIGITAL.GND	NC	A30
B30	DIGITAL.GND	NC	B30
A31	_CH.SLOTS	NC	A31
B31	INTERNAL.SIG	NC	B31
A32	GND	GND	A32
B32	GND	GND	B32

64P
CN4

64P
CN10

64P
CN3
-CH.SLOT6

GND	A1
GND	B1
+B	A2
+B	B2
GND	A3
GND	B3
-15V	A4
-15V	B4
+15V	A5
+15V	B5
-6V	A6
-6V	B6
+6V	A7
+6V	B7
0UB	A8
0UB	B8
0UR	A9
VSP	A9
ABL	A10
G2. CONTROL	B10
AFC. PULSE	A11
_HS	B11
_VS	A12
_2HS	B12
_2VS	A13
NC22A	B13
NC22B	A14
NC23A	B14
NC23B	A15
NC24A	B15
V. BLK1	A16
H. BLK	B16
V. BLK2	A17
+5V. SENSE	B17
RESET	A18
NC	B18
MISO	A19
MOSI	B19
DIGITAL+5V	A20
DIGITAL+5V	B20
DIGITAL+5V	A21
DIGITAL+5V	B21
DIGITAL.GND	A22
DIGITAL.GND	B22
DIGITAL.GND	A23
DIGITAL.GND	B23
_CH.SLOT2	A24
_CH.SLOT1	B24
SCLK	A25
INTERNAL.SIG	B25


50P
CN13
(14E5/14F5/
20E1/20F1)
CN9
(14E1/14F1)

TO TA BOARD
CN19

CN1 64P		CN2 64P	
GND	A1	A1	B1
GND	B1	A2	B1
+B	A2	A3	B2
+B	B2	A4	B2
GND	A3	A5	B3
GND	B3	A6	B3
-15V	A4	A7	B4
-15V	B4	A8	B4
+15V	A5	A9	B5
+15V	B5	A10	B5
-6V	A6	A11	B6
-6V	B6	A12	B6
+6V	A7	A13	B7
+6V	B7	A14	B7
0UB	A8	A15	B8
0UB	B8	A16	B8
0UR	A9	A17	B9
VSP	A9	A18	B9
ABL	A10	A19	B10
G2. CONTROL	B10	A20	B10
AFC. PULSE	A11	A21	B11
_HS	B11	A22	B11
_VS	A12	A23	B12
_2HS	B12	A24	B12
_2VS	A13	A25	B13
NC22A	B13	A26	B13
NC22B	A14	A27	B14
NC23A	B14	A28	B14
NC23B	A15	A29	B15
NC24A	B15	A30	B15
V. BLK1	A16	A31	B16
H. BLK	B16	A32	B16
V. BLK2	A17	A33	B17
+5V. SENSE	B17	A34	B17
RESET	A18	A35	B18
NC	B18	A36	B18
MISO	A19	A37	B19
MOSI	B19	A38	B19
DIGITAL+5V	A20	A39	B20
DIGITAL+5V	B20	A40	B20
DIGITAL+5V	A21	A41	B21
DIGITAL+5V	B21	A42	B21
DIGITAL.GND	A22	A43	B22
DIGITAL.GND	B22	A44	B22
DIGITAL.GND	A23	A45	B23
DIGITAL.GND	B23	A46	B23
_CH.SLOT2	A24	A47	B24
_CH.SLOT1	B24	A48	B24
SCLK	A25	A49	B25
INTERNAL.SIG	B25	A50	B25
		A51	B26
		A52	B26
		A53	B27
		A54	B27
		A55	B28
		A56	B28
		A57	B29
		A58	B29
		A59	B30
		A60	B30
		A61	B31
		A62	B31
		A63	B32
		A64	B32



TO TB BOARD
CN1

TO TB BOARD
C7
(14E5/14F5/
20E1/20F1)
CN5
(14E1/14F1)

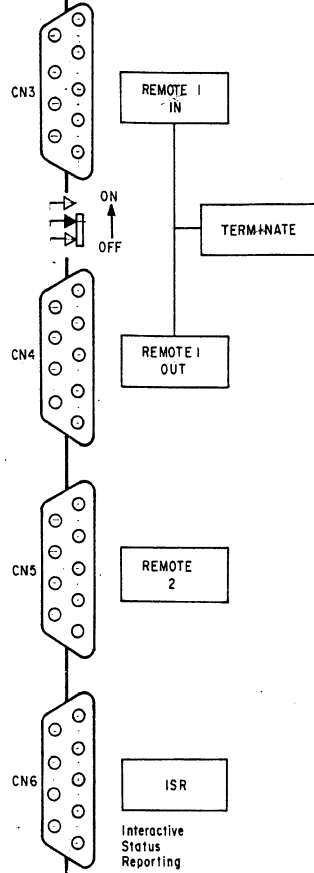

TO TB BOARD
CN6
(14E5/14F5/
20E1/20F1)
CN4
(14E1/14F1)

CN1 64P	
1a	GND
1b	GND
2a	+B
2b	+B
3a	GND
3b	GND
4a	-15V
4b	-15V
5a	+15V
5b	+15V
6a	-6V
6b	-6V
7a	+6V
7b	+6V
8a	0U 0
8b	0U B
9a	0U R
9b	V S P
10a	ABL
10b	G2 CONTROL
11a	GND
11b	Y/G
12a	GND
12b	2Y/20
13a	GND
13b	PB/B
14a	GND
14b	2PB/2B
15a	GND
15b	PR/R
16a	GND
16b	2PR/2R
17a	GND
17b	CHAR BLK
18a	CHAR 0
18b	CHAR B
19a	CHAR R
19b	AFC PULSE
20a	HS
20b	VS
21a	2HS
21b	2VS
22a	GND
22b	GND
23a	GND
23b	GND
24a	V BLK1
24b	H BLK
25a	V BLK2
25b	+5V SENSE
26a	RESET
27a	S. PULSE
27b	MISO
28a	MOSI
28b	SCLK
29a	DIGITAL +5V
29b	DIGITAL +5V
30a	DIGITAL GND
30b	DIGITAL GND
31a	CH SLOTS
31b	
32a	GND
32b	GND



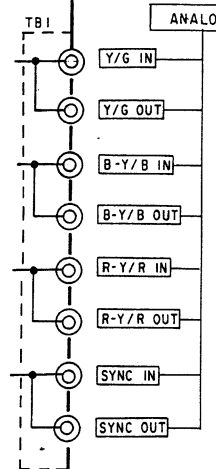
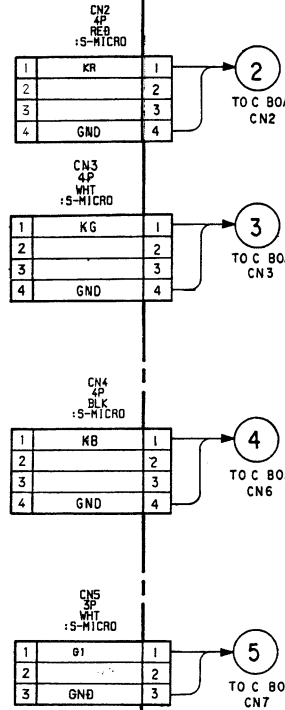


E BOARD		
B32	GND	B32
A32	GND	A32
B31	+B	B31
A31	+B	A31
B30	GND	B30
A30	GND	A30
B29	-15V	B29
A29	-15V	A29
B28	+15V	B28
A28	+15V	A28
B27	-6V	B27
A27	-6V	A27
B26	+6V	B26
A26	+6V	A26
B25	DUG	B25
A25	DUG	A25
B24	DUR	B24
A24	DUR	A24
B23	ABL	B23
A23	G2. CONTROL	A23
B22	HCR	B22
A22	VCR	A22
B21	HCY	B21
A21	VCY	A21
B20	H. STAT	B20
A20	V. STAT	A20
B19	HCT	B19
A19	_POWER.ON	A19
B18	_DEGAUSS	B18
A18	_E. PROTECT	A18
B17	_G. PROTECT1	B17
A17	_G. PROTECT2	A17
B16	_G. PROTECT3	B16
A16	_G. PROTECT4	A16
B15	GND	B15
A15	GND	A15
B14	V0	B14
A14	AFC. PULSE	A14
B13	_HS	B13
A13	_VS	A13
B12	_2HS	B12
A12	_2VS	A12
B11	NC22A	B11
A11	NC22B	A11
B10	NC23A	B10
A10	NC23B	A10
B9	NC24A	B9
A9	V. BLK1	A9
B8	H. BLK	B8
A8	V. BLK2	A8
B7	+5V. SENSE	B7
A7	RESET.	A7
B6	NC	B6
A6	MISO	A6
B5	MOS1	B5
A5	SCLK	A5
B4	DIGITAL+5V	B4
A4	DIGITAL+5V	A4
B3	DIGITAL.GND	B3
A3	DIGITAL.GND	A3
B2	_CH. SLOT2	B2
A2	INTERNAL. SIG	A2
B1	GND	B1
A1	GND	A1


(14E5/14F5/20E1/20F1) only

OPTION A		
A1	GND	A1
B1	GND	B1
A2	+B	A2
B2	+B	B2
A3	GND	A3
B3	GND	B3
A4	-15V	A4
B4	-15V	B4
A5	+15V	A5
B5	+15V	B5
A6	-6V	A6
B6	-6V	B6
A7	+6V	A7
B7	+6V	B7
A8	DUG	A8
B8	DUG	B8
A9	DUR	A9
B9	DUR	B9
A10	ABL	A10
B10	G2. CONTROL	B10
A11	HCR	A11
B11	VCR	B11
A12	HCY	A12
B12	VCY	B12
A13	H. STAT	A13
B13	V. STAT	B13
A14	HCT	A14
B14	_POWER.ON	B14
A15	_DEGAUSS	A15
B15	_E. PROTECT	B15
A16	_G. PROTECT1	A16
B16	_G. PROTECT2	B16
A17	_G. PROTECT3	A17
B17	_G. PROTECT4	B17
A18	GND	A18
B18	GND	B18
A19	V0	A19
B19	AFC. PULSE	B19
A20	_HS	A20
B20	_VS	B20
A21	_2HS	A21
B21	_2VS	B21
A22	NC22A	A22
B22	NC22B	B22
A23	NC23A	A23
B23	NC23B	B23
A24	NC24A	A24
B24	V. BLK1	B24
A25	H. BLK	A25
B25	V. BLK2	B25
A26	+5V. SENSE	A26
B26	RESET	B26
A27	NC	A27
B27	MISO	B27
A28	MOS1	A28
B28	SCLK	B28
A29	DIGITAL+5V	A29
B29	DIGITAL+5V	B29
A30	DIGITAL.GND	A30
B30	DIGITAL.GND	B30
A31	_CH. SLOT1	A31
B31	INTERNAL. SIG	B31
A32	GND	A32
B32	GND	B32


G BOARD		
A1	GND	A1
B1	GND	B1
A2	+B	A2
B2	+B	B2
A3	GND	A3
B3	GND	B3
A4	-15V	A4
B4	-15V	B4
A5	+15V	A5
B5	+15V	B5
A6	-6V	A6
B6	-6V	B6
A7	+6V	A7
B7	+6V	B7
A8	DUG	A8
B8	DUG	B8
A9	DUR	A9
B9	DUR	B9
A10	ABL	A10
B10	GND	B10
A11	HCR	A11
B11	GND	B11
A12	GND	A12
B12	GND	B12
A13	GND	A13
B13	GND	B13
A14	GND	A14
B14	_POWER.ON	B14
A15	_DEGAUSS	A15
B15	_E. PROTECT	B15
A16	_G. PROTECT1	A16
B16	_G. PROTECT2	B16
A17	_G. PROTECT3	A17
B17	_G. PROTECT4	B17
A18	GND	A18
B18	GND	B18
A19	V0	A19
B19	AFC. PULSE	B19
A20	_HS	A20
B20	_VS	B20
A21	_2HS	A21
B21	_2VS	B21
A22	NC22A	A22
B22	NC22B	B22
A23	NC23A	A23
B23	NC23B	B23
A24	NC24A	A24
B24	V. BLK1	B24
A25	H. BLK	A25
B25	V. BLK2	B25
A26	+5V. SENSE	A26
B26	RESET	B26
A27	NC	A27
B27	MISO	B27
A28	MOS1	A28
B28	SCLK	B28
A29	DIGITAL+5V	A29
B29	DIGITAL+5V	B29
A30	DIGITAL.GND	A30
B30	DIGITAL.GND	B30
A31	NC	A31
B31	INTERNAL. SIG	B31
A32	GND	A32
B32	GND	B32

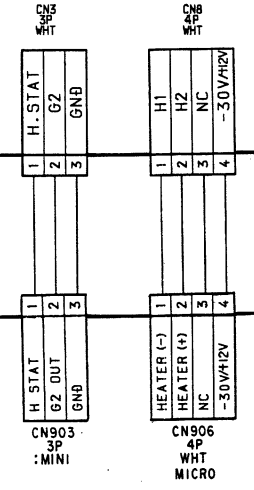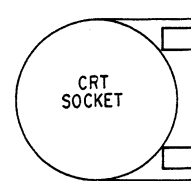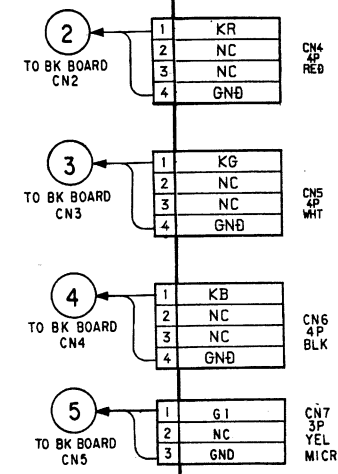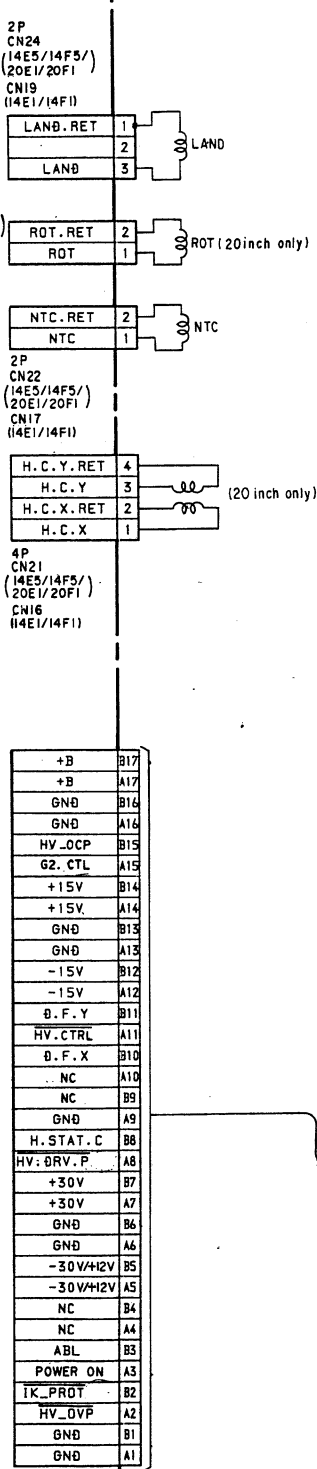

7e	+B
7f	+B
6e	GND
6f	GND
5e	HV_OCP
5f	G2 CTRL
4e	+15V
4f	+15V
3e	GND
3f	GND
2e	-15V
2f	-15V
1e	NC
1f	BFY
1e	HV CTRL
0e	BFX
0f	NC
9e	NC
9f	GND
8e	H. STAT C
8f	HV DRV P
7e	+30V
7f	+30V
6e	GND
6f	GND
5e	-30V/+2V
5f	-30V/+2V
4e	NC
4f	NC
3e	ABL
3f	POWER ON
2e	IK_PROT
2f	HV_OVP
1e	GND
1f	GND

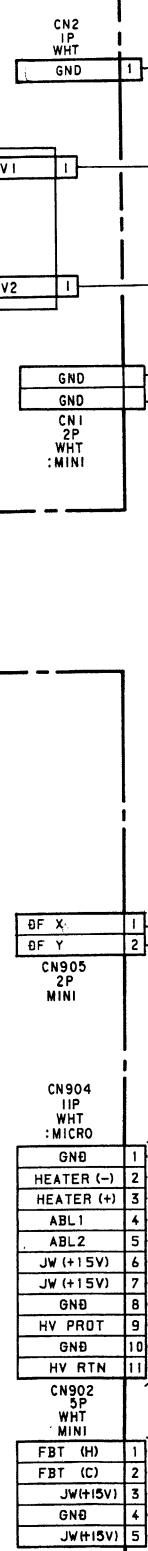


PA

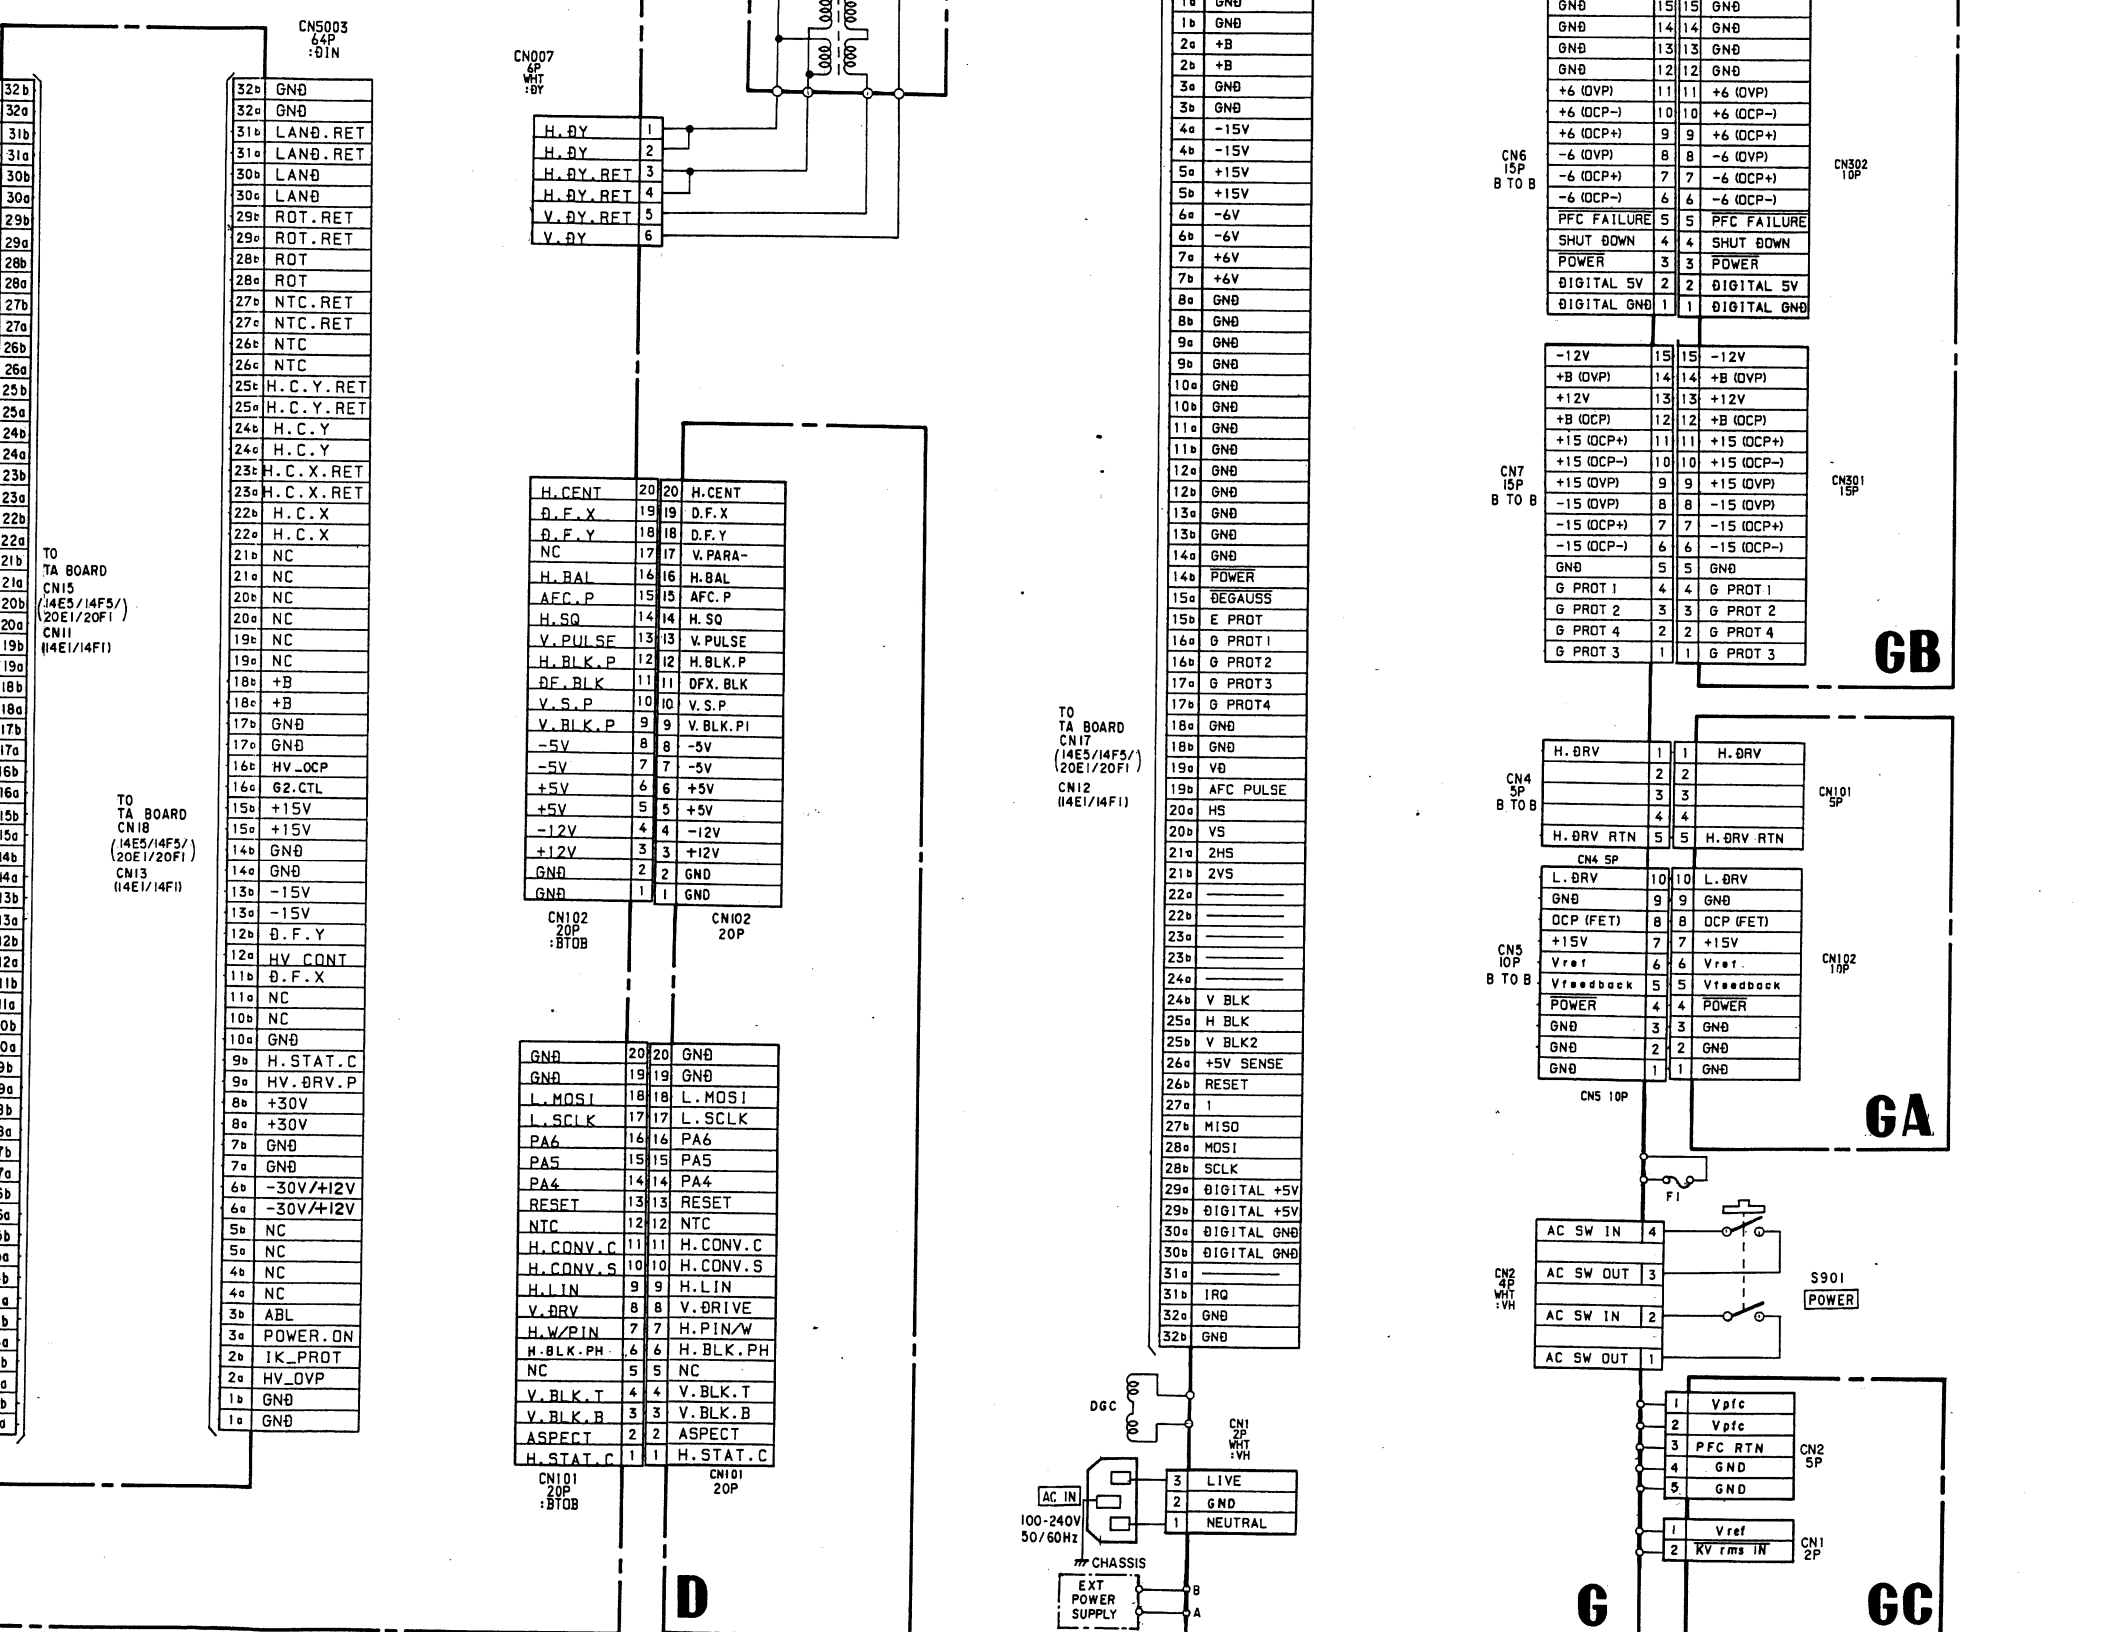

32b	GND
32a	GND
31b	LAND. RET
31a	LAND. RET
30b	LAND
30a	LAND
29b	ROT. RET
29a	ROT. RET
28b	ROT
28a	ROT
27b	NTC. RET
27a	NTC. RET
26b	NTC
26a	NTC
25b	H. C. Y. RET
25a	H. C. Y. RET
24b	H. C. Y
24a	H. C. Y
23b	H. C. X. RET
23a	H. C. X. RET
22b	H. C. X
22a	H. C. X
21b	NC
21a	NC
20b	NC
20a	NC
19b	NC
19a	NC
18b	+B
18a	+B
17b	GND
17a	GND
16b	HV_OCP
16a	G2_CTL
15b	+15V
15a	+15V
14b	GND
14a	GND
13b	-15V
13a	-15V
12b	D. F. Y
12a	HV CONT
11b	D. F. X
11a	NC
10b	NC
10a	GND
9b	H. STAT. C
9a	HV. DRV. P
8b	+30V
8a	+30V
7b	GND
7a	GND
6b	-30V/+12V
6a	-30V/+12V
5b	NC
5a	NC
4b	NC
4a	NC
3b	ABL
3a	POWER. ON
2b	IK_PROT
2a	HV_OVP
1b	GND
1a	GND

TO TA BOARD
CN15
(14E5/14F5/
20E1/20F1)
CN11
(14E1/14F1)

TO TA BOARD
CN18
(14E5/14F5/
20E1/20F1)
CN13
(14E1/14F1)

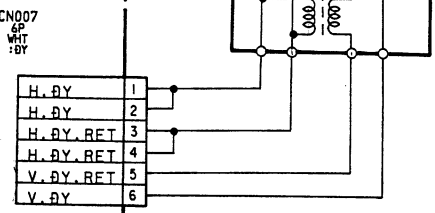

H.CENT	20	20	H.CENT
D.F.X	19	19	D.F.X
D.F.Y	18	18	D.F.Y
NC	17	17	V.PARA-
H.BAL	16	16	H.BAL
AFC.P	15	15	AFC.P
H.SQ	14	14	H.SQ
V.PULSE	13	13	V.PULSE
H.BLK.P	12	12	H.BLK.P
DF.BLK	11	11	DFX.BLK
V.S.P	10	10	V.S.P
V.BLK.P	9	9	V.BLK.PI
-5V	8	8	-5V
-5V	7	7	-5V
+5V	6	6	+5V
+5V	5	5	+5V
-12V	4	4	-12V
+12V	3	3	+12V
GND	2	2	GND
GND	1	1	GND


CN102
20P
:BTOB

GND	20	20	GND
GND	19	19	GND
L.MOS1	18	18	L.MOS1
L.SCLK	17	17	L.SCLK
PA6	16	16	PA6
PA5	15	15	PA5
PA4	14	14	PA4
RESET	13	13	RESET
NTC	12	12	NTC
H.CONV.C	11	11	H.CONV.C
H.CONV.S	10	10	H.CONV.S
H.LIN	9	9	H.LIN
V.DRV	8	8	V.DRV
H.W/PIN	7	7	H.PIN/W
H.BLK.PH	6	6	H.BLK.PH
NC	5	5	NC
V.BLK.T	4	4	V.BLK.T
V.BLK.B	3	3	V.BLK.B
ASPECT	2	2	ASPECT
H.STAT.C	1	1	H.STAT.C

CN101
20P
:BTOB

1a	GND
1b	GND
2a	+B
2b	+B
3a	GND
3b	GND
4a	-15V
4b	-15V
5a	+15V
5b	+15V
6a	-6V
6b	-6V
7a	+6V
7b	+6V
8a	GND
8b	GND
9a	GND
9b	GND
10a	GND
10b	GND
11a	GND
11b	GND
12a	GND
12b	GND
13a	GND
13b	GND
14a	GND
14b	POWER
15a	DEGAUSS
15b	E PROT
16a	G PROT1
16b	G PROT2
17a	G PROT3
17b	G PROT4
18a	GND
18b	GND
19a	VB
19b	AFC PULSE
20a	HS
20b	VS
21a	2HS
21b	2VS
22a	
22b	
23a	
23b	
24a	
24b	V BLK
25a	H BLK
25b	V BLK2
26a	+5V SENSE
26b	RESET
27a	I
27b	MISO
28a	MOSI
28b	SCLK
29a	DIGITAL +5V
29b	DIGITAL +5V
30a	DIGITAL GND
30b	DIGITAL GND
31a	
31b	IRQ
32a	GND
32b	GND

TO TA BOARD
CN17
(14E5/14F5/
20E1/20F1)
CN12
(14E1/14F1)

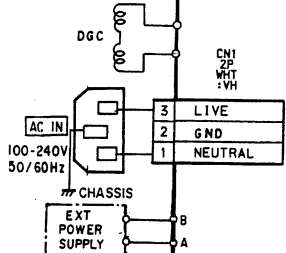


GND	15	15	GND
GND	14	14	GND
GND	13	13	GND
GND	12	12	GND
+6 (OVP)	11	11	+6 (OVP)
+6 (OCP-)	10	10	+6 (OCP-)
+6 (OCP+)	9	9	+6 (OCP+)
-6 (OVP)	8	8	-6 (OVP)
-6 (OCP+)	7	7	-6 (OCP+)
-6 (OCP-)	6	6	-6 (OCP-)
PFC FAILURE	5	5	PFC FAILURE
SHUT DOWN	4	4	SHUT DOWN
POWER	3	3	POWER
DIGITAL 5V	2	2	DIGITAL 5V
DIGITAL GND	1	1	DIGITAL GND

-12V	15	15	-12V
+B (OVP)	14	14	+B (OVP)
+12V	13	13	+12V
+B (OCP)	12	12	+B (OCP)
+15 (OCP+)	11	11	+15 (OCP+)
+15 (OCP-)	10	10	+15 (OCP-)
+15 (OVP)	9	9	+15 (OVP)
-15 (OVP)	8	8	-15 (OVP)
-15 (OCP+)	7	7	-15 (OCP+)
-15 (OCP-)	6	6	-15 (OCP-)
GND	5	5	GND
G PROT 1	4	4	G PROT 1
G PROT 2	3	3	G PROT 2
G PROT 4	2	2	G PROT 4
G PROT 3	1	1	G PROT 3

H.DRV	1	1	H.DRV
	2	2	
	3	3	
	4	4	
H.DRV RTN	5	5	H.DRV RTN

L.DRV	10	10	L.DRV
GND	9	9	GND
DCP (FET)	8	8	DCP (FET)
+15V	7	7	+15V
Vref	6	6	Vref
Vfeedback	5	5	Vfeedback
POWER	4	4	POWER
GND	3	3	GND
GND	2	2	GND
GND	1	1	GND

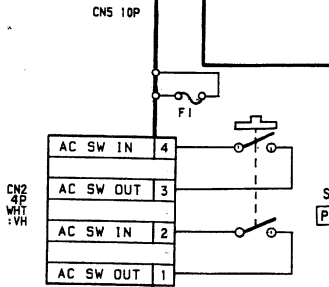

1	Vpfc
2	Vpfc
3	PFC RTN
4	GND
5	GND

1	Vref
2	KV rms IN


GB

GA



G

GC

D

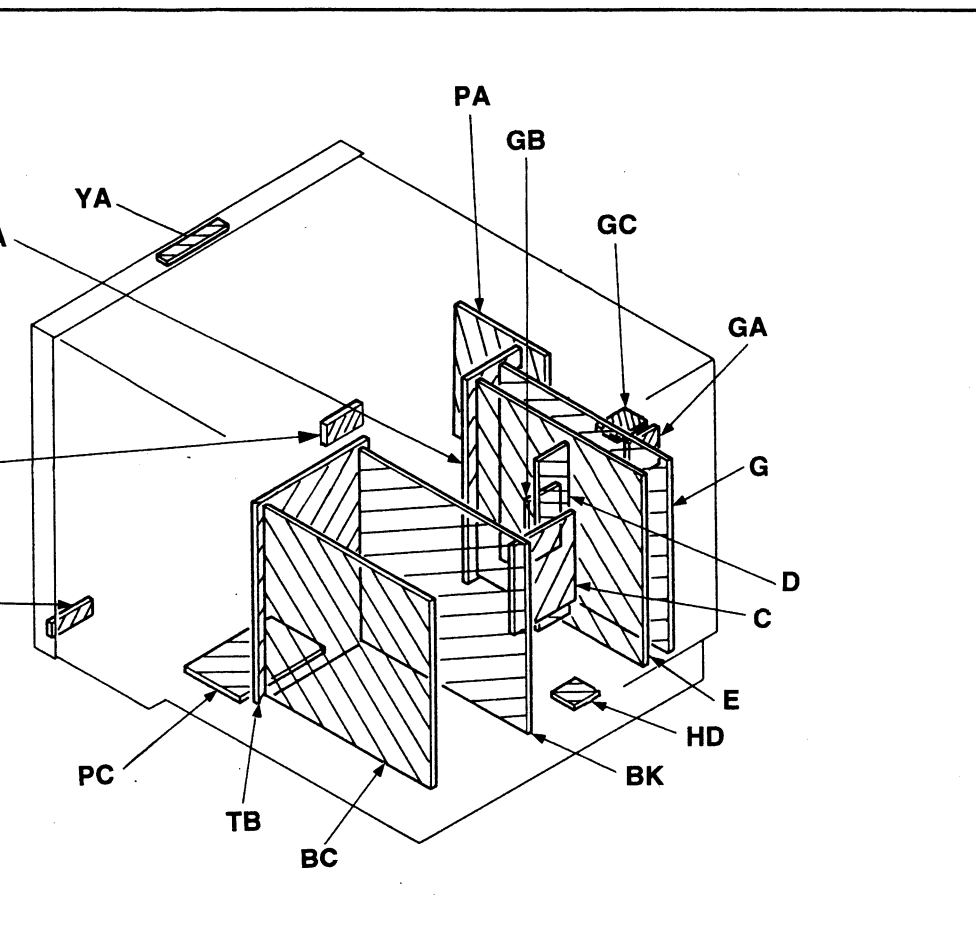

14F5E/14F5U

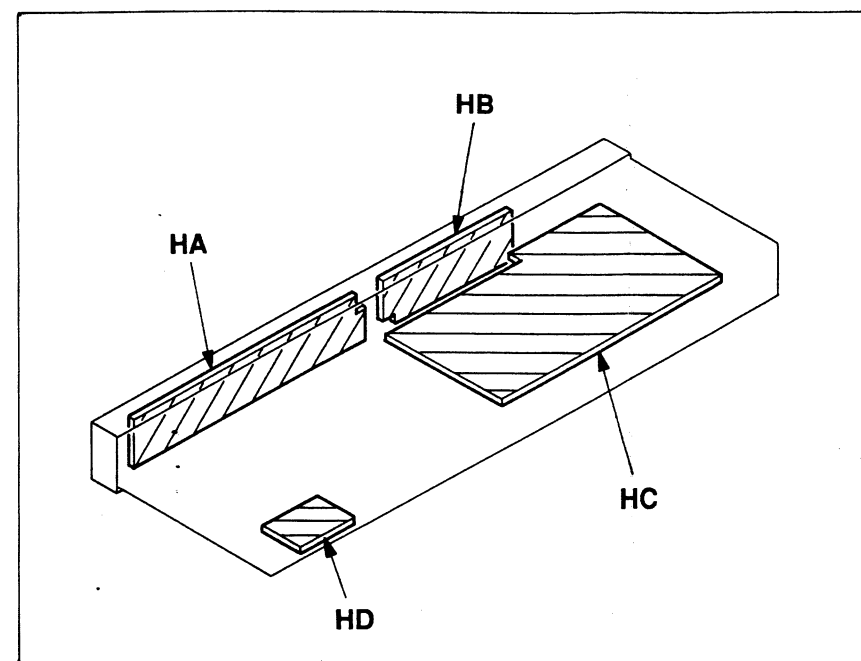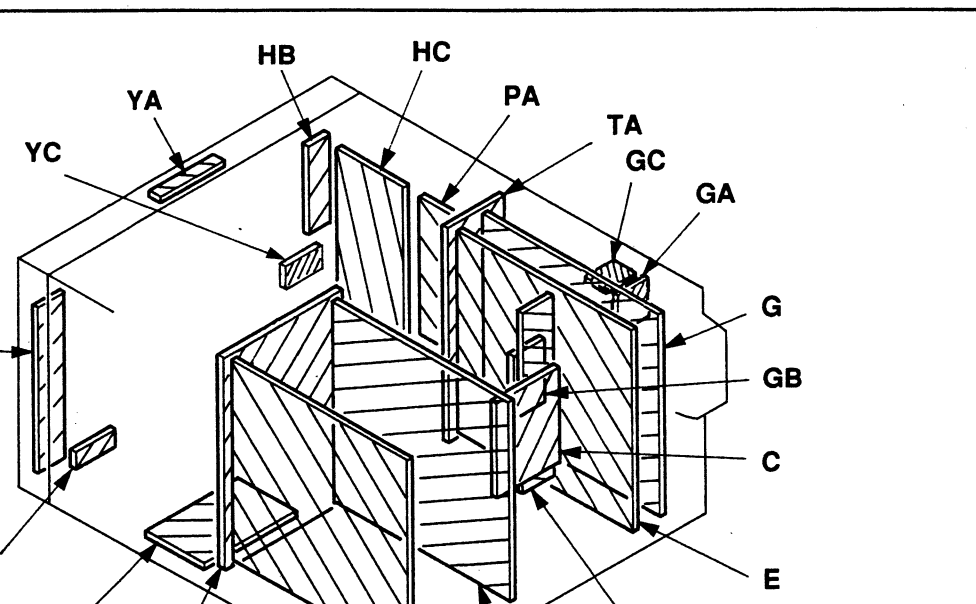

5-4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGR

Note:

- All capacitors are in μF unless otherwise noted.
pF: $\mu\mu\text{F}$ 50WV or less are not indicated except for electrolytics.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm
Rating electrical power 1/4W

- All resistors are in ohms.
- : nonflammable resistor.
- Chip resistor are 1/10W unless otherwise noted.
- : fusible resistor.
- : internal component.
- : panel designation.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- METAL FILM (: RN) resistor in 0.5%, 1/4W unless otherwise specified.
- The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved. (Refer to RV101, RV501, RV502 and RV503 on page 4-12 to 4-15.)

Part replac

IC101, PC1, R115
R120, R121, R122

IC102, R111

IC501, R509, R510
R802, R804, RV501

IC502, R101, R511
R517, RV502

R1, R2, R3, R4, R5

IC901, R912, R913

IC502, R524, R525
R530, R808, RV502

- : Adjustment f
- All voltages are in V
- Reading are taken
- Voltage are dc w
- no mark : 14inch m
- () : 20 inch m

OTHER)

BC BOARD
CN2

OPTION 1

OPTION 2


OPTION 3


OPTION 4

BK BOARD
(NON CONNECT)

BC BOARD
CN1

OPTION 1

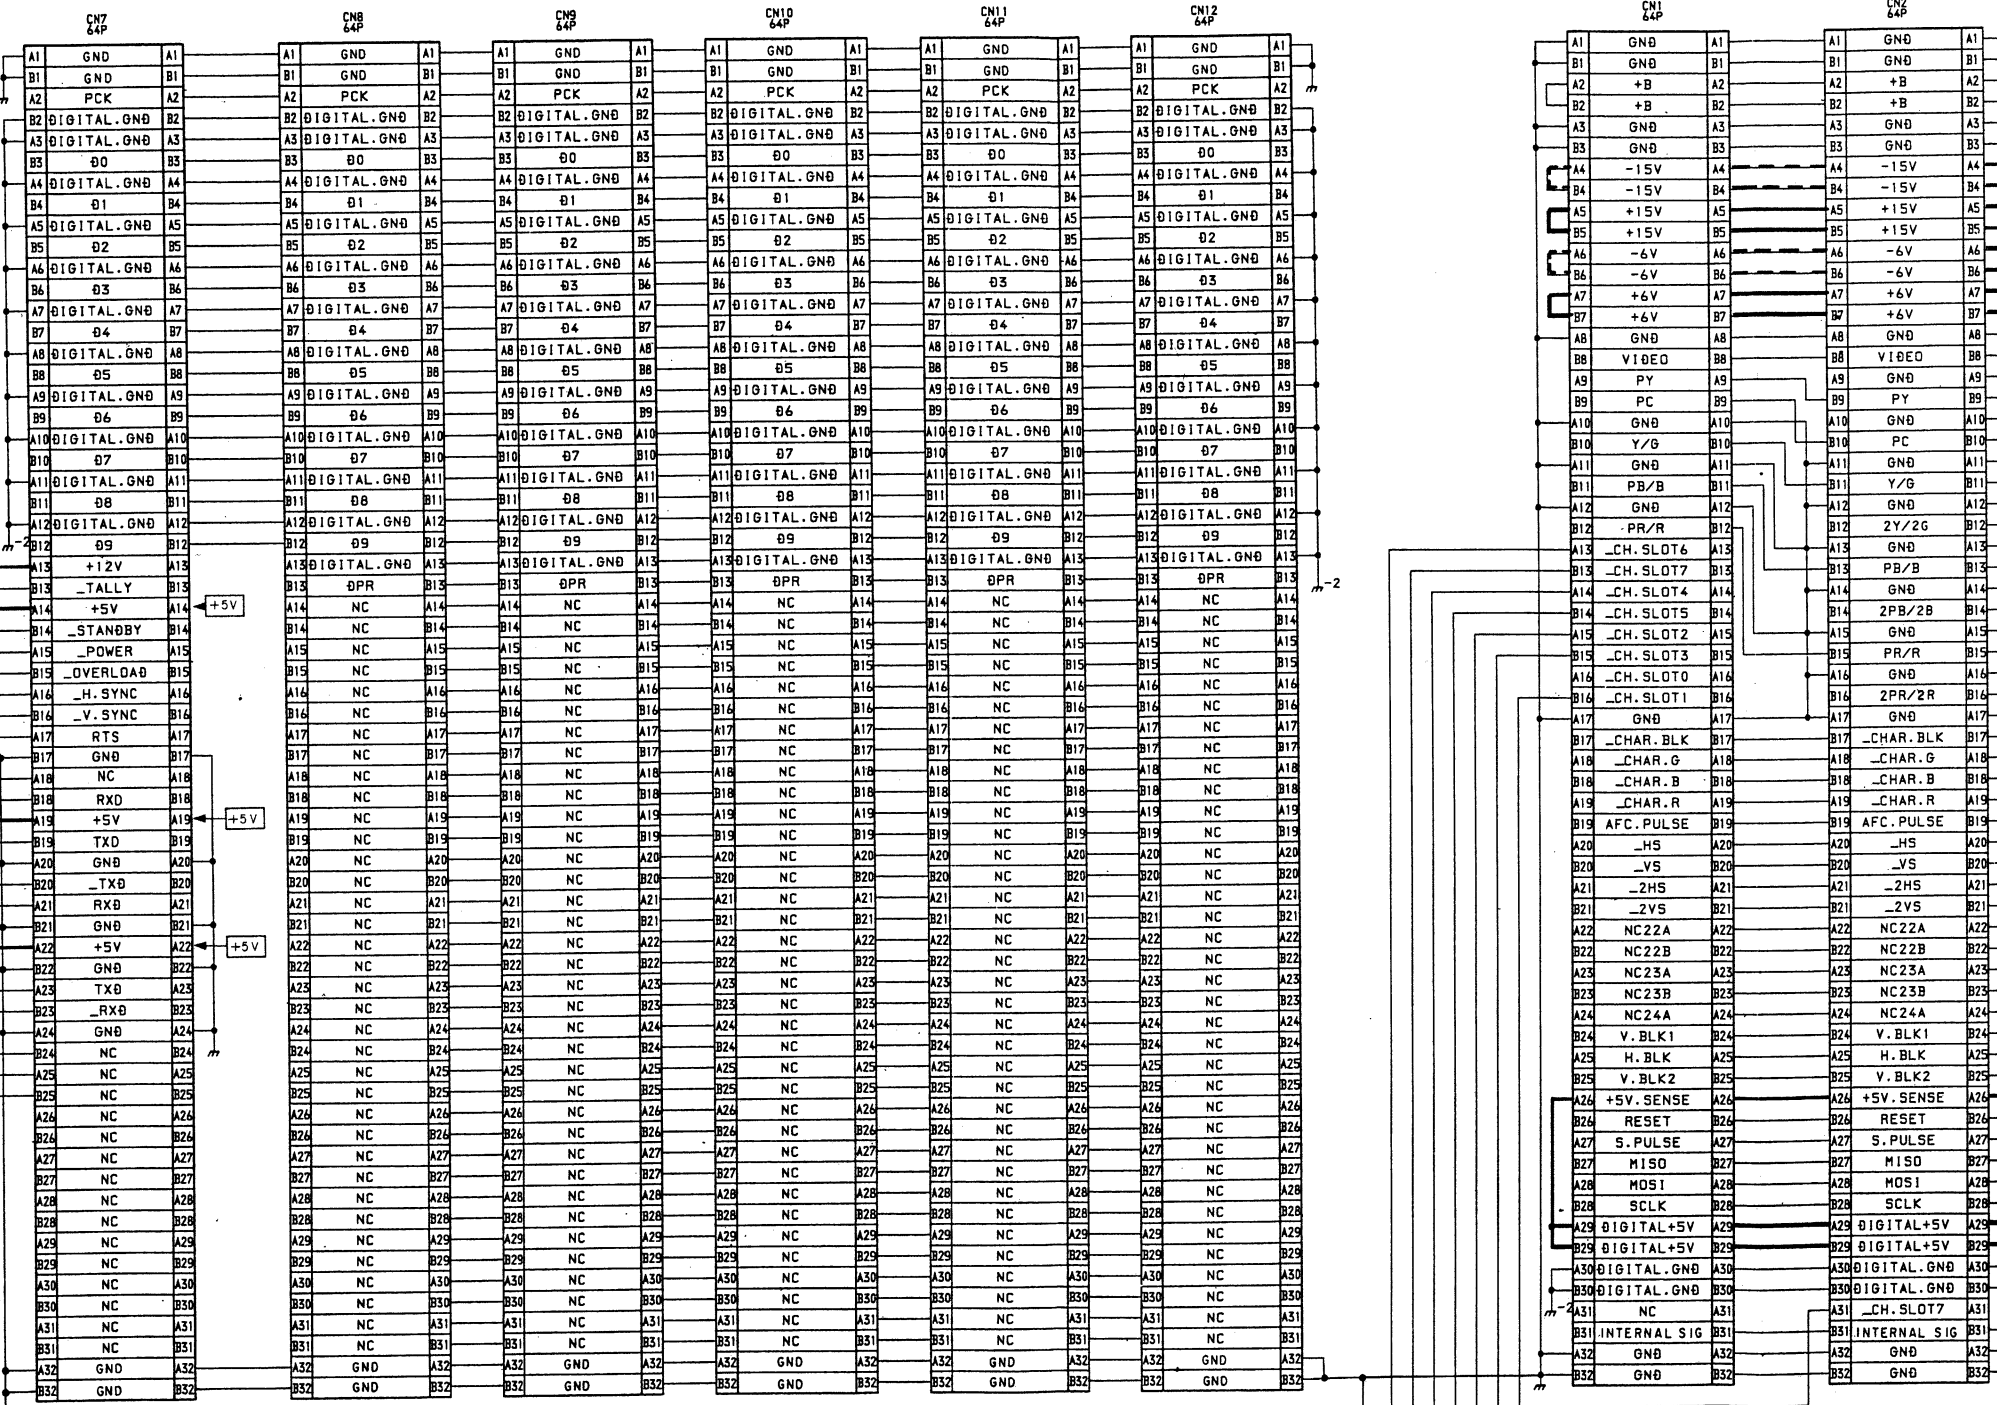

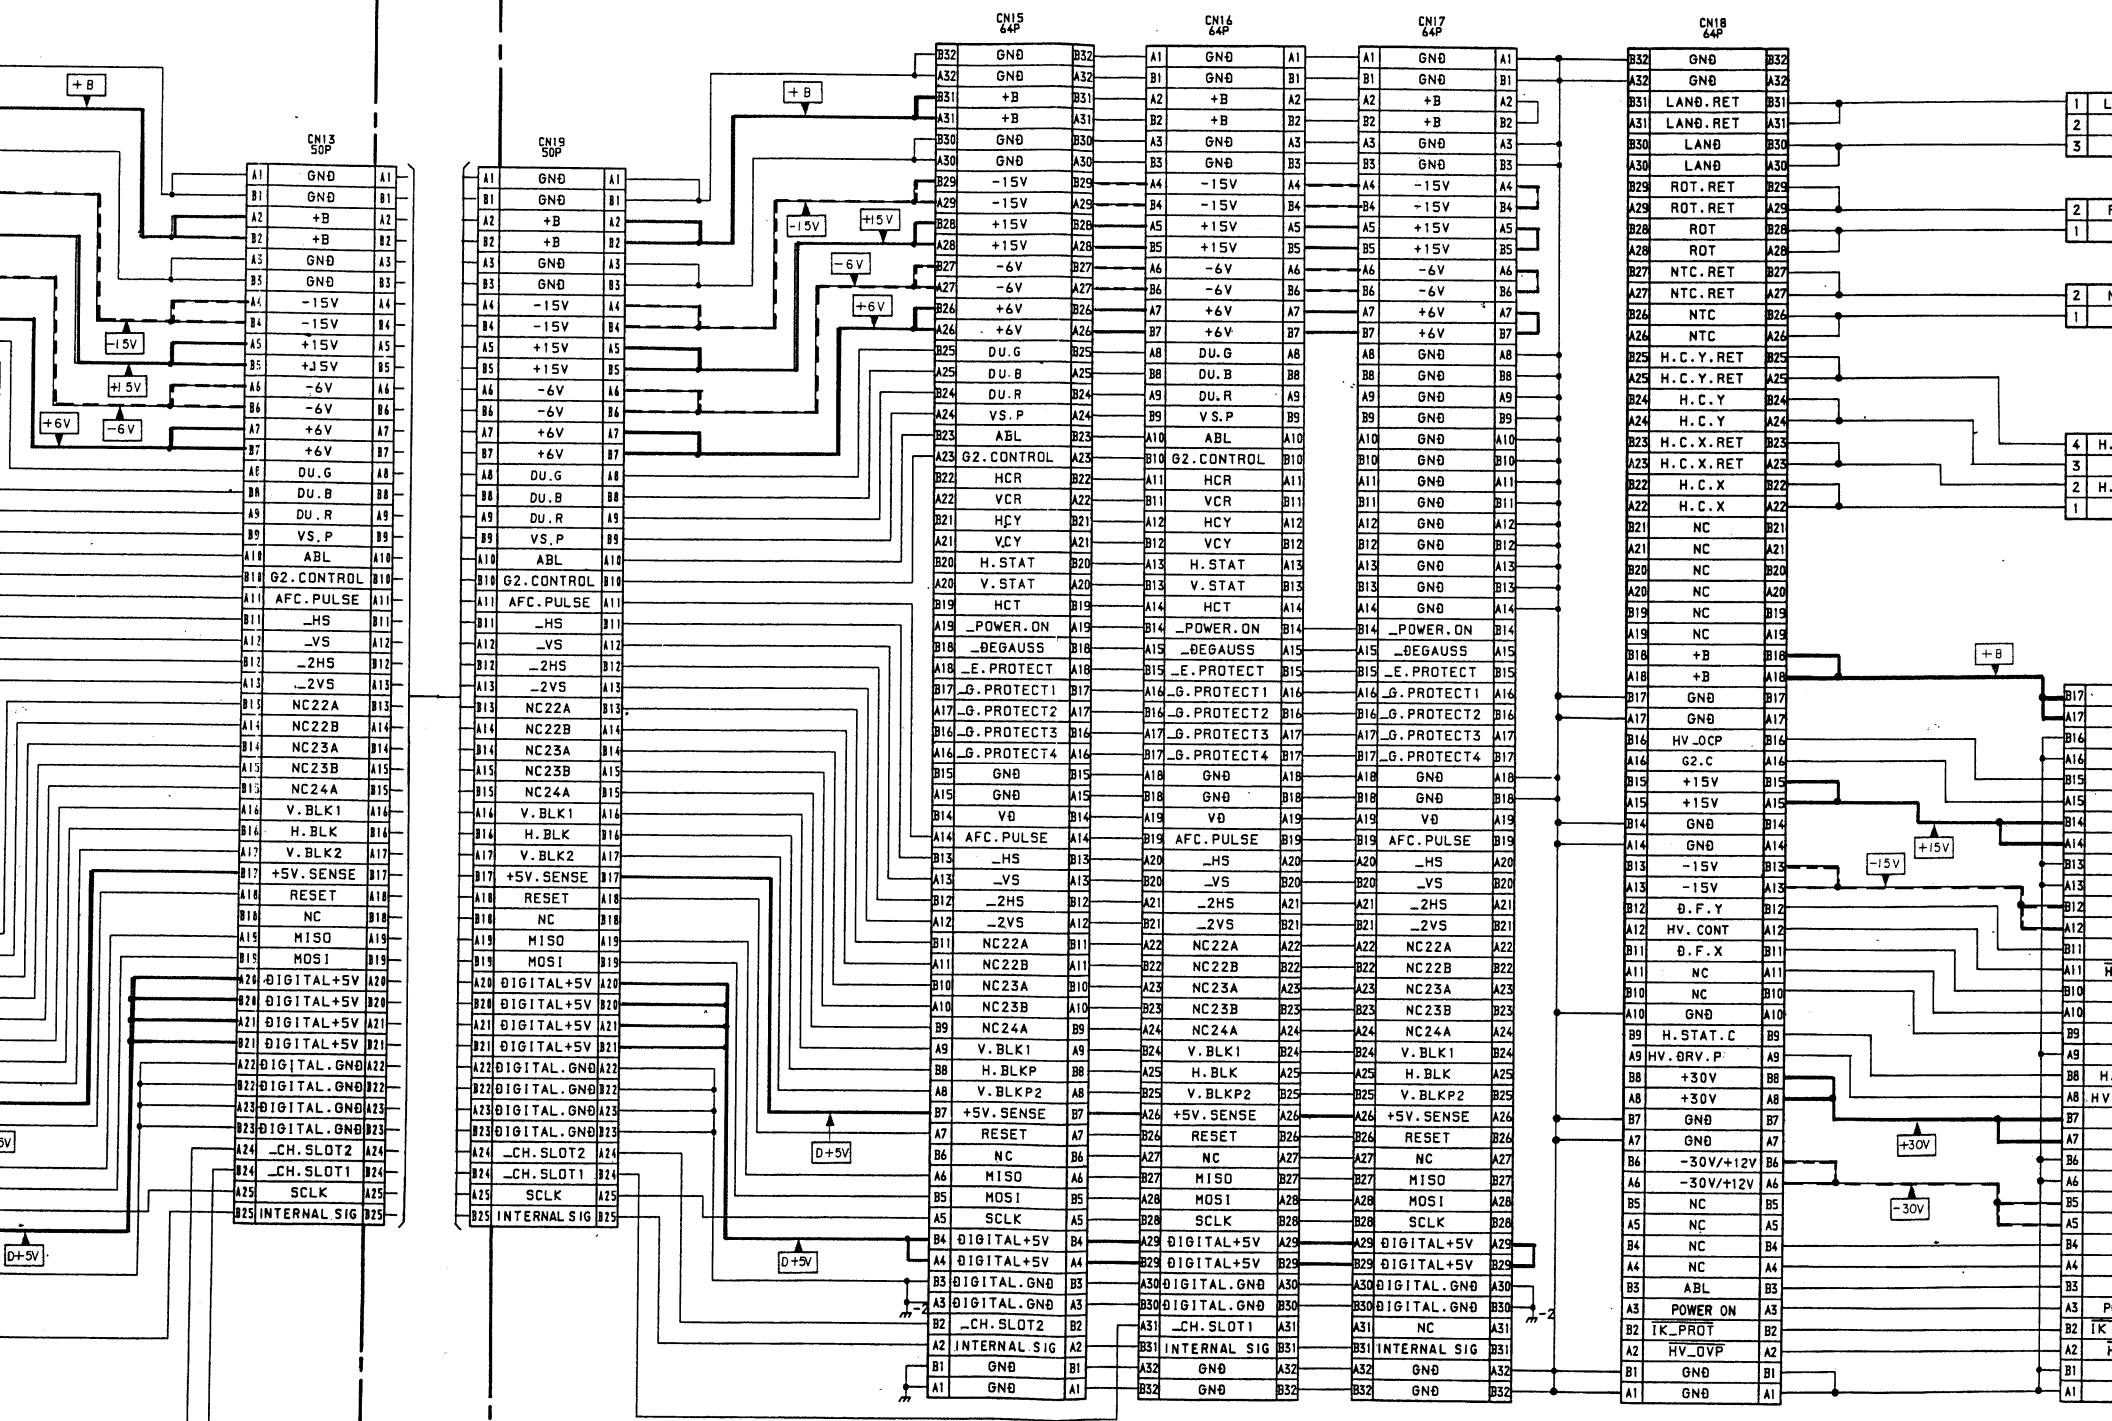

E BOARD CN5000

OPTION A

G BOARD

E BOARD CN5003

MOTHER)

BC BOARD
CN2

OPTION 1



OPTION 2

BK BOARD
(NON CONNECT)


BC BOARD
CN1

OPTION 1

OPTION 2

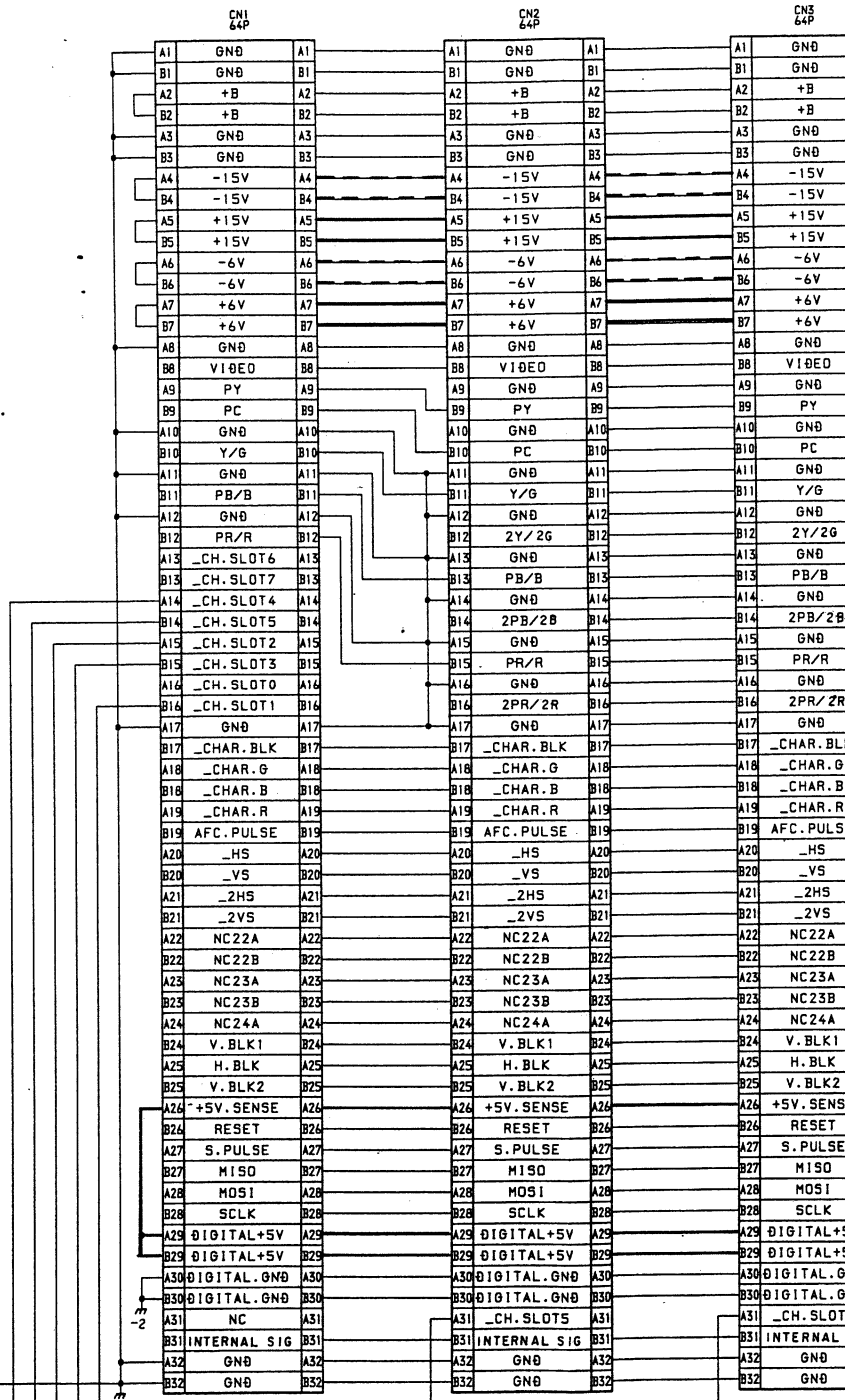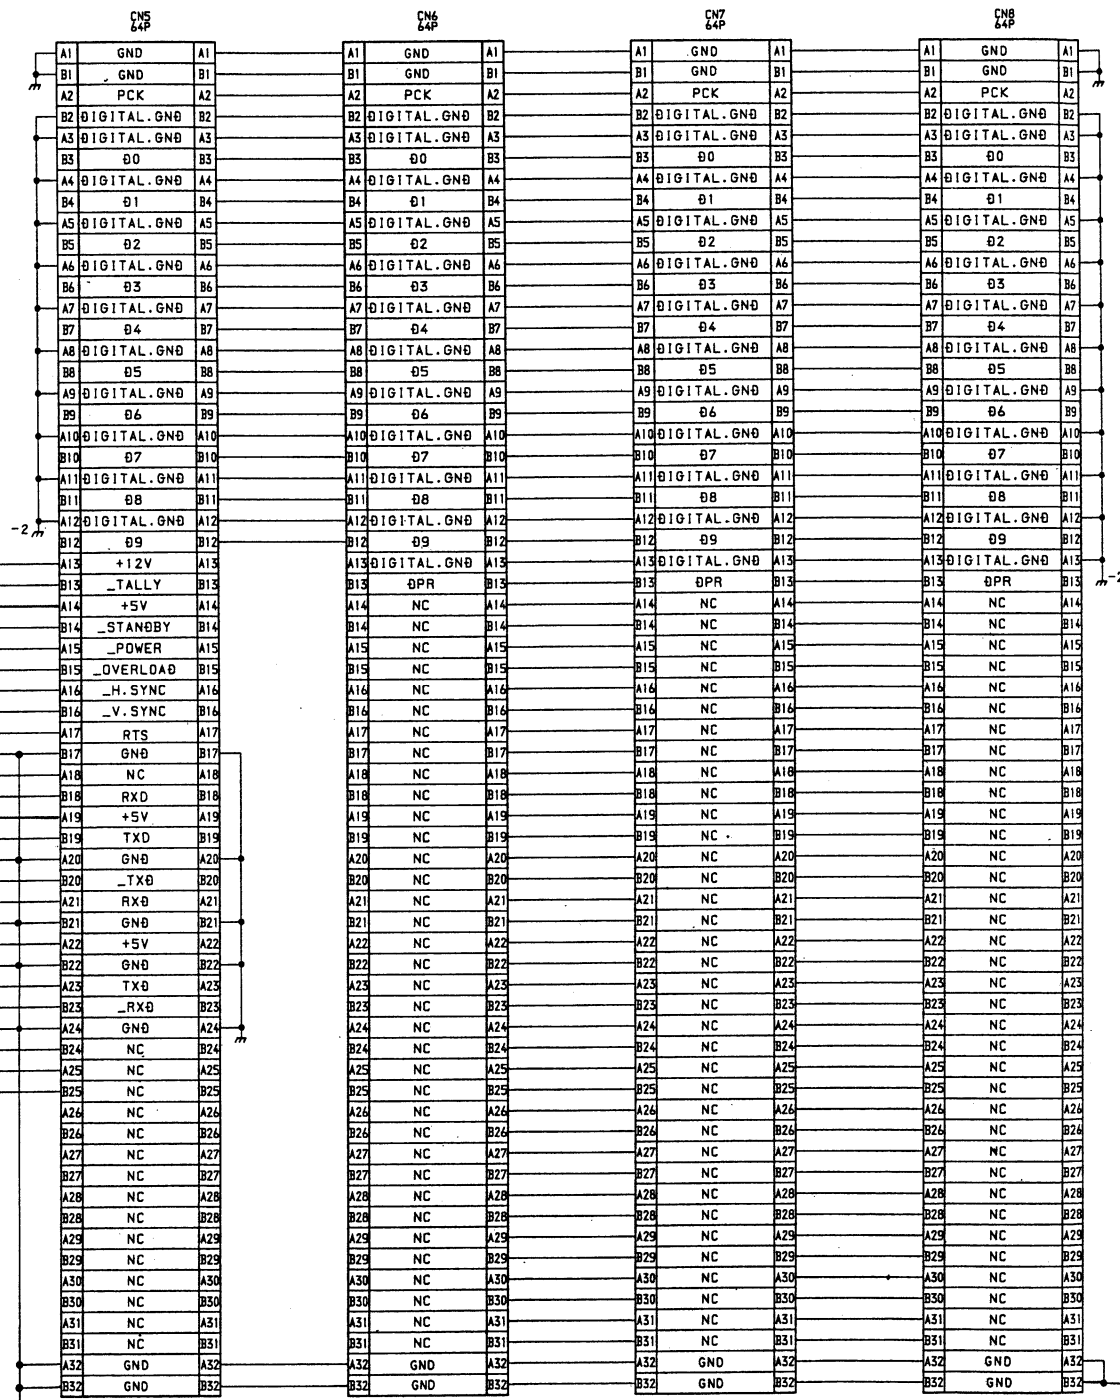

TA (MOTHER)

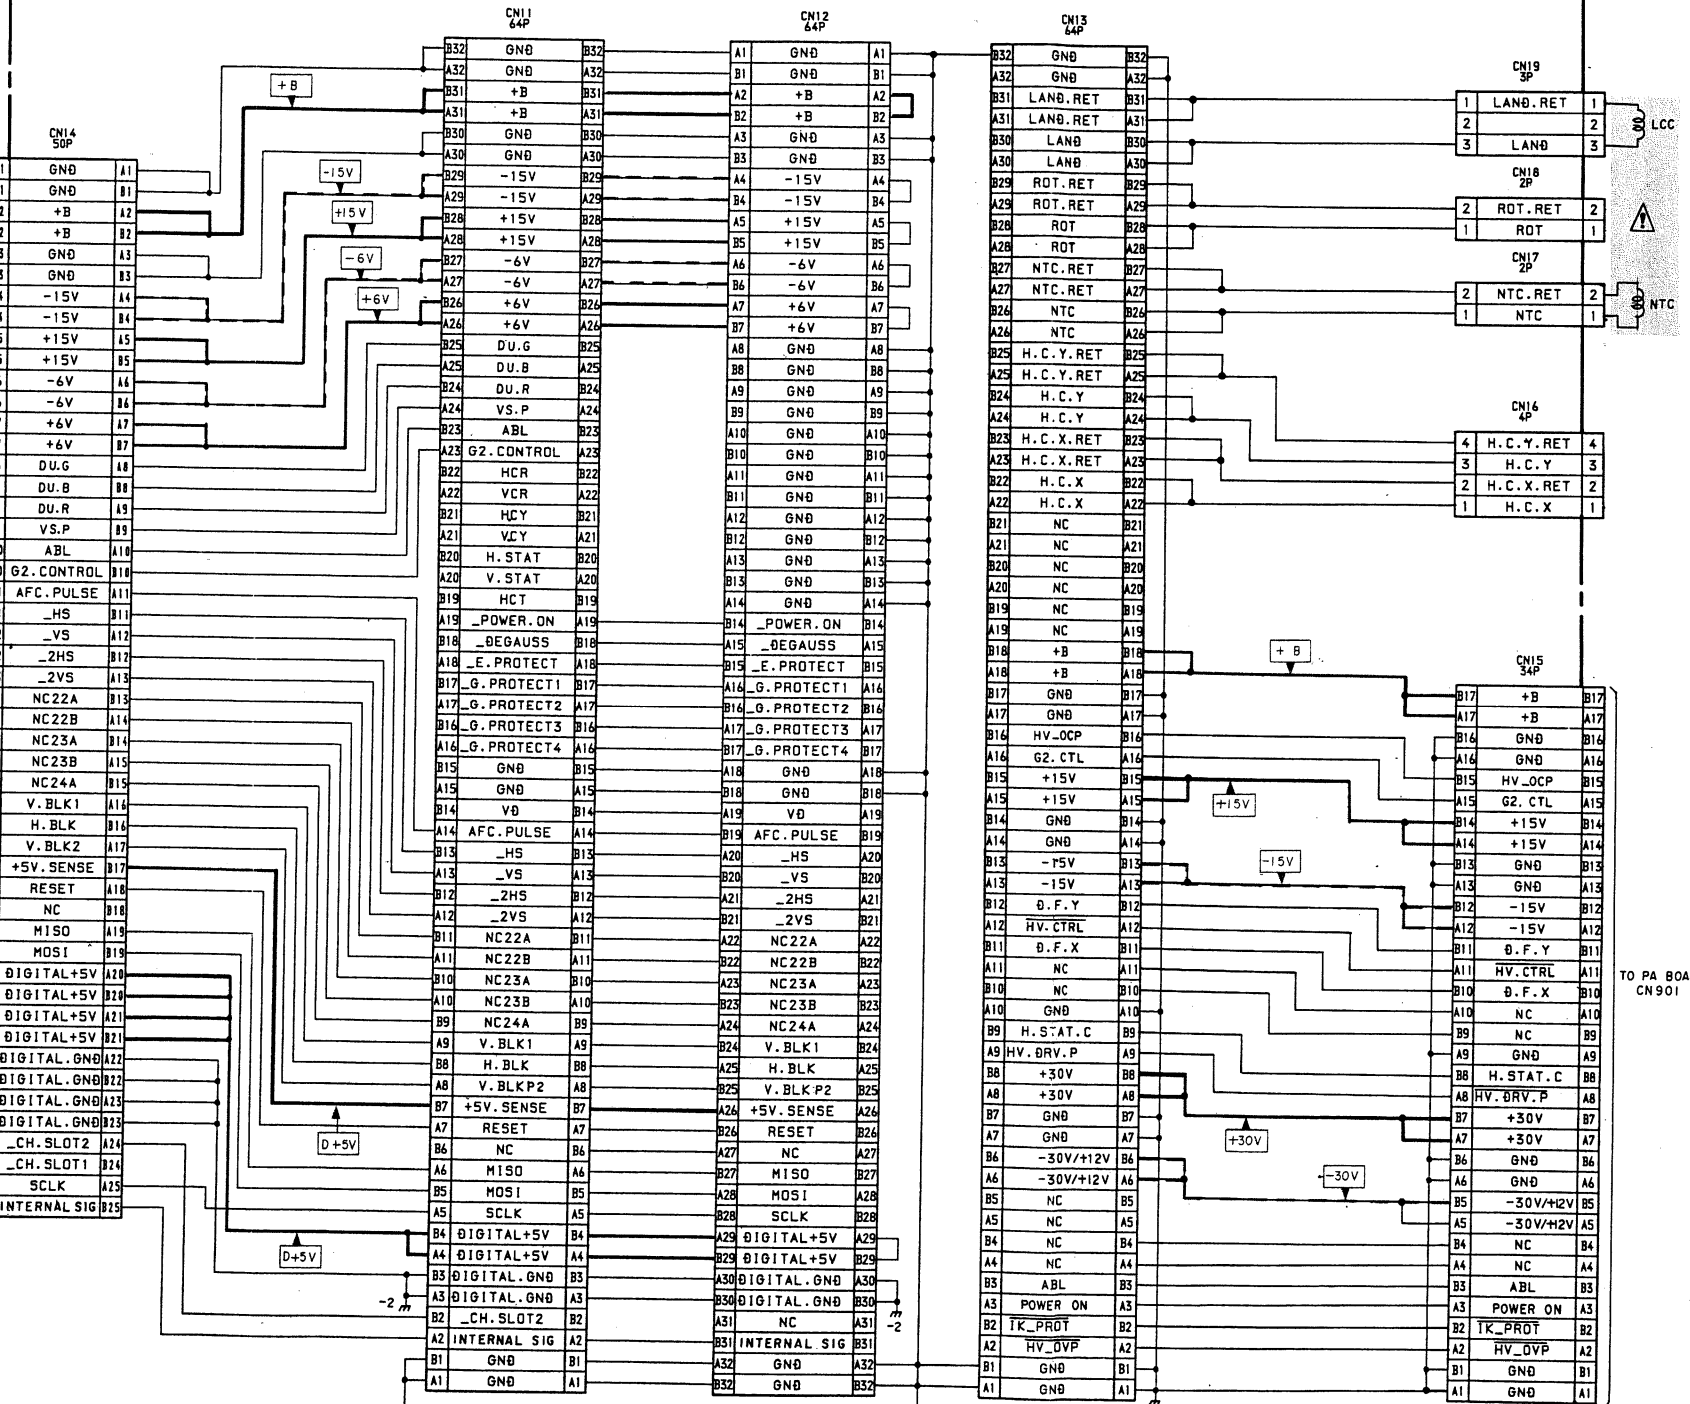


E BOARD
CN5000


G BOARD
CN3


E BOARD
CNS003

TO PA BOARD
CN 901

IC		IC510 D-12		Q544 D-13		D303 D-14		
IC1	A-1	IC511	E-12	Q141	A-13	Q567	D-4	D374 C-5
IC2	B-1	IC512	D-11	Q142	A-13	Q568	D-12	D375 C-10
IC3	C-1	IC513	E-11	Q143	A-12	Q569	D-11	D376 C-10
IC101	B-13	IC514	E-11	Q144	A-13	Q570	D-4	D377 C-5
IC102	A-13	IC515	D-11	Q164	A-4	Q571	D-11	D378 C-5
IC104	B-13	IC516	E-11	Q165	A-12	Q572	D-11	D400 C-11
IC106	A-12	IC517	D-10	Q166	A-11	Q573	D-11	D401 C-11
IC107	A-12	IC518	E-10	Q167	A-4	Q574	D-11	D502 B-8
IC110	A-12	IC519	D-5	Q168	A-11	Q575	D-11	D503 D-14
IC111	A-12	IC520	E-13	Q169	A-11	Q576	D-4	D567 D-5
IC112	A-11	IC521	D-9	Q170	A-11	Q577	D-11	D568 E-10
IC113	B-11	IC522	D-9	Q171	A-11	Q578	D-11	D569 D-10
IC114	B-11	IC523	D-9	Q172	A-11	Q579	D-4	D570 D-5
IC115	A-11	IC524	E-9	Q173	A-4	Q580	D-10	D571 D-5
IC116	B-11	IC525	E-13	Q174	A-11	Q581	D-10	D600 D-11
IC117	A-10	IC526	D-9	Q175	A-11	Q582	D-5	D601 D-11
IC118	B-10	IC527	D-9	Q176	A-4	Q583	D-5	D802 G-9
IC119	A-5	IC528	E-9	Q177	A-10	Q590	E-9	D803 G-5
IC121	A-9	IC529	E-9	Q178	A-10	Q600	E-11	D804 G-10
IC122	A-9	IC530	D-9	Q179	A-5	Q700	B-5	D805 G-10
IC123	A-9	IC531	E-12	Q190	B-9	Q701	C-5	D900 G-1
IC124	B-9	IC700	F-12	Q200	B-11	Q702	E-5	D901 F-4
IC126	A-9	IC701	G-12	Q300	D-8	Q728	F-8	D902 F-4
IC127	A-9	IC702	G-12	Q301	C-8	Q729	F-8	D903 G-4
IC128	B-9	IC703	G-12	Q302	D-14	Q800	E-1	D904 G-3
IC129	B-9	IC704	G-12	Q303	C-2	Q801	E-8	D905 G-11
IC130	A-9	IC705	G-11	Q304	C-1	Q802	F-9	
IC131	A-12	IC706	G-4	Q305	C-1	Q803	F-9	VARIABLE RESISTOR
IC300	C-13	IC728	G-9	Q306	C-2	Q804	F-9	CV100 B-10
IC301	C-13	IC730	F-9	Q307	C-2	Q805	G-9	CV300 C-10
IC302	C-13	IC731	F-9	Q308	C-2	Q806	G-9	CV500 E-10
IC303	C-13	IC732	F-8	Q309	C-2	Q807	G-6	
IC304	C-13	IC734	G-8	Q310	C-14	Q808	G-9	TEST POINT
IC305	C-13	IC735	F-8	Q350	C-13	Q809	G-9	TP1 C-12
IC306	C-12	IC736	F-9	Q351	C-13	Q810	G-9	TP100 B-14
IC307	C-12	IC800	F-10	Q352	C-13	Q811	G-10	TP101 B-13
IC310	C-12	IC801	G-10	Q353	C-12	Q812	G-5	TP102 B-13
IC311	C-12	IC802	G-10	Q354	C-13	Q813	G-5	TP103 A-13
IC312	C-11	IC803	G-10	Q374	B-4	Q814	G-6	TP104 A-12
IC313	C-11	IC804	F-10	Q375	C-12	Q815	G-5	TP105 A-11
IC314	C-11	IC805	F-10	Q376	C-11	Q816	G-5	TP106 B-10
IC315	C-11	IC900	G-2	Q377	B-4	Q817	G-10	TP107 A-10
IC316	C-11	IC901	G-11	Q378	C-11	Q818	G-10	TP300 C-14
IC317	C-10	IC902	G-13	Q379	C-11	Q819	G-10	
IC318	C-10	IC903	G-14	Q380	C-11	Q820	G-4	TP301 C-13
IC319	C-5	IC904	G-11	Q381	C-11	Q821	G-10	TP302 C-13
IC320	C-13	IC905	G-12	Q382	C-11	Q822	G-10	TP303 C-13
IC321	C-9	IC906	E-13	Q383	B-4	Q823	G-5	TP304 C-12
IC322	C-9	IC907	B-9	Q384	C-11	Q824	G-5	TP305 C-11
IC323	C-9	IC908	B-13	Q385	C-11	Q825	G-5	TP306 C-10
IC324	C-9	IC909	C-9	Q386	B-4	Q826	F-5	TP307 C-10
IC325	B-13	IC910	C-13	Q387	C-10	Q827	F-5	TP500 E-14
IC326	C-9	IC911	E-9	Q388	C-10	Q900	F-13	TP501 E-13
IC327	C-9	IC912	F-13	Q389	C-5	Q901	G-3	TP502 E-13
IC328	C-9	IC913	F-13	Q390	C-9	Q902	F-13	
IC329	C-9			Q400	C-11			DIODE
IC330	C-9			Q500	B-8			D102 A-8
IC331	C-12			Q501	B-8			D103 D-14
IC500	D-13			Q502	D-14			D164 A-5
IC501	E-13			Q503	E-2			D165 B-10
IC502	E-13			Q504	E-1			D166 A-10
IC503	D-13			Q505	E-1			D167 A-5
IC504	E-13			Q506	D-2			D168 A-5
IC506	D-12			Q507	D-1			D200 A-11
IC507	D-12			Q510	D-14			D201 A-11
IC508	D-12			Q540	D-13			D302 D-8
IC509	E-12			Q541	D-13			
				Q542	E-13			TP900 F-11
				Q543	E-13			TP901 G-11

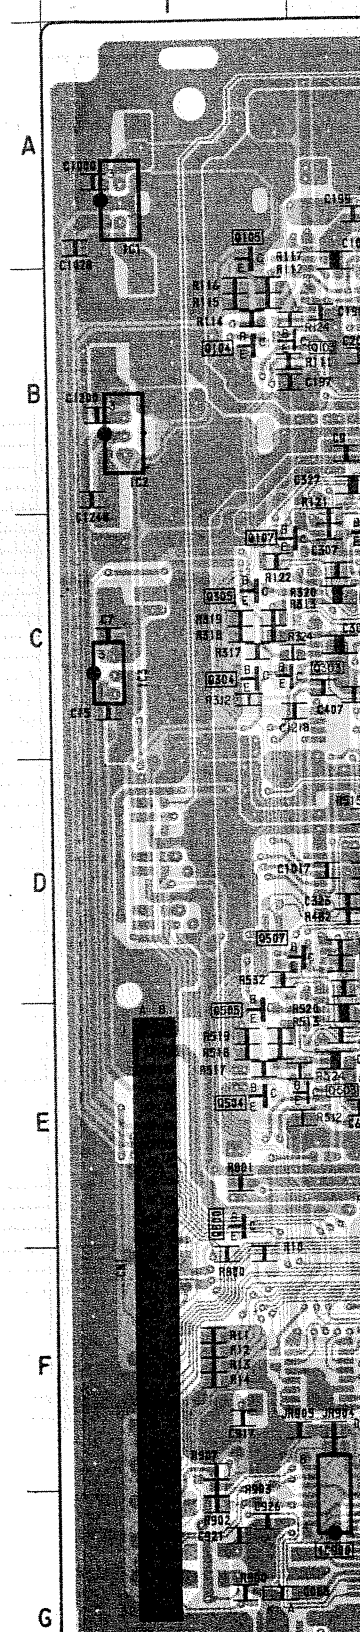


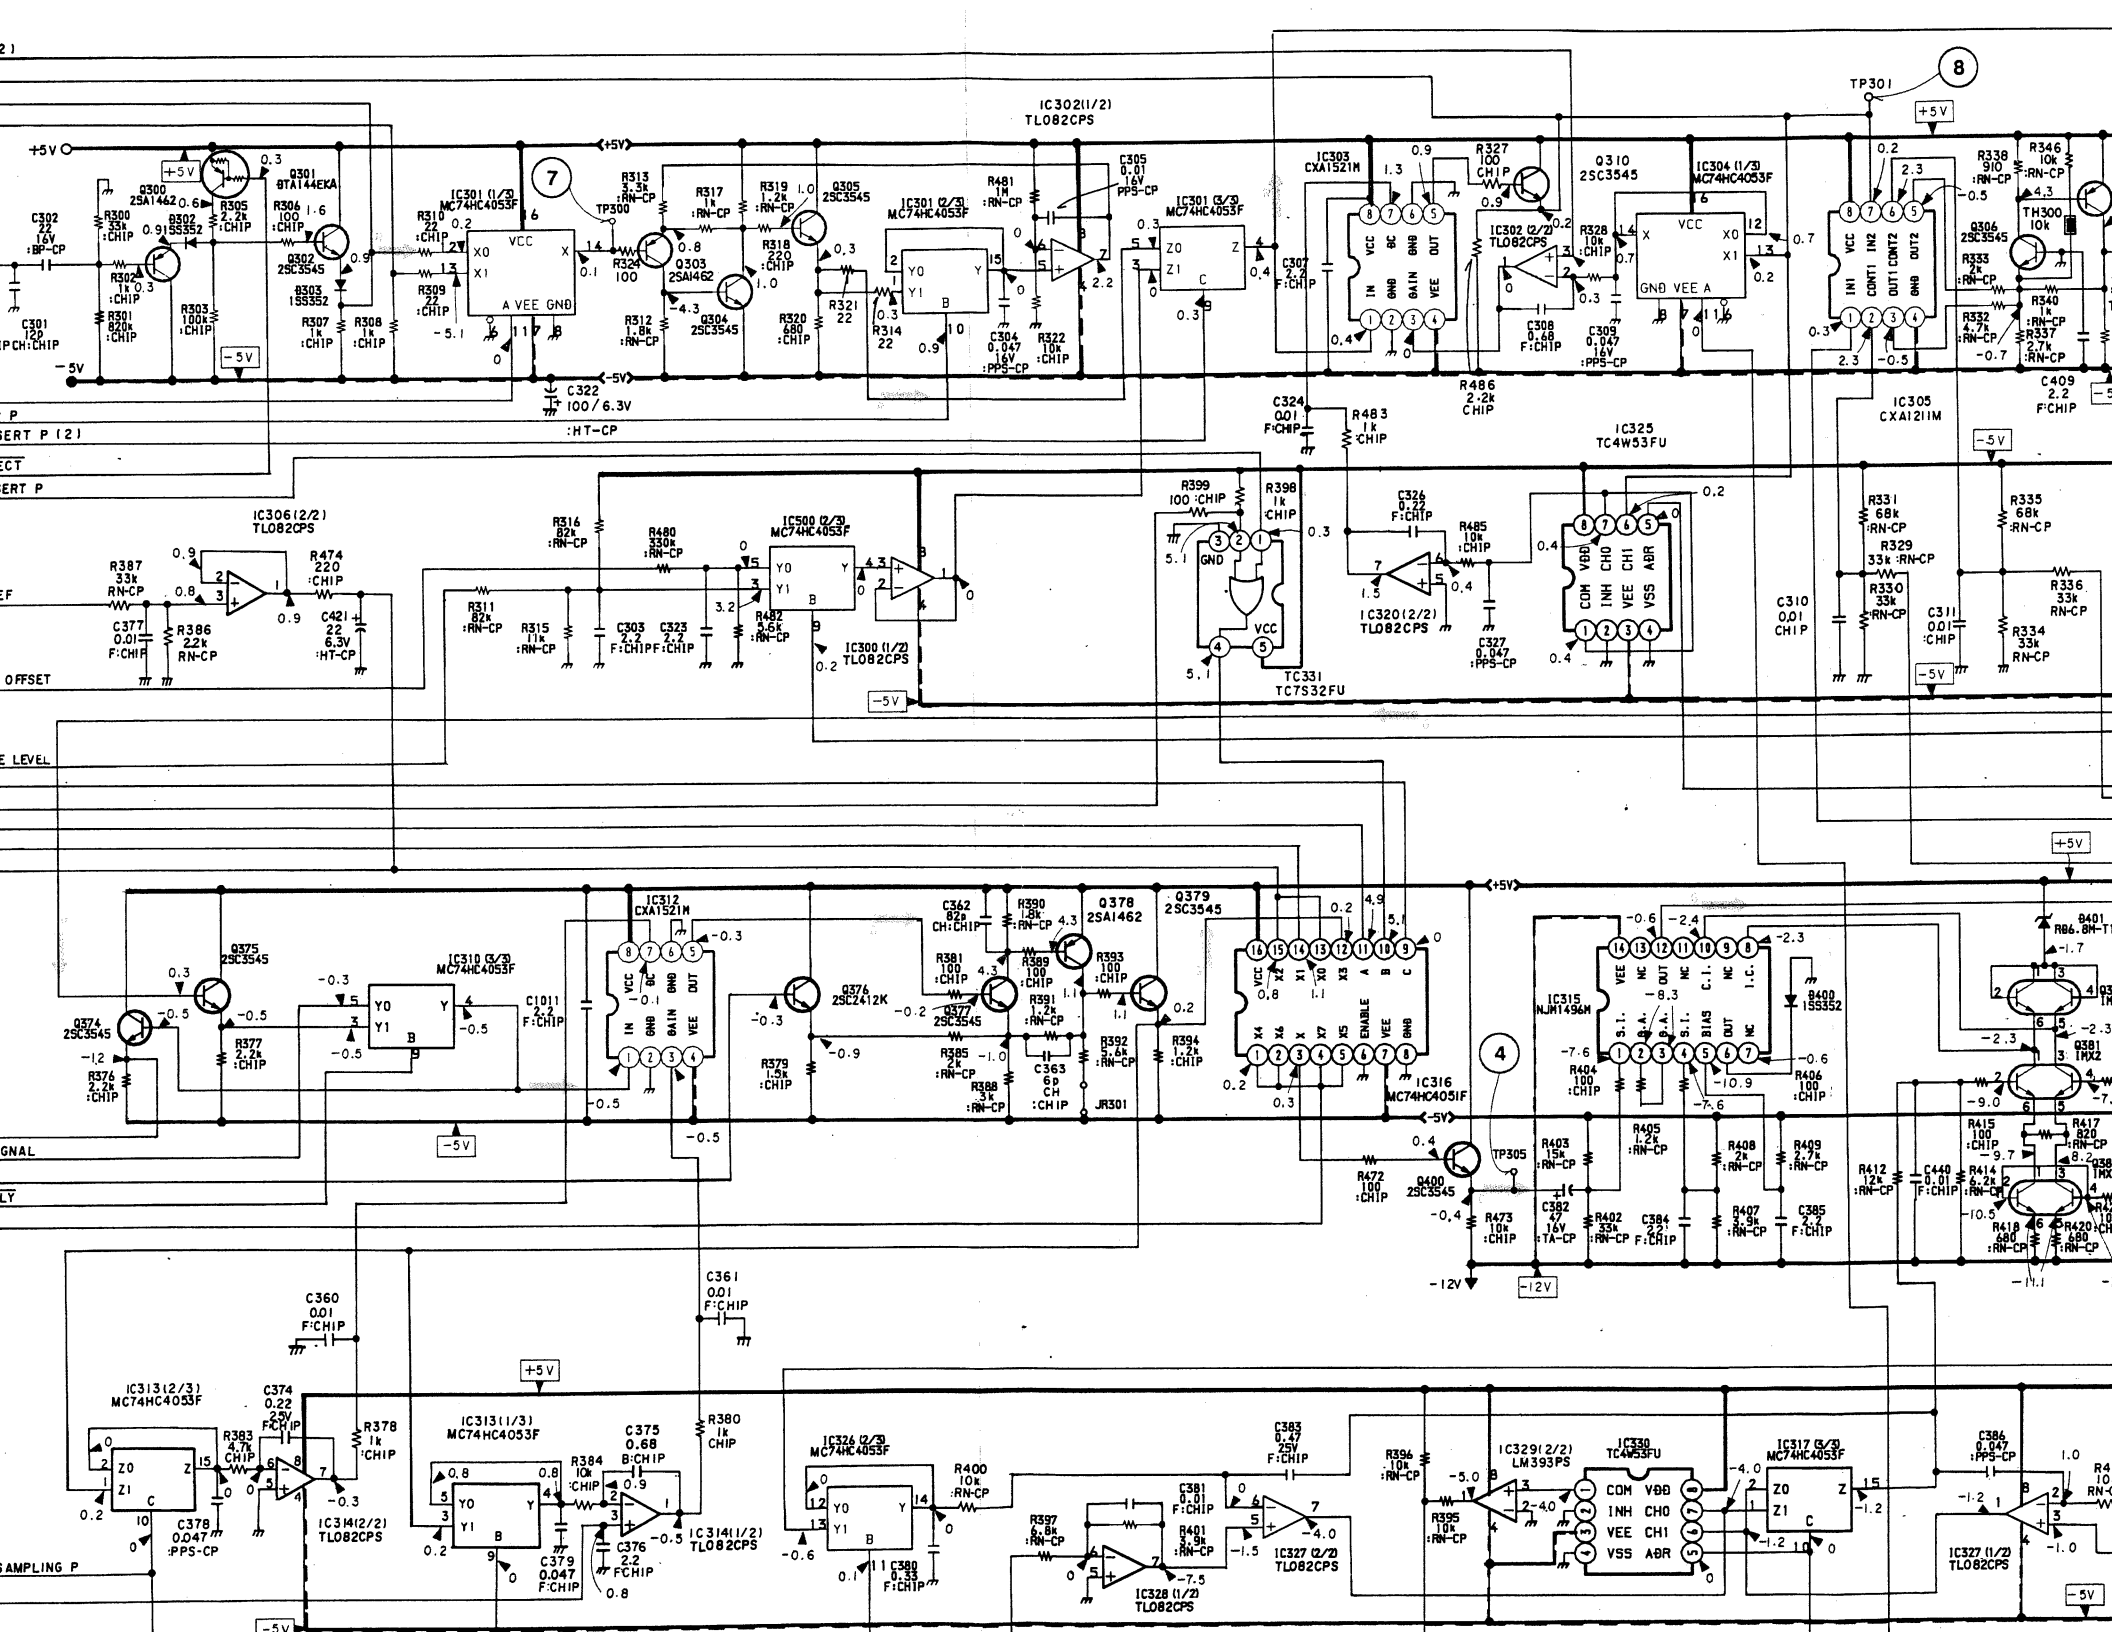


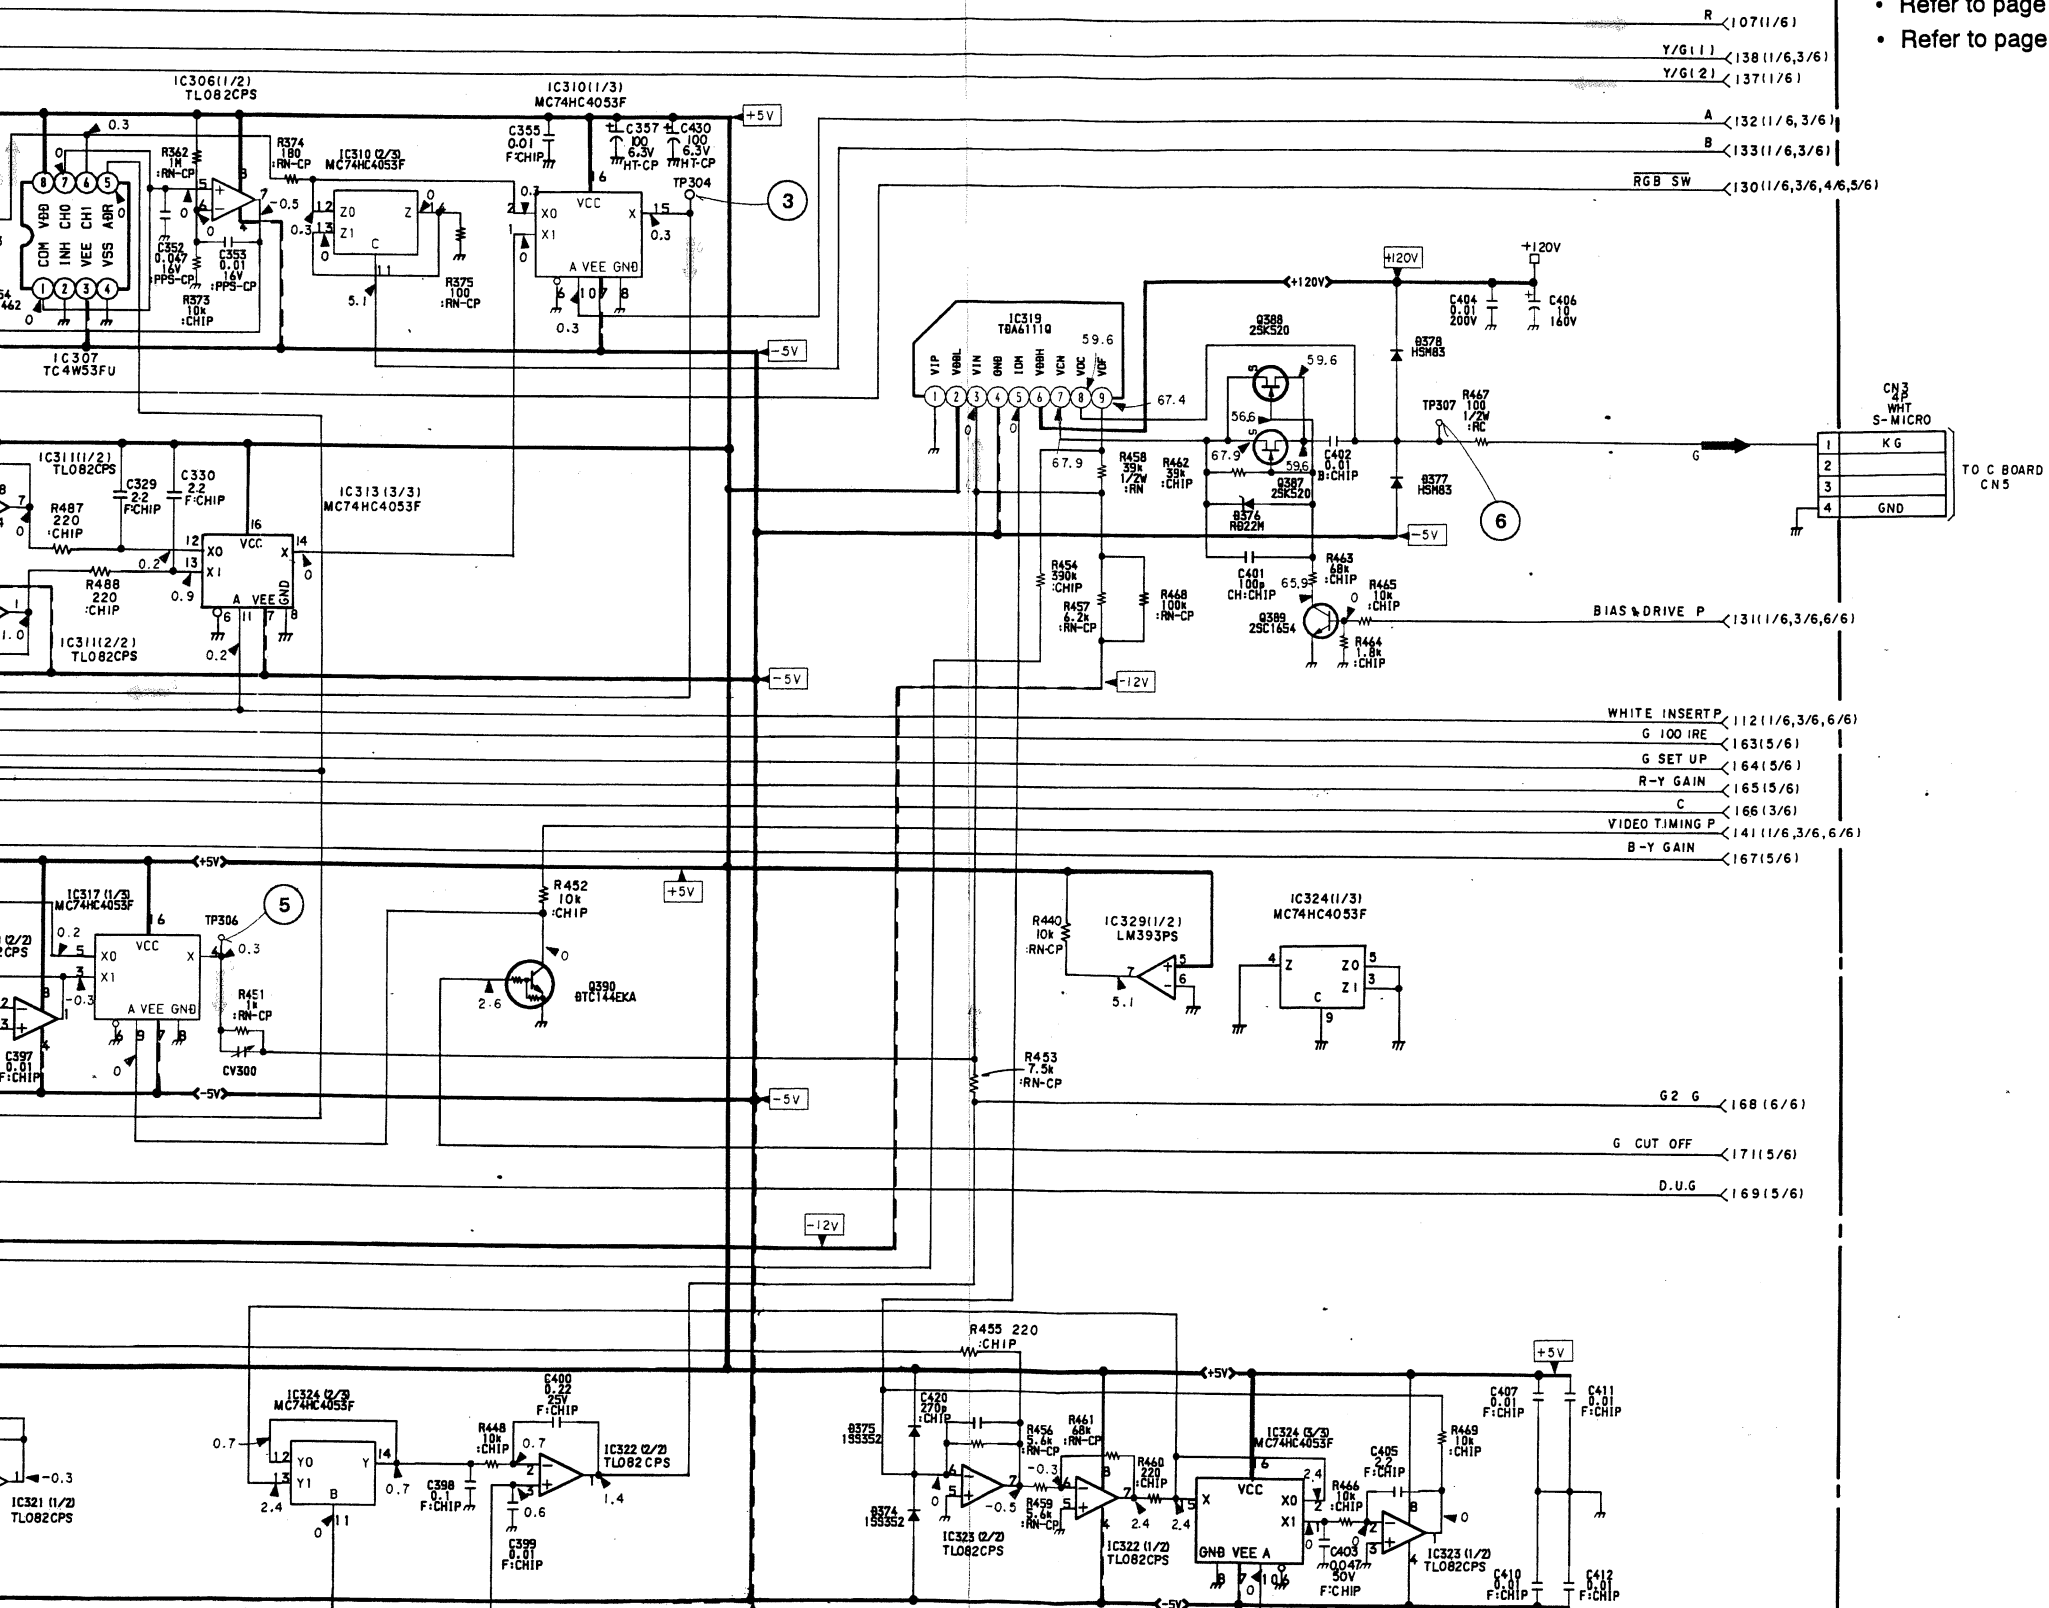


- R <107(1/6)
- Y/G11 <138(1/6,3/6)
- Y/G12 <137(1/6)
- A <132(1/6,3/6)
- B <133(1/6,3/6)
- RGB SW <130(1/6,3/6,4/6,5/6)
- CN3
WHT
S-MICRO
- TO C BOARD
CN5
- 1 KG
- 2
- 3
- 4 GND
- BIAS & DRIVE P <131(1/6,3/6,6/6)
- WHITE INSERT P <112(1/6,3/6,6/6)
- G 100 IRE <163(5/6)
- G SET UP <164(5/6)
- R-Y GAIN <165(5/6)
- C <166(3/6)
- VIDEO TIMING P <141(1/6,3/6,6/6)
- B-Y GAIN <167(5/6)
- G2 G <168(6/6)
- G CUT OFF <171(5/6)
- D.U.G <169(5/6)


A
B
C
D
E
F
G
H
I

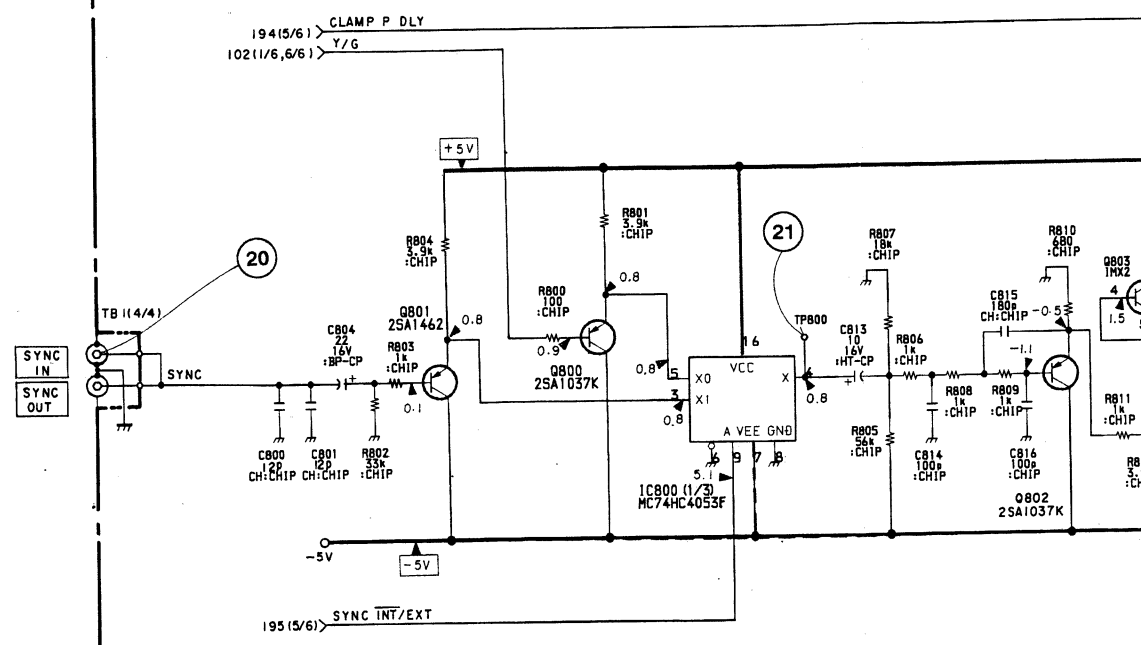

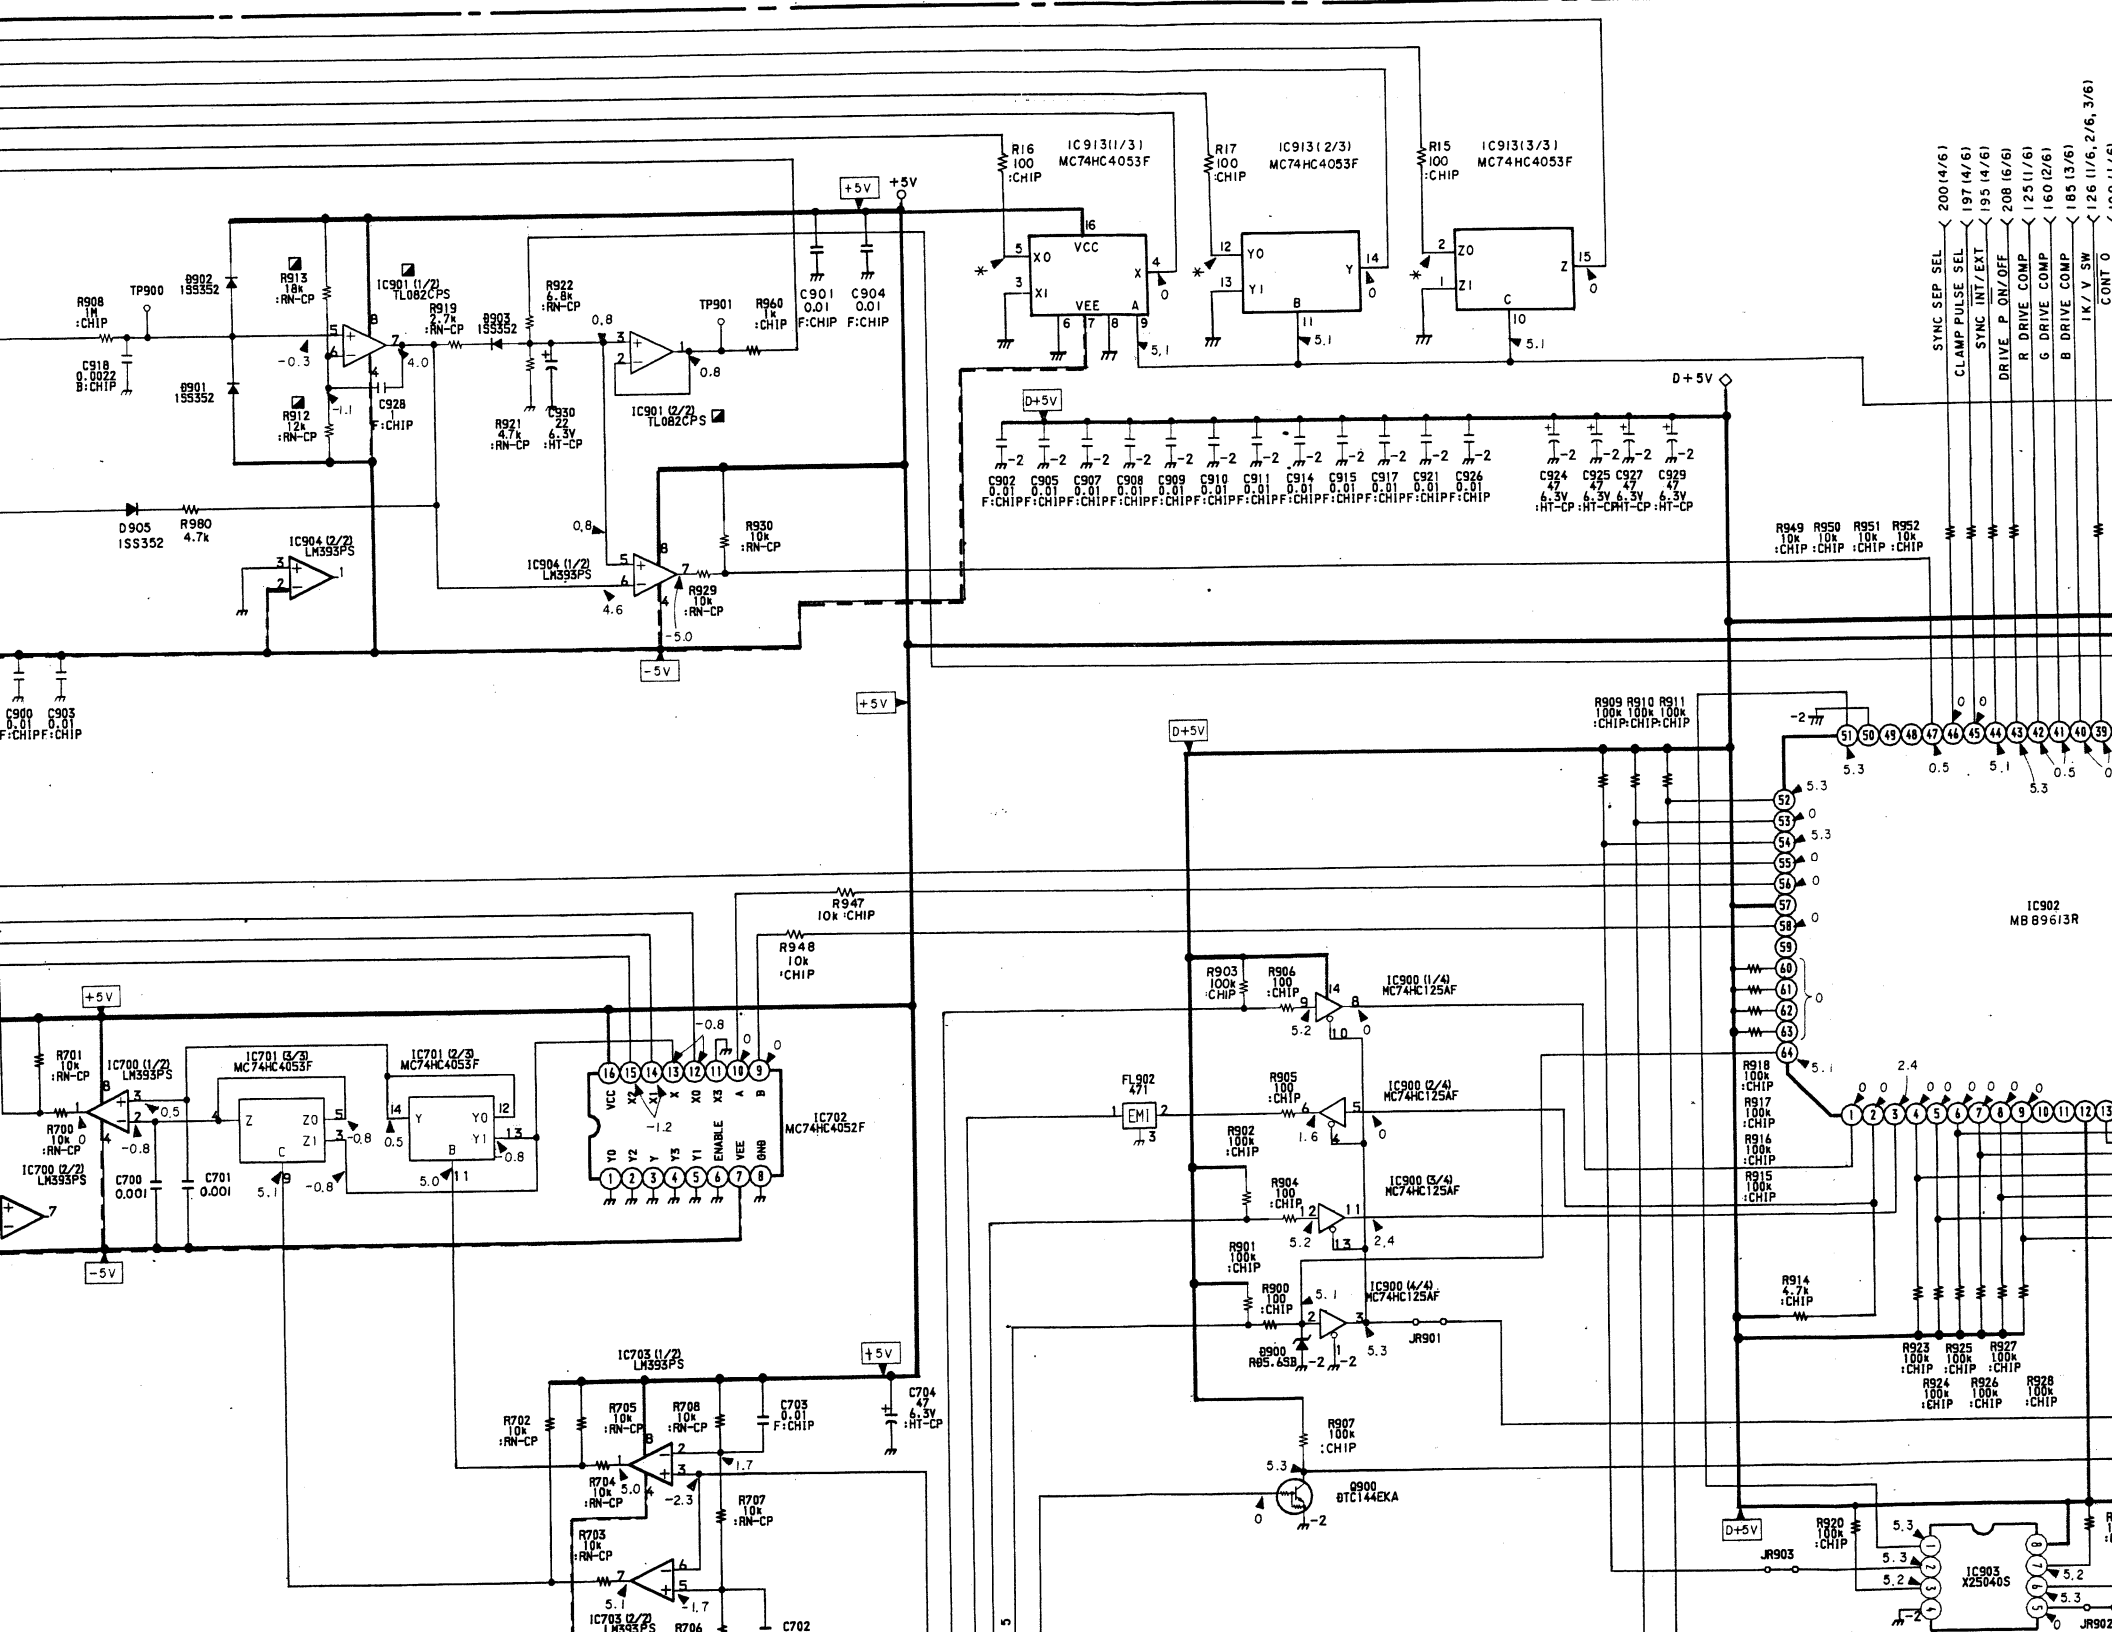






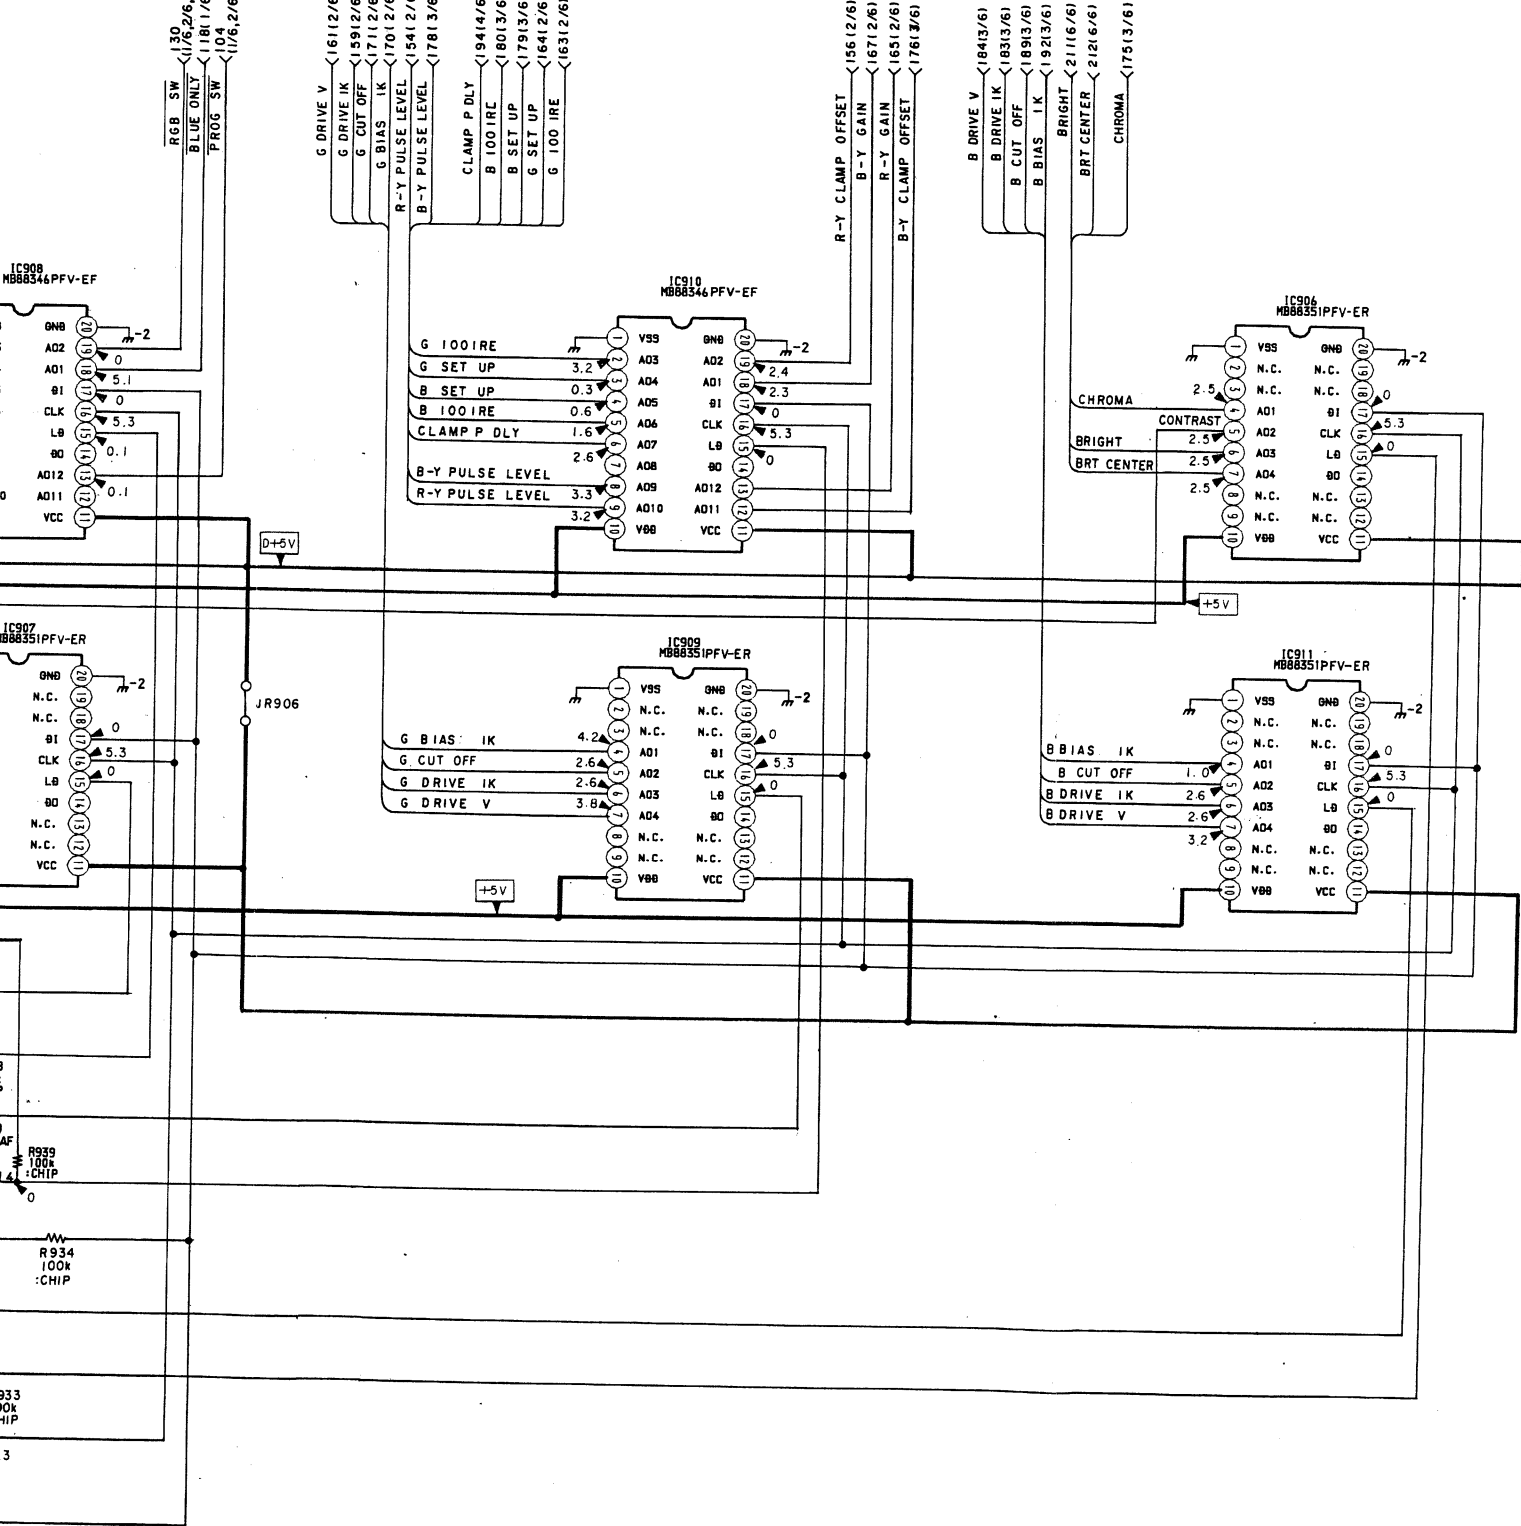



A
B
C
D
E
F
G
H
I

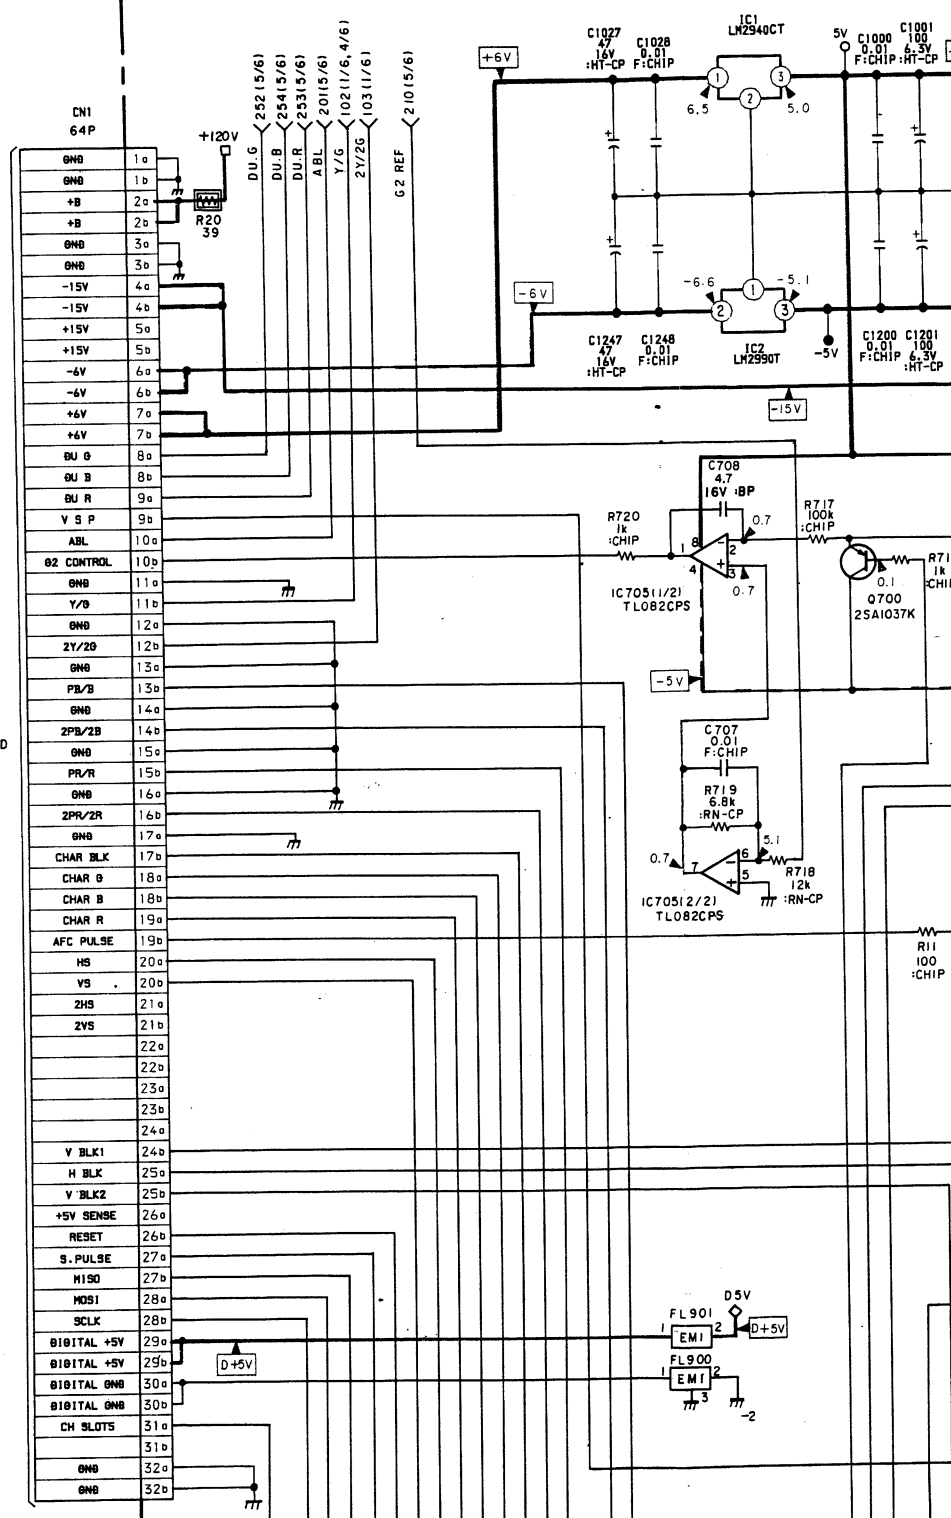

TO TB BOARD
CN1

IN/ OFF

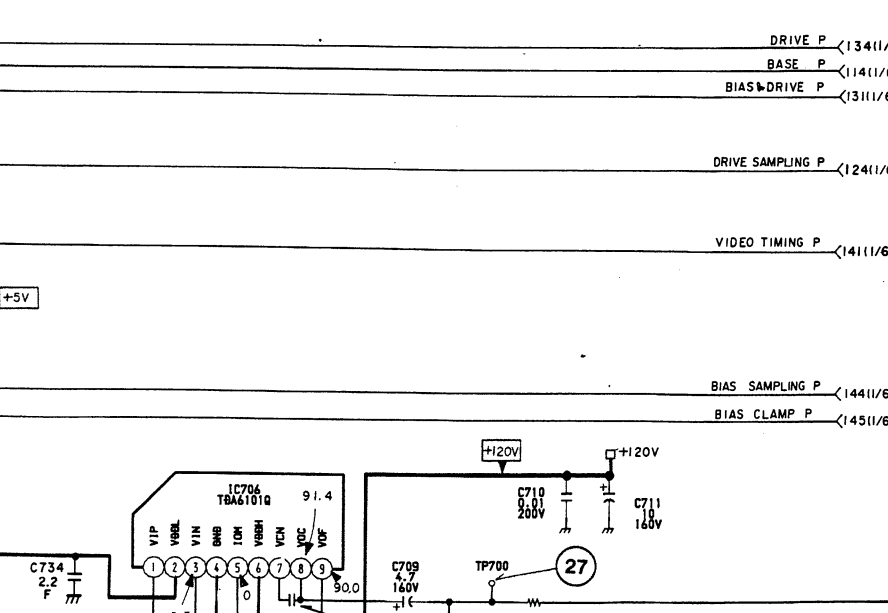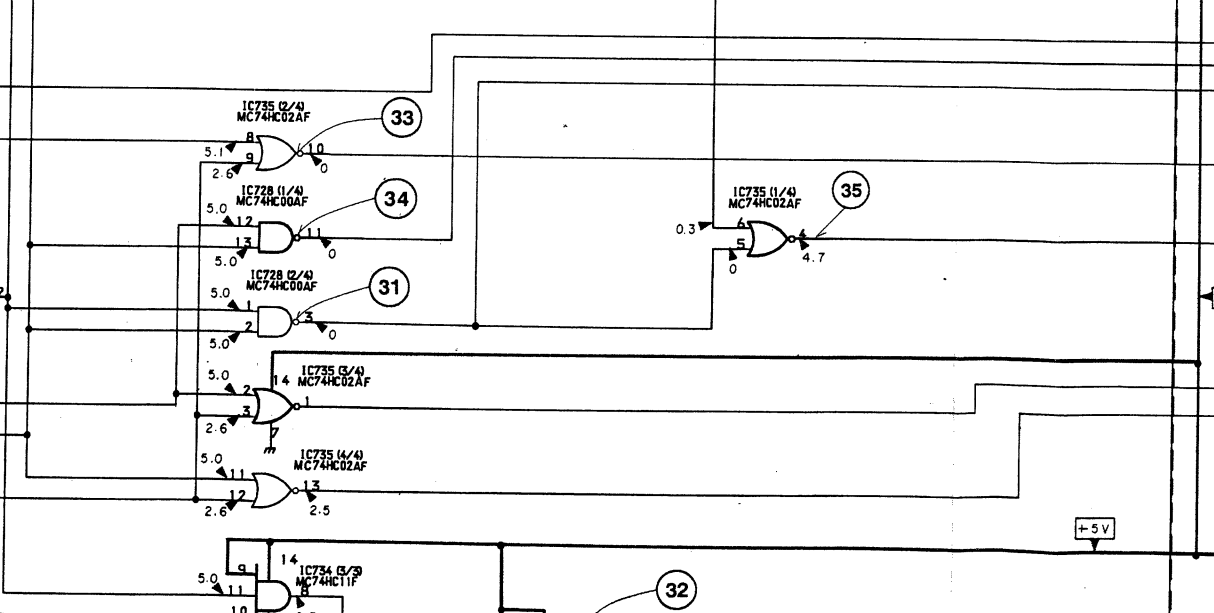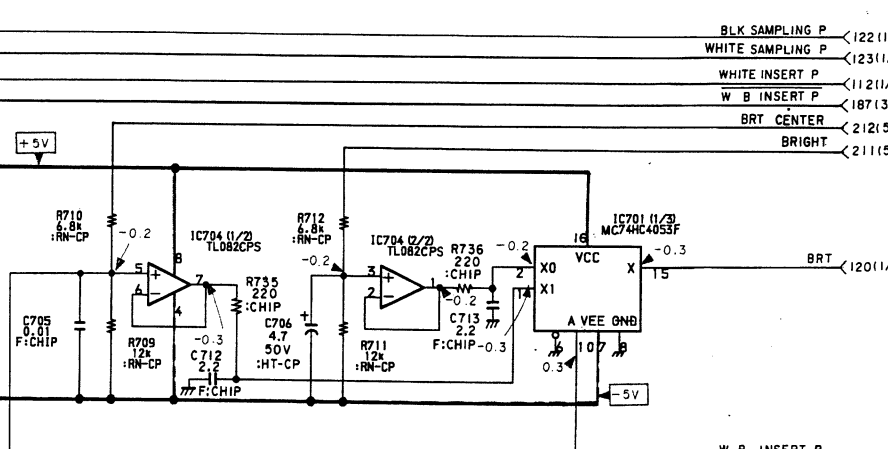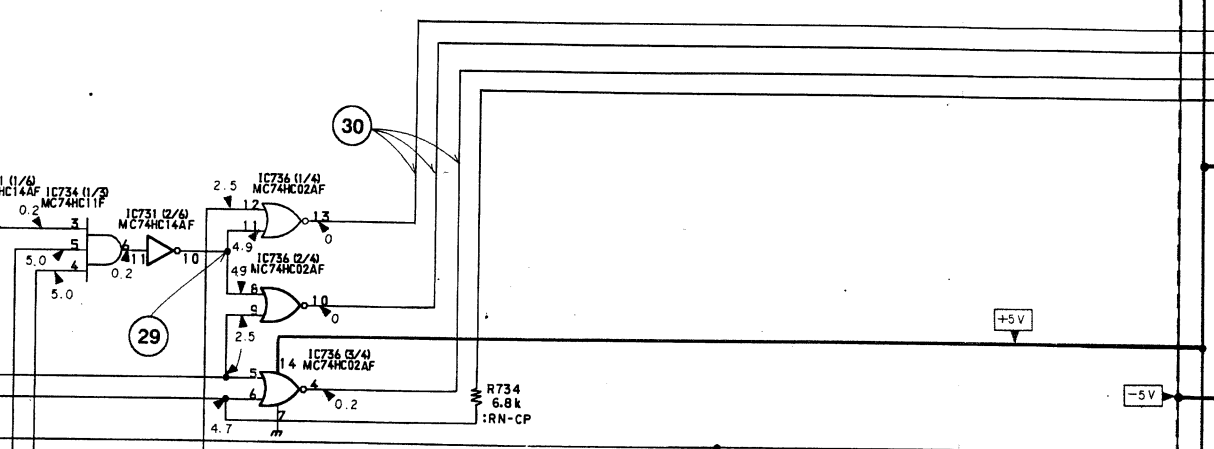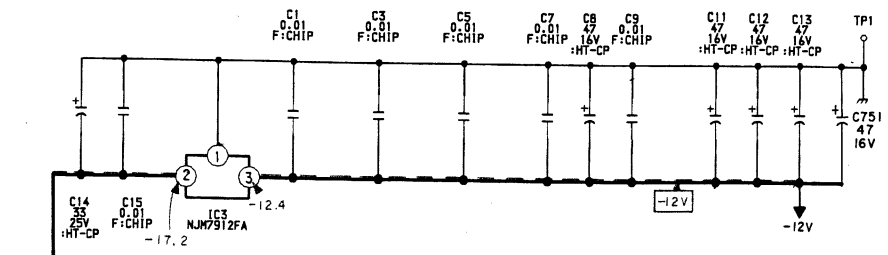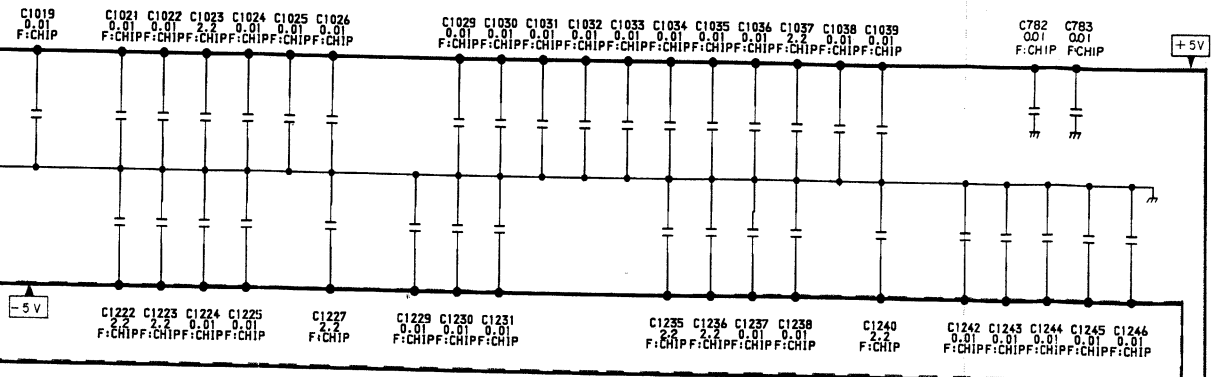

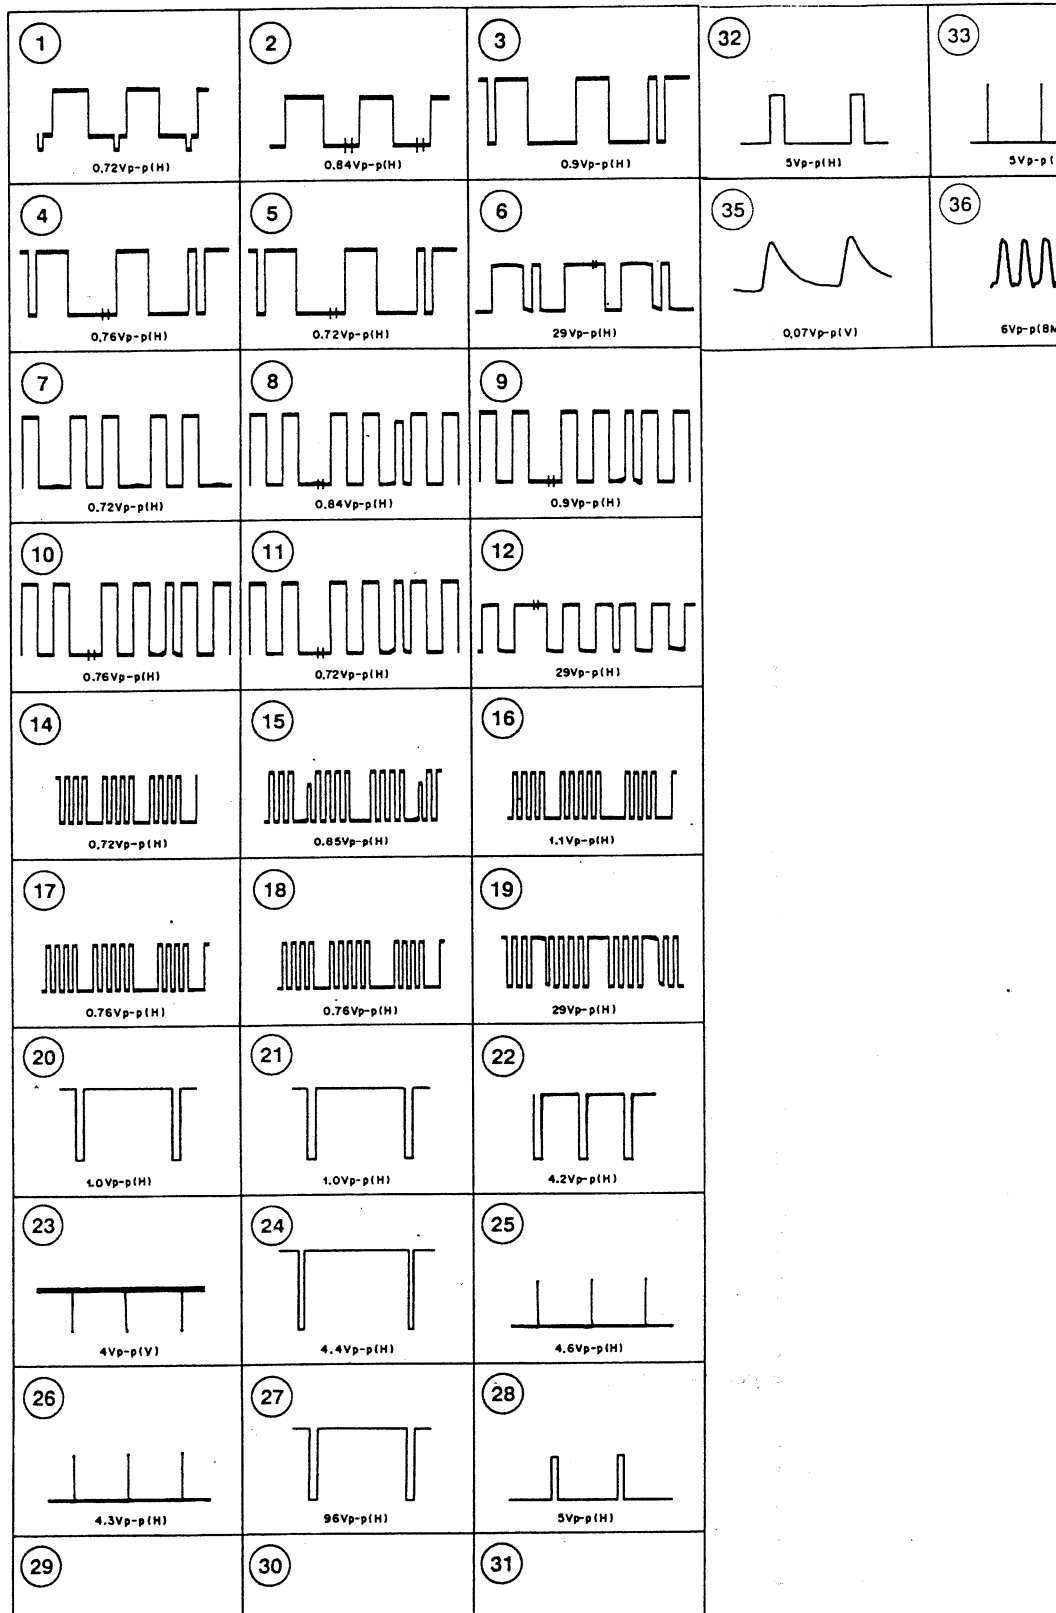

REG	502	TL082CPS-E20	B-Y/B CLAMP, B-Y GAIN CONT
REG	503	CXA1521M-T4	B-Y GAIN CONTROL
SW, PULSE INS., Y/G CLAMP	504	MC74HC4053F	PRG SW, B-Y GAIN CONT
CLAMP	506	TL082CPS-E20	BUFFER, B CLAMP
SWITCH	507	TC4W53FU	B CLAMP
ER, R CLAMP	508	TC4W53FU	CHAR BACK SW
AMP	509	TC7S00FU	CHAR BLK INSERT
BLK SW, PULSE INSERT	510	MC74HC4053F	HALF BLK, PULSE INSERT SW
ER	511	TL082CPS-E20	BUFFER
. BRT CONTROL	512	CXA1521M-T4	CONT. BRT CONTROL
. BRT CONTROL, R REF SW	513	MC74HC4053F	CONT. BRT CONTROL, B REF SW
. BRT CONTROL	514	TL082CPS-E20	CONT. BRT CONTROL
IVE AMP	515	NJM1496M-TE2	B DRIVE AMP
E INSERT	516	MC74HC4051F	PULSE INSERT
DRIVE AMP, IK/V, CUTOFF SW	517	MC74HC4053F	IK/V, CUTOFF SW, AMP
IVE AMP, BUFFER	518	TL082CPS-E20	B DRIVE AMP, BUFFER
VIDEO OUT	519	TDA6111Q	B VIDEO OUT
IVE (IK/V) CONTROL	520	TL082CPS-E20	B-Y GAIN CONTROL
SAS CONT, R IK CLAMP	521	TL082CPS-E20	B DRIVE (V) CONTROL
CLAMP	522	TL082CPS-E20	B IK CLAMP, B BIAS CONTROL
SAS CONT, R IK CLAMP	523	TL082CPS-E20	B IK CLAMP
IVE (IK/V) CONTROL	524	MC74HC4053F	B IK CLAMP, B BIAS CONTROL
IVE (IK/V) CONTROL	525	TC4W53FU	B-Y GAIN CONTROL
IVE (IK/V) CONTROL	526	MC74HC4053F	B DRIVE (IK/V) CONTROL
IVE COMPARATOR	527	TL082CPS-E20	B DRIVE (IK/V) CONTROL
SWITCH	528	TL082CPS-E20	B DRIVE (IK/V) CONTROL
R	529	LM393PS-T5L	B DRIVE COMPARATOR
ER	530	TC4W53FU	IK/V SWITCH
SW, R-Y/R CLAMP, PULSE INSERT	531	TC7S32FU	CHAR B
R CLAMP	700	LM393PS-T5L	COMPARATOR
GAIN CONTROL	701	MC74HC4053F	SAMPLING HOLD, BRT REF SW
SW, R-Y GAIN CONTROL	702	MC74HC4052F	SIGNAL SELECT SW
MATRIX AMP	703	LM393PS-T5L	SAMPLING P SEP
ER, G CLAMP	704	TL082CPS-E20	BUFFER
AMP	705	TL082CPS-E20	G2 CONTROL
BLK SW, PULSE INSERT	706	TDA6101Q	BLK AMP
ER	728	MC74HC00AF	PULSE GENERATOR
BRT CONTROL	730	MC74HC02AF	PULSE GENERATOR
BRT CONTROL, G REF SW	731	MC74HC14AF	PULSE GENERATOR
BRT CONTROL	732	MC74HC175F	PULSE GENERATOR
IVE AMP	734	MC74HC11F	PULSE GENERATOR
INSERT	735	MC74HC02AF	PULSE GENERATOR
IVE AMP, IK/V, CUTOFF SW	736	MC74HC02AF	PULSE GENERATOR
IVE AMP, BUFFER	800	MC74HC4053F	INT/EXT SYNC, HS/H BLK SW
VIDEO OUT	801	MC74HC4538AF	CLAMP PULSE GEN
AIN CONTROL	802	NJM4558M-T2	CLAMP PULSE DLY
IVE (V) CONTROL	803	MC74HC4538AF	H SYNC SEP
SAS CONT, G IK CLAMP	804	MC74HC4538AF	CLAMP PULSE GEN
CLAMP	805	TC7S02FU	CLAMP PULSE GEN
SAS CONT, G IK CLAMP	900	MC74HC125AF	BUFFER
AIN CONTROL	901	TL082CPS-E20	A. B. L. CONT BUFFER
IVE (IK/V) CONTROL	902	MB89613PF-SUB02	SUB MICROCOMPUTER
VE (IK/V) CONTROL	903	X25040S-C7000	EEP ROM
VE (IK/V) CONTROL	904	LM393PS-T5L	OVERLOAD COMPARATOR
VE COMPARATOR	905	MC74HC244AF	BUFFER
SWITCH	906	MB88351PFV-ER	DAC
G	907	MB88351PFV-ER	DAC
P, B-Y REF, R-Y REF SW	908	MB88346BPFV-EF	DAC

910	MB88346BPFV-EF	DAC
911	MB88351PFV-ER	DAC
912	TC7W32FU-TE12L	MONO SW
913	MC74HC4053F	D. U SW
0100	2SA1462	Y/G BUFFER
101	DTA144EKA	BK SELECT SW
102	2SC3545	Y/G BUFFER
103	2SA1462	Y/G CLAMP
104	2SC3545	Y/G CLAMP
105	2SC3545	Y/G CLAMP
106	2SA1462	R BUFFER
107	2SC3545	R-Y BUFFER
108	2SC2412K-OR	Y BUFFER
140	2SC3545	Y-R-Y MIX
141	2SC3545	Y-R-Y MIX
142	2SC3545	R CLAMP
143	2SA1462	R CLAMP
144	2SA1462	R CLAMP
164	2SC3545	R BUFFER
165	2SC3545	R BUFFER
166	2SC2412K-OR	BRT BUFFER
167	2SC3545	CONT. BRT CONTROL
168	2SA1462	CONT. BRT CONTROL
169	2SC3545	CONT. BRT CONTROL
170	1MX2	R DRIVE AMP
171	1MX2	R DRIVE AMP
172	1MX2	R DRIVE AMP
173	2SC2412K-OR	R DRIVE AMP
174	2SC3545	R DRIVE AMP
175	2SA1462	R DRIVE AMP
176	2SC3545	R DRIVE AMP
177	2SK520K44K45	TRANSIENT OFF SW
178	2SK520K44K45	TRANSIENT OFF SW
179	2SC1654	TRANSIENT OFF SW
190	DTC144EKA	CUTOFF SW
200	2SC3545	R BUFFER
300	2SA1462	R-Y/R BUFFER
301	DTA144EKA	BK SELECT SW
302	2SC3545	R-Y/R BUFFER
303	2SA1462	R-Y/R CLAMP
304	2SC3545	R-Y/R CLAMP
305	2SC3545	R-Y/R CLAMP
306	2SC3545	G-Y MATRIX AMP
307	2SA1462	G-Y MATRIX AMP
308	2SC2412K-OR	G-Y BUFFER
309	2SA1462	G BUFFER
310	2SC3545	R-Y GAIN CONTROL
350	2SC3545	Y-G-Y MIX
351	2SC3545	Y-G-Y MIX
352	2SC3545	G CLAMP
353	2SA1462	G CLAMP
354	2SA1462	G CLAMP
374	2SC3545	G BUFFER
375	2SC3545	G BUFFER
376	2SC2412K-OR	BTR BUFFER
377	2SC3545	CONT. BRT CONTROL
378	2SA1462	CONT. BRT CONTROL

380	1MX2	G DRIVE AMP
381	1MX2	G DRIVE AMP
382	1MX2	G DRIVE AMP
383	2SC2412K-OR	G DRIVE AMP
384	2SC3545	G DRIVE AMP
385	2SA1462	G DRIVE AMP
386	2SC3545	G DRIVE AMP
387	2SK520K44K45	TRANSIENT OFF SW
388	2SK520K44K45	TRANSIENT OFF SW
389	2SC1654	TRANSIENT OFF SW
390	DTC144EKA	CUTOFF SW
400	2SC3545	G BUFFER
500	2SA1462	B-Y/B BUFFER
501	DTA144EKA	BK SELECT SW
502	2SC3545	B-Y/B BUFFER
503	2SA1462	B-Y/B CLAMP
504	2SC3545	B-Y/B CLAMP
505	2SC3545	B-Y/B CLAMP
506	2SA1462	B BUFFER
507	2SC3545	B-Y BUFFER
510	2SC3545	B-Y GAIN CONTROL
540	2SC3545	Y-B-Y MIX
541	2SC3545	Y-B-Y MIX
542	2SC3545	B CLAMP
543	2SA1462	B CLAMP
544	2SA1462	B CLAMP
567	2SC3545	B BUFFER
568	1MX2	B BUFFER
569	2SC2412K-OR	BRT BUFFER
570	2SC3545	CONT. BRT CONTROL
571	2SA1462	CONT. BRT CONTROL
572	2SC3545	CONT. BRT CONTROL
573	1MX2	B DRIVE AMP
574	1MX2	B DRIVE AMP
575	1MX2	B DRIVE AMP
576	2SC2412K-OR	B DRIVE AMP
577	2SC3545	B DRIVE AMP
578	2SA1462	B DRIVE AMP
579	2SC3545	B DRIVE AMP
580	2SK520K44K45	TRANSIENT OFF SW
581	2SK520K44K45	TRANSIENT OFF SW
582	2SC1654	TRANSIENT OFF SW
590	DTC144EKA	CUTOFF SWITCH
600	2SC3545	B BUFFER
700	2SA1037K-OR	G2 R CONTROL
701	2SA1037K-OR	G2 G CONTROL
702	2SA1037K-OR	G2 B CONTROL
728	2SC2412K-OR	PULSE GENERATOR
729	2SC2412K-OR	PULSE GENERATOR
800	2SA1037K-OR	Y/G BUFFER
801	2SA1037K-OR	EXT SYNC BUFFER
802	2SA1037K-OR	SYNC AGC
803	1MX2	SYNC AGC
804	2SC2412K-OR	SYNC AGC
805	1MX2	SYNC AGC
806	2SA1037K-OR	SYNC AGC
807	2SC2412K-OR	SYNC AGC
808	2SC2412K-OR	SYNC AGC

810	1MT2	SYNC AGC
811	1MT2	SYNC AGC
812	2SC2412K-OR	SYNC AGC
813	2SA1037K-OR	SYNC AGC
814	2SA1037K-OR	SYNC AGC
815	2SC2412K-OR	SYNC AGC
816	2SA1037K-OR	SYNC AGC
817	2SC2412K-OR	SYNC AGC
818	2SC2412K-OR	SYNC AGC
819	2SC2412K-OR	SYNC AGC
820	2SA1037K-OR	CLAMP PULS
821	DTC144EKA	SYNC SEP
822	2SC2412K-OR	V SYNC SEP
823	2SC2412K-OR	V SYNC SEP
824	2SA1037K-OR	CLAMP PULS
825	2SA1037K-OR	H SYNC SEP
826	2SC4213A	CLAMP PULS
827	2SC4213A	CLAMP PULS
900	DTC144EKA	RESET SW
901	DTC144EKA	BUFFER CON
902	DTA144EK	SIGNAL OFF
D102	1SS352	DC SHIFT
103	1SS352	PROTECTOR
164	1SS352	PROTECTOR
165	1SS352	PROTECTOR
166	RD22M	PROTECTOR
167	HSM83-TL	PROTECTOR
168	HSM83-TL	PROTECTOR
200	1SS352	DC SHIFT
201	RD6. 8M-B3	R DRIVE AM
302	1SS352	DC SHIFT
303	1SS352	PROTECTOR
374	1SS352	PROTECTOR
375	1SS352	PROTECTOR
376	RD22M-B3	PROTECTOR
377	HSM83-TL	PROTECTOR
378	HSM83-TL	PROTECTOR
400	1SS352	DC SHIFT
401	RD6. 8M-B1	G DRIVE AM
502	1SS352	DC SHIFT
503	1SS352	PROTECTOR
567	1SS352	PROTECTOR
568	1SS352	PROTECTOR
569	RD22M-B3	PROTECTOR
570	HSM83-TL	PROTECTOR
571	HSM83-TL	PROTECTOR
600	1SS352	DC SHIFT
601	RD6. 8M-B1	B DRIVE AM
802	1SS352	SYNC AGC
803	1SS352	SYNC AGC
804	1SS352	V SYNC SEP
805	1SS352	PROTECTOR
900	RD5. 6SB	PROTECTOR
901	1SS352	PROTECTOR
902	1SS352	PROTECTOR
903	1SS352	A. B. L
904	1SS352	BUFFER CON

IC1	F-4	Q6	D-2
IC2	D-10	Q7	D-9
IC3	E-4	Q8	A-9
IC4	D-4	Q9	B-14
IC5	E-9	Q101	B-5
IC6	E-12	Q102	B-5
IC7	F-13	Q103	C-3
IC8	F-13	Q104	C-4
IC9	D-10	Q106	C-2
IC10	F-12	Q107	B-2
		Q108	B-2
		Q109	C-13
		Q110	E-2
		Q111	E-1
		Q112	F-1
IC11	F-12		
IC12	G-13		
IC13	F-12		
IC14	C-14	Q113	E-1
IC15	G-11	Q114	F-2
IC16	G-12	Q115	F-1
IC17	G-12	Q116	D-12
IC19	F-10	Q151	E-13
IC20	G-10	Q152	E-1
IC21	F-10	Q153	A-10
		Q154	A-10
		Q155	A-10
IC22	B-9		
IC23	C-9		
IC24	B-9		
IC25	A-9		
IC26	A-9		
IC27	F-9		
IC28	F-9		
IC30	F-9		
IC31	F-9		
IC32	E-13		
IC33	E-13		
IC34	E-14		
IC35	F-14		
IC36	B-14		
IC37	E-14		
IC51	C-1		
IC52	D-1		
IC101	A-10		
IC102	A-10		
IC103	A-11		
IC104	B-12		
IC105	B-4		
IC106	C-11		
IC107	B-3		
IC108	A-3		
IC109	B-13		
IC110	A-13		
IC111	C-12		
IC113	C-11		
IC114	B-10		
IC115	B-11		
IC116	B-11		
IC117	C-12		
IC118	B-10		
IC119	B-10		
IC120	B-11		
IC121	C-10		
IC122	C-10		
IC123	C-10		
IC124	D-2		
IC125	F-12		
IC126	D-12		
TRANSISTOR			
Q1	G-13	TP1	A-8
Q2	F-13	TP3	G-9
		TP5	C-14
		TP6	C-14
		TP7	G-13

DIODE

D1	B-1
D2	B-1
D3	B-1
D4	B-1
D5	B-1
D12	B-1
D13	E-2
D29	A-7
D30	A-7
D31	A-7

D32	A-7
D33	A-7
D34	E-8
D35	E-8
D36	E-8
D37	E-8
D38	E-8
D39	E-8
D40	E-8
D41	E-8


D103	E-2
D104	E-1
D105	E-2
D106	F-1
D107	E-1
D108	F-2
D109	F-1
D111	F-2
D112	F-2
D113	F-2

VARIABLE RESISTOR


RV101	A-13
-------	------



TEST POINT

A
B
C
D
E
F
G

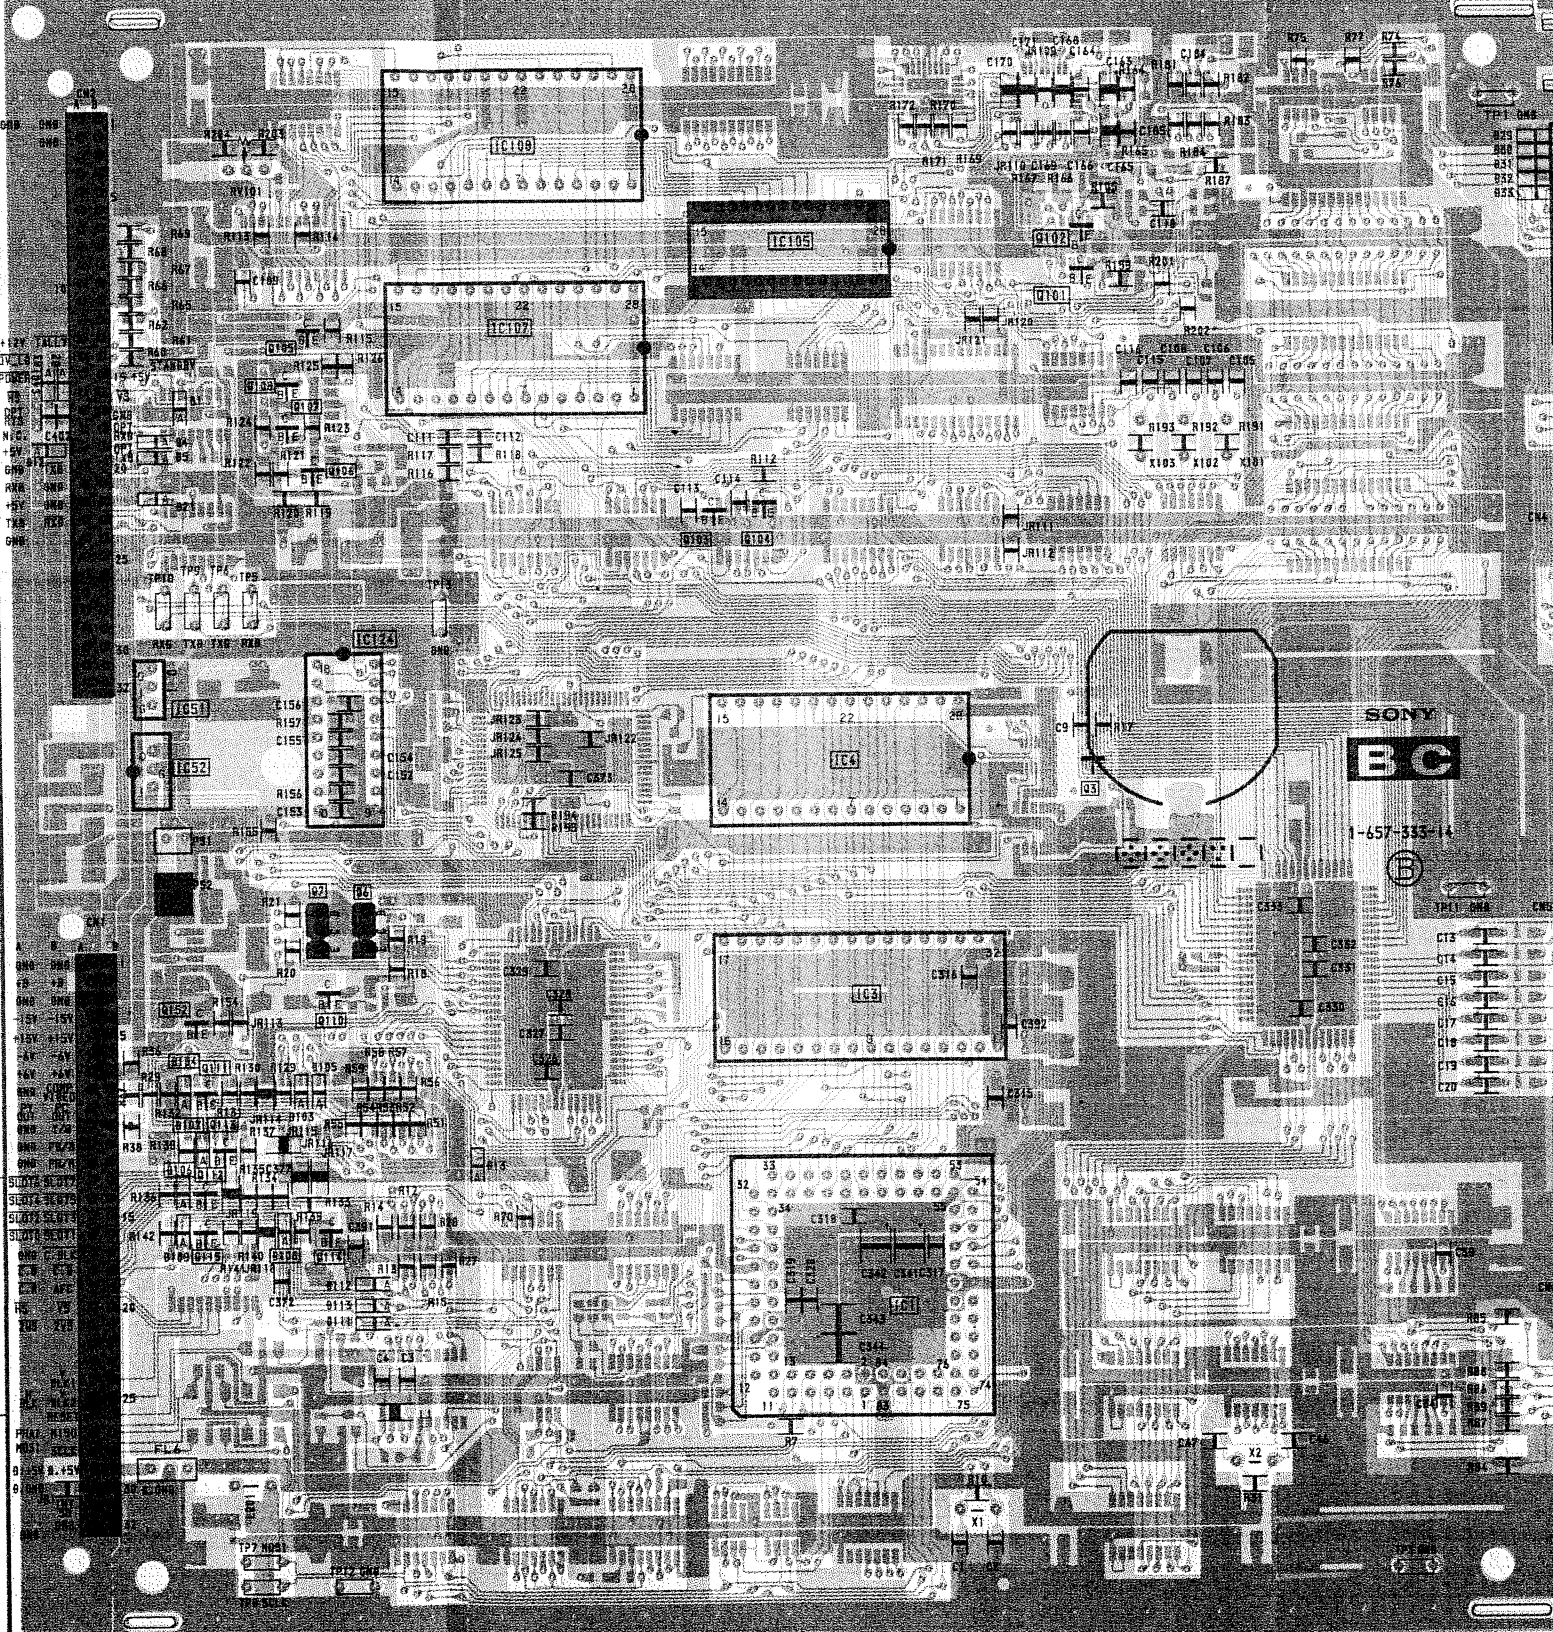


A
B
C
D
E
F
G
H
I

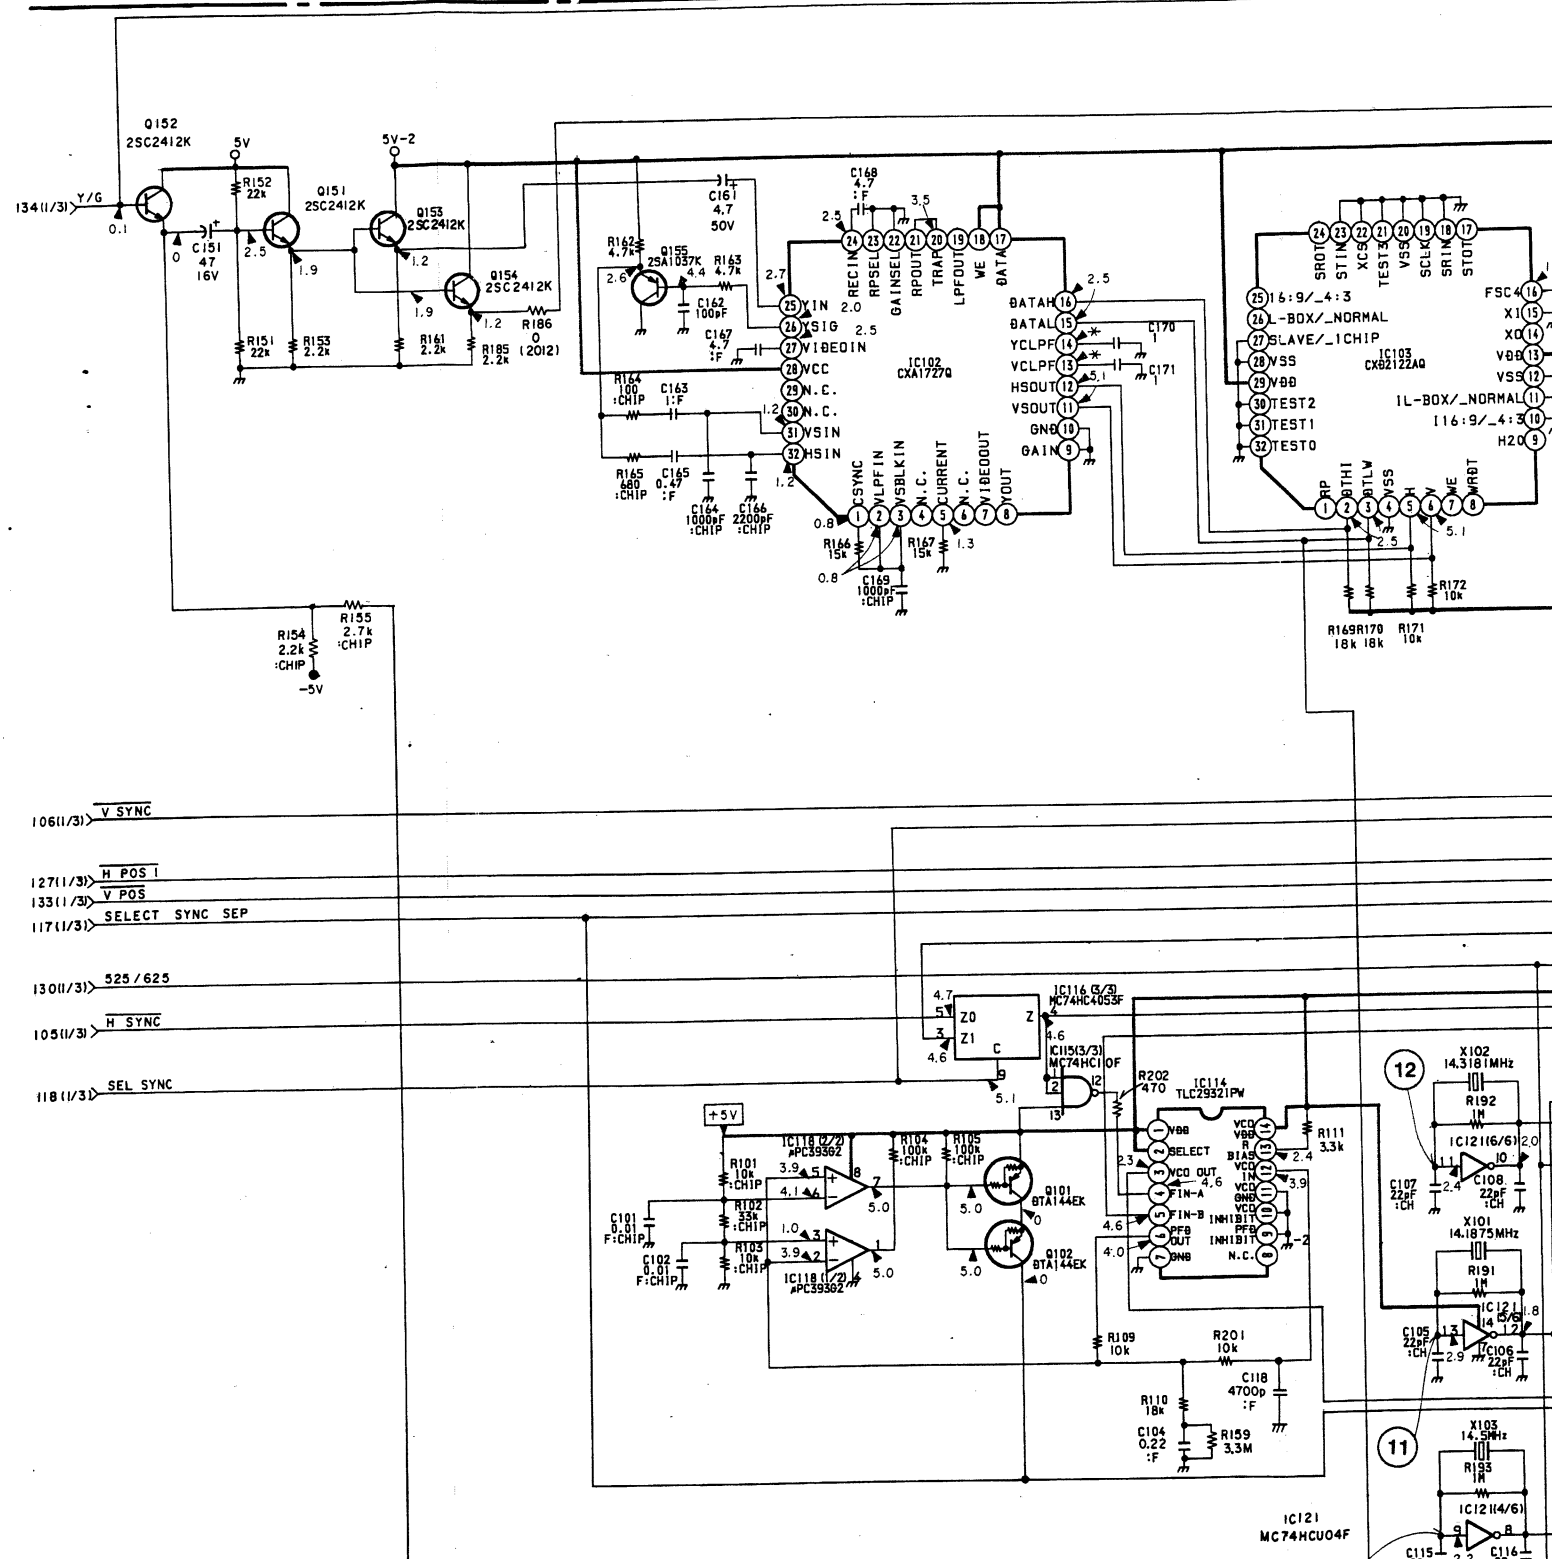

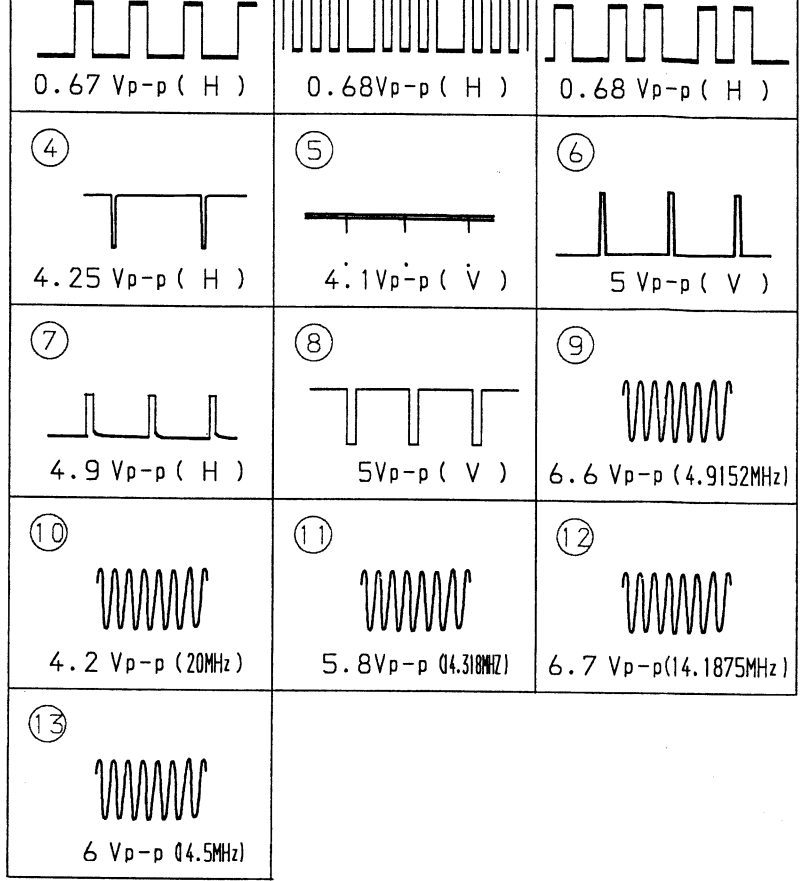
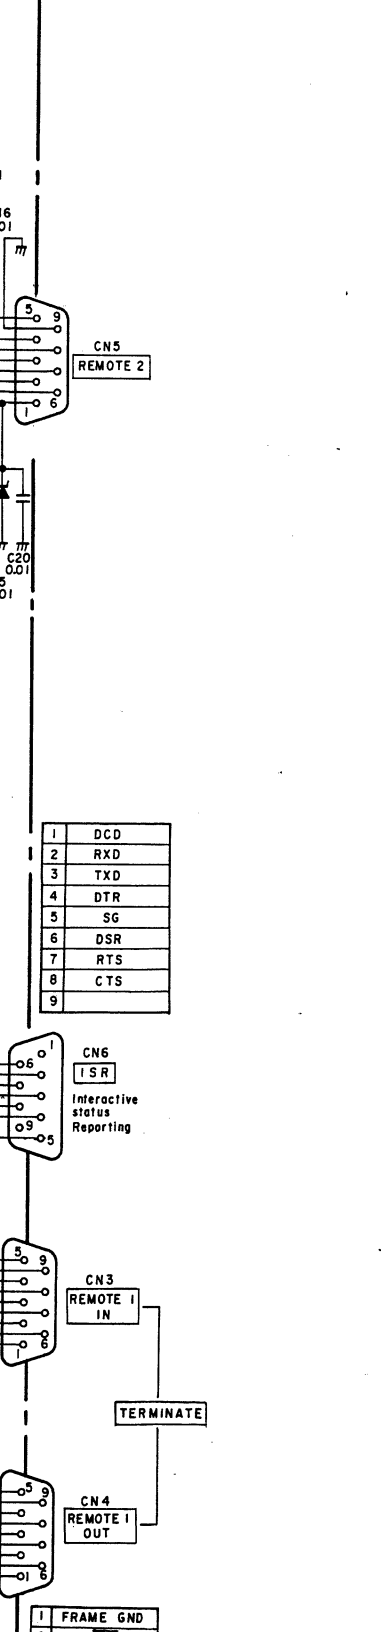



03	CA128F020F	PROGRAM	04	DTC144EK	+5V SW
04	CXK58257AP	SRAM	04	DTC144EK	+5V SW
05	CXD10950	PARALLEL I/O	05	DTC144EK	+12V SW
06	CXD10950	PARALLEL I/O	06	2SA1221	+5V DRI
07	UPD6453GT-101	CHARACTER GEN.	07	2SA1221	+12V DR
08	SN74HC05ANS	INVERTER	08	DTC144EK	MASTER/
09	TC7W32FU	SRAM ENABLE	09	2SD1834	TALLY D
10	MC74HC138AF	ADDRESS SELECTER	101	DTA144EK	LOCK DE
11	T082CPS	SAMPLE PULSE AMP.	102	DTA144EK	LOCK DE
12	TC74HC125AF	INTERNAL BUS DRIVER	103	DTA144EK	V SYNC
13	MC74HC138AF	ADDRESS SELECTER	104	DTA144EK	V SYNC
14	MC34051M	RS422 TRANSCEIVER	105	2SC2412K	BUFFER
15	MC74HC04F	INVERTER	106	2SA1037K	BUFFER
16	MC74HC123AF	SAMPLE PULSE GEN.	107	2SC2412K	BUFFER
17	TC74HC03AF	NAND(O. C.)	108	2SC2412K	BUFFER
19	TC74HC151AF	8 TO 1 SELECTER	109	2SA1037K	BUFFER
20	TC74HC151AF	8 TO 1 SELECTER	110	DTA144EK	INT. SI
21	TC74HC151AF	8 TO 1 SELECTER	111	2SC2412K	BUFFER
22	UPD71051GU-10	SERIAL CONTROL UNIT	112	2SC2412K	BUFFER
23	UPD71051GU-10	SERIAL CONTROL UNIT	113	2SC2412K	BUFFER
24	UPD71051GU-10	SERIAL CONTROL UNIT	114	DTA144EK	DU. SIG
25	LTC485CS8	RS485 TRANSCEIVER	115	2SC2412K	BUFFER
26	LTC485CS8	RS485 TRANSCEIVER	116	DTA144EK	525/625
27	MAX202CSE	RS232C TRANSCEIVER	151	2SC2412K	BUFFER
28	MAX202CSE	RS232C TRANSCEIVER	152	2SC2412K	BUFFER
30	SN74HC4040ANS	LINE COUNTER	153	2SC2412K	BUFFER
31	MC74HC04F	INVERTER	154	2SC2412K	BUFFER
32	SN74HC05ANS	INVERTER(O. C.)	155	2SA1037K	BUFFER
33	SN74HC05ANS	INVERTER(O. C.)			
34	MC74HC30F	8 INPUT NAND	D01	RD5. 6S-B	PROTECT
35	MC74HC541AF	OCTAL BUFFER	02	RD5. 6S-B	PROTECT
36	MAX202CSE	RS232C TRANSCEIVER	03	RD5. 6S-B	PROTECT
37	P012TZ5U	+12V REGULATOR	04	RD5. 6S-B	PROTECT
51	NJM79L05A	-5V REGULATOR	05	RD5. 6S-B	PROTECT
52	LM2940CT-5.0	+5V REGULATOR	12	RD6. 2ES-B1	PROTECT
101	BA7046F	SYNC SEPARATION	13	RD6. 2SB	SAD BLAN
102	CXA1727Q	ID-1 DETECTOR	29	RD6. 2SB	PROTECT
103	CXD2122AQ	ID-1 ENCODER	30	RD6. 2SB	PROTECT
105	CXD2343S	DOT CLOCK COUNTER	31	RD6. 2SB	PROTECT
106	MC74HC163AF	4 BIT COUNTER	32	RD6. 2SB	PROTECT
107	HN27C256-10	INTERNAL SIGNAL DATA	33	RD6. 2SB	PROTECT
108	HN27C256-10	INTERNAL SIGNAL DATA	34	RD6. 2SB	PROTECT
109	CXD1171M	D/A CONVERTER	35	RD6. 2SB	PROTECT
110	TC74HC166AF	P/S CONVERTER	36	RD6. 2SB	PROTECT
111	MC74HC4053F	ANALOG SW	37	RD6. 2SB	PROTECT
113	MC74HC74AF	SAD BLANKING	38	RD6. 2SB	PROTECT
114	TLC29321PW	PLL	39	RD6. 2SB	PROTECT
115	MC74HC10F	3 INPUT NAND	40	RD6. 2SB	PROTECT
116	MC74HC4053F	ANALOG SW	41	RD6. 2SB	PROTECT
117	MC74HC00AF	NAND	103	MAX110	INTERNAL
118	UPC39362	OP. AMP	104	MAX110	INTERNAL
119	MC74HC4053F	ANALOG SW	105	MAX110	INTERNAL
120	CXD1030	SYNC GENERATOR	106	MAX110	INTERNAL
121	MC74HC04F	INVERTER	107	MAX110	INTERNAL
122	TC74HC04AF	INVERTER	108	MAX110	D. U. SIG
123	MC74HC74AF	D FLIP FLOP	109	MAX110	D. U. SIG
124	Z8622812PSC	CLOSED CAPTION DISPLAY	111	MAX110	SAD RCH
125	SN74HC05ANS	INVERTER(O. C.)	112	MAX110	SAD GCH
126	CXD1132Q	VITC READER	113	MAX110	SAD RCH

IC		Q702 F-3
IC101 E-4		Q2001 D-1
IC301 F-7		Q2002 F-2
IC401 F-4		Q2003 E-12
IC501 E-2		Q5000 E-12
IC601 E-7		Q7001 B-13
IC701 G-3		Q7002 E-2
IC801 G-5		Q7003 A-12
IC1001 B-2		
IC1002 B-2		DIODE
IC1003 B-2		
IC1004 C-3		D1 E-6
IC2001 D-1		D2 D-7
IC2002 D-13		D25 F-2
IC2003 E-2		D55 B-4
IC2007 F-2		D61 D-4
IC2011 F-13		D101 C-4
IC2012 D-12		D102 C-4
IC2015 E-2		D154 B-7
IC2016 D-12		D155 B-7
IC2017 C-12		D301 F-6
IC2019 E-13		D302 F-6
IC2701 D-13		D401 G-4
IC2702 D-12		D402 G-4
IC2703 D-3		D502 E-12
IC2704 D-2		D503 E-12
IC2705 D-2		D505 E-3
IC7001 A-12		D531 D-4
IC7002 A-2		D532 D-4
IC7003 A-3		D551 E-2
IC7004 B-2		D606 E-6
IC7005 F-12		D607 D-7
		D701 G-3
		D702 G-2
TRANSISTOR		D5001 E-12
		D5002 B-4
		D7001 A-13
		D7002 A-3
		TEST POINT
Q1 D-6		TP1 G-12
Q2 C-7		TP3 B-13
Q25 E-2		TP4 B-12
Q26 E-2		TP5 B-12
Q27 F-2		TP6 C-13
Q28 F-2		TP7 E-6
Q51 B-4		TP8 C-6
Q52 D-4		TP9 C-12
Q54 F-2		TP2001 E-13
Q55 F-2		TP2005 F-13
Q56 F-2		TP2007 C-12
Q57 G-2		TP2008 E-13
Q58 D-2		TP2010 C-12
Q101 E-4		TP2011 F-5
Q102 E-4		TP2012 F-5
Q103 E-4		TP2013 E-5
Q104 F-5		TP2014 F-4
Q105 F-5		TP2015 F-6
Q151 B-6		TP2016 G-13
Q152 A-6		TP2017 F-13
Q155 A-6		TP2018 F-5
Q156 B-7		TP2023 F-14
Q157 B-7		TP2024 A-1
Q158 B-7		TP2025 D-12
Q159 A-7		
Q501 F-3		
Q502 E-12		
Q505 E-13		
Q507 E-12		
Q701 F-3		

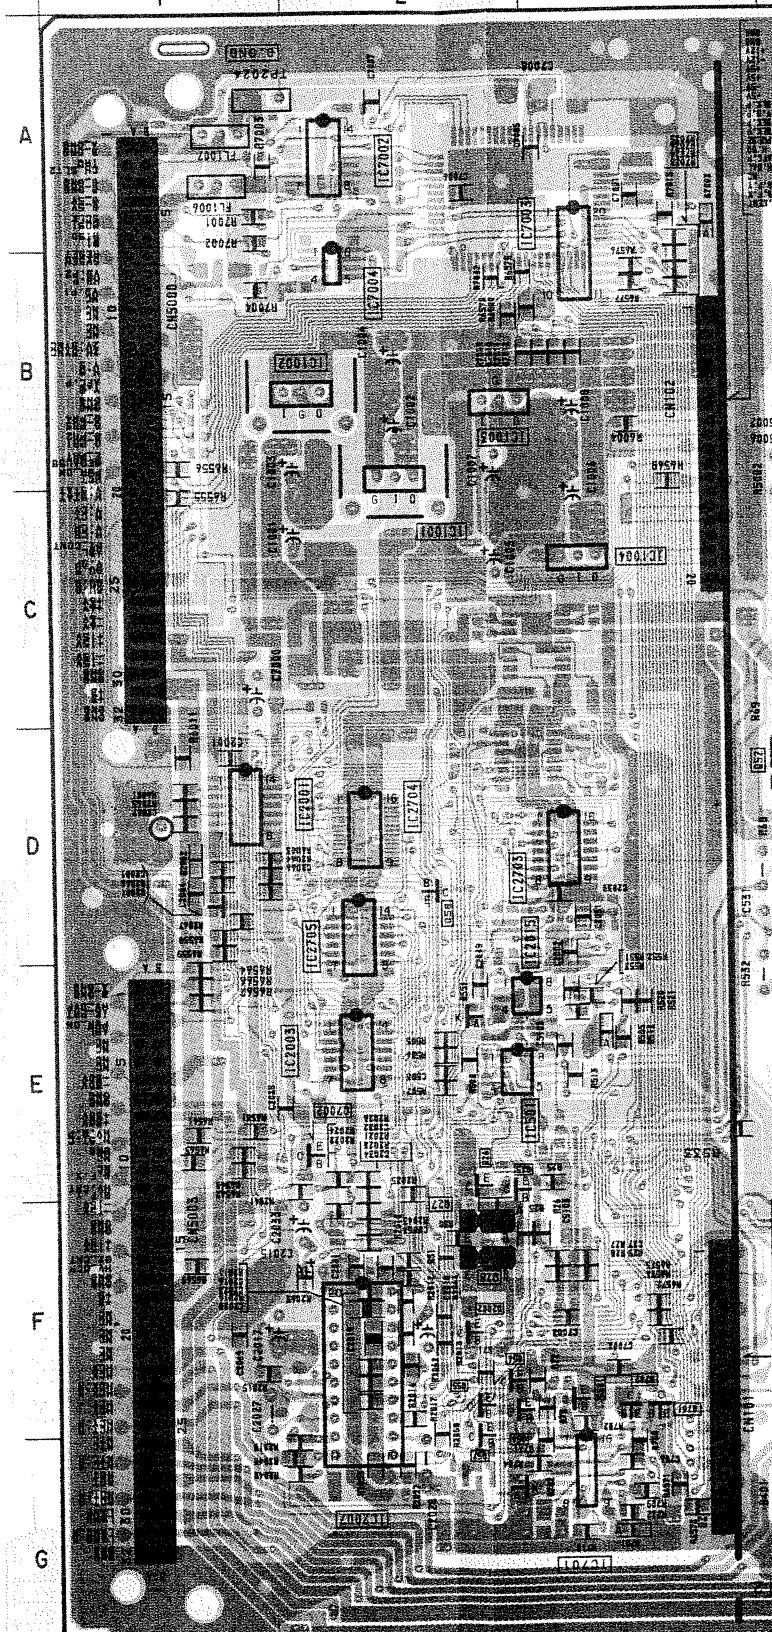

NOTE:

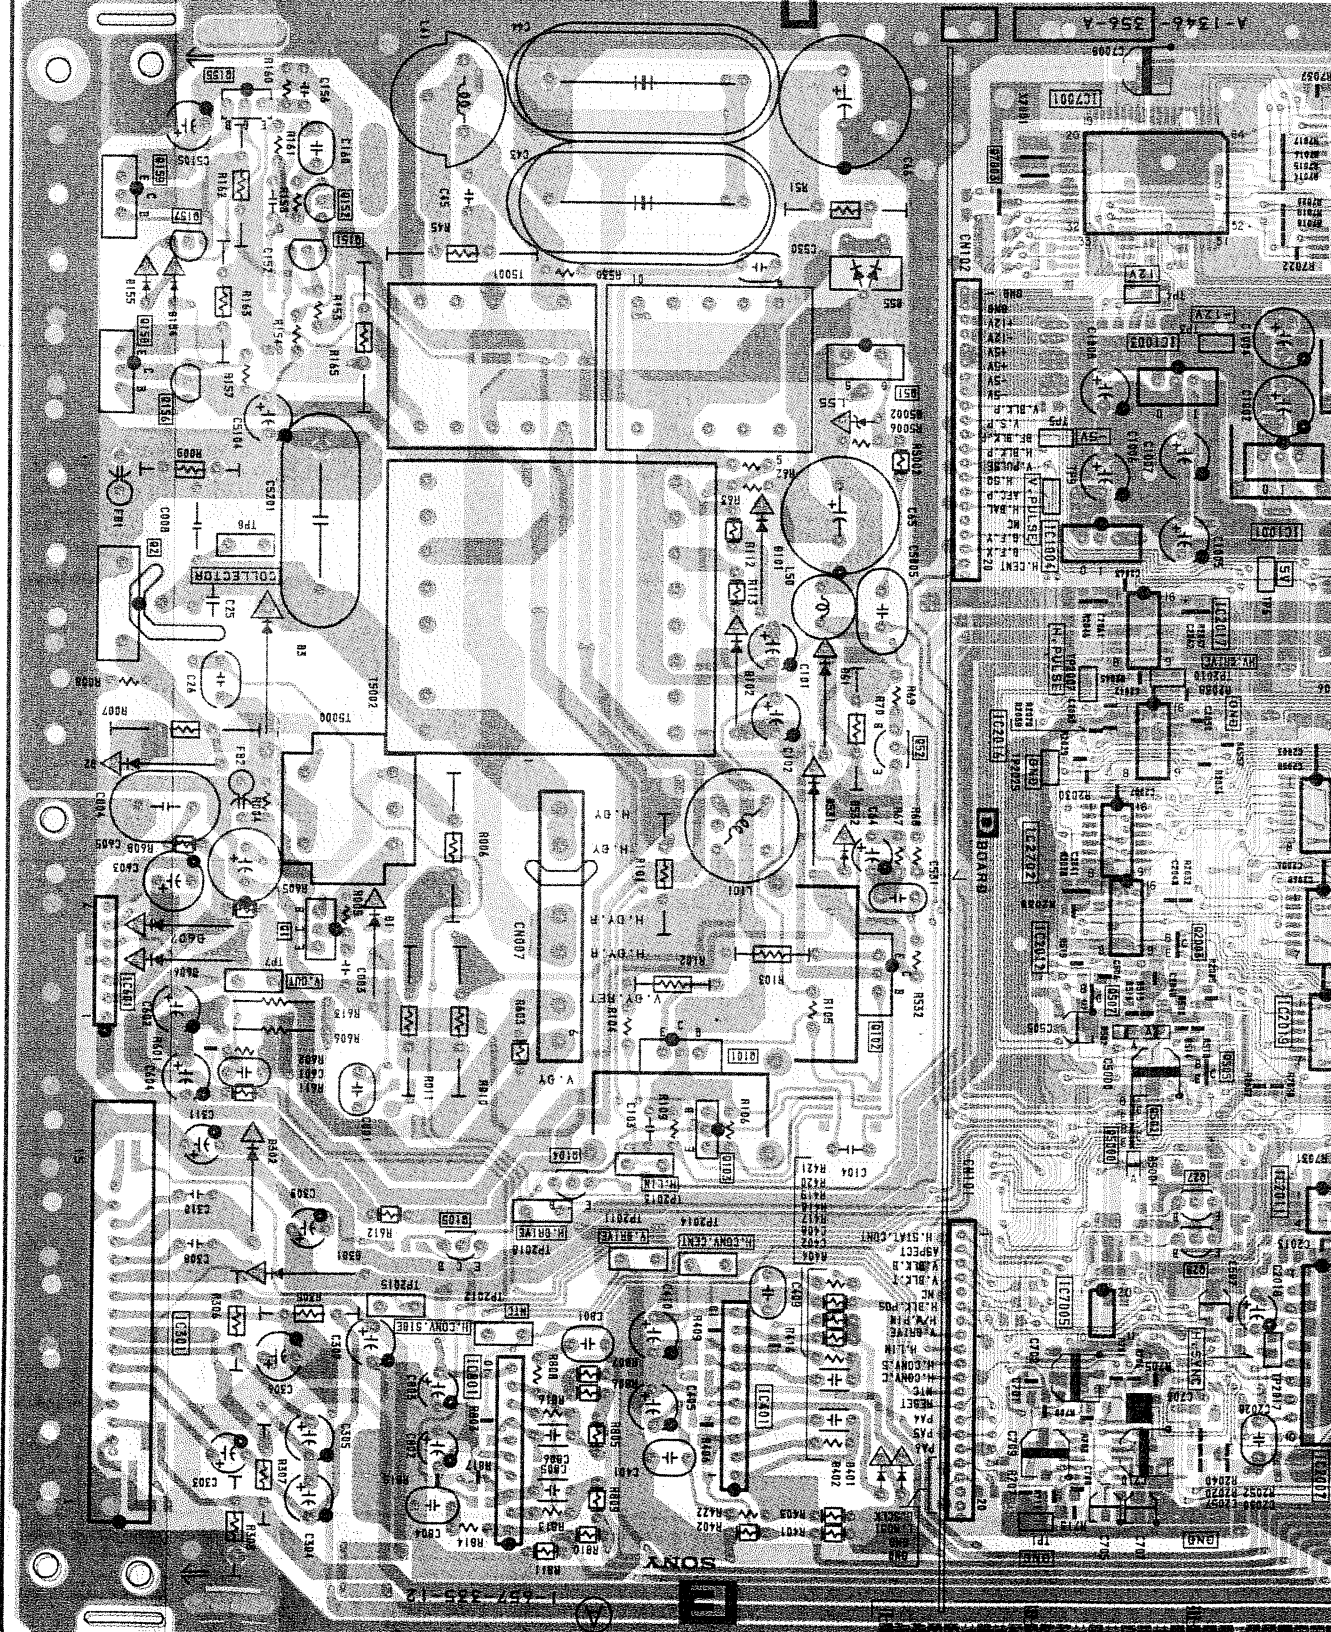
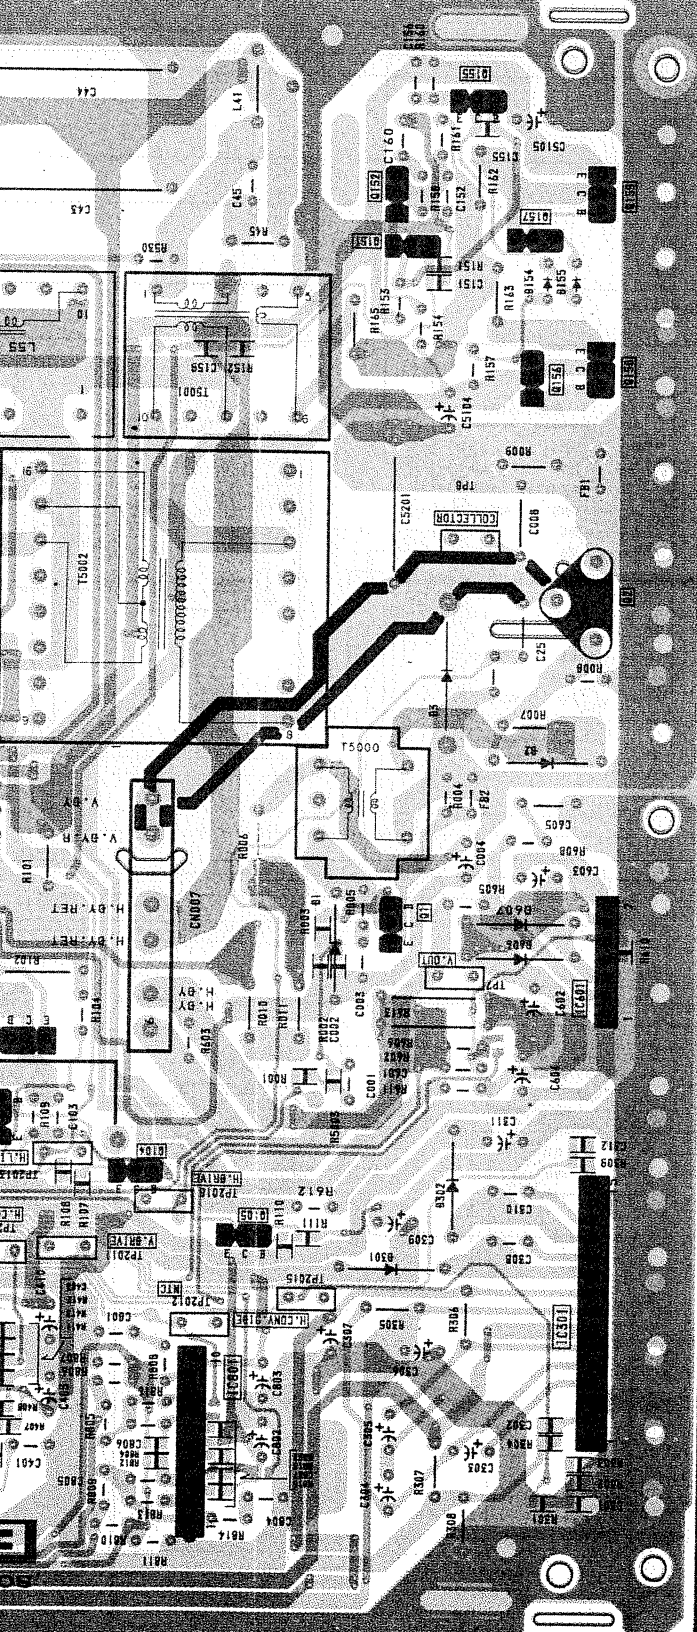


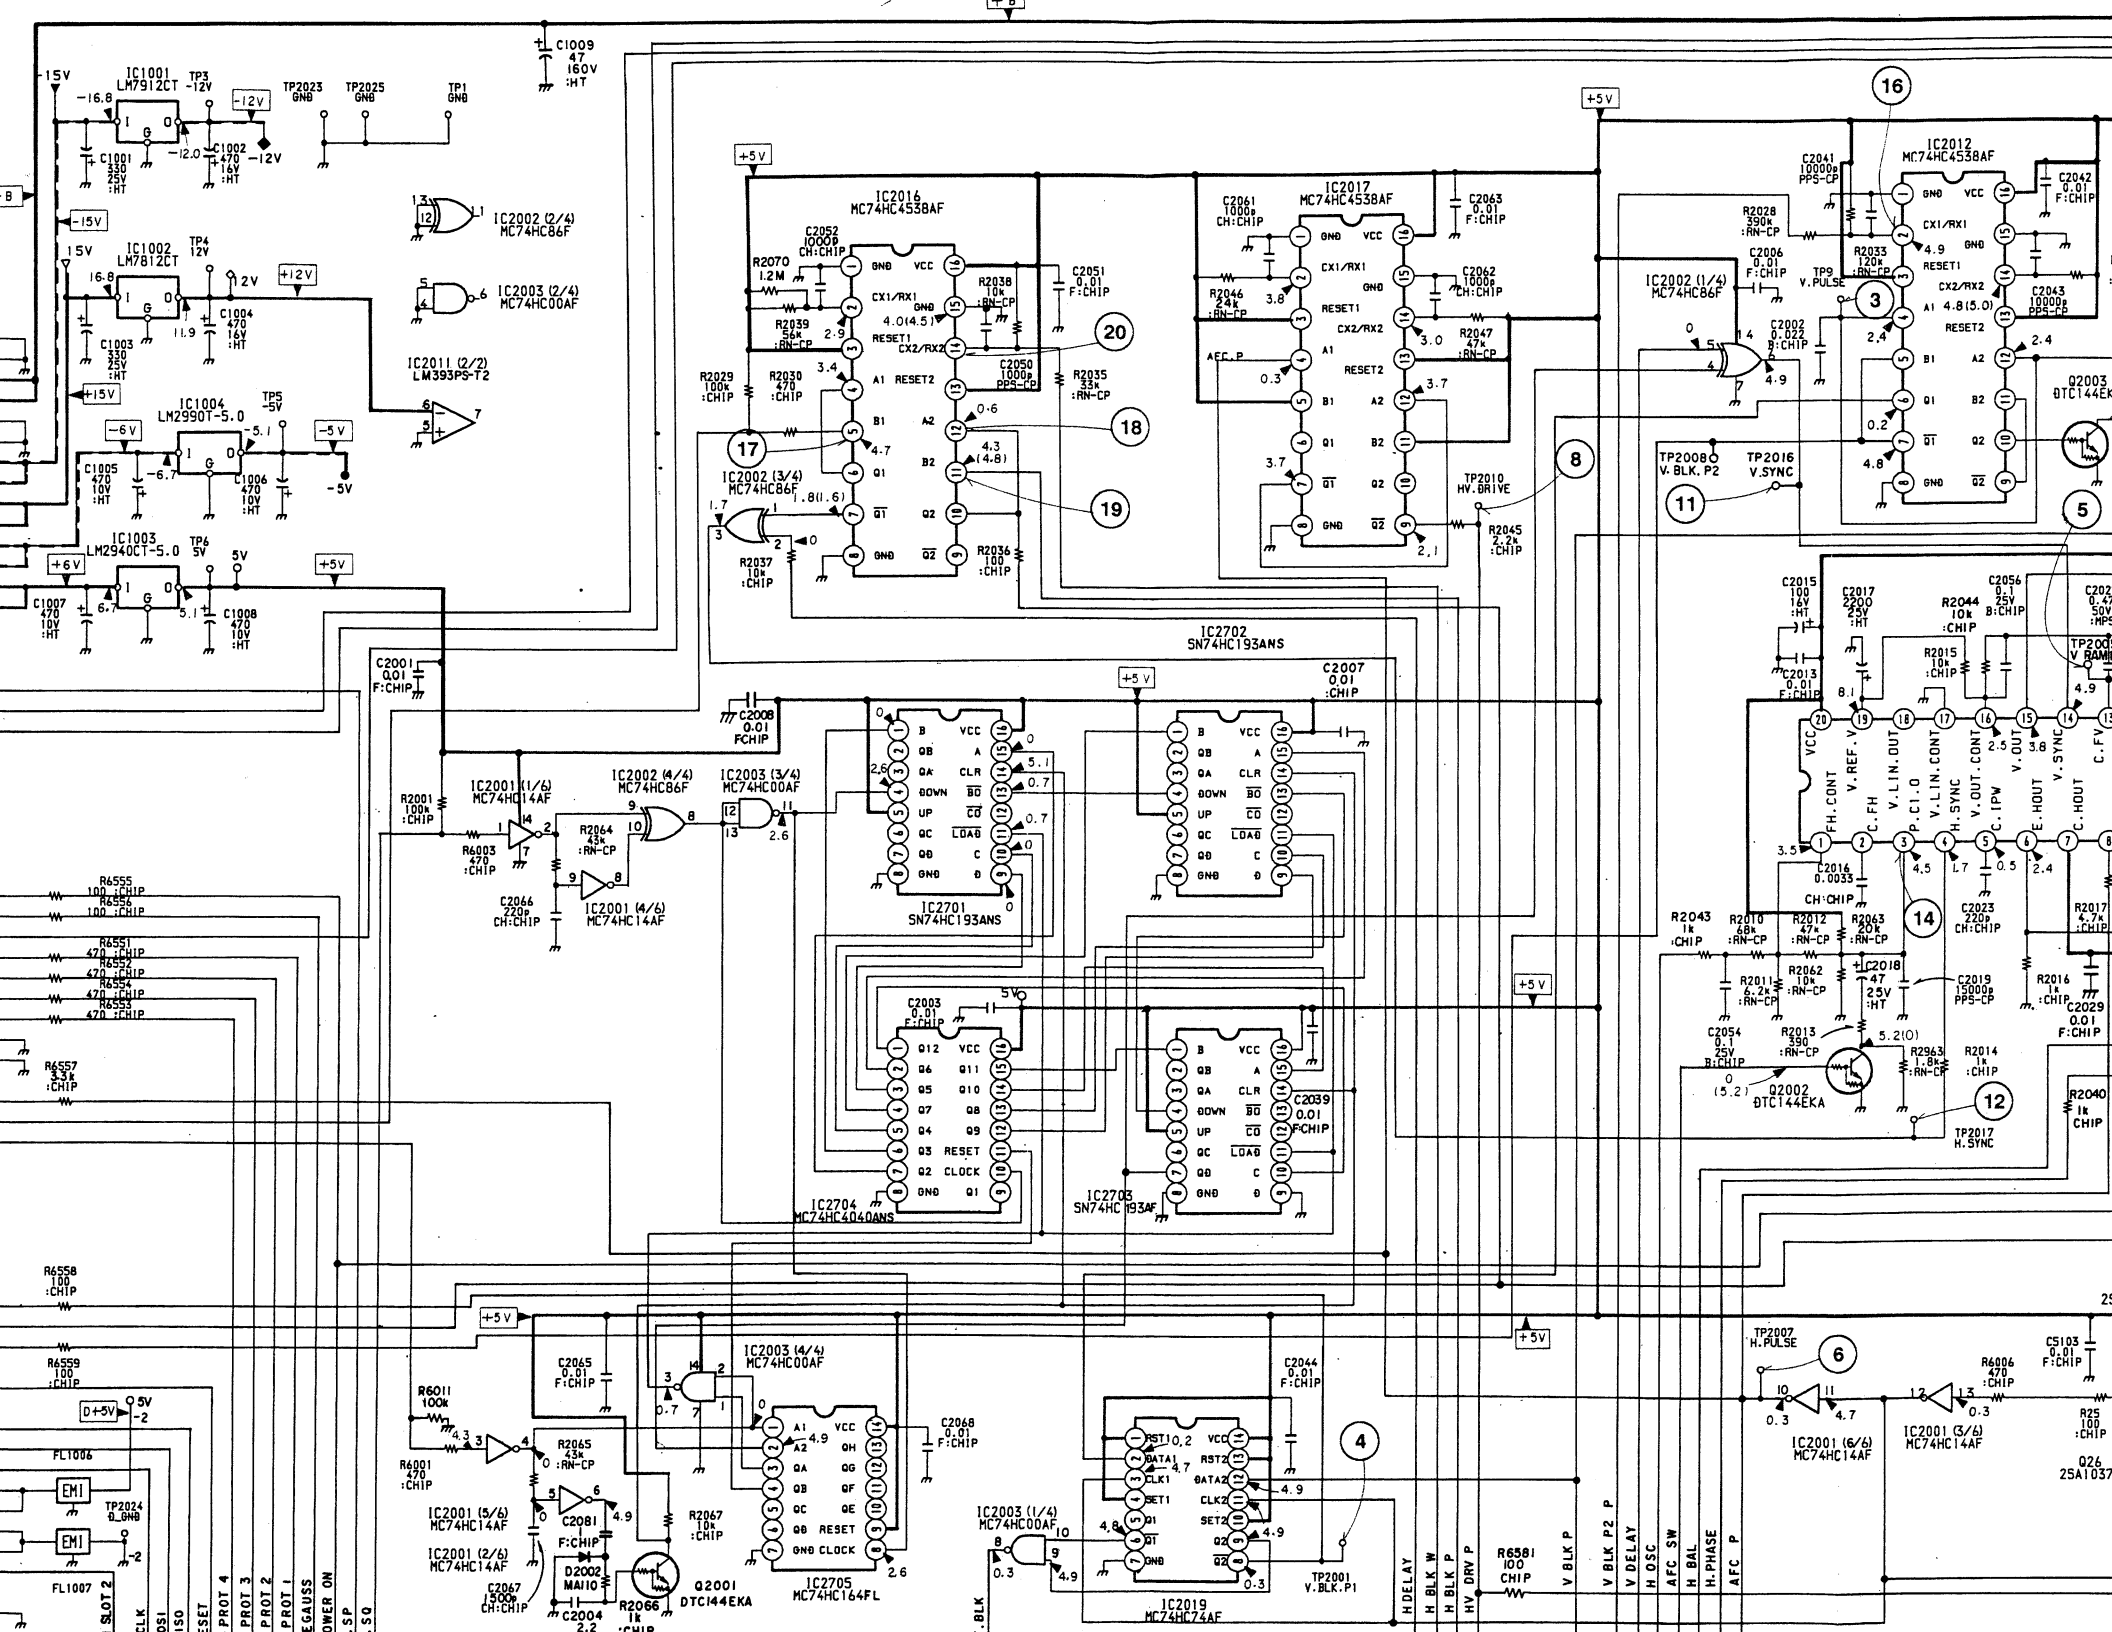







A
B
C
D
E
F
G
H


E (2/2) (SYSTEM CONTROL, HV OUT)

TO D BOARD
CN102

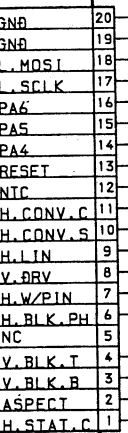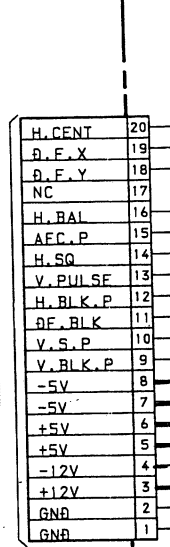



TO D BOARD
CN101

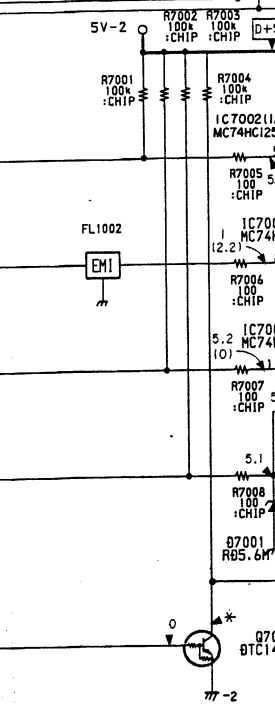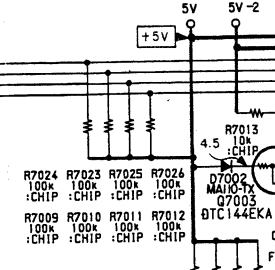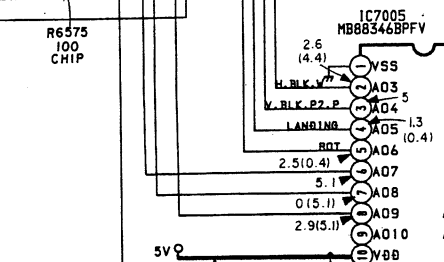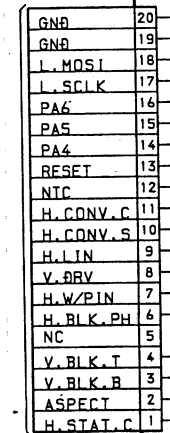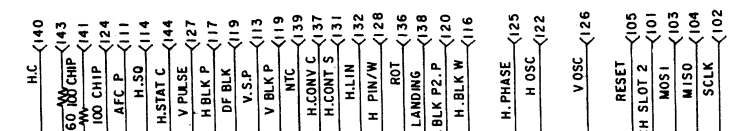


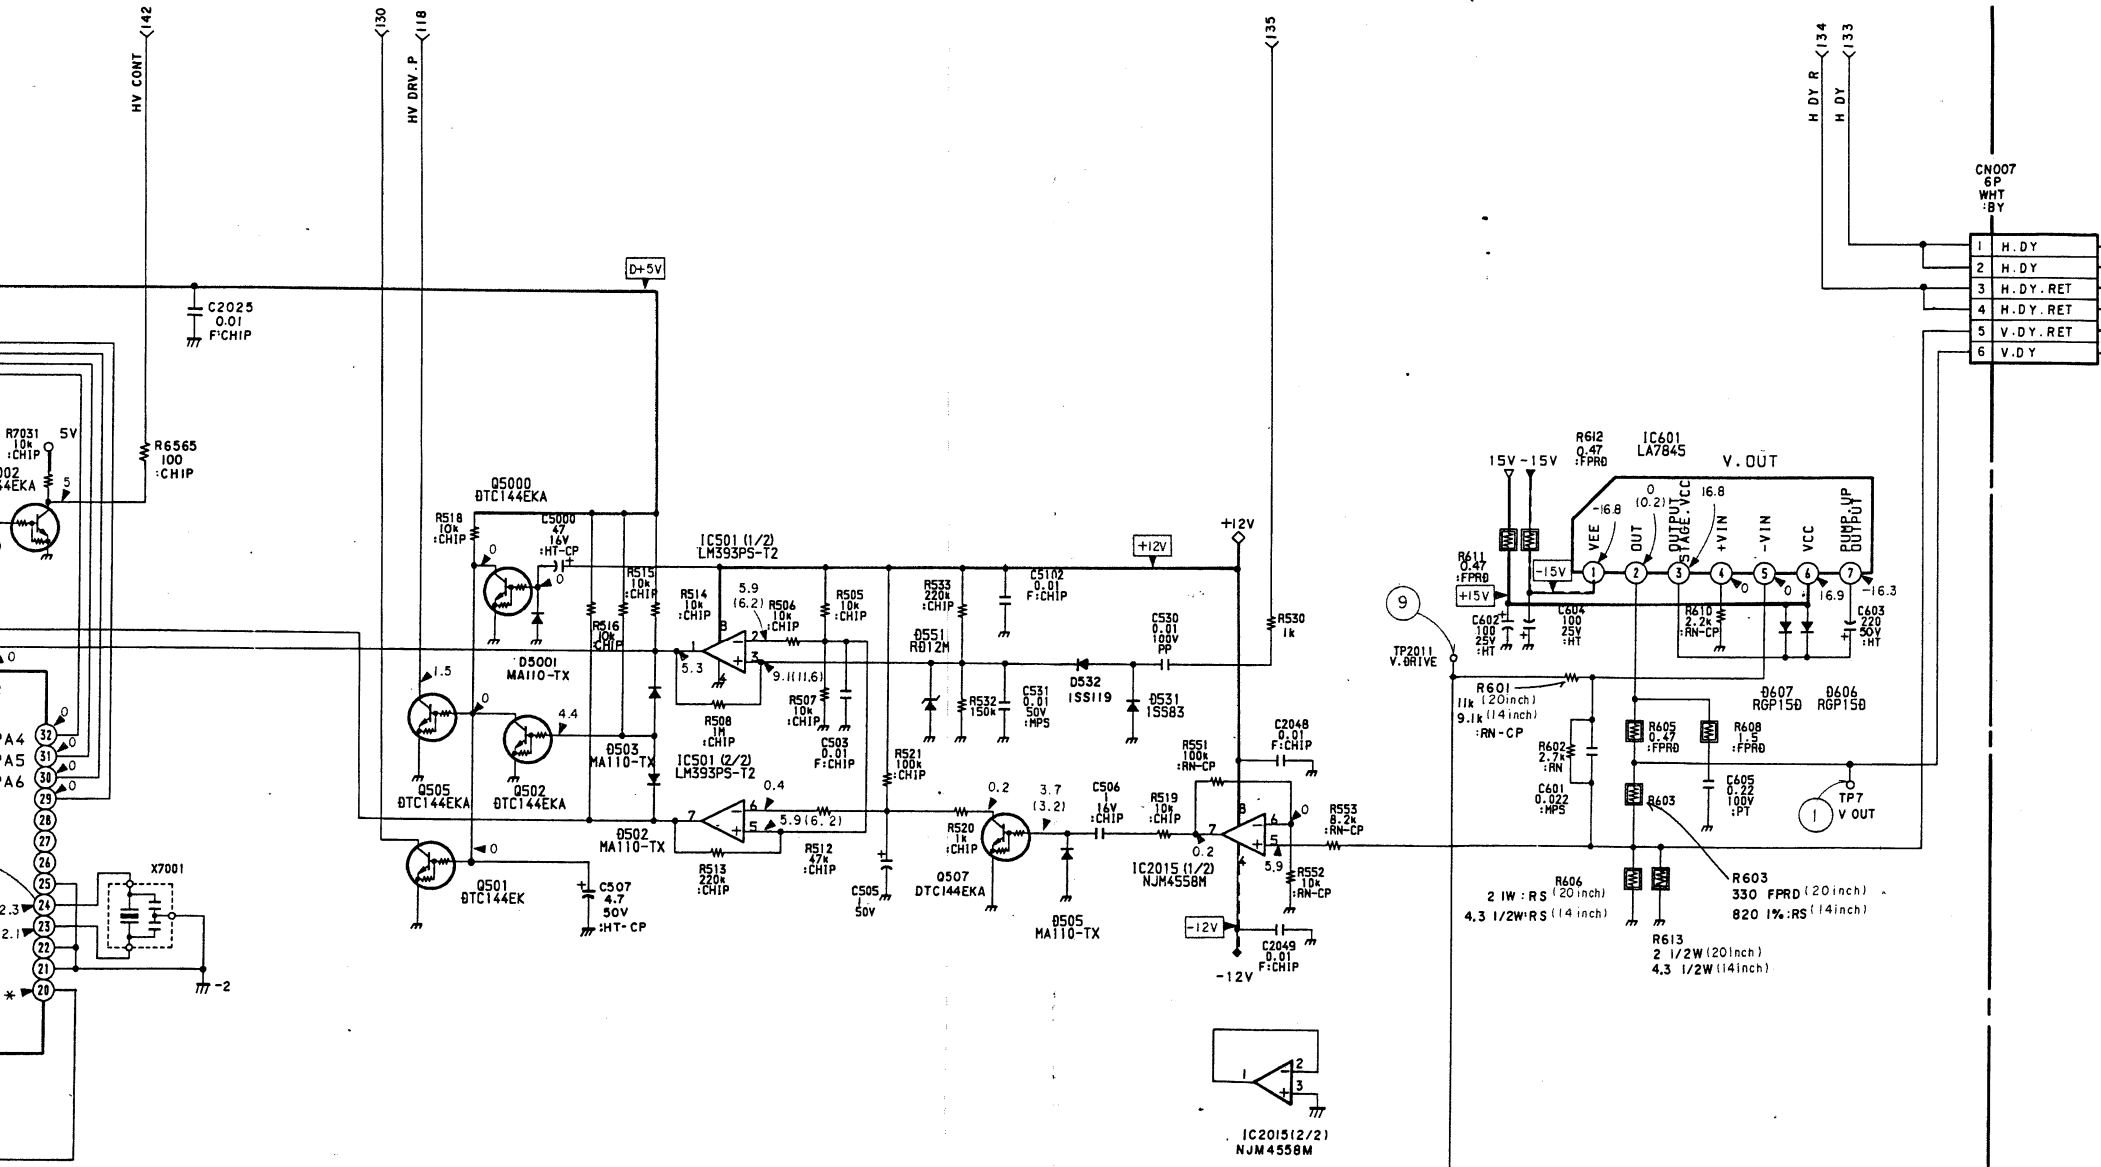

CN007
6P
WHT
BY

1	H.DY
2	H.DY
3	H.DY.RET
4	H.DY.RET
5	V.DY.RET
6	V.DY

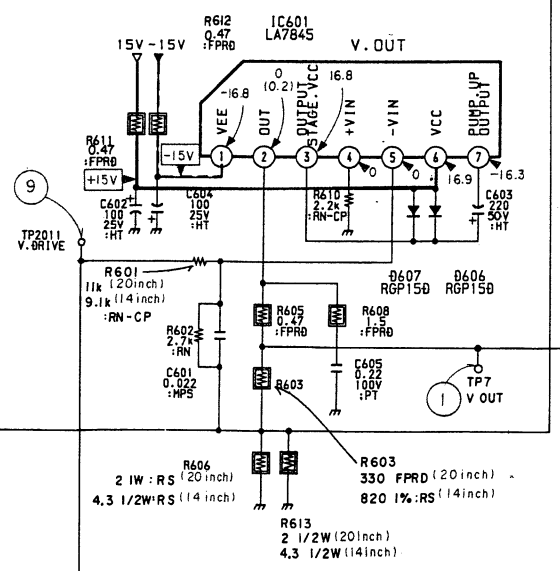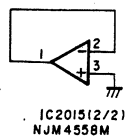

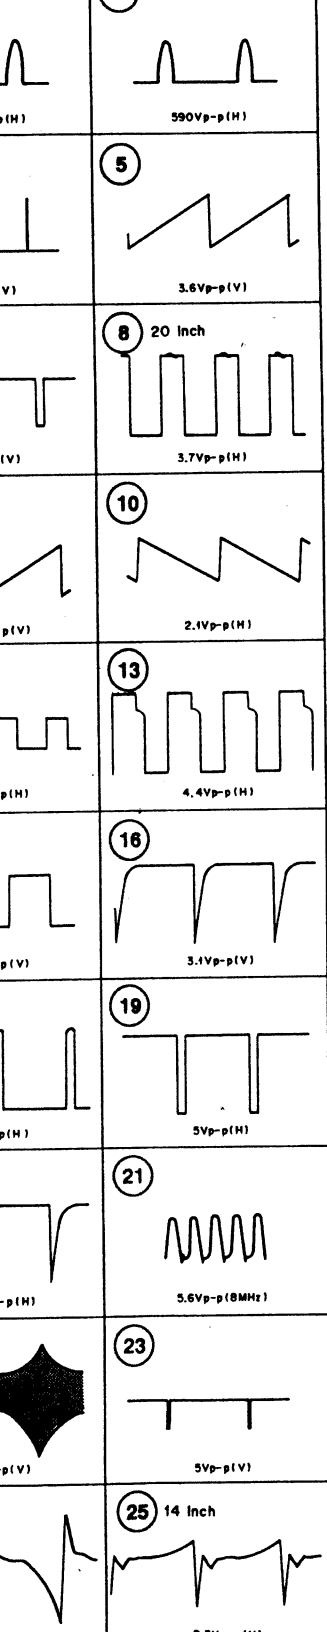

301	STK390-T20	H CONVERGENCE	132	Z5A835A	CLAMP
401	LA6510	ROTATION, H. CONV. CENTER	155	2SC3209LK	LEVEL SW
501	LM393PS	H/V STOP COMPARATOR	156	2SC1890A	H LIN AMP
601	LA7845	V OUT	157	2SA893A	H LIN AMP
701	FA5301N-TE1	PWM CONTROL	158	2SD1137	H LIN OUT
801	LA6510	LANDING, NTC	159	2SD1137	H LIN OUT
1001	LM7912CT	-12V REG	501	DTC144EKA	DEF STOP PROT DRIVE
1002	LM7812CT	+12V REG	502	DTC144EKA	INVERTER
1003	LM2940CT-5.0	-5V REG	505	DTC144EKA	DEF STOP PROTECTOR
1004	LM2990T-5.0	+5V REG	507	DTC144EKA	DISCHARGE SW
2001	MC74HC14AF	INVERTER	701	2SC2412K-QR	PWM DRIVE
2002	MC74HC86F	V DELAY SW	702	2SA1037K-QR	PWM DRIVE
2003	MC74HC00AF	DF PULSE GEN	2001	DTC144EKA	INVERTER
2007	TDA9102C	V OSC, H OSC, AFC	2002	DTC144EKA	AFC SW
2011	LM393PS	V PULSE GEN	2003	DTC144EKA	V BLK PULSE SW
2012	MC74HC4538AF	V BLK P2 GEN	5000	DTC144EKA	POWER ON RESET
2015	NJM4558M	V STOP PROT	7001	DTC144EKA	RESET SW
2016	MC74HC4538AF	H BLK GEN, DELAY	7002	DTC144EKA	INVERTER
2017	MC74HC4538AF	H/V DRIVE PULSE GEN	7003	DTC144EKA	A5V SW
2019	MC74HC74AF	V BLK PULSE GEN			
2701	SN74HC193ANS	V COUNTER	D1	V19E-T52	PROTECT
2702	SN74HC193ANS	V COUNTER	2	RH-1AV1	DAMPER
2703	SN74HC193ANS	V COUNTER	25	MA110-TX	DAMPER
2704	MC74HC4040AF	V COUNTER	55	DBLCA20R-F	DAMPER
2705	MC74HC164F	V. START	61	V19C-T52	SWITCH
7001	MB89613PF-SUB02	SUB MICROCOMPUTER	101	V19C-T52	H CENT
7002	MC74HC125AF	BUFFER	102	V19C-T52	H CENT
7003	MC74HC244AF	BUFFER	154	1SS119	PROTECTOR
7004	X25040S-C7000	EEP ROM	155	1SS119	PROTECTOR
7005	MB88346BPFV-EF	12CH DAC	301	V19E-T52	VCC SW
			302	V19E-T52	VEE SW
01	2SD1138-C	H DRIVE	401	1SS119	SWITCH
2	2SC4927-01	H OUT	402	1SS119	SWITCH
25	2SC2412K-QR	AFC PULSE	502	MA110-TX	SWITCH
26	2SA1037K-QR	AFC PULSE	503	MA110-TX	SWITCH
27	2SC2878A	AFC PULSE	505	MA110-TX	PROTECTOR
28	2SC2878A	AFC PULSE	531	1SS83TA	PROTECTOR
51	IRF19630GS-LF	PWM	532	1SS119	PROTECTOR
52	2SA1208S	H WIDTH AMP	551	RD12M-B1	PROTECTOR
54	DTA144EKA	LATCH	606	RG15DPKG23	PUMP UP
55	DTC144EKA	H WIDTH SW	607	RG15DPKG23	PUMP UP
56	DTA144EKA	LATCH	701	MA110-TX	SWITCH
57	DTC144EKA	DRIVE	702	RD3.3M-B1	PROTECTOR
58	DTC144EKA	POWER RECET	2002	MA110-TX	PROTECTOR
101	2SD1137	H CENT AMP	5001	MA110-TX	PROTECTOR
102	2SB860	H CENT AMP	5002	RD9.1ES-B2	PROTECTOR
103	2SA1175-HFE	BIAS	7001	RD5.6M-B	DC LEVEL SHIFT
104	2SC2362KG-AA	H CENT AMP	7002	MA110-TX	SWITCH
105	2SC2362KG-AA	BIAS			

IC101	B-6
IC102	B-5
IC103	A-6
IC105	B-5
IC106	A-7
IC108	B-1
IC111	B-4
IC112	B-2
IC113	B-7
IC114	C-3

IC115	B-5
IC118	C-4
IC119	B-2
IC120	B-4
IC203	B-1
IC301	C-3


TRANSISTOR

Q101	B-2
Q102	B-3
Q601	B-3
Q602	B-3
Q603	B-4
Q604	B-3


DIODE

TP101	C-5
TP102	C-5
TP105	C-6
TP107	B-4
TP109	C-3
TP110	B-3
TP111	B-2
TP112	C-4
TP113	C-1
TP114	C-7

TP115	C-3
TP116	C-1
TP117	C-7

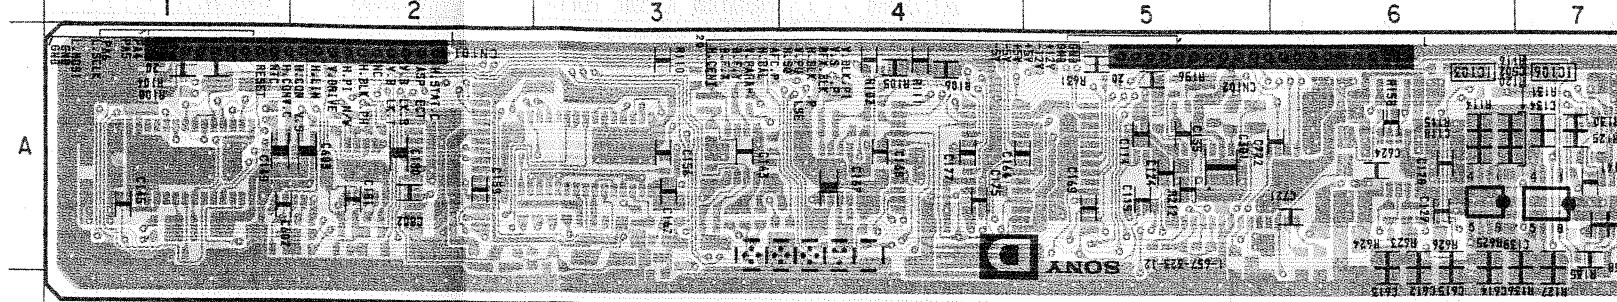



— D BOARD — <Component Side>

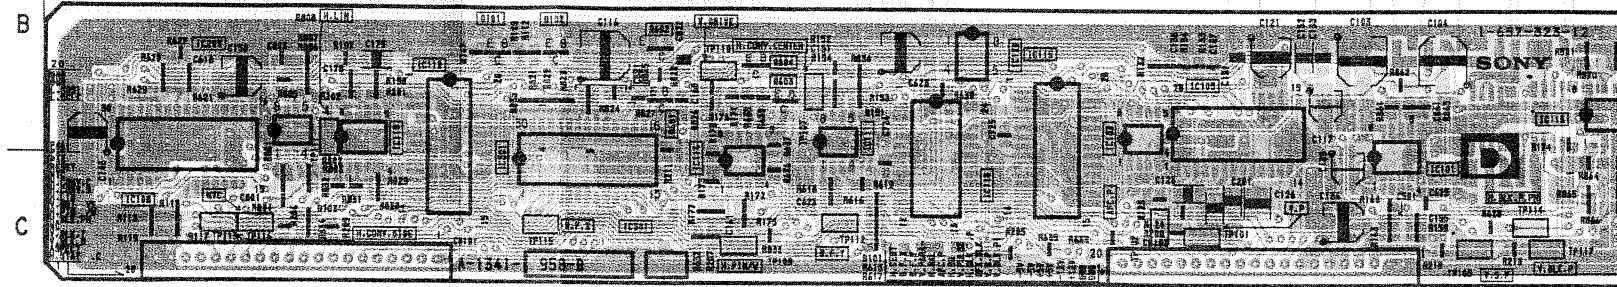

- [Light Gray Box] : Pattern from the side which
- [Dark Gray Box] : Pattern of the rear side.


D (H.DEFLECTION)

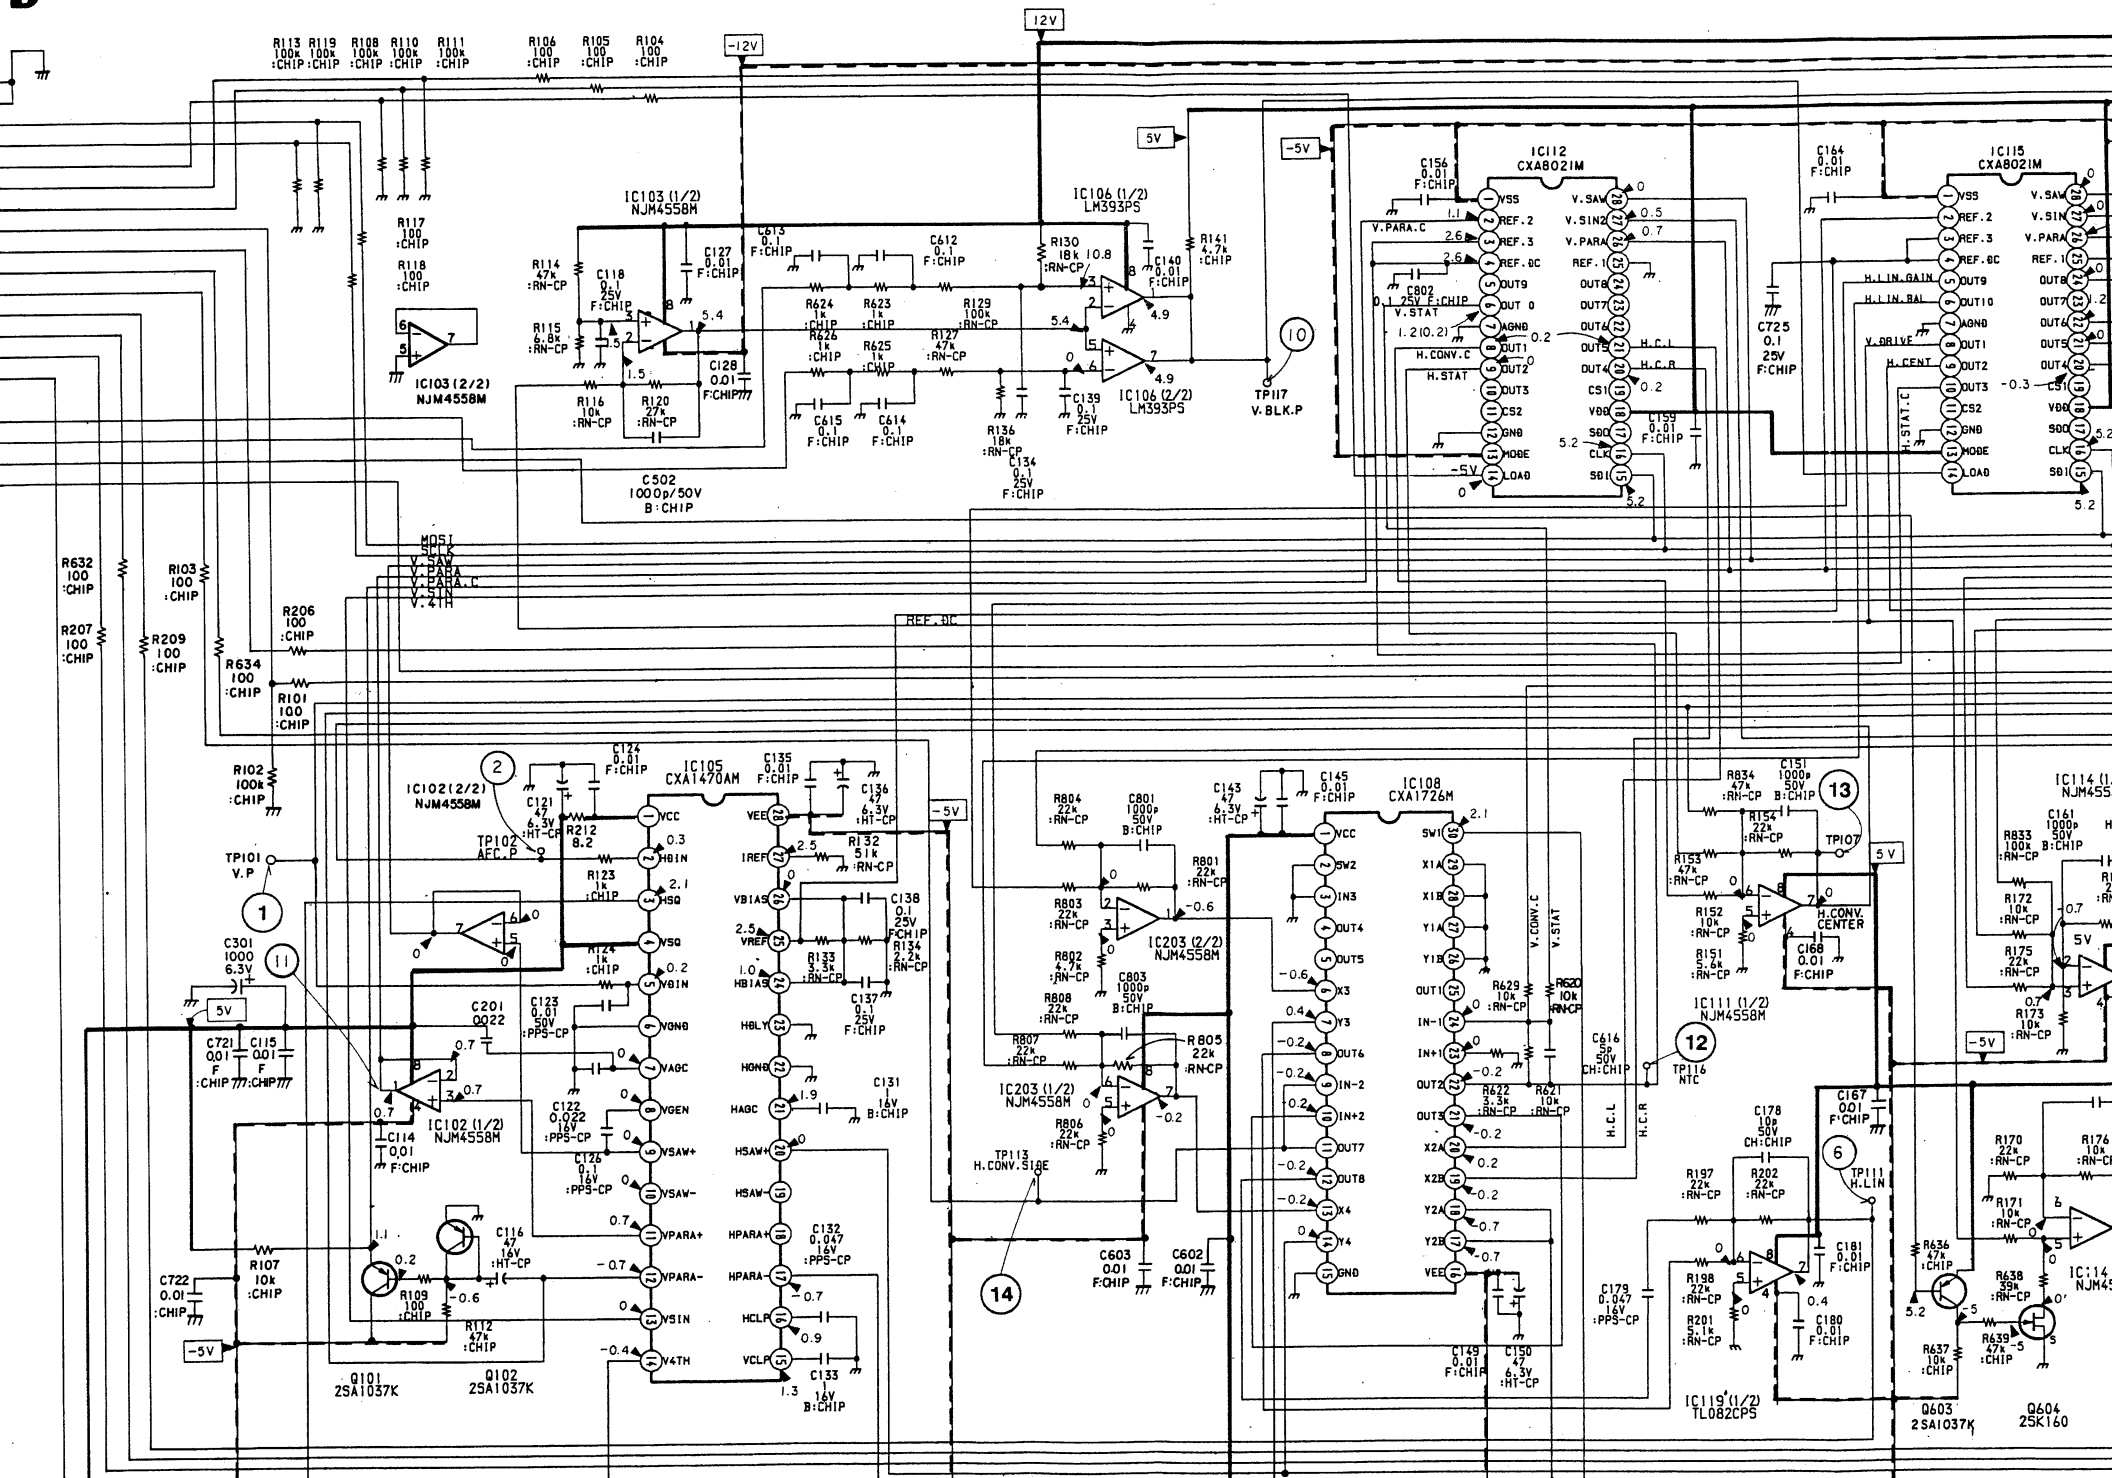

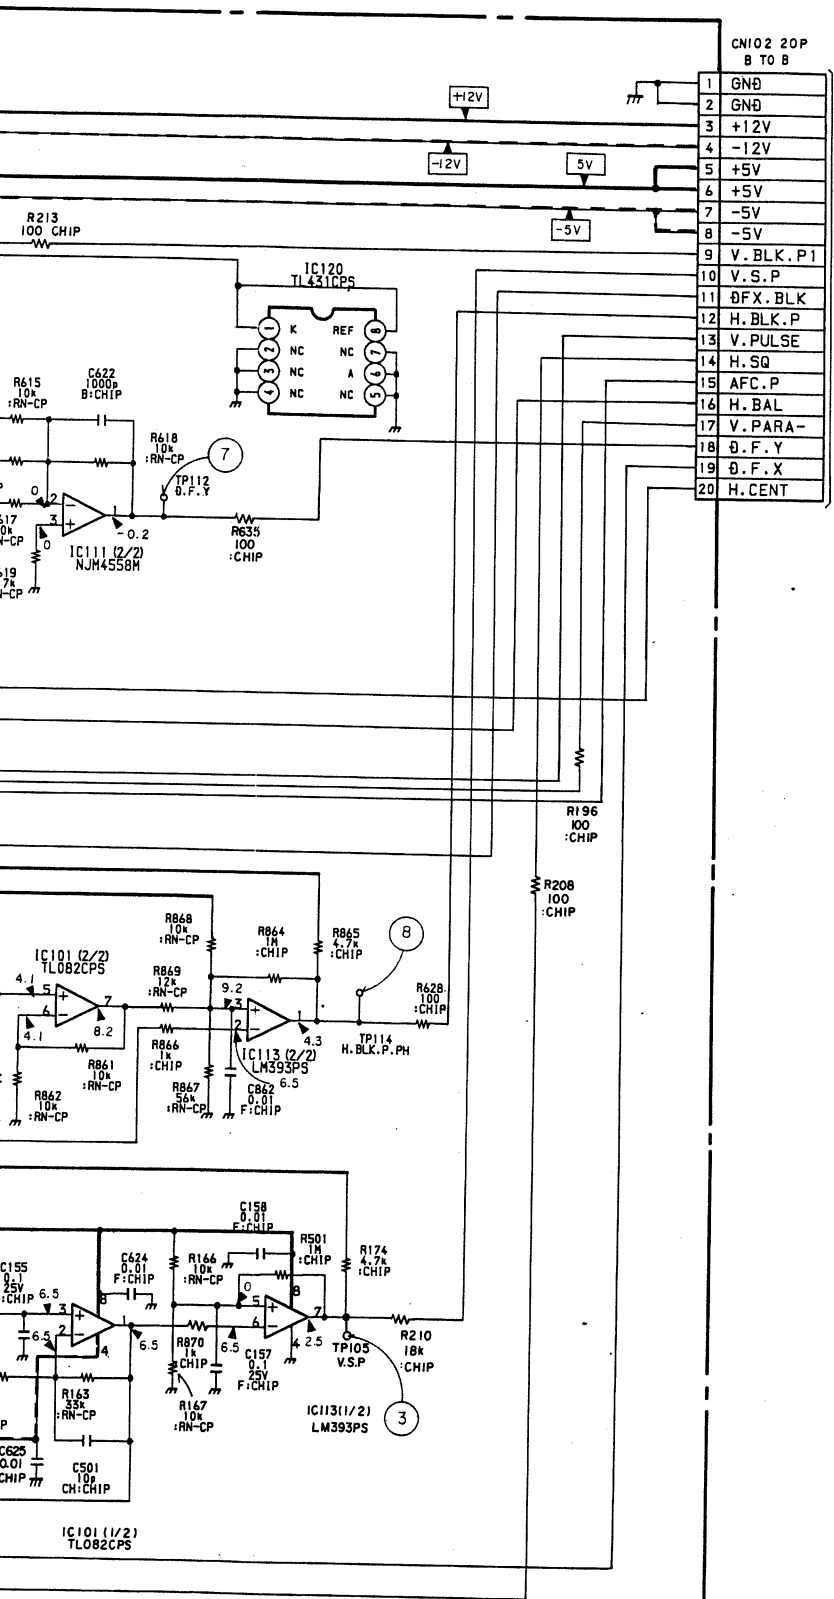

TO E BOARD
CN102

- | | |
|----|------------|
| 1 | GND |
| 2 | GND |
| 3 | +12V |
| 4 | -12V |
| 5 | +5V |
| 6 | +5V |
| 7 | -5V |
| 8 | -5V |
| 9 | V. BLK. P1 |
| 10 | V. S. P |
| 11 | DFX. BLK |
| 12 | H. BLK. P |
| 13 | V. PULSE |
| 14 | H. SQ |
| 15 | AFC. P |
| 16 | H. BAL |
| 17 | V. PARA- |
| 18 | D. F. Y |
| 19 | D. F. X |
| 20 | H. CENT |

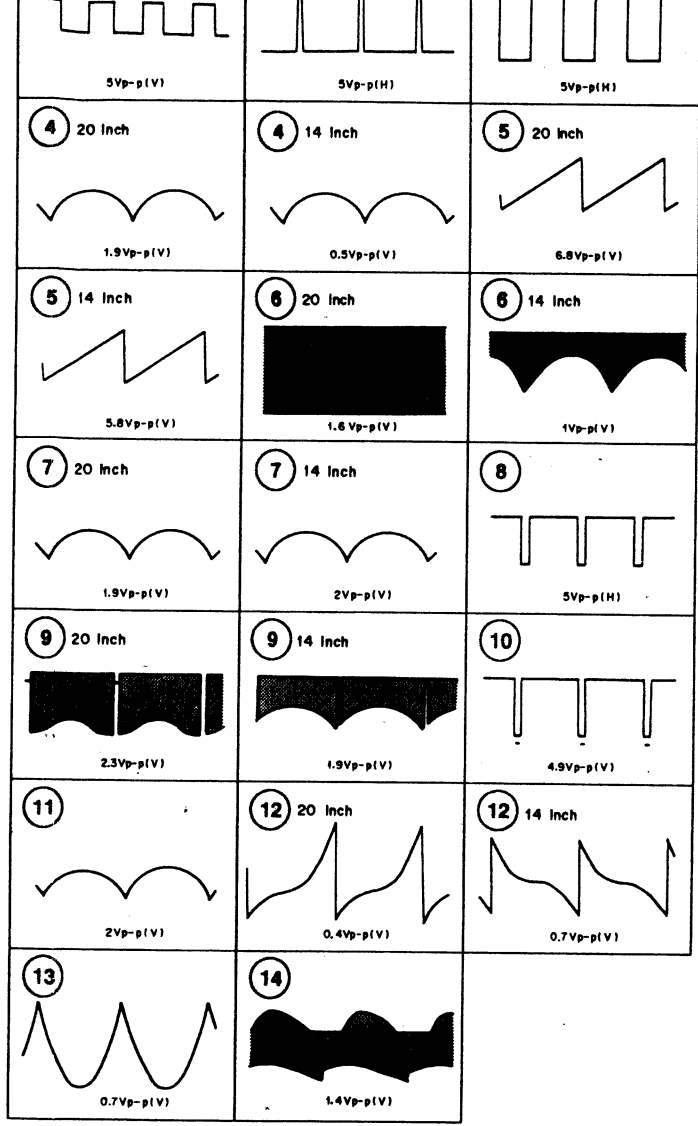

103	NJM4558M	V. BLK G
105	CXA1470AM	SIGNAL G
106	LM393PS	V. BLK G
108	CXA1726M	H. LIN.
111	NJM4558M	H. CONV.
112	CXA8021M	H. CONVE
113	LM393PS	H. BLK,
114	NJM4558M	V. DRIVE
115	CXA8021M	DEFLECTI
118	MP7670AS	8CH DAC
119	TL082CPS-E20	H. PARA.
120	TL431CPS-E05	+2.5V RE
203	NJM4558M	H. LIN.
301	CXA1726M	DFX MOD


Q101	2SA1037K-OR	V PARA CI
102	2SA1037K-OR	V PARA CI
601	2SA1037K-OR	H PARA CI
602	2SA1037K-OR	H PARA CI
603	2SA1037K-OR	ASPECT SW
604	2SK160	ASPECT SW

104	MA110-TX	CLAMP
105	ERD38-06TP11	+30V RECT
106	ERD38-06TP11	-30V RECT
107	ERB91-02TP1	PROTECTOR
201	V11N	+500V RECT
203	MA110-TX	DISCHARGE
204	MA110-TX	PROTECTOR
205	MA110-TX	PROTECTOR
301	MA110-TX	BIAS
321	MA110-TX	PROTECTOR
322	MA110-TX	PROTECTOR
401	MA110-TX	PROTECTOR
501	MA110-TX	SWITCH
502	MA110-TX	SWITCH
505	MA110-TX	THERMAL COMP
511	MA110-TX	DISCHARGE
512	MA110-TX	SWITCH
513	RD3.0M-B	LIMITER
514	MA110-TX	SWITCH
516	MA110-TX	DISCHARGE
517	RD3.0M-B	LIMITER
518	MA110-TX	SWITCH
519	MA110-TX	SWITCH
521	MA110-TX	SWITCH
801	RD12M-B2	PROTECTOR
802	MA110-TX	HV PROT RECT
901	HZT33-02TA	1K PROT REF
902	HZT33-02TA	HV PROT REF




A
B
C
D
E
F
G
H
I



PA (HIGH VOLTAGE)

TO TA BOARD
CN20

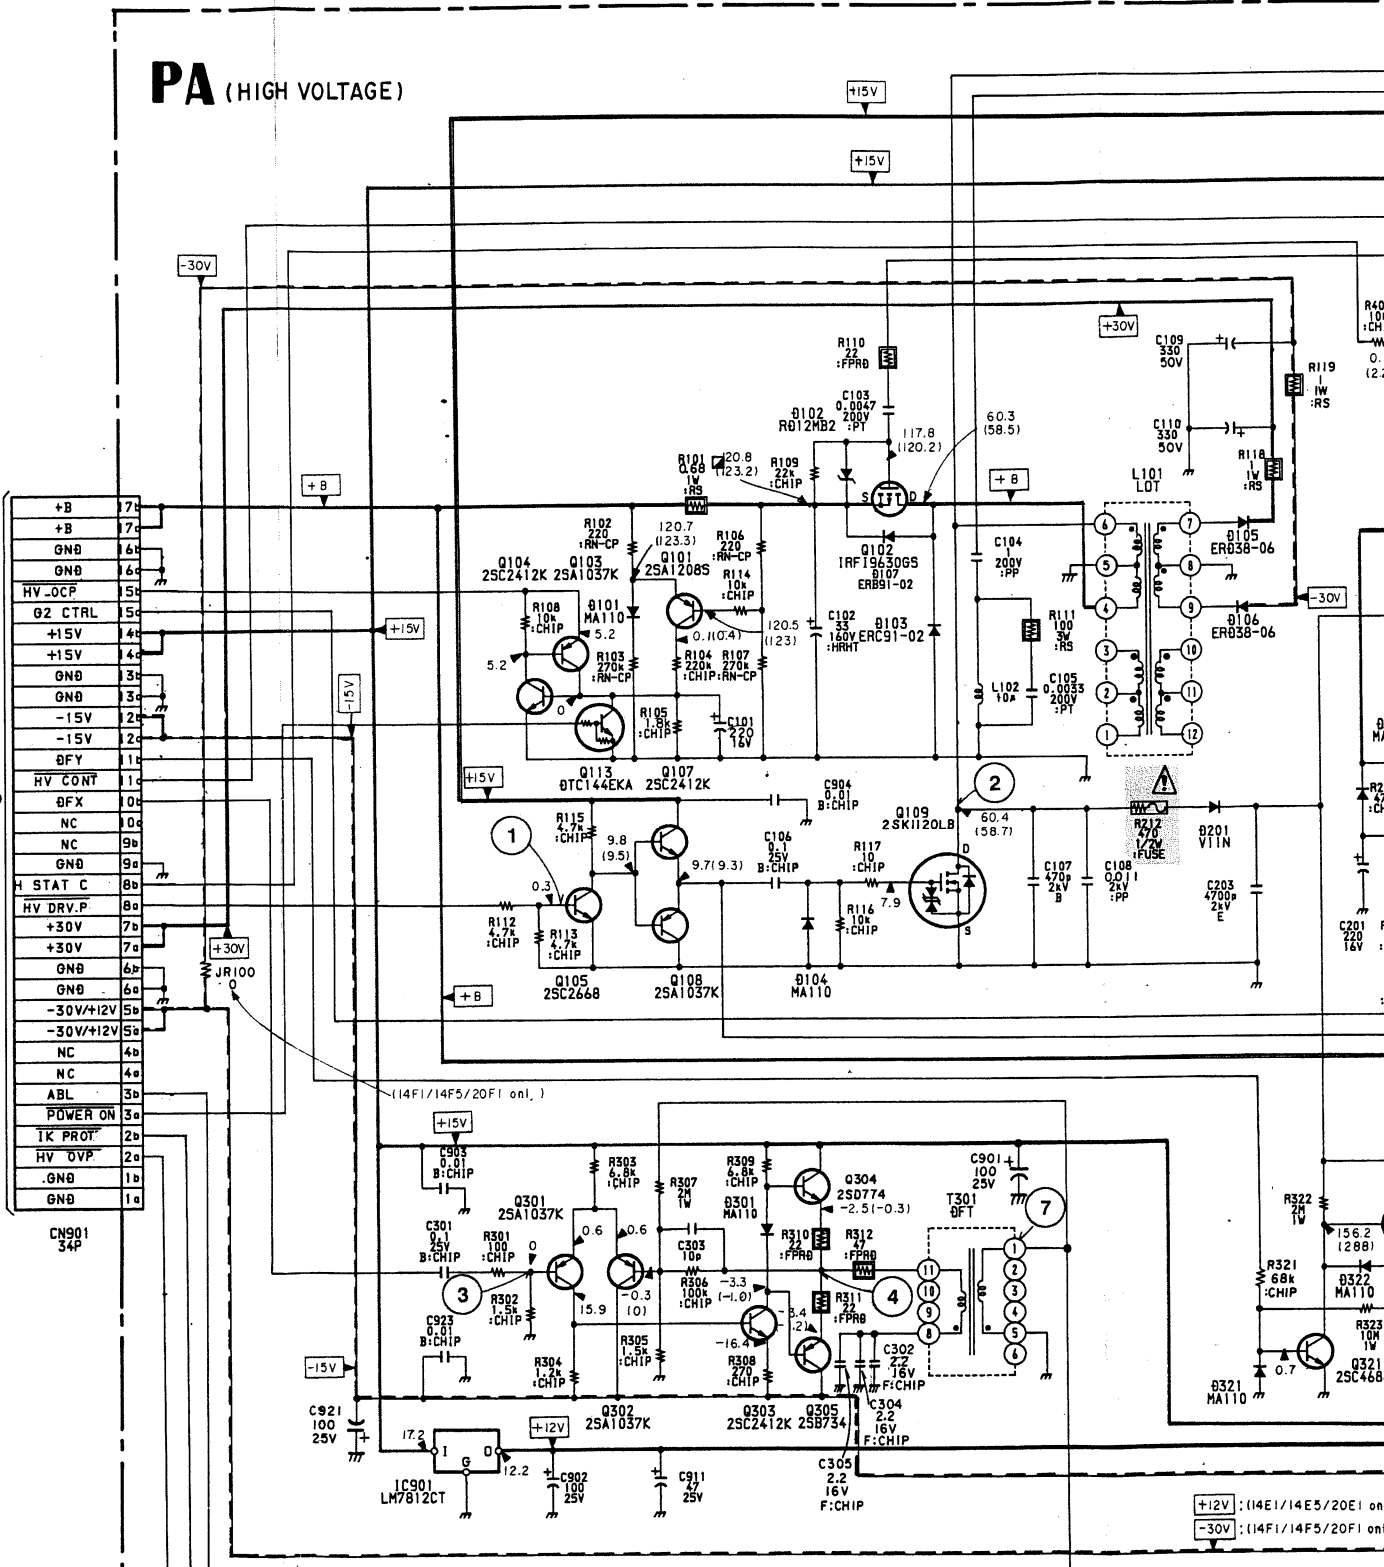


+12V : (14E1/14E5/20E1 on
-30V : (14F1/14F5/20F1 on

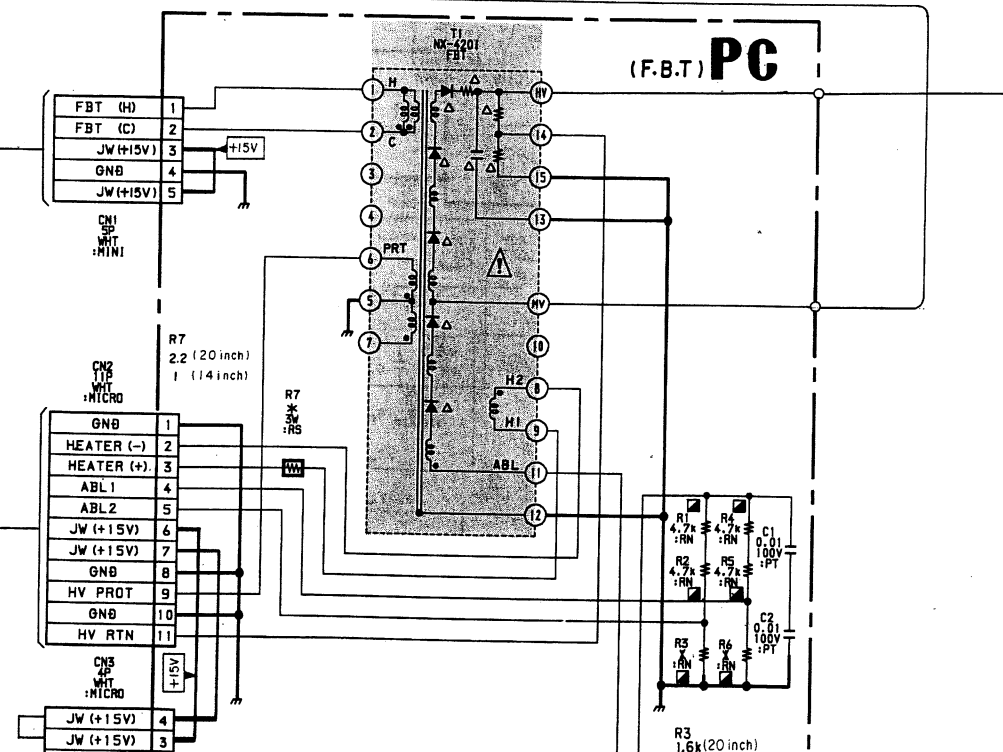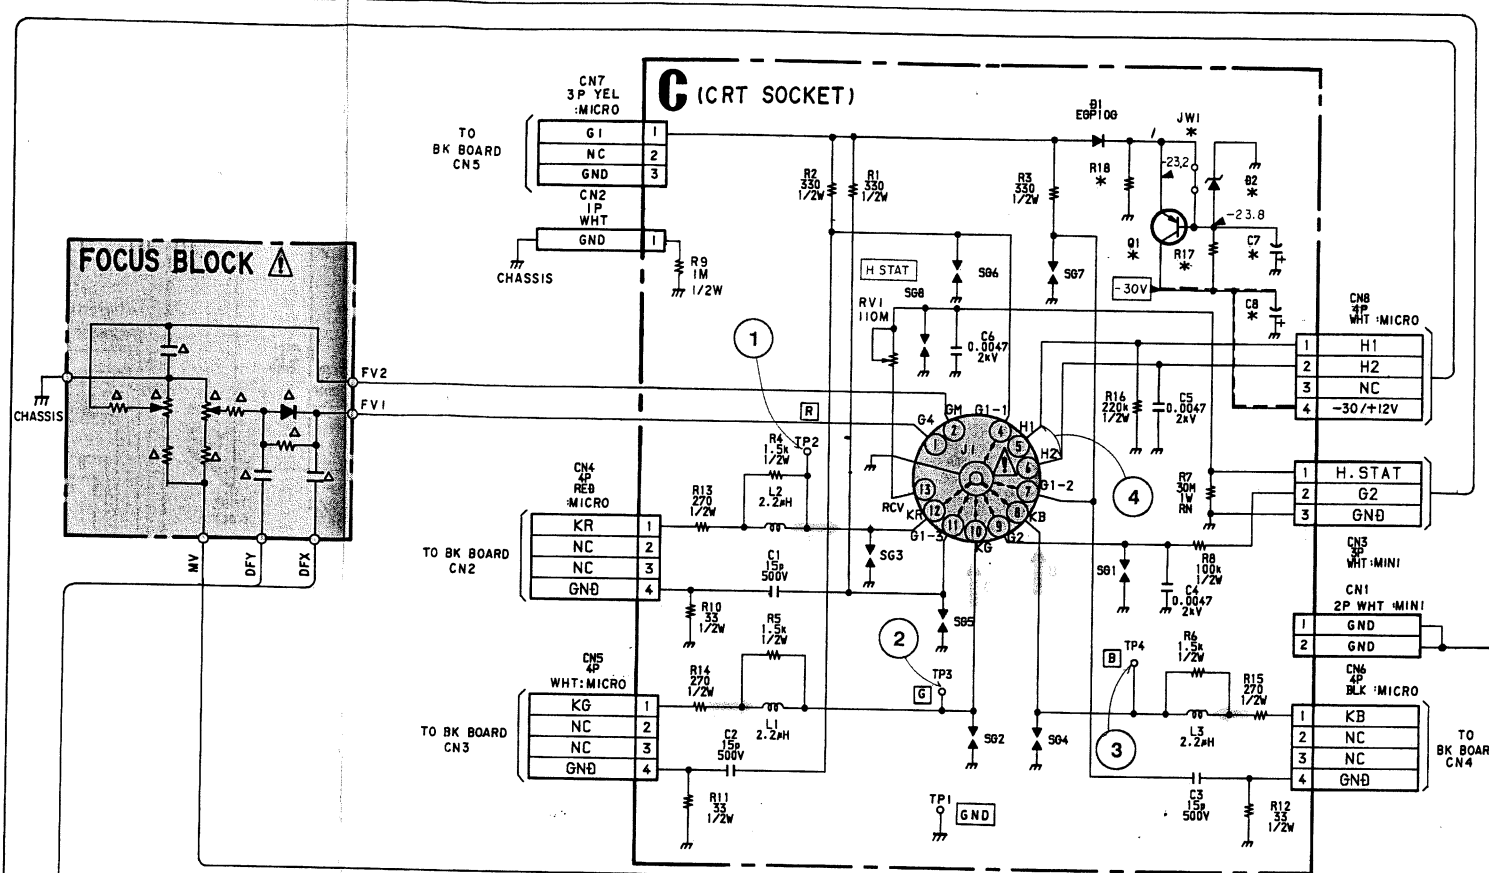
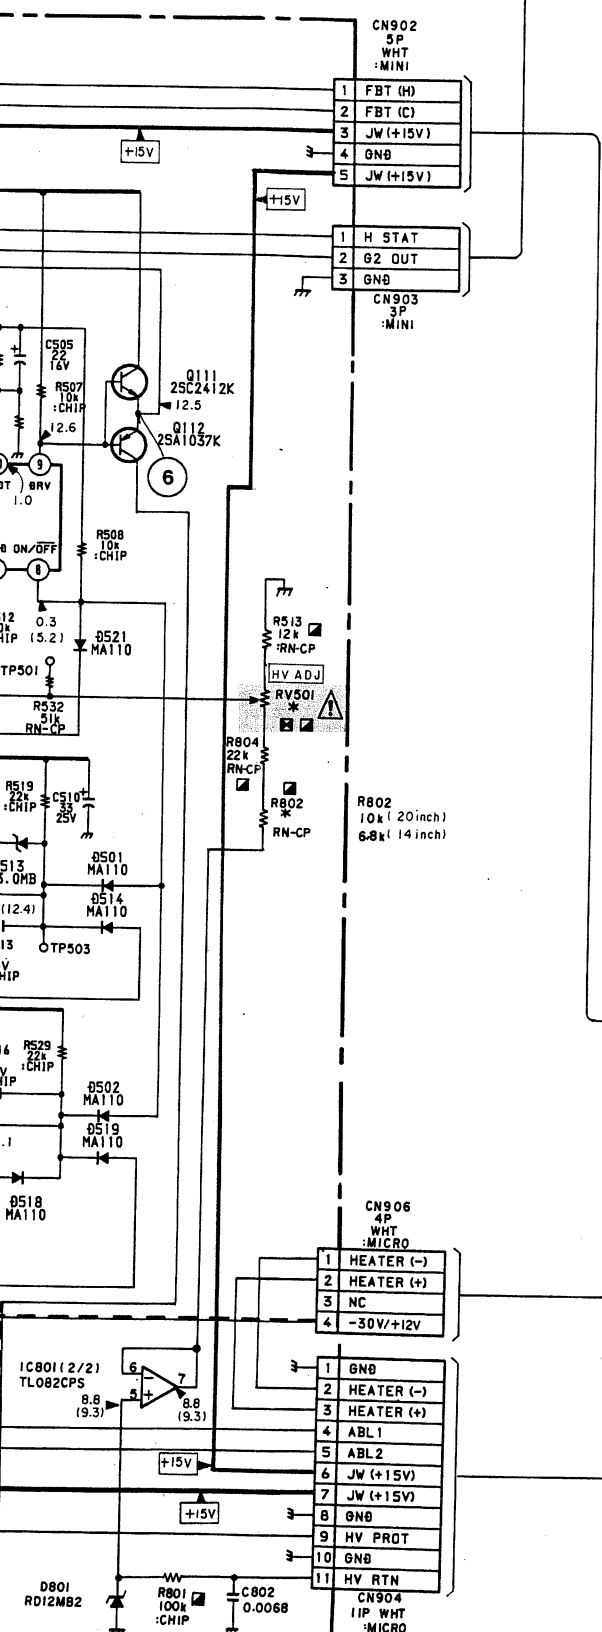


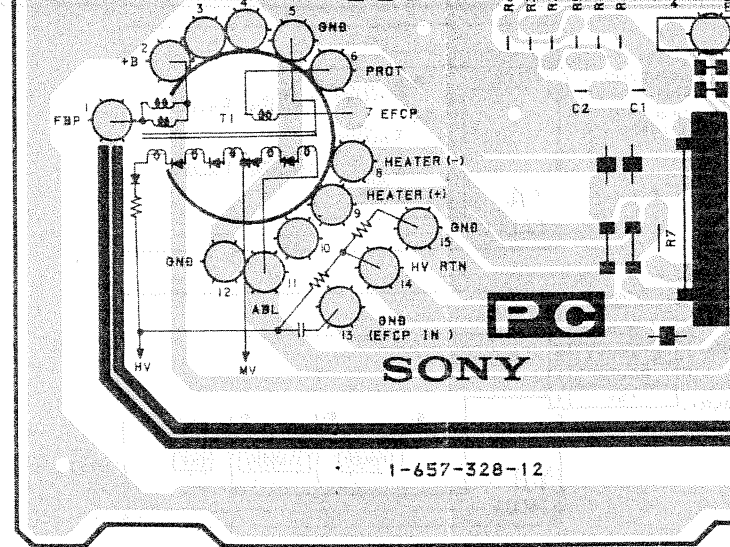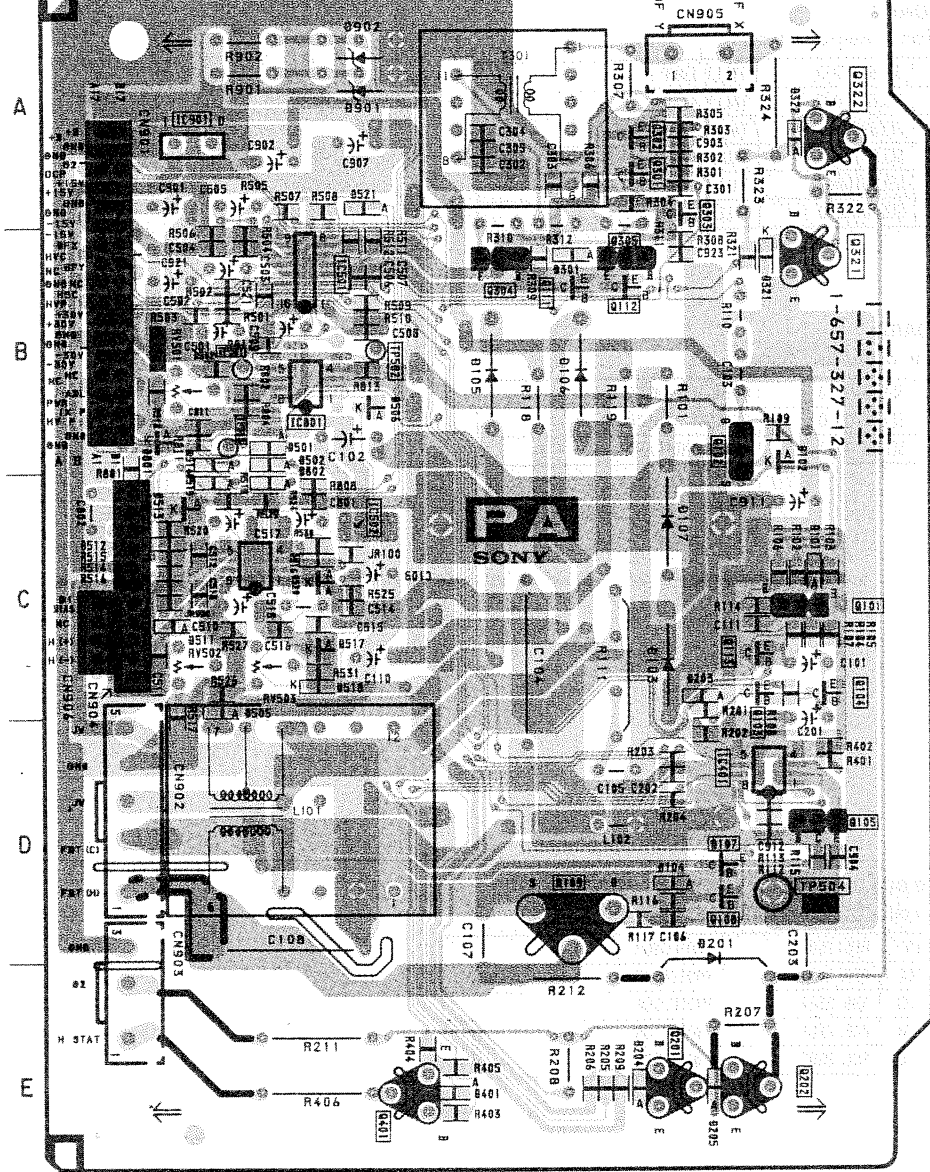





— C BOARD — <Conductor Side>

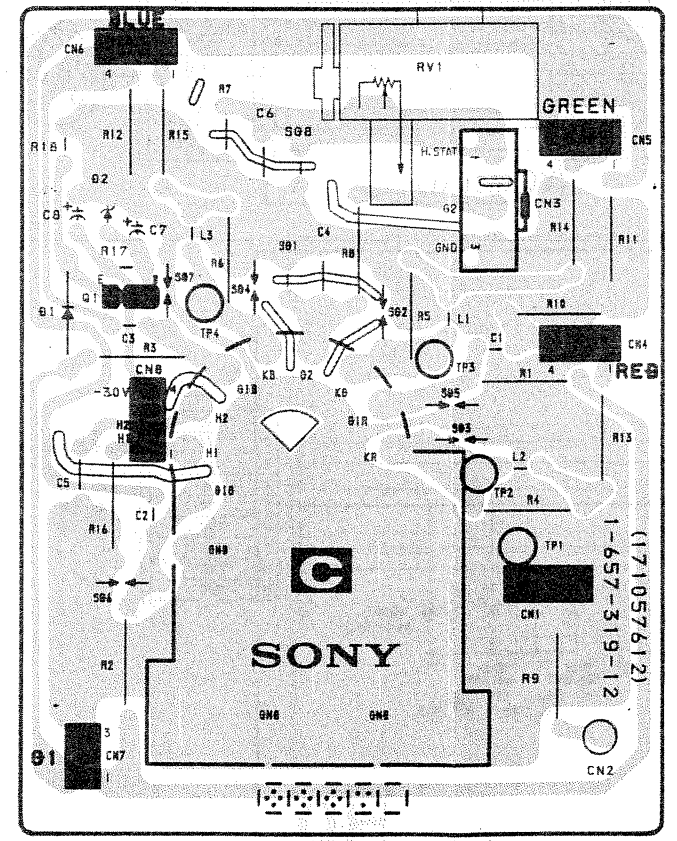

• C BOARD Waveforms

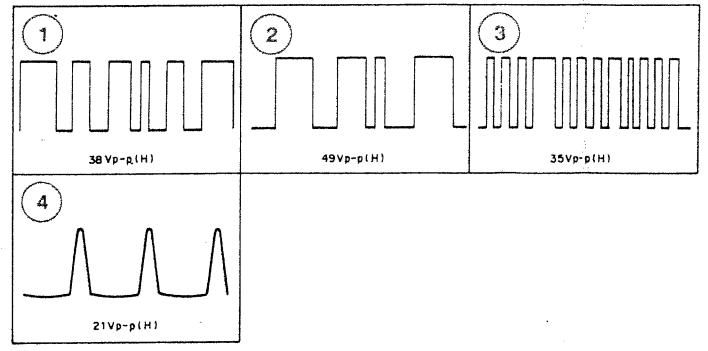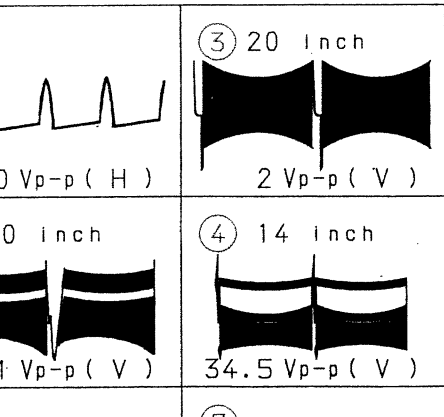

NOTE:
The circuit indicated as left contains high voltage (up to 600 Vp-p). Care must be paid to prevent an electric shock.

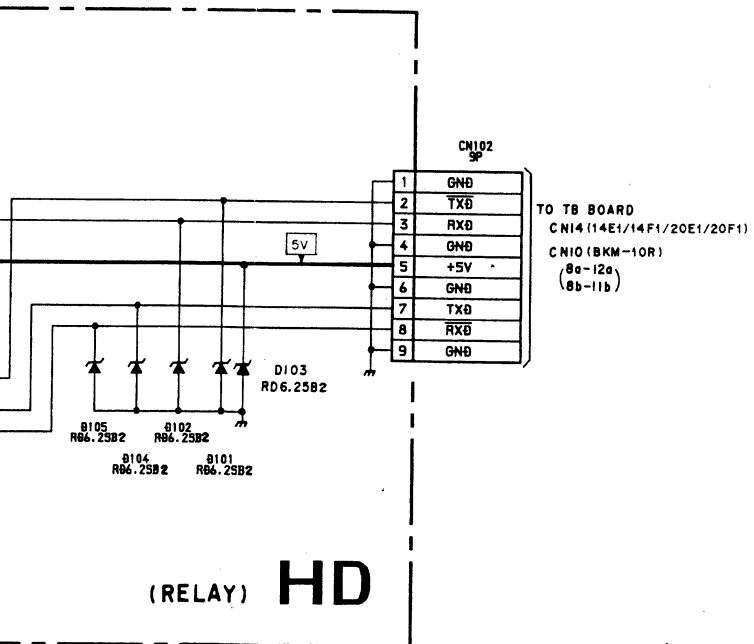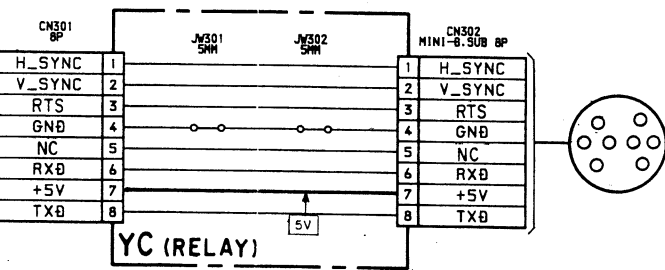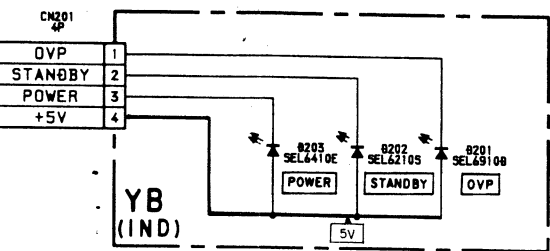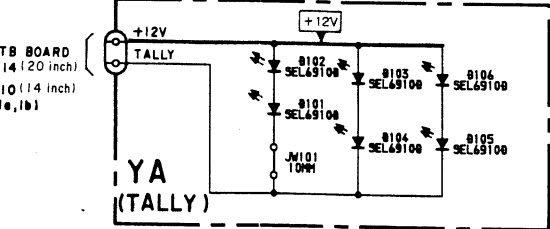

Function of Semiconductor

D101	SEL6910D-D	TALLY LAMP
102	SEL6910D-D	TALLY LAMP
103	SEL6910D-D	TALLY LAMP
104	SEL6910D-D	TALLY LAMP
105	SEL6910D-D	TALLY LAMP
106	SEL6910D-D	TALLY LAMP

YB BOARD

Function of Semiconductor


D201	SEL6910D-D	OVERLOAD INDICATOR
202	SEL6910D-D	STANDBY INDICATOR
203	SEL6910D-D	POWER INDICATOR


HD BOARD

Function of Semiconductor


D101	RD6.2SB2	PROTECTOR
102	RD6.2SB2	PROTECTOR
103	RD6.2SB2	PROTECTOR
104	RD6.2SB2	PROTECTOR
105	RD6.2SB2	PROTECTOR

IC1	C-5	D14	E-4
IC2	E-6	D16	D-5
IC3	E-4	D17	D-4
IC4	D-4	D18	C-5
IC101	B-3	D19	F-6
IC102	E-3	D20	F-6
IC103	G-2	D21	E-6
IC104	F-2	D101	D-1
IC105	E-2	D102	D-1
IC106	F-2	D103	B-1
TRANSISTOR		D104	C-1
Q1	E-6	D105	A-1
Q2	E-6	D106	B-1
Q3	F-7	D107	G-3
Q4	F-6	D108	E-3
Q5	C-7	D109	E-2
Q6	B-7	D110	E-3
Q7	A-7	D111	F-2
Q8	D-5	D112	F-2
Q9	D-5	D114	F-2
Q10	D-5	D115	F-3
Q11	F-6	D116	G-2
Q12	B-15	D117	G-2
Q13	E-6	D118	F-3
Q14	F-7	VARIABLE RESISTOR	
Q15	F-6	RV101	B-3
Q16	F-7	TEST POINT	
Q17	F-6	TP1	B-5
Q101	G-2	TP2	D-5
Q103	F-2	TP3	C-6
Q104	F-2	TP4	A-6
DIODE		TP5	C-5
D1	E-5	TP6	A-5
D2	D-6	TP7	A-5
D3	E-7	TP8	A-5
D7	C-5	TP9	C-4
D8	C-5	TP105	B-1
D9	D-7	TP106	C-3
D10	C-7	TP107	C-3
D11	B-7	TP108	G-2
		TP109	G-2

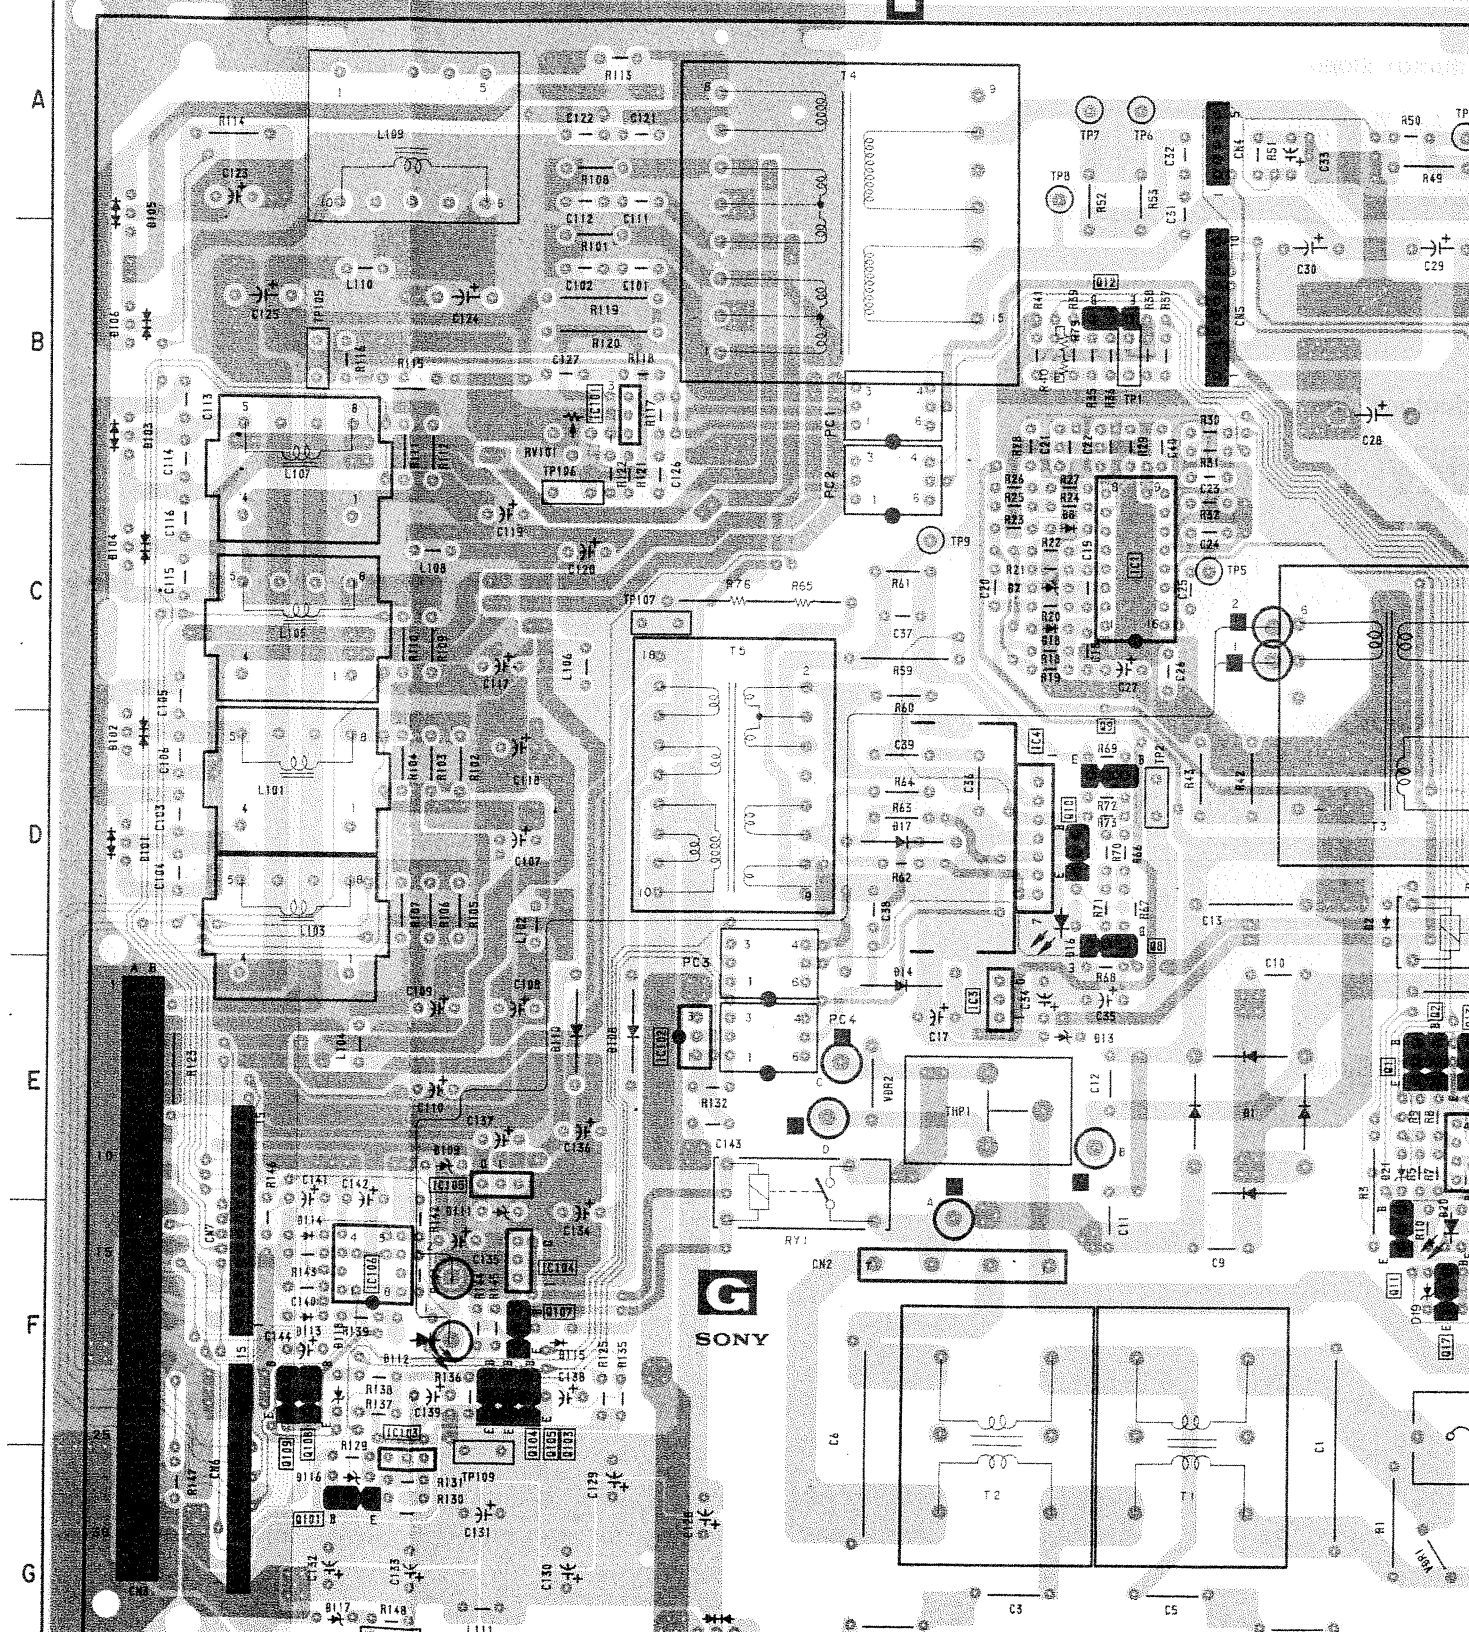

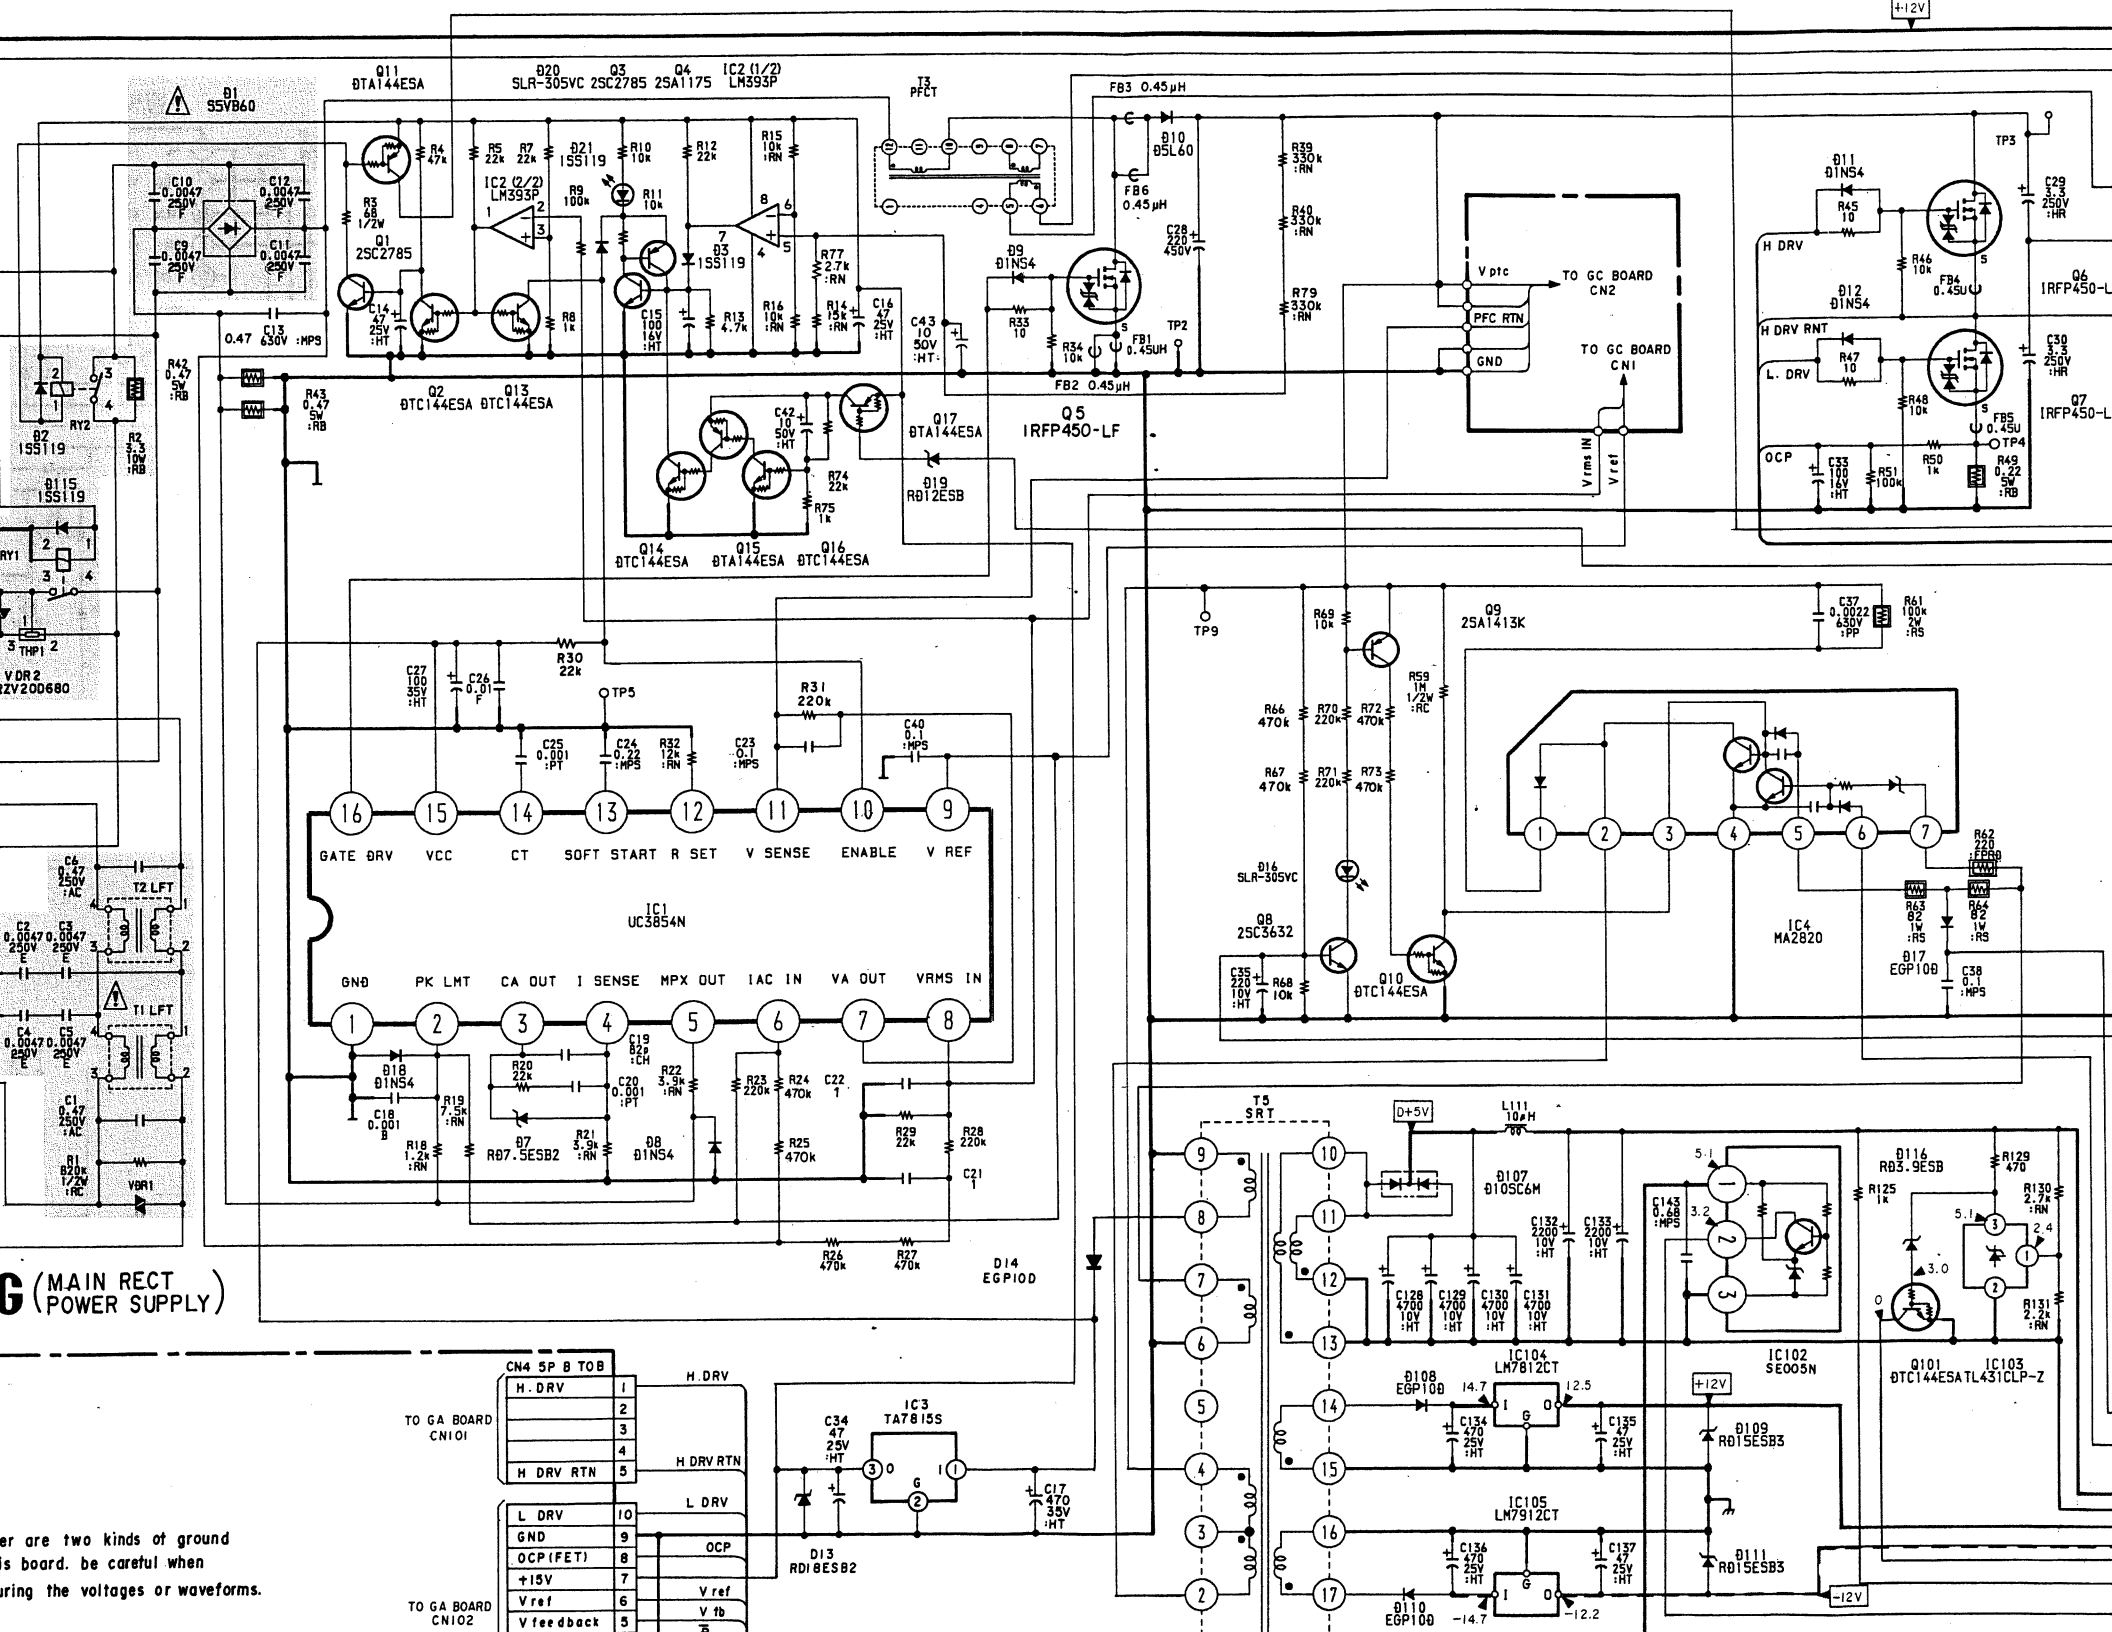


G (MAIN RECT POWER SUPPLY)

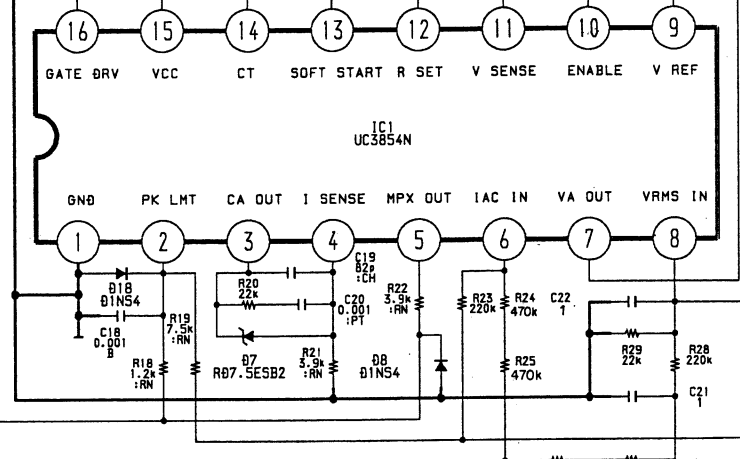

TO GA BOARD CN101		H. DRV		H. DRV	
1	H. DRV	1	H. DRV	1	H. DRV
2		2		2	
3		3		3	
4	H. DRV RTH	4	H. DRV RTH	4	H. DRV RTH
TO GA BOARD CN102		L. DRV		OCP	
10	L. DRV	9	L. DRV	8	OCP
9	GND	8	GND	7	+15V
8	OCP (FET)	7	+15V	6	V ref
7	+15V	6	V ref	5	V fb
6	V ref	5	V fb	4	V feedback
5	V feedback	3		3	

er are two kinds of ground
is board. be careful when
uring the voltages or waveforms.

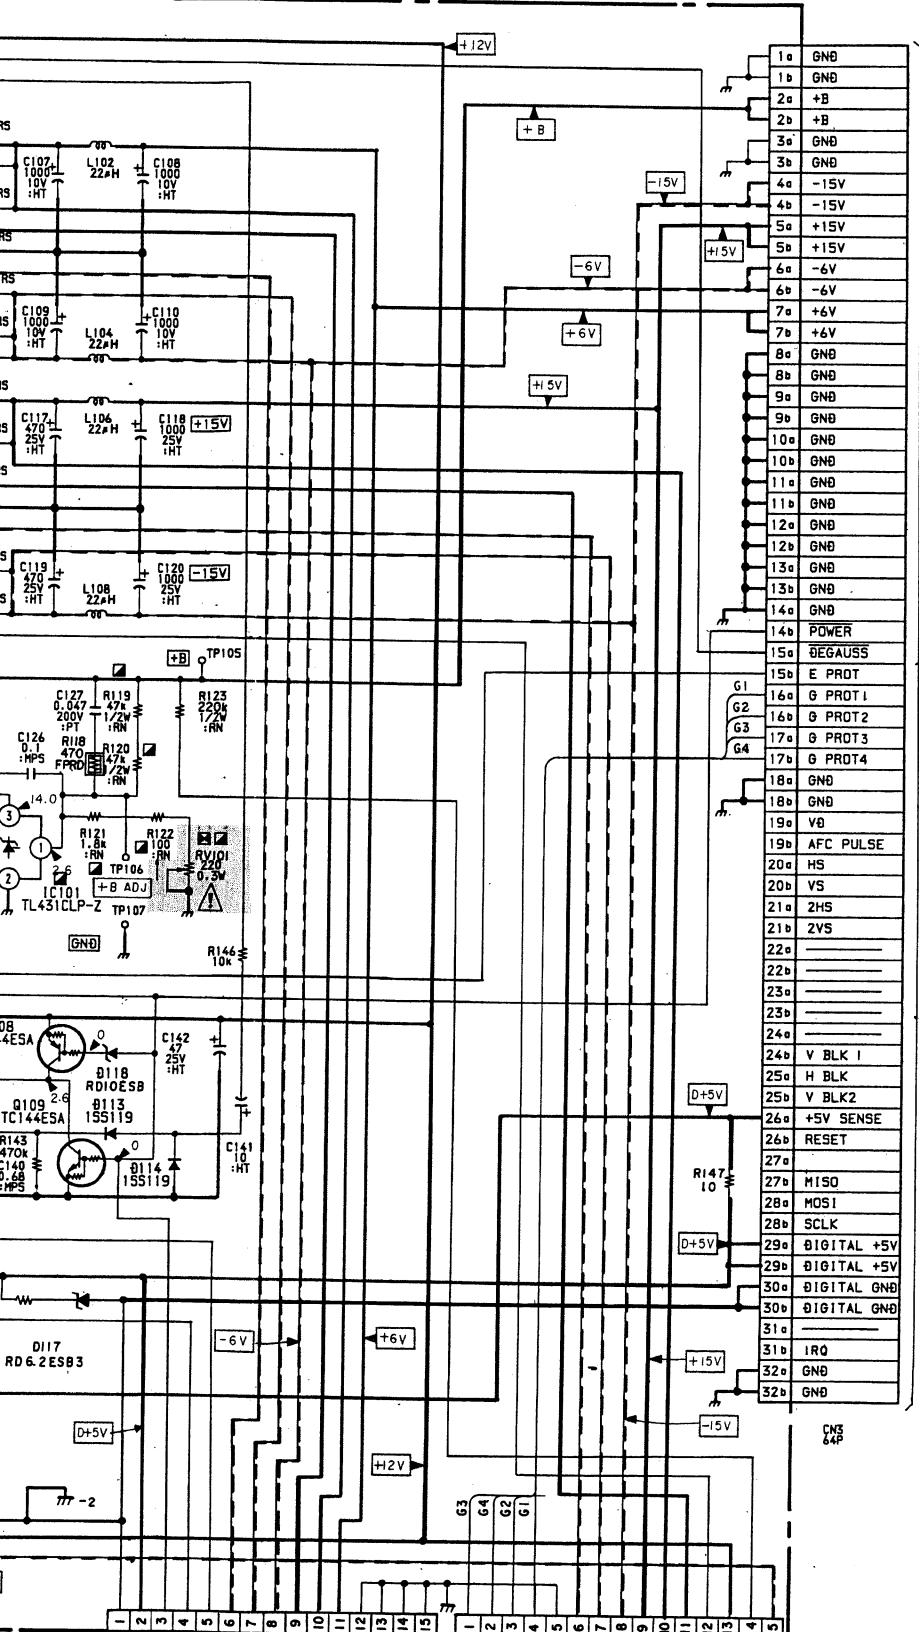

TO TA BOARD
CN17

3	LM7815CT	+15V REG	8	D1NS4	CLAMP
4	MA2820	RCC SWITCHING	9	D1NS4	SPEED UP
101	TL431CLP-Z	+B REG	10	D5L60	FLYHOOL
102	SEO05N	+5V REG	11	D1NS4	SPEED UP
103	TL431CLP-Z	+5V OVP	12	D1NS4	SPEED UP
104	LM7812CT	12V REG	13	RD18ESB2	PROTECTOR
105	LM7912CT	-12V REG	14	EGP10DPKG23	+18V RECT
106	LM393P	PFC FAILUVE DET	16	SEL6210S-D	RCC FAIL PILOT
			17	EGP10DPKG23	RECT
Q1	ZSC2785-HFE	RELAY DRIVE	18	D1NS4	CLAMP
2	DTC144ESA	DISCHARGE	19	RD12ES-B	DC LEVEL SHIFT
3	ZSC2785-HFE	LATCH	20	SEL6210S-D	PFC OVP PILOT
4	2SA1175-HFE	LATCH	21	1SS119	SWITCH
5	1RFP450LF	PFC SWITCHING	101	D10SC6MR	-6V RECT
6	1RFP450LF	HIGH SIDE SWITCHING	102	D10SC6M	+6V RECT
7	1RFP450LF	LOW SIDE SWITCHING	103	D8LCA20R	-15V RECT
8	ZSC3632-M	RCC PROTECTOR	104	D8LCA20	+15V RECT
9	ZSC3632-M	RCC PROTECTOR	105	ESAC39M-06N	+B RECT
10	DTC144ESA	RCC PROTECTOR	106	ESAC39M-06C	+B RECT
11	DTA144ESA	INRUSH FAILUVE	107	D10SC6M	DIGITAL 5V RECT
12	DTC144ESA	SOFT START	108	EGP10DPKG23	+15V RECT
13	DTC144ESA	PFC STOP	109	RD15ES-B3	PROTECTOR
14	DTC144ESA	PWR ON RESET	110	EGP10DPKG23	-15V RECT
15	DTA144ESA	PWR ON RESET	111	RD15ES-B3	PROTECTOR
16	DTC144ESA	PWR ON RESET	112	SEL6410E-D	PFC PILOT
17	DTA144ESA	SWITCH	113	1SS119	RECT
101	DTC144ESA	PWR SWITCH	114	1SS119	CLAMP
103	DTC144ESA	E PROT SWITCH	115	1SS119	CLAMP
104	ZSC2785-HFE	PWR SW	116	RD3.9ES-B	DC LEVEL SHIFT
105	DTC144ESA	SHUT DWN SW	117	RD6.2ES-B3	PROTECTOR
107	ZSC2785-HFE	DGC SWITCH	118	10V	DC LEVEL SHIFT
108	DTA144ESA	PWR ON RESET			
109	DTC144ESA	PWR ON RESET	PC1	PC111YS	+B REG ISOLATOR
			PC2	PC111YS	PWR ISOLATOR
D1	SSVB60	MAIN RECT	PC3	PC111YS	RCC PROTECT ISOLATOR
2	1SS119	CLAMP	PC4	PC111YS	+5V REG ISOLATOR
3	1SS119	SWITCH			


IC101	IR2112	HALF BRIDGE DRIVER
102	TL494CNS-E20	HALF BRIDGE PWM CONTROL
Q101	2SC2412K-Q	POWER SW
102	2SA1037K-Q	SOFT START
103	2SC2412K-Q	SOFT START
D101	MA110-TX	LEVEL SHIFT
102	SC311-6	PROTECTOR
103	SC311-6	PROTECTOR
104	RD18M-B2	PROTECTOR
105	MA110-TX	PROTECTOR
106	MA110-TX	PROTECTOR
107	MA110-TX	PROTECTOR
108	MA110-TX	PROTECTOR




GB BOARD

Function of Semiconductor

IC201	TL431CLP-Z	+B OCP REF
202	LM393PS	+B O.V.P/O.C.P DETECTOR
203	LM339NS-E20	±15V O.V.P/O.C.P DETECTOR
204	LM339NS-E20	±6V O.V.P/O.C.P DETECTOR
301	TC74HC148AF	PROTECTOR ENCODER
302	TC74HC148AF	PROTECTOR ENCODER
303	MC74HC08AF	PROTECTOR ENCODER
Q301	IMZ1T109	+B O.V.P
302	IMZ1T109	+B O.C.P
303	IMZ1T109	+15V O.V.P
304	IMZ1T109	+15V O.C.P
305	IMZ1T109	-15V O.V.P
306	IMZ1T109	-15V O.C.P
307	IMZ1T109	+6V O.C.P
308	IMZ1T109	+6V O.V.P
309	IMZ1T109	-6V O.V.P
310	IMZ1T109	-6V O.C.P
311	2SA1037K-Q	POWER SW
312	DTA144EKA	POWER RESET
313	DTA144EKA	PFC PROTECT
D201	RD5.6M-B2	OVP REF
202	MA110-TX	SWITCH
203	MA110-TX	SWITCH
204	MA110-TX	SWITCH
205	MA110-TX	SWITCH
206	RD5.6M-B2	OVP REF
301	MA110-TX	SWITCH
302	MA110-TX	SWITCH
303	MA110-TX	SWITCH
304	MA110-TX	SWITCH
305	MA110-TX	SWITCH
306	MA110-TX	SWITCH
307	MA110-TX	SWITCH
308	MA110-TX	SWITCH
309	MA110-TX	SWITCH
310	MA110-TX	SWITCH

A
B
C
D
E
F
G
H
I

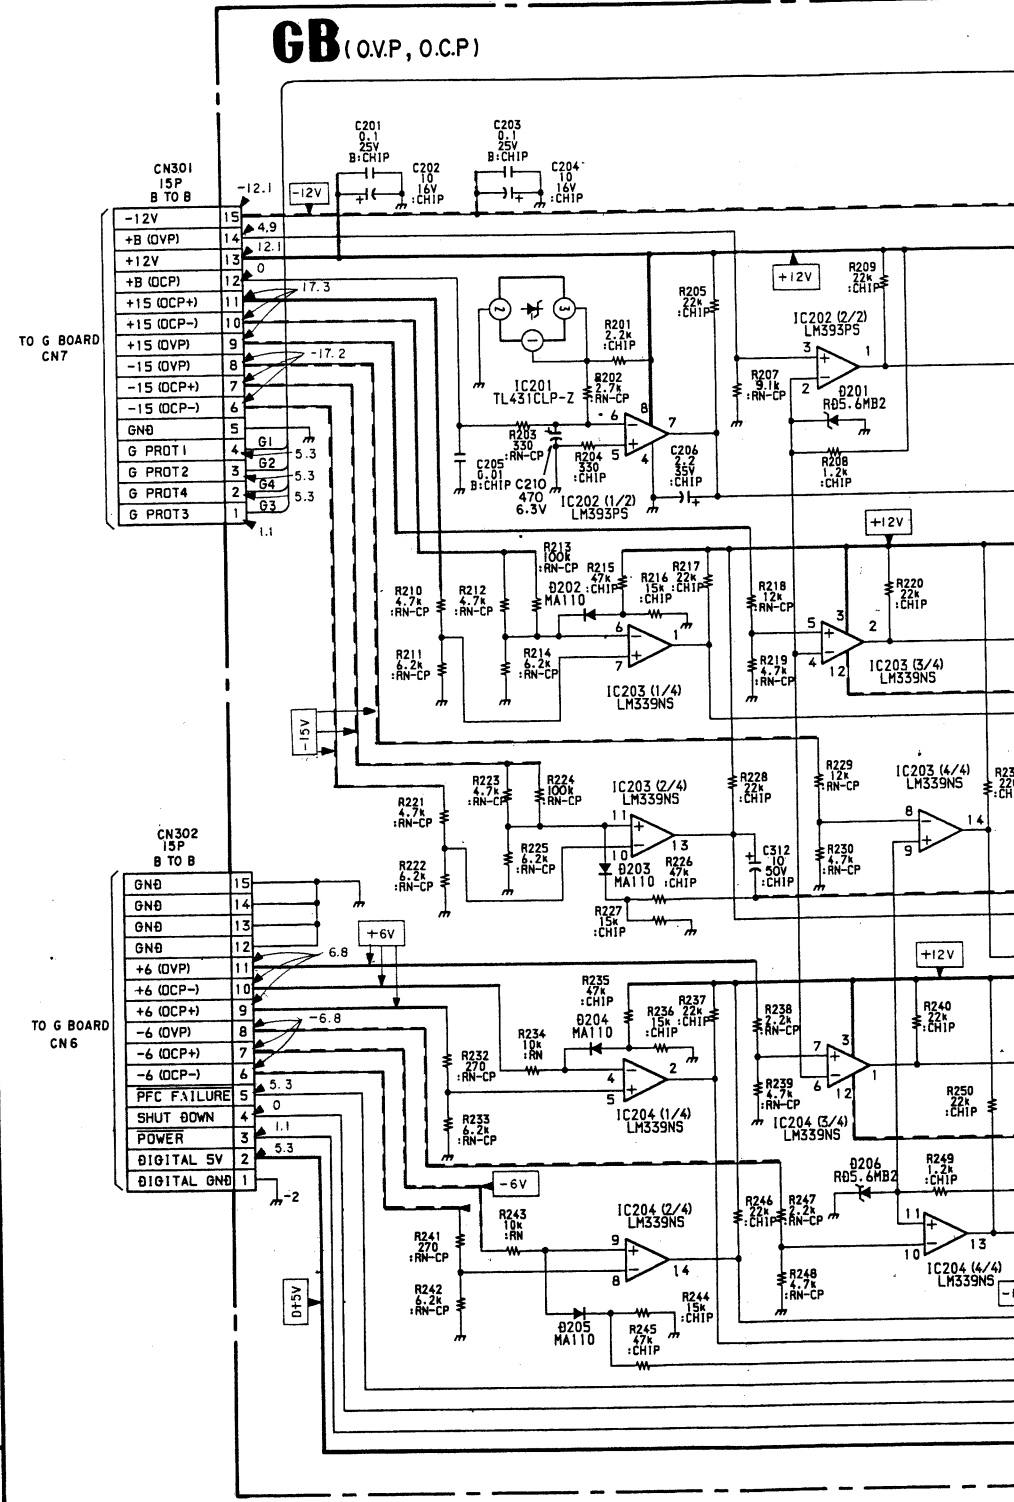

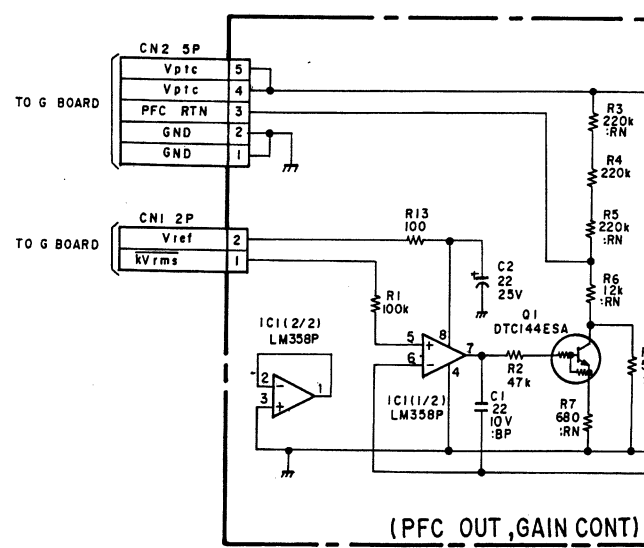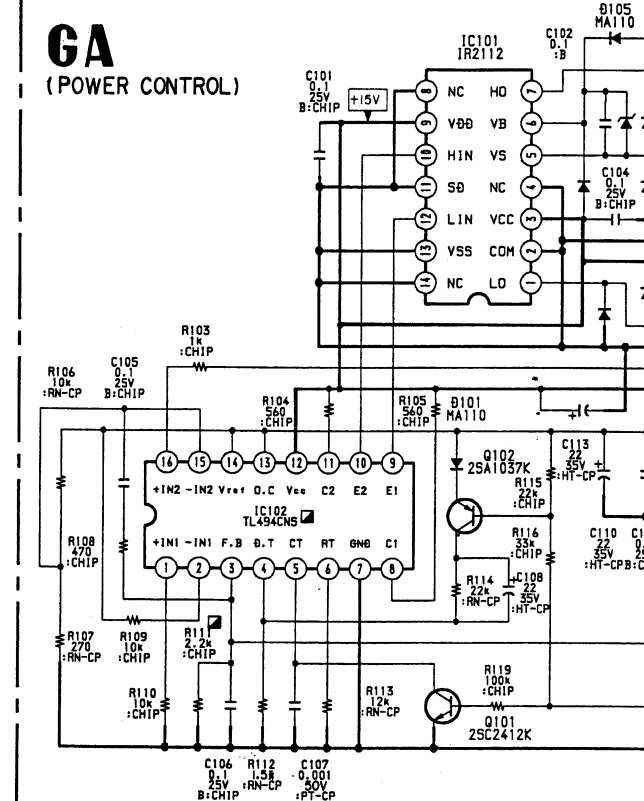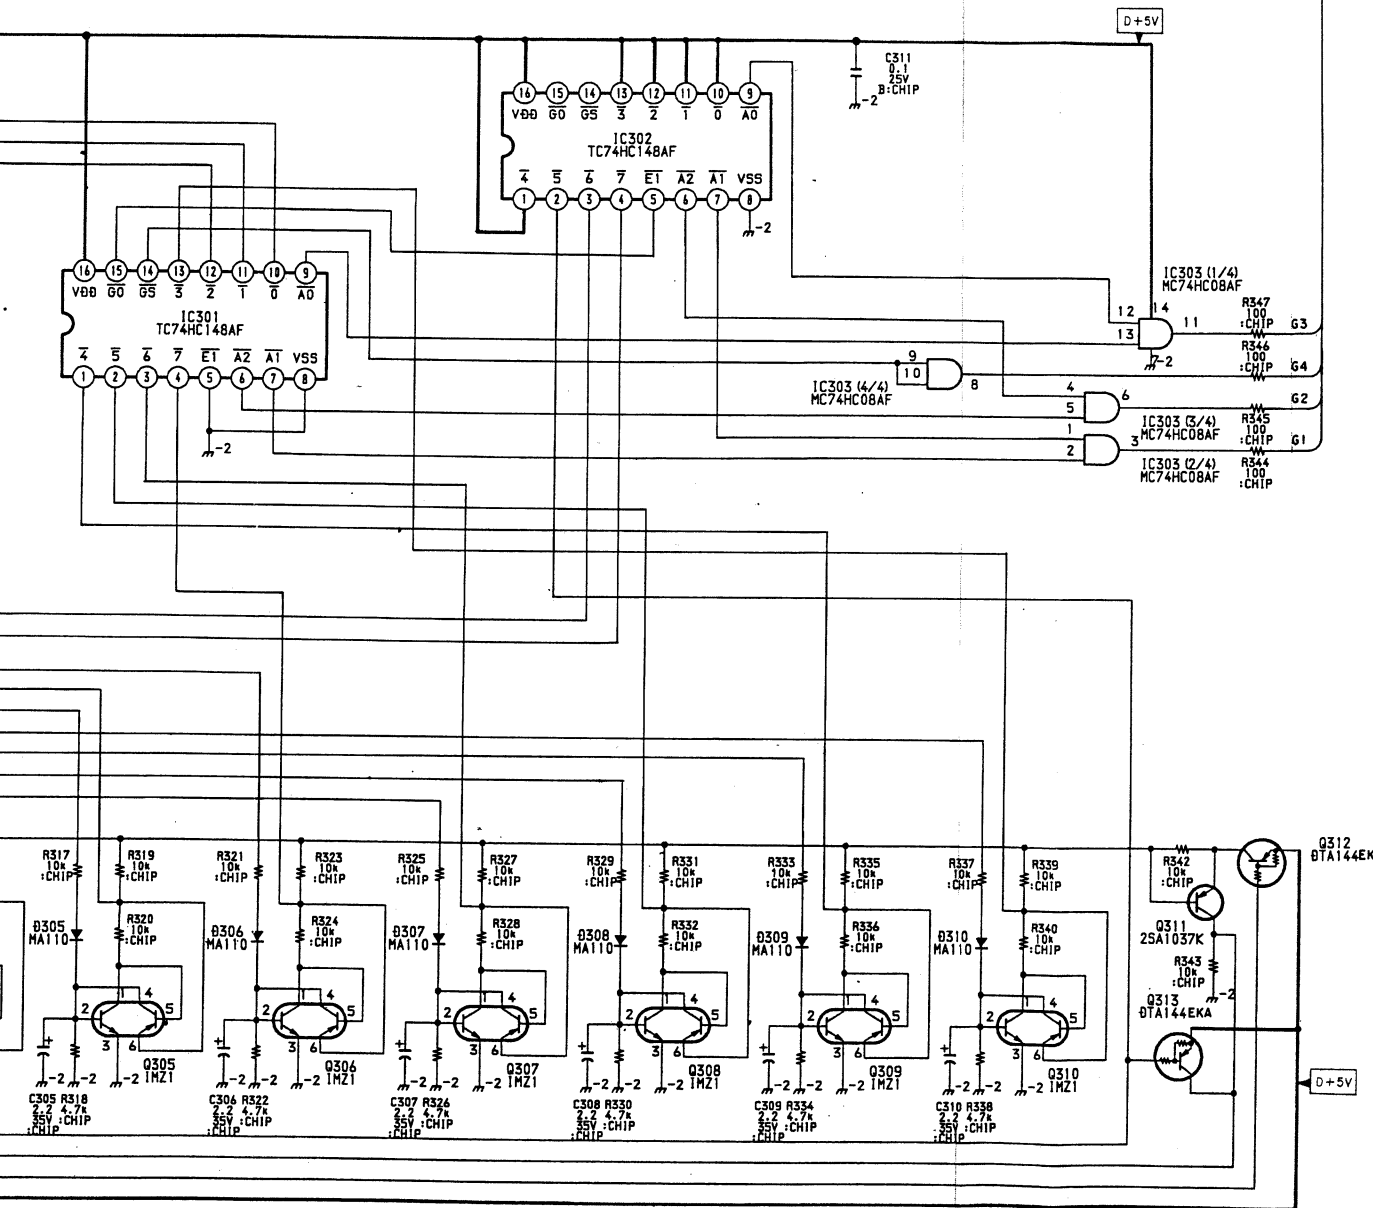

GA

(POWER CONTROL)



GB

(O.V.P. O.C.P)


GC

(PFC OUT, GAIN CONTROL)


— GA BOARD — <Conductor Side> — GA BOARD — <Component Side>

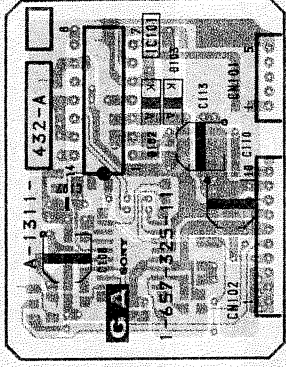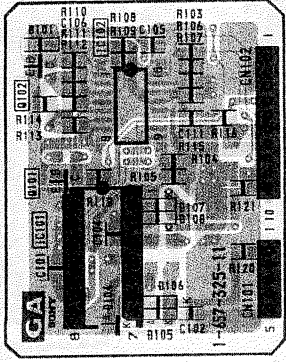


— GB BOARD — <Conductor Side>

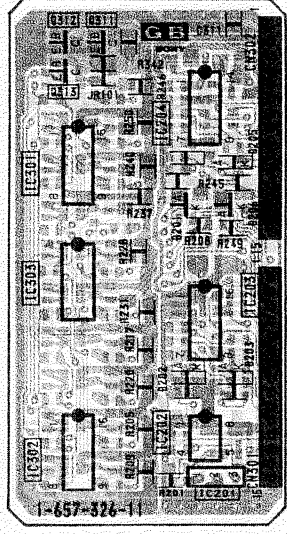

— GB BOARD — <Component Side>

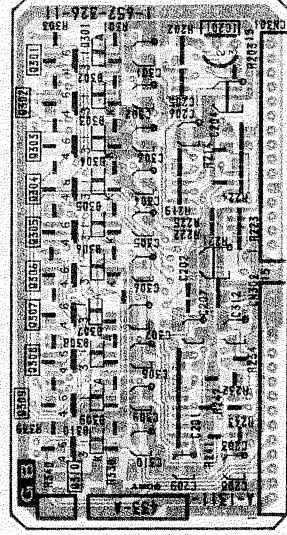

— GC BOARD — <Conductor Side>

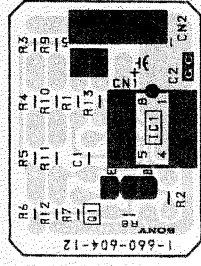


• : Pattern from the side which enables seeing.

• : Pattern of the rear side.


HA

(FUNCTION CONTROL) (BVM-14E5E/14E5U/14F5E/14F5U, BKM-10R)

— HA BOARD — <Component Side>

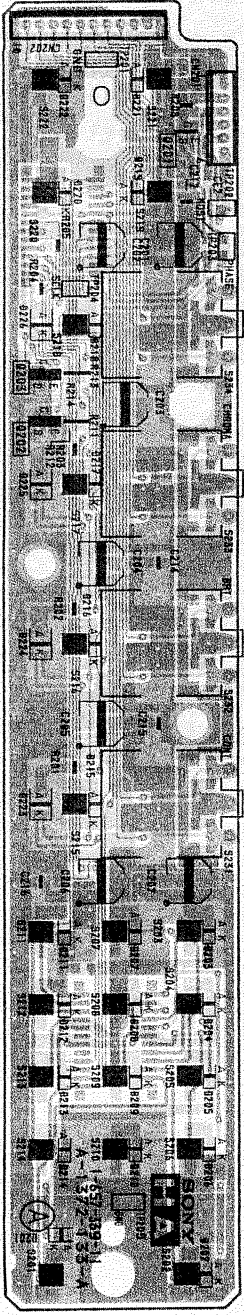


— HA BOARD — <Conductor Side>

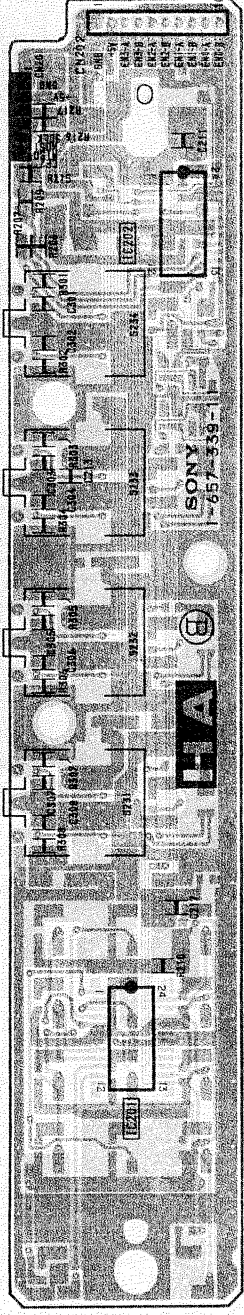

• : Pattern from the side which enables seeing.

• : Pattern of the rear side.

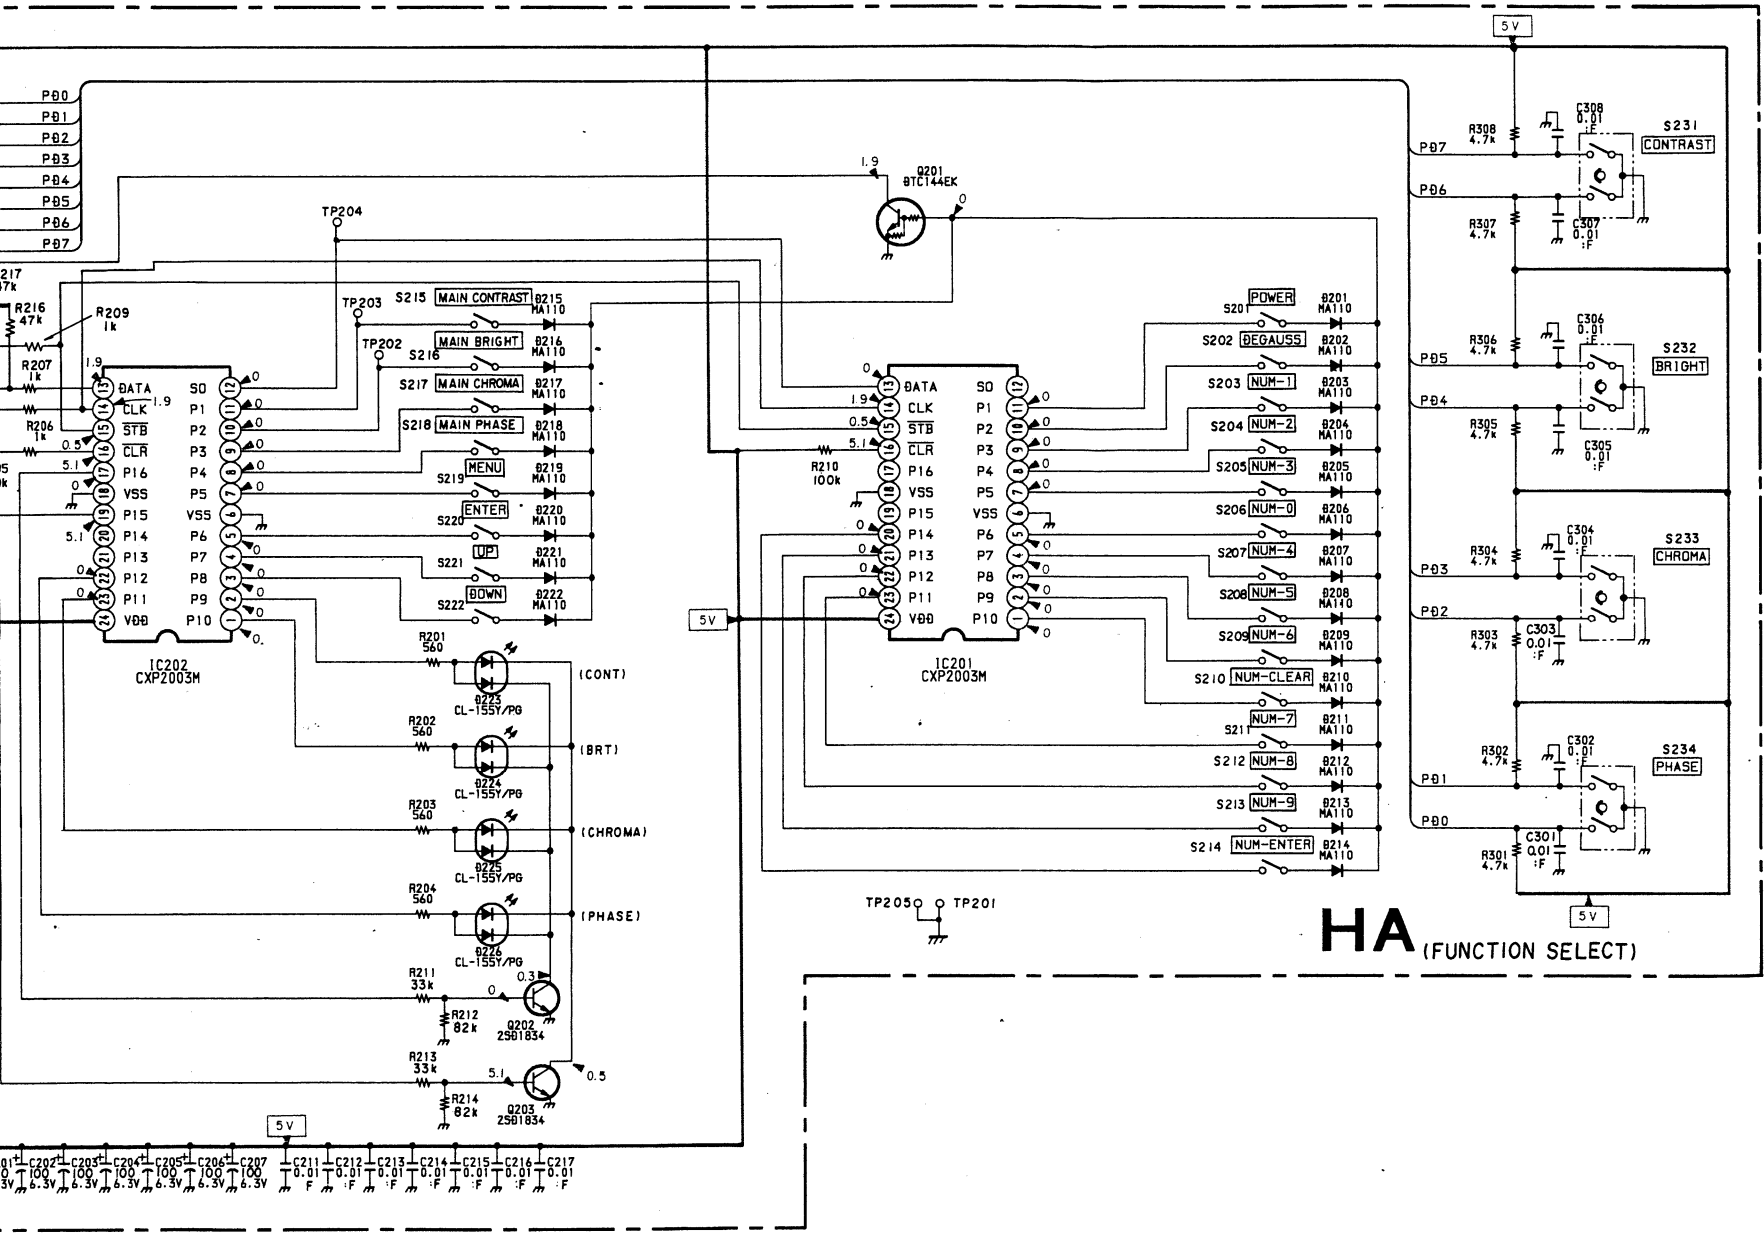

HA (FUNCTION SELECT)

IC201	CXP2003M
202	CXP2003M
Q201	DTC144EK
202	2SD1834
203	2SD1834
D201	MA110
202	MA110
203	MA110
204	MA110
205	MA110
206	MA110
207	MA110
208	MA110
209	MA110
210	MA110
211	MA110
212	MA110
213	MA110
214	MA110
215	MA110
216	MA110
217	MA110
218	MA110
219	MA110
220	MA110
221	MA110
222	MA110
223	CL155Y/PG-0
224	CL155Y/PG-0
225	CL155Y/PG-0
226	CL155Y/PG-0

- DRIVE
- DRIVE
- OUT
- R(SHIFT)
- R(UND/16:9)
- R(H DLY/SYNC)
- R(V DLY/BLUE ONLY)
- R(MONO/R)
- R(APT/G)
- R(COMB/B)
- R(F1/F3)
- R(F2/F4)
- R(ADDR/SAD)

A

B

C

D


E

F

CN101 6P

CE1	6
MISO	5
MOSI	4
SCLK	3
+5V	2
GND	1

TO HC BOARD
CN 4

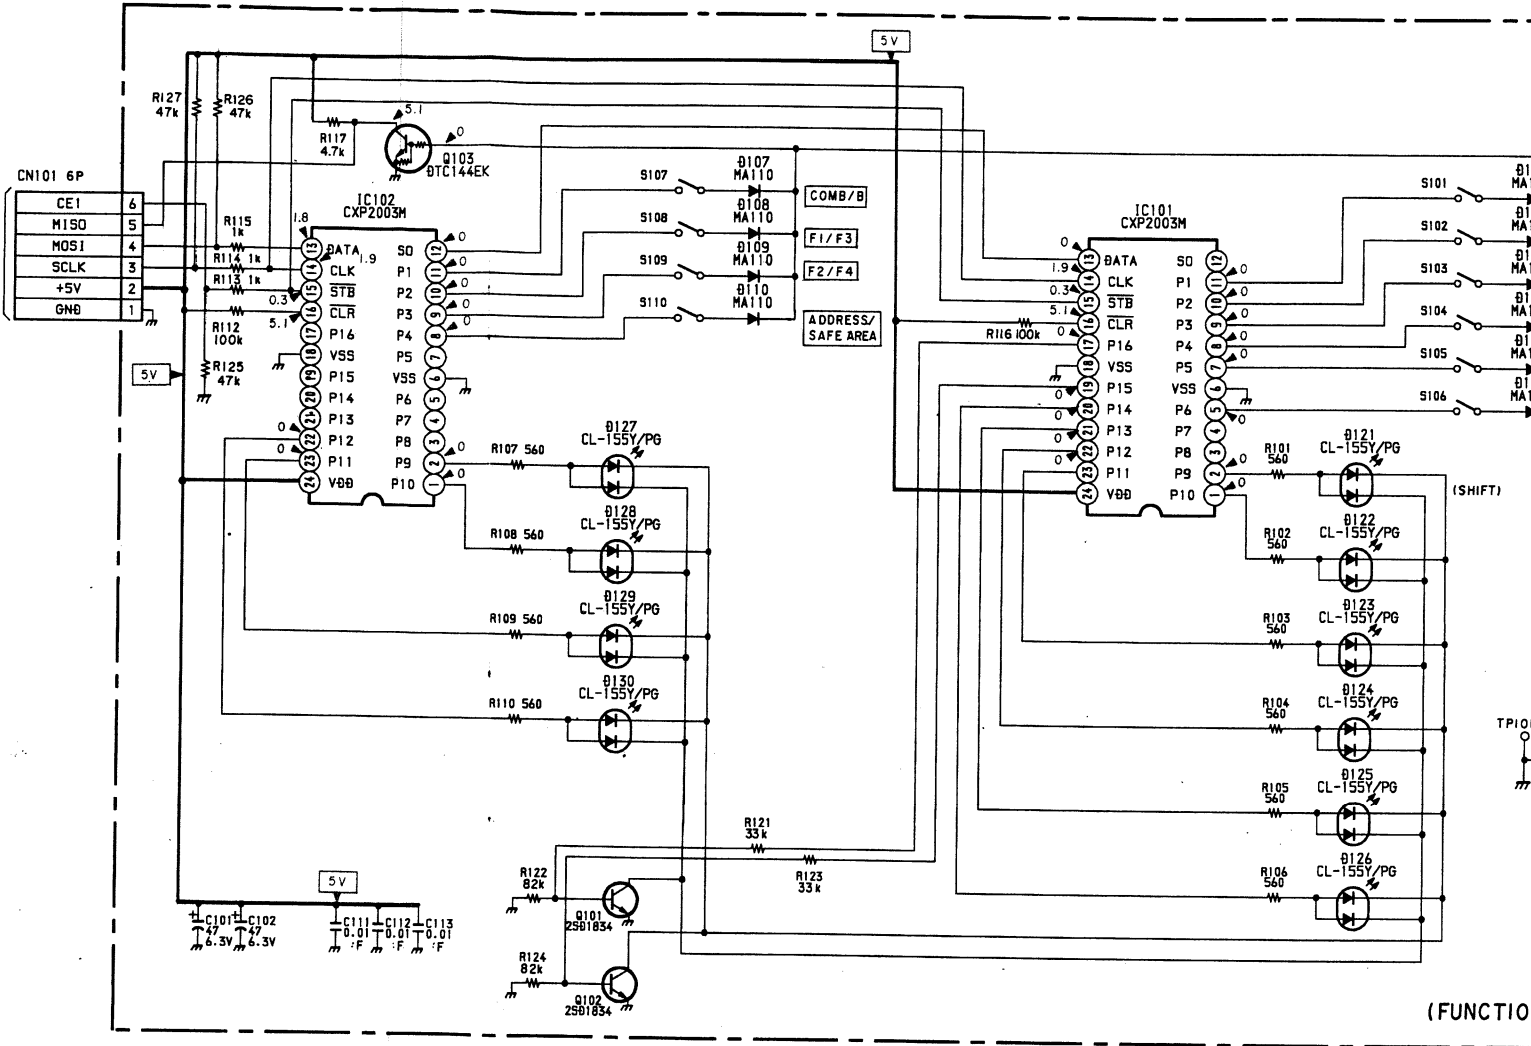


(FUNCTION


HB


(FUNCTION CONTROL) (BVM-14E5E/14E5U/14F5E/14F5U, BKM-10R)

— HB BOARD — <Component Side>

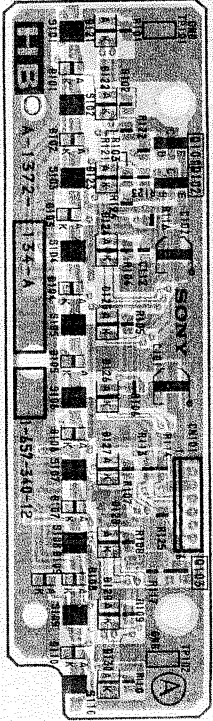

— HB BOARD — <Conductor Side>

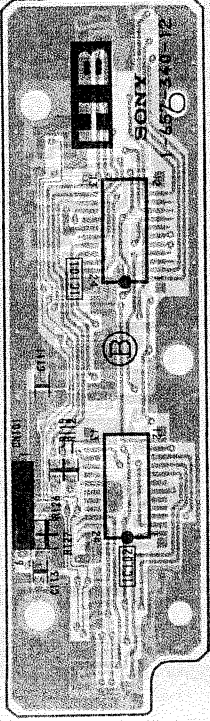


-  : Pattern from the side which enables seeing.
-  : Pattern of the rear side.


HC

(SYSTEM CONTROL) (BVM-14E5E/14E5U/14F5U, BKM-10R)

— HC BOARD — <Conductor Side>

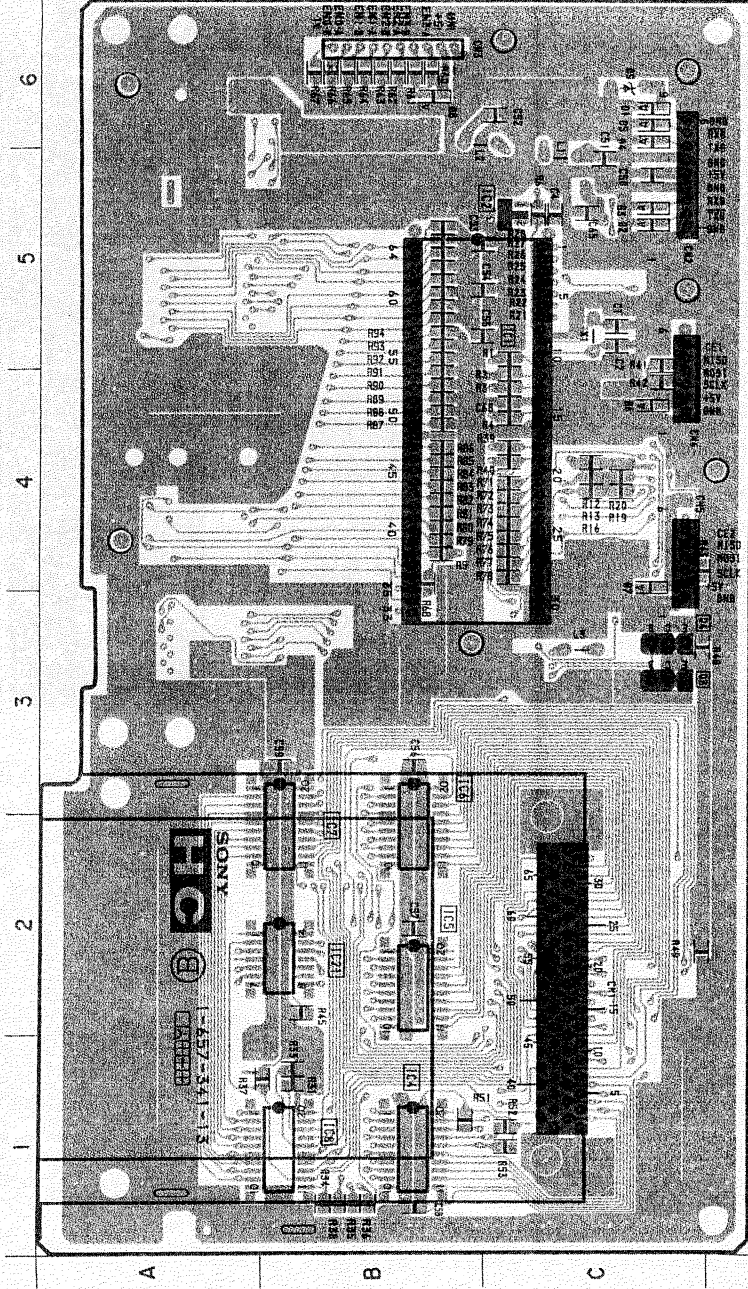

— HC BOARD — <Component Side>

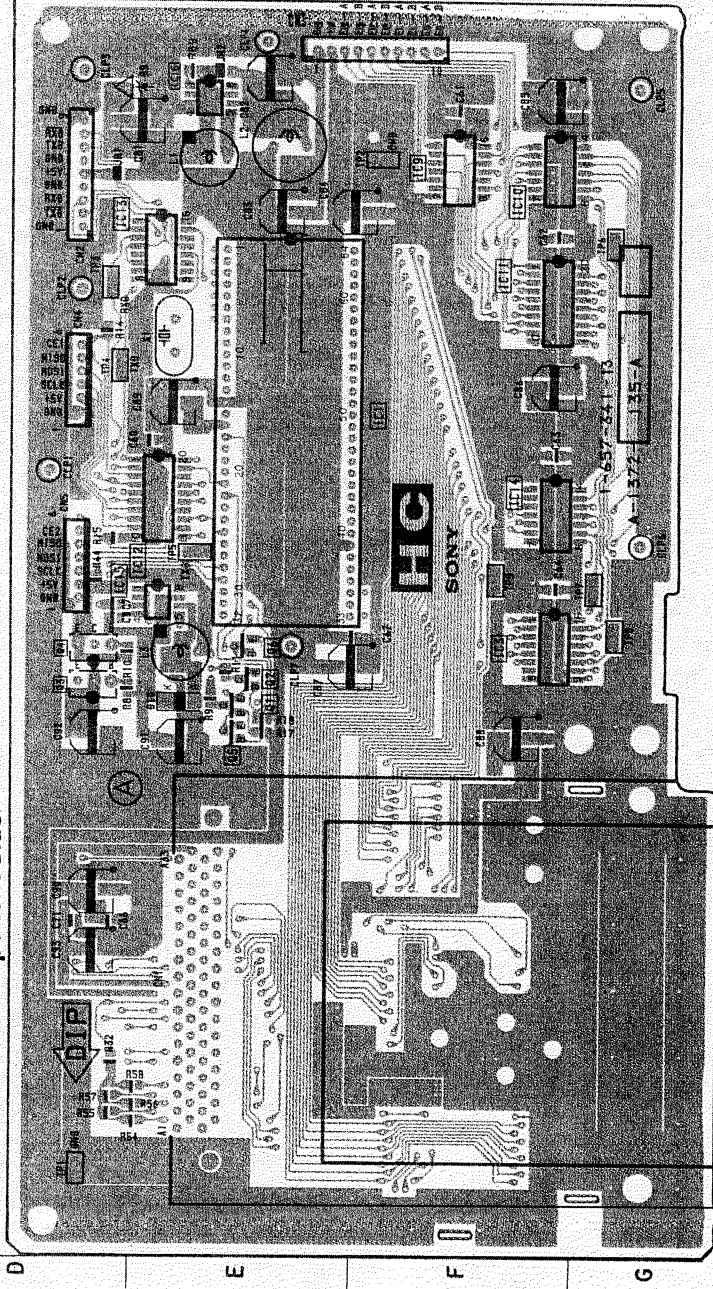

- : Pattern from the side which enables seating.
- : Pattern of the rear side.


TO HA BOARD
CN301

CN3
TOP








TO HD BOARD
CN102

TO HB BOARD
CN101



TO HA BOARD
CN201

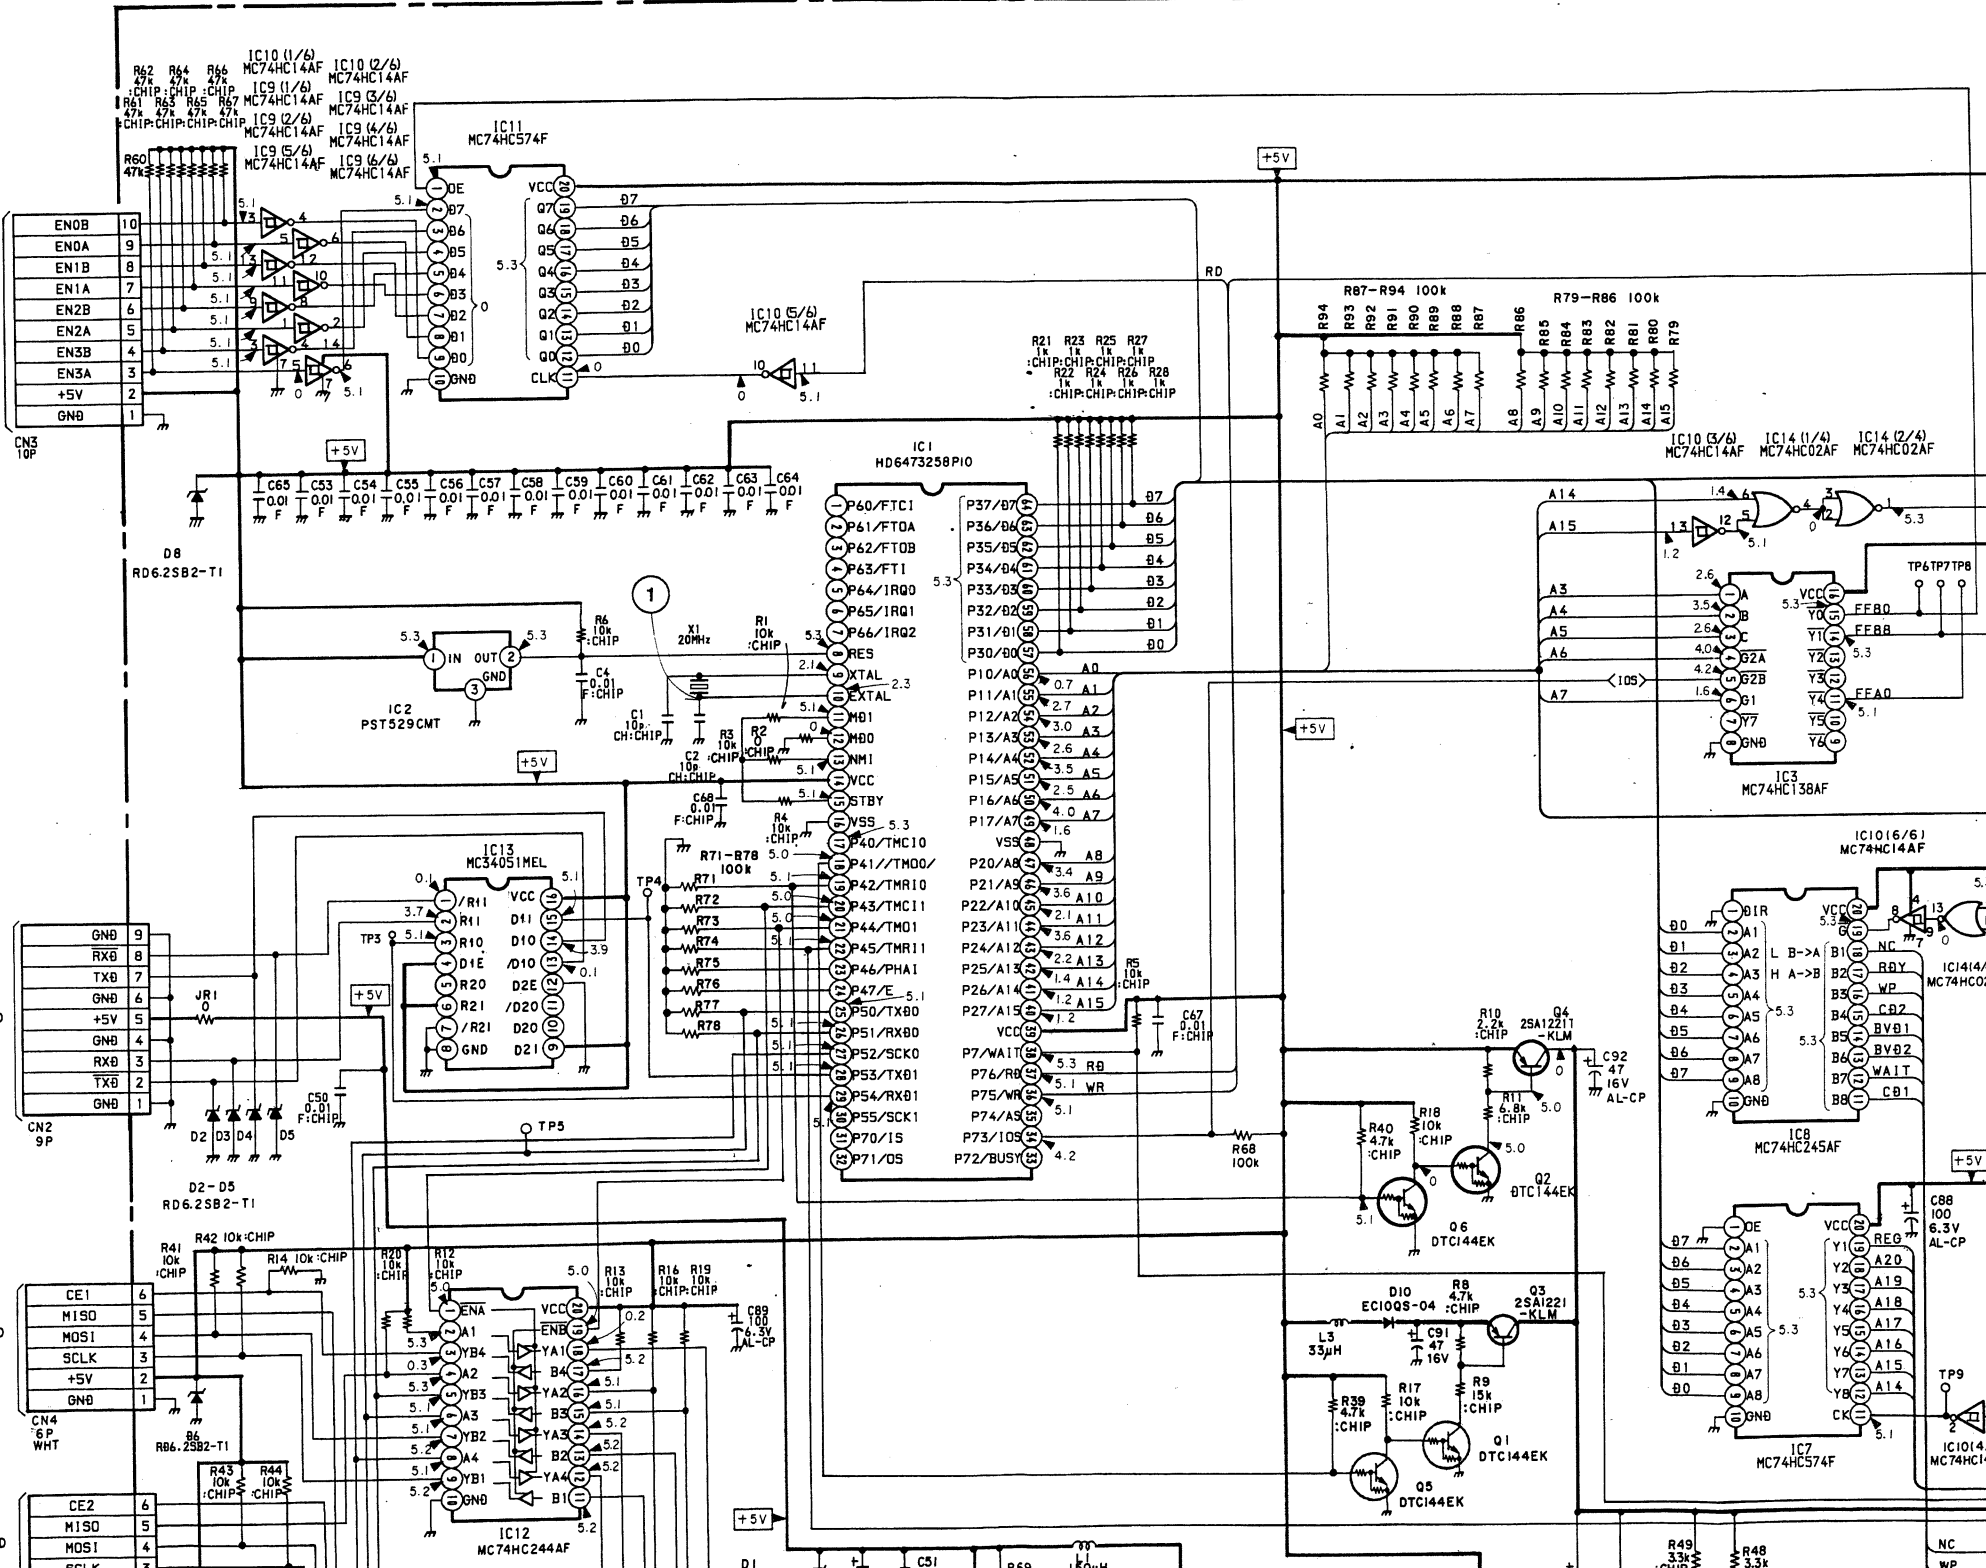

IC10 (1/6) MC74HC14AF
IC10 (2/6) MC74HC14AF
IC9 (1/6) IC9 (3/6) MC74HC14AF
IC9 (2/6) MC74HC14AF
IC9 (4/6) MC74HC14AF
IC9 (5/6) MC74HC14AF
IC9 (6/6) MC74HC14AF

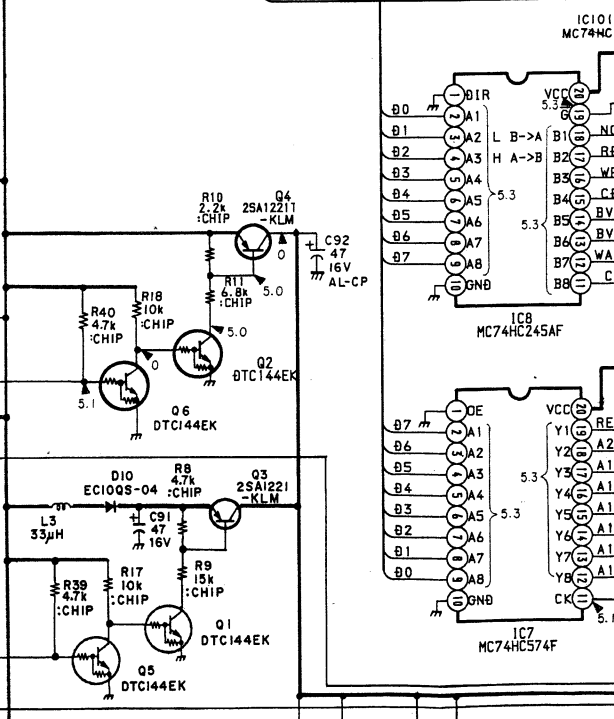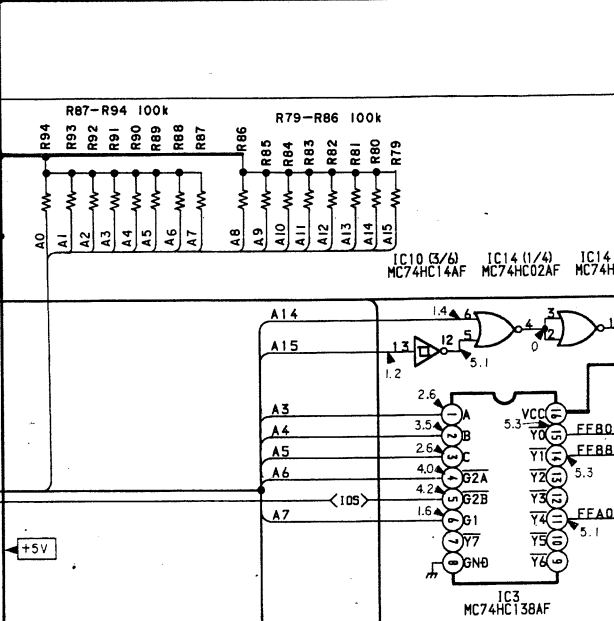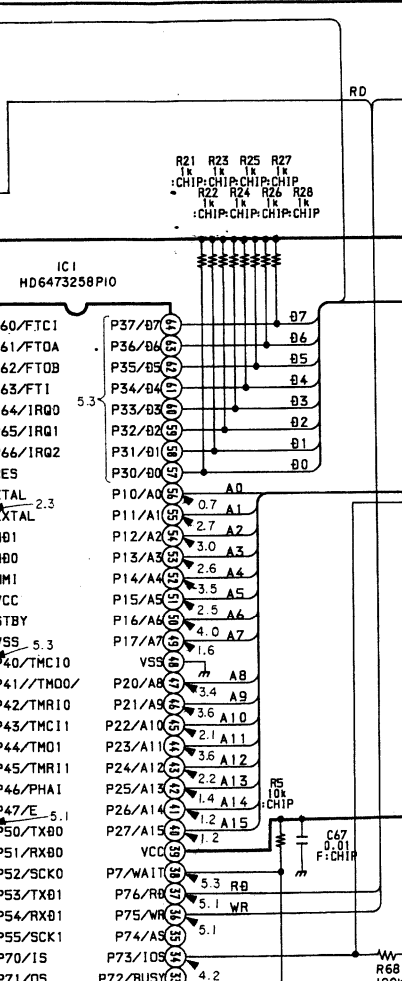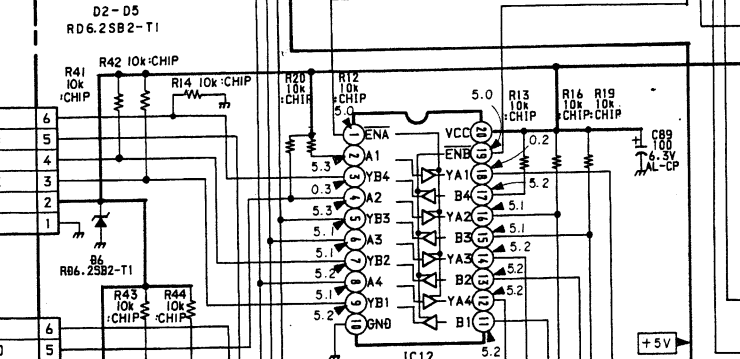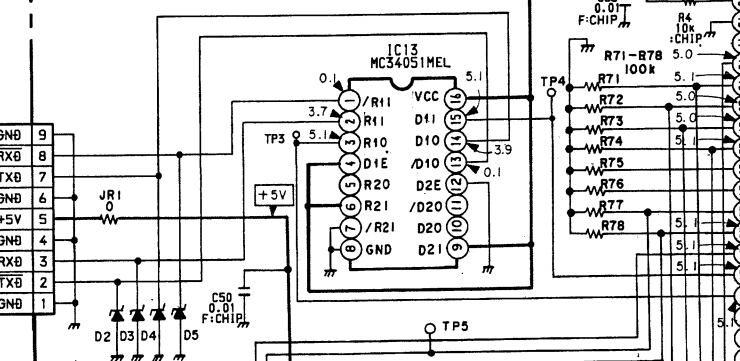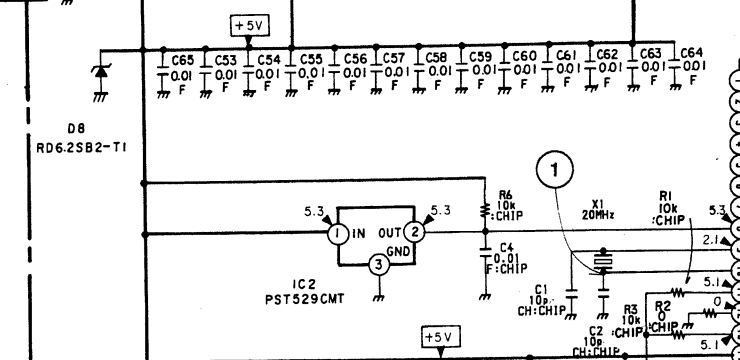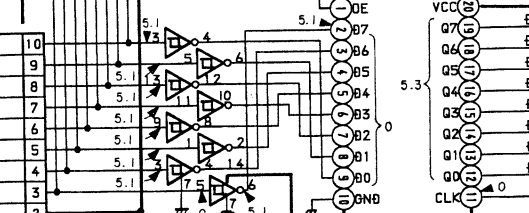


HC (SYSTEM CONTROL)

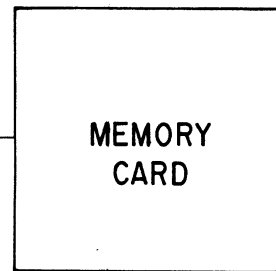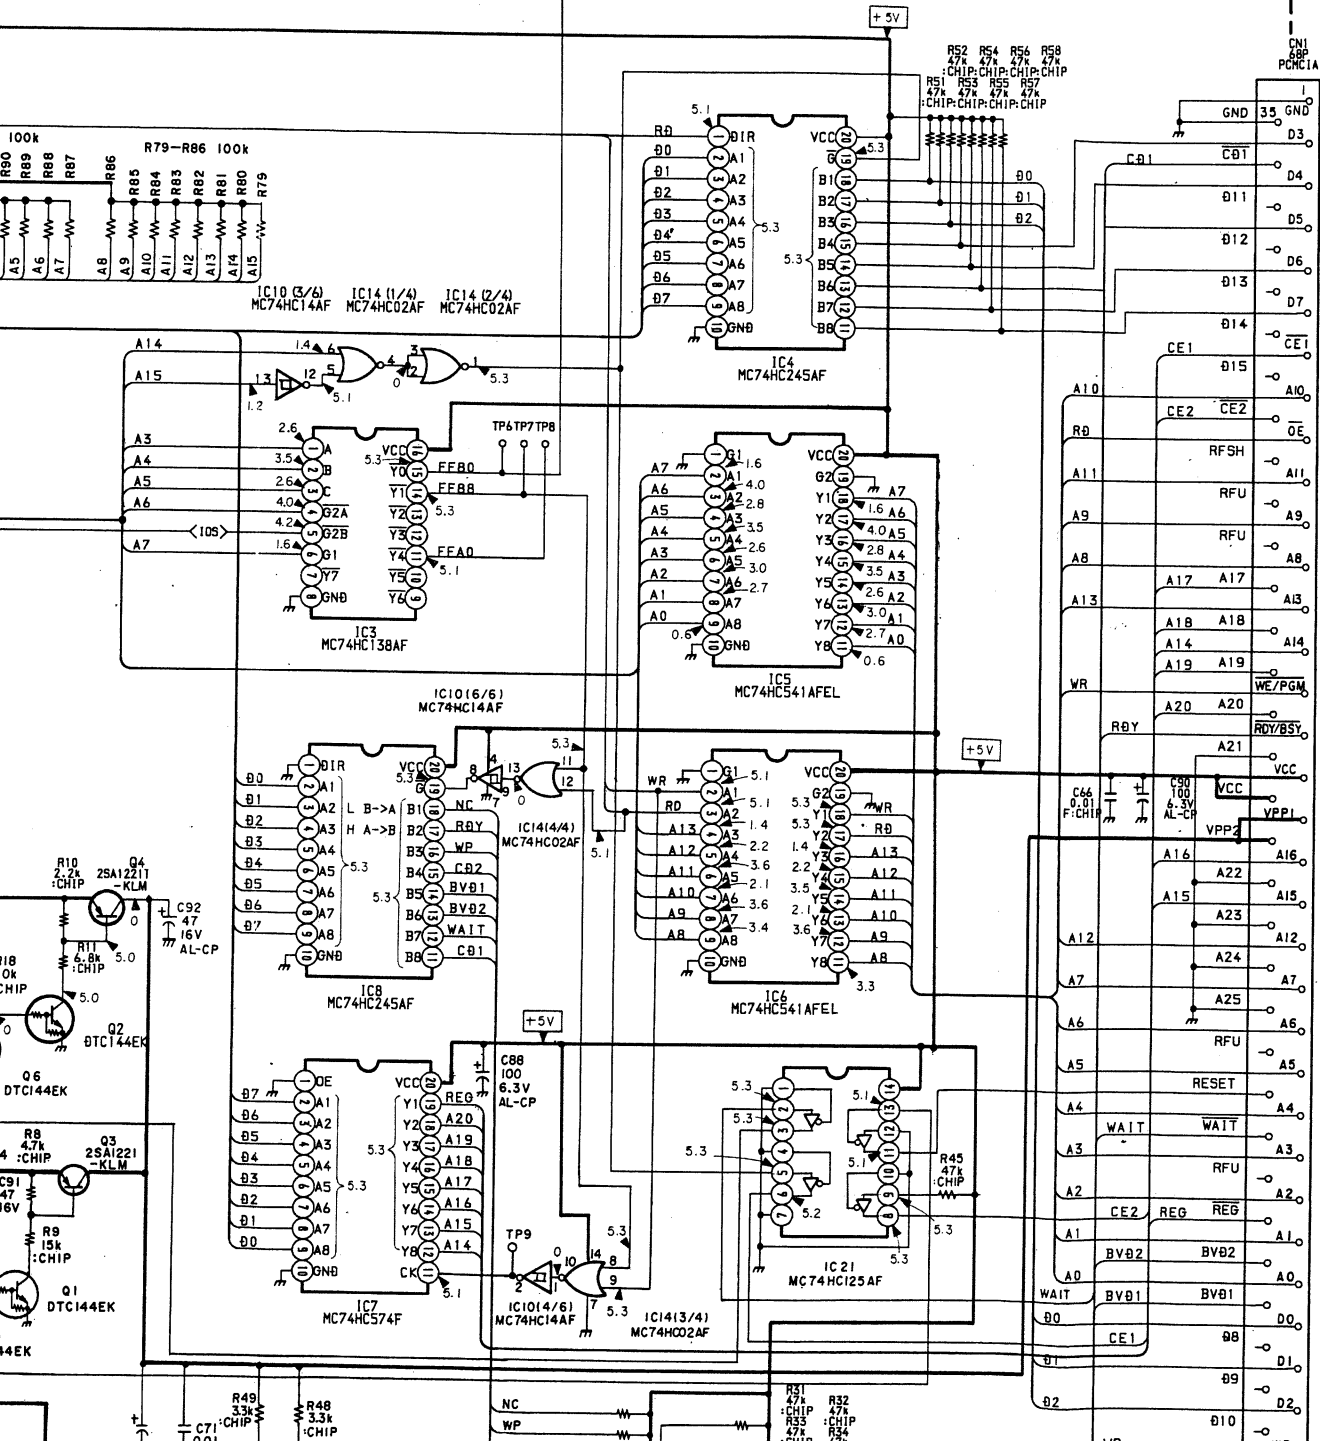

2	PST529CMT-T1	RE
3	TC74HC138AF	AC
4	TC74HC245AF	BU
5	MC74HC541AFEL	BU
6	MC74HC541AFEL	BU
7	TC74HC574AF	CA
8	TC74HC245AF	BU
9	TC74HC14AF	IN
10	TC74HC14AF	IN
11	TC74HC574AF	BU
12	TC74HC244AF	BU
13	MC34051MEL	RS
14	SN74HC02ANS	DE
16	MAX877CSA	RE
21	MC74HC125AF	BU
Q1	DTC144EK	VP
2	DTC144EK	VP
3	2SA1221	VP
4	2SA1221	VP
5	DTC144EK	VP
6	DTC144EK	VP
D1	RD6. 2S82	PR
2	RD6. 2S82	PR
3	RD6. 2S82	PR
4	RD6. 2S82	PR
5	RD6. 2S82	PR
6	RD6. 2S82	PR
7	RD6. 2S82	PR
8	RD6. 2S82	PR
10	EC10QS04-TE12L5	SW


• HC BOARD Wave

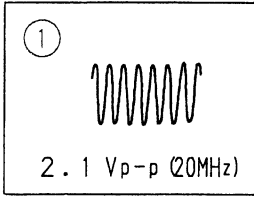

AF

GAIN CONTROL AMP

- TOP VIEW -

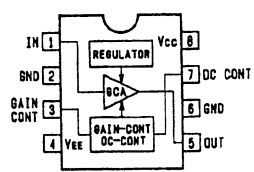

PHASE COMP OUT

VIDEO IN


PHASE COMP 8 PHASE COMP OUT

SYNC SEPA 6 VIDEO IN

BAND VCA


2

DEFLECTION COMPENSATION

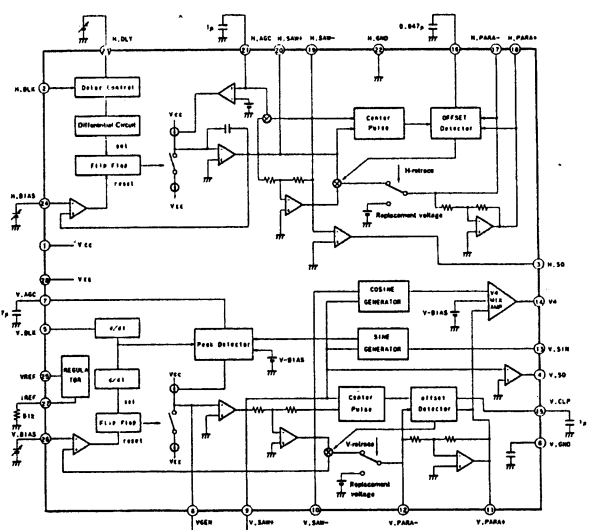


CXA1726M MULTIPLIER IC FOR DISPLAYS

- TOP VIEW -

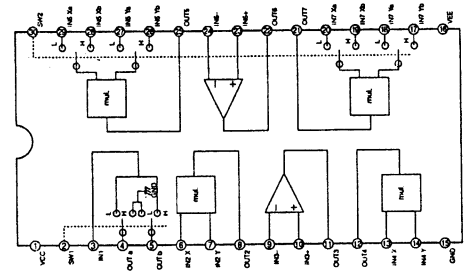


CAT28F020P (CATALYST SEMICONDUCTOR) C-MOS PROGRAMABLE ROM

- TOP VIEW -

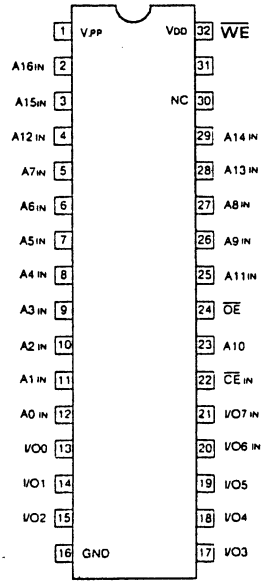

- TOP VIEW -

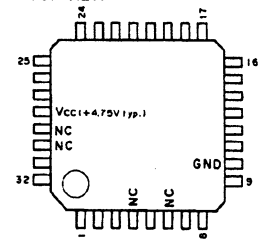

(Vcc = + 4.75V (typ.))

PIN No.	I/O	SIGNAL	PIN No.	I/O	SIGNAL
1	O	CSYNC	17	I	DATA
2	I	VLFFIN	18	I	WE
3	I	VSBLKIN	19	O	LPFOUT
4	-	NC	20	I	TRAP
5	O	CURRENT	21	O	RPOUT
6	-	NC	22	I	GAINSEL
7	O	VIDEOOUT	23	I	RPSEL
8	O	YOUT	24	I	RECIN
9	I	GAIN	25	I	YIN
10	-	GND	26	O	YSIG
11	O	VSOUT	27	I	VIDEOIN
12	O	HSOUT	28	-	Vcc
13	O	VCLPF	29	-	NC
14	O	YCLPF	30	-	NC
15	O	DATAL	31	I	VSIN
16	O	DATAH	32	I	HSIN

INPUT


- DATA : ID DATA
- GAIN : VIDEO/Y OUT AMP GAIN SELECT
- GAINSEL : Y AMP GAIN SELECT
- HSIN : H SYNC SEP.
- RECIN : REC Y
- RPSEL : Y R/P SELECT
- TRAP : TRAPPED Y
- VIDEOIN : VIDEO
- VLFFIN : LOW-PASSED CSYNC
- VSBLKIN : LOW-PASSED CSYNC
- VSIN : V SYNC SEP.
- WE : ID WRITE ENABLE
- YIN : PB Y

OUTPUT




- CSYNC : COMPOSITE SYNC
- DATAH : Y LEVEL HIGH
- DATAL : Y LEVEL LOW
- HSOUT : H SYNC
- LPFOUT : LOW-PASSED Y
- RPOUT : R/P Y
- VIDEOOUT : VIDEO
- VSOUT : V SYNC
- YOUT : Y MAIN
- YSIG : R/P SELECTED Y

OTHER

- CURRENT : REF CURRENT RESISTOR
- VCLPF : CAPACITOR FOR VIDEO CLAMP
- YCLPF : CAPACITOR FOR Y CLAMP

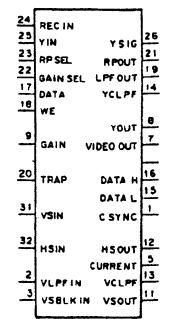


- TOP VIEW -

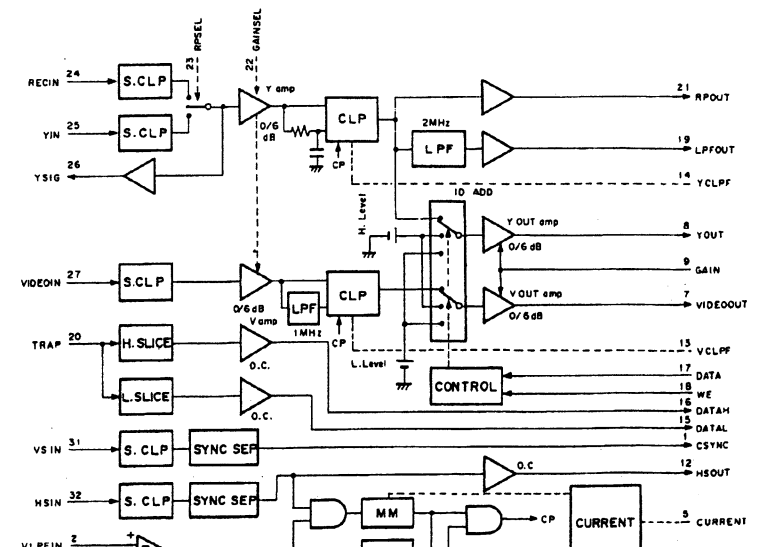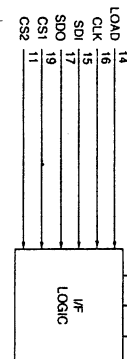
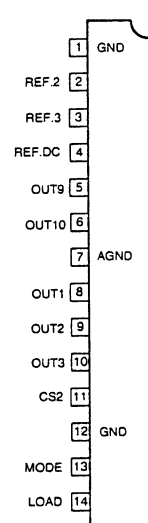


C-MOS SYNCHRONOUS SIGNAL GENERATOR

- TOP VIEW -

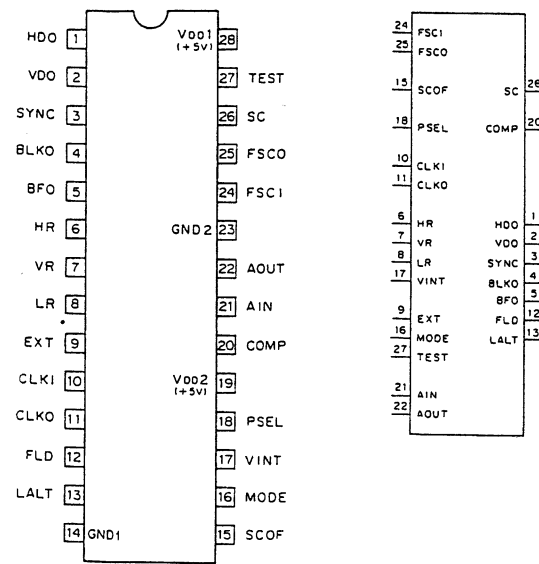


PIN NO.	IN	OUT	SYMBOL	PIN NO.	IN	OUT	SYMBOL	PIN NO.
1			NC	17	O	O	PC6	33
2			NC	18	O	O	PC7	34
3	O	O	PB1	19			NC	35
4	O	O	PB2	20	O	O	PD0	36
5	O	O	PB3	21	O	O	PD1	37
6	O	O	PB4	22	O	O	PD2	38
7	O	O	PB5	23	O	O	PD3	39
8	O	O	PB6	24	O	O	PD4	40
9	O	O	PB7	25			GND	41
10			GND	26	O		VDD(+5V)	42
11	O	O	PC0	27	O	O	PD5	43
12	O	O	PC1	28	O	O	PD6	44
13	O	O	PC2	29	O	O	PD7	45
14	O	O	PC3	30	O	O	DO	46
15	O	O	PC4	31	O	O	D1	47
16	O	O	PC5	32	O	O	D2	48

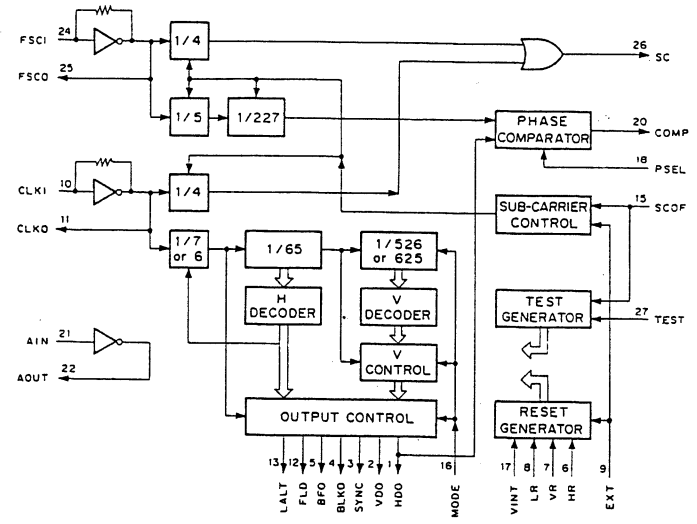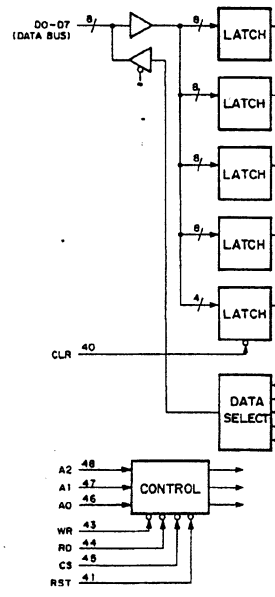

PIN NO.	SYMBOL	IN	OUT	IN	OUT
30	DO			PA0	34
31	D1			PA1	35
32	D2			PA2	36
33	D3			PA3	37
34	D4			PA4	38
35	D5			PA5	39
36	D6			PA6	40
37	D7			PA7	41
38	PB0			PA8	42
39	PB1			PA9	43
40	PB2			PA10	44
41	PB3			PA11	45
42	PB4			PA12	46
43	PB5			PA13	47
44	PB6			PA14	48
45	PB7			PA15	49
46	PC0			PA16	50
47	PC1			PA17	51
48	PC2			PA18	52
49	PC3			PA19	53
50	PC4			PA20	54
51	PC5			PA21	55
52	PC6			PA22	56
53	PC7			PA23	57
54	DO			PA24	58
55	D1			PA25	59
56	D2			PA26	60
57	D3			PA27	61
58	D4			PA28	62
59	D5			PA29	63
60	D6			PA30	64
61	D7			PA31	65
62	PB0			PA32	66
63	PB1			PA33	67
64	PB2			PA34	68
65	PB3			PA35	69
66	PB4			PA36	70
67	PB5			PA37	71
68	PB6			PA38	72
69	PB7			PA39	73
70	PC0			PA40	74
71	PC1			PA41	75
72	PC2			PA42	76
73	PC3			PA43	77
74	PC4			PA44	78
75	PC5			PA45	79
76	PC6			PA46	80
77	PC7			PA47	81
78	DO			PA48	82
79	D1			PA49	83
80	D2			PA50	84
81	D3			PA51	85
82	D4			PA52	86
83	D5			PA53	87
84	D6			PA54	88
85	D7			PA55	89
86	PB0			PA56	90
87	PB1			PA57	91
88	PB2			PA58	92
89	PB3			PA59	93
90	PB4			PA60	94
91	PB5			PA61	95
92	PB6			PA62	96
93	PB7			PA63	97
94	PC0			PA64	98
95	PC1			PA65	99
96	PC2			PA66	100
97	PC3			PA67	101
98	PC4			PA68	102
99	PC5			PA69	103
100	PC6			PA70	104
101	PC7			PA71	105
102	DO			PA72	106
103	D1			PA73	107
104	D2			PA74	108
105	D3			PA75	109
106	D4			PA76	110
107	D5			PA77	111
108	D6			PA78	112
109	D7			PA79	113
110	PB0			PA80	114
111	PB1			PA81	115
112	PB2			PA82	116
113	PB3			PA83	117
114	PB4			PA84	118
115	PB5			PA85	119
116	PB6			PA86	120
117	PB7			PA87	121
118	PC0			PA88	122
119	PC1			PA89	123
120	PC2			PA90	124
121	PC3			PA91	125
122	PC4			PA92	126
123	PC5			PA93	127
124	PC6			PA94	128
125	PC7			PA95	129
126	DO			PA96	130
127	D1			PA97	131
128	D2			PA98	132
129	D3			PA99	133
130	D4			PA100	134
131	D5			PA101	135
132	D6			PA102	136
133	D7			PA103	137
134	PB0			PA104	138
135	PB1			PA105	139
136	PB2			PA106	140
137	PB3			PA107	141
138	PB4			PA108	142
139	PB5			PA109	143
140	PB6			PA110	144
141	PB7			PA111	145
142	PC0			PA112	146
143	PC1			PA113	147
144	PC2			PA114	148
145	PC3			PA115	149
146	PC4			PA116	150
147	PC5			PA117	151
148	PC6			PA118	152
149	PC7			PA119	153
150	DO			PA120	154
151	D1			PA121	155
152	D2			PA122	156
153	D3			PA123	157
154	D4			PA124	158
155	D5			PA125	159
156	D6			PA126	160
157	D7			PA127	161
158	PB0			PA128	162
159	PB1			PA129	163
160	PB2			PA130	164
161	PB3			PA131	165
162	PB4			PA132	166
163	PB5			PA133	167
164	PB6			PA134	168
165	PB7			PA135	169
166	PC0			PA136	170
167	PC1			PA137	171
168	PC2			PA138	172
169	PC3			PA139	173
170	PC4			PA140	174
171	PC5			PA141	175
172	PC6			PA142	176
173	PC7			PA143	177
174	DO			PA144	178
175	D1			PA145	179
176	D2			PA146	180
177	D3			PA147	181
178	D4			PA148	182
179	D5			PA149	183
180	D6			PA150	184
181	D7			PA151	185
182	PB0			PA152	186
183	PB1			PA153	187
184	PB2			PA154	188
185	PB3			PA155	189
186	PB4			PA156	190
187	PB5			PA157	191
188	PB6			PA158	192
189	PB7			PA159	193
190	PC0			PA160	194
191	PC1			PA161	195
192	PC2			PA162	196
193	PC3			PA163	197
194	PC4			PA164	198
195	PC5			PA165	199
196	PC6			PA166	200
197	PC7			PA167	201
198	DO			PA168	202
199	D1			PA169	203
200	D2			PA170	204
201	D3			PA171	205
202	D4			PA172	206
203	D5			PA173	207
204	D6			PA174	208
205	D7			PA175	209
206	PB0			PA176	210
207	PB1			PA177	211
208	PB2			PA178	212
209	PB3			PA179	213
210	PB4			PA180	214
211	PB5			PA181	215
212	PB6			PA182	216
213	PB7			PA183	217
214	PC0			PA184	218
215	PC1			PA185	219
216	PC2			PA186	220
217	PC3			PA187	221
218	PC4			PA188	222
219	PC5			PA189	223
220	PC6			PA190	224
221	PC7			PA191	225
222	DO			PA192	226
223	D1			PA193	227
224	D2			PA194	228
225	D3			PA195	229
226	D4			PA196	230
227	D5			PA197	231
228	D6			PA198	232
229	D7			PA199	233
230	PB0			PA200	234
231	PB1			PA201	235
232	PB2			PA202	236
233	PB3			PA203	237
234	PB4			PA204	238
235	PB5			PA205	239
236	PB6			PA206	240
237	PB7			PA207	241
238	PC0			PA208	242
239	PC1			PA209	243
240	PC2			PA210	244
241	PC3			PA211	245
242	PC4			PA212	246
243	PC5			PA213	247
244	PC6			PA214	248
245	PC7			PA215	249
246	DO			PA216	250
247	D1			PA217	251
248	D2			PA218	252
249	D3			PA219	253
250	D4			PA220	254
251	D5			PA221	255
252	D6			PA222	256
253	D7			PA223	257
254	PB0			PA224	258
255	PB1			PA225	259
256	PB2			PA226	260
257	PB3			PA227	261
258	PB4			PA228	262
259	PB5			PA229	263
260	PB6			PA230	264
261	PB7			PA231	265
262	PC0			PA232	266
263	PC1			PA233	267
264	PC2			PA234	268
265	PC3			PA235	269
266	PC4			PA236	270
267	PC5			PA237	271
268	PC6			PA238	272
269	PC7			PA239	273
270	DO			PA240	274
271	D1			PA241	275
272	D2			PA242	276
273	D3			PA243	


CXD1132Q (SONY) FLAT PACKAGE
C-MOS TIME CODE GENERATOR/READER

- TOP VIEW -

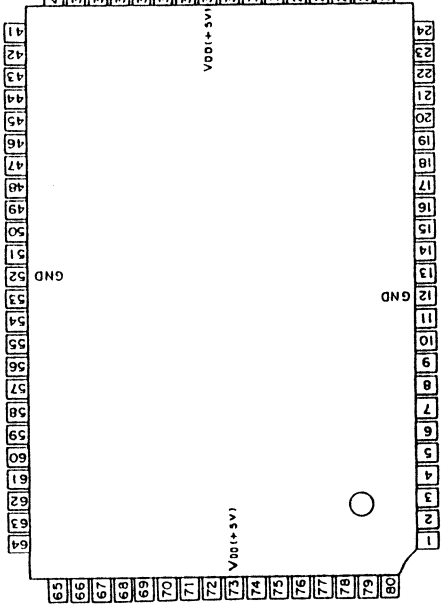



CXD1171M (SONY) FLAT PACKAGE
C-MOS 8-BIT DIA CONVERTER

- TOP VIEW -

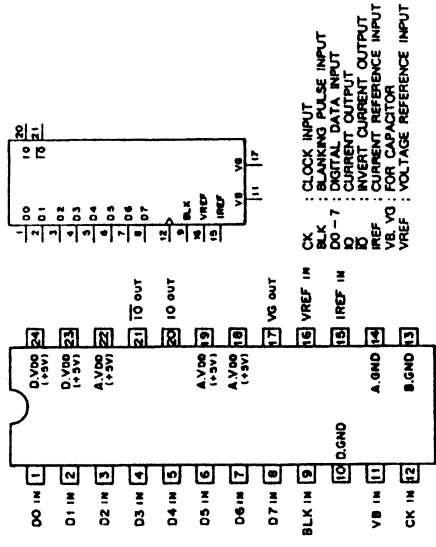


CK : CLOCK INPUT
BLK : BLANKING PULSE INPUT
DO-7 : DIGITAL DATA INPUT
DO : CURRENT OUTPUT
IO : INVERT CURRENT OUTPUT
REF : CURRENT REFERENCE INPUT
VEL, VG : FOR CAPACITOR
VREF : VOLTAGE REFERENCE INPUT

PIN NO.	I/O	SYMBOL	PIN NO.	I/O	SYMBOL	PIN NO.	I/O	SYMBOL	PIN NO.	I/O	SYMBOL			
1	I/O	DB5	17	I	CGS	33	-	V _{DD}	49	I	C1MI	65	I	TCIN
2	I/O	DB4	18	I	CWR	34	I/O	DA1	50	O	C1MO	56	O	DCLK
3	I/O	DB3	19	I	CRD	35	I/O	DA0	51	O	C2MO	61	O	DATA
4	I/O	DB2	20	O	INT	36	I	DSP	52	-	GND	68	O	RFLD
5	I/O	DB1	21	I	STBY	37	O	DTSE	53	O	CKO	69	O	RDSY
6	I/O	DB0	22	I	TST1	38	O	VRCK	54	I	CKIN	70	O	LRP
7	O	STOP	23	I	TST2	39	I	SLLM	55	I	SLCK	71	O	BUSY
8	I/O	DT	24	I	TST3	40	O	RVDD	56	I	GCSI	72	I	BA2
9	I/O	DB	25	I	PON	41	I	RCSI	57	I	S1	73	-	V _{DD}
10	I/O	D5	26	I	FLDI	42	I	VITC	58	O	VTGO	74	I	BA1
11	I/O	D4	27	I	RTIM	43	O	FRMI	59	O	VTO	75	I	BA0
12	-	GND	28	I	CDIR	44	O	FRMO	60	O	LTCO	76	I	BYVR
13	I/O	D3	29	I	CTLI	45	O	GLSY	61	I	LRES	77	I	BPD
14	I/O	D2	30	I/O	DWR	46	I	HOK	62	I	VCEI	78	I	BGS
15	I/O	D1	31	I/O	DA3	47	O	HOO	63	O	LSHO	79	I/O	SD7
16	I/O	D0	32	I/O	DA2	48	O	VDD	64	I	C2MI	80	I/O	SD6

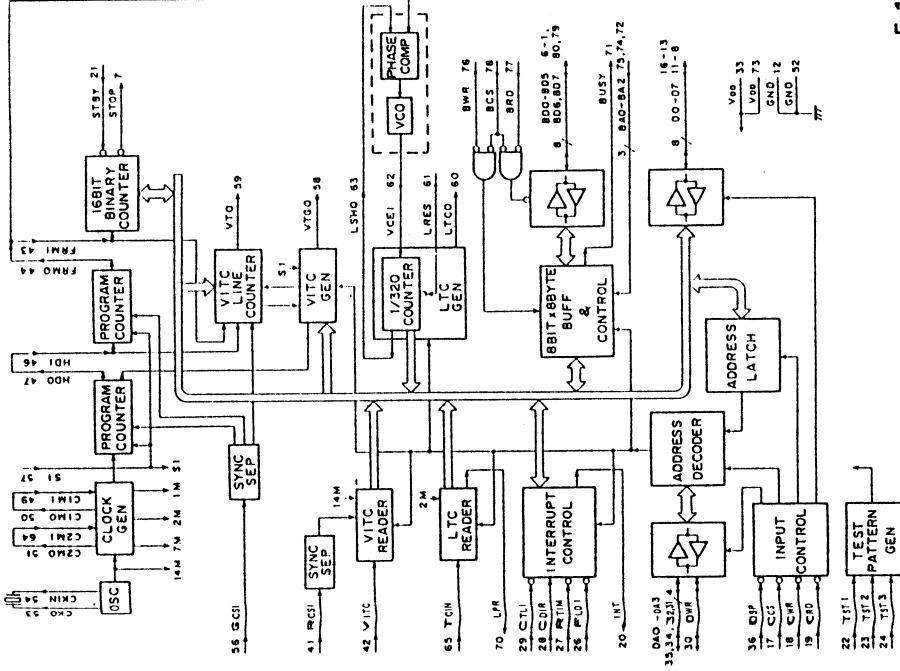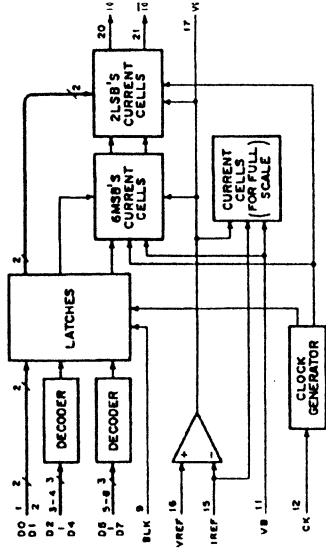



CXD2122AO
VIDEO ASPECT RATIO IDENTIFICATION SIGNAL ENCODER/DECODER

- TOP VIEW -

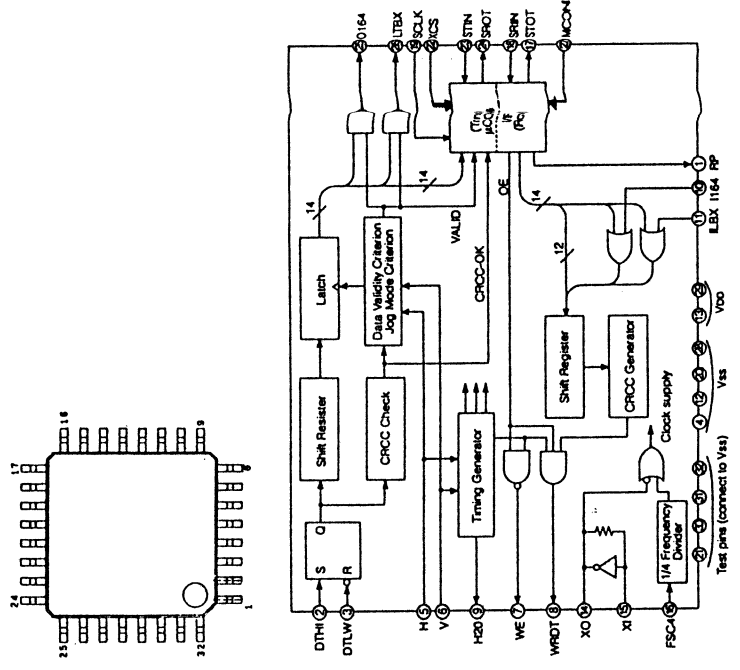


CXD2343S (SONY)
N-MOS SYNCHRONOUS 10-BIT BINARY COUNTER

- TOP VIEW -

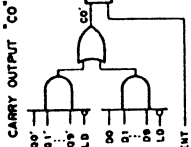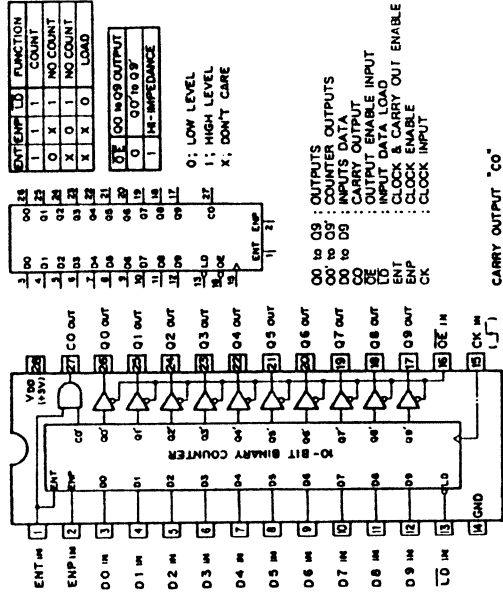



CXK58257AP10LL (SONY)
C-MOS 32768-WORDx8-BIT STATIC RAM

- TOP VIEW -

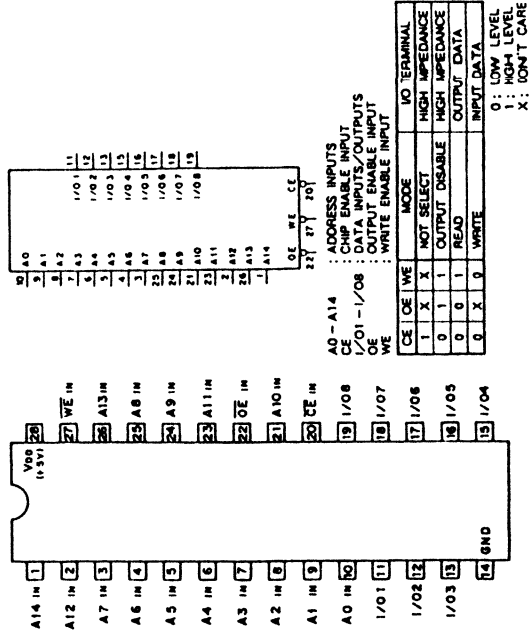

CXP2003M
C-MOS SERIAL TO PARALLEL CONVERTER

- TOP VIEW -

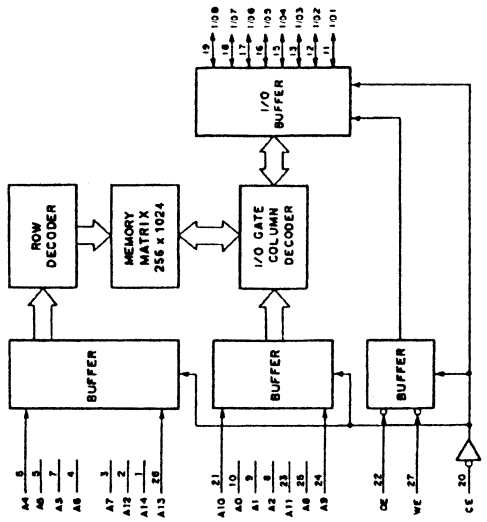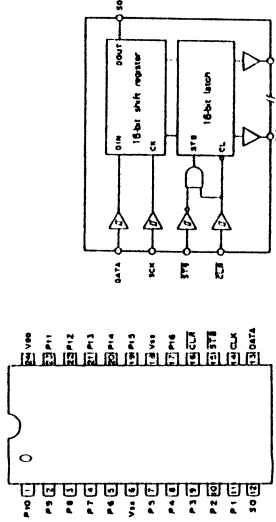


FA5301N

- TOP VIEW -





HD6473258P10
C-MOS 8 BIT CHIP ONE MICROCOMPUTER FOR MONITOR

- TOP VIEW -

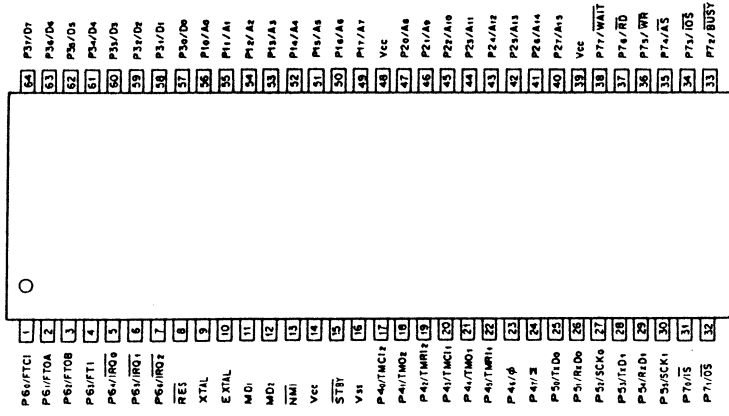


IR2112 (IRF)
C-MOS HIGH VOLTAGE MOS GATE DRIVER

- TOP VIEW -

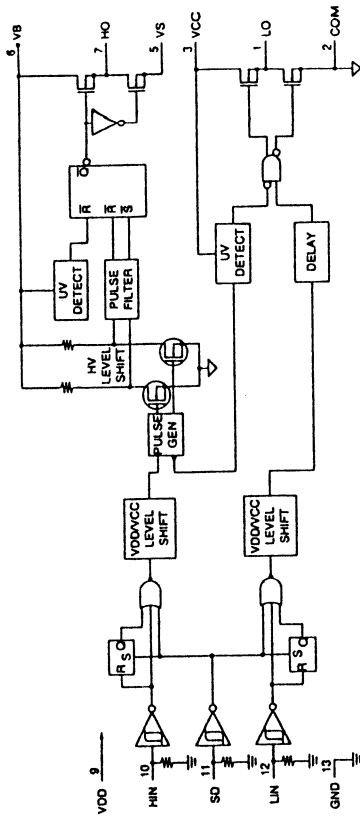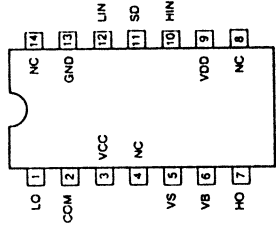



LA6510 (SANYO)
DUAL POWER OPERATIONAL AMPLIFIER

- SIDE VIEW -

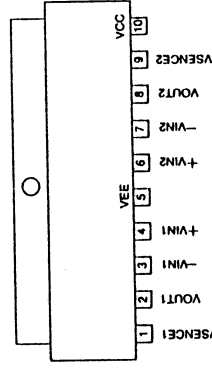


HN27C01AG-12 (HITACHI)
C-MOS PROGRAMMABLE ROM

- TOP VIEW -

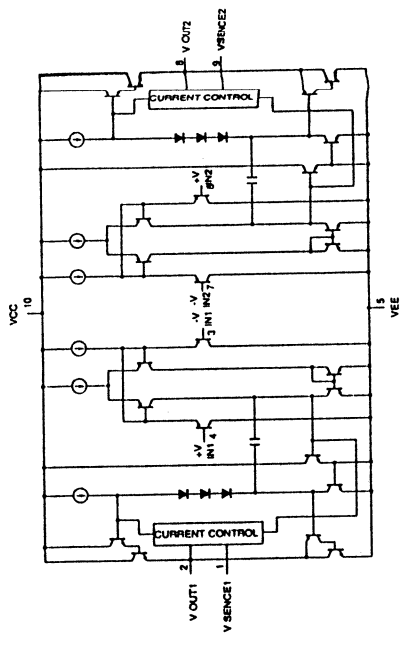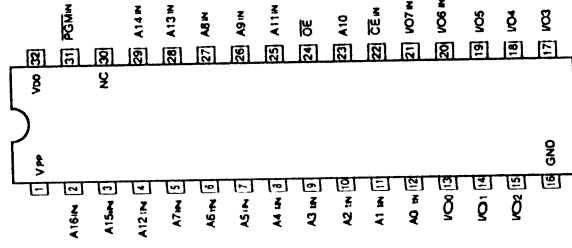


HN27C258AG-10

- TOP VIEW -




LA7845 (SANYO)
VERTICAL OUTPUT FOR TV DISPLAY

- SIDE VIEW -

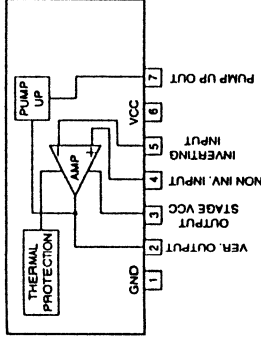


LM358PS
DUAL OPERATIONAL AMPLIFIERS

- TOP VIEW -

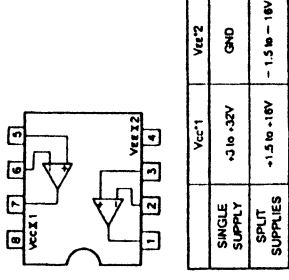


LM2940CT:5.0 (NSC)
C-MOS LOW DROPOUT REGULATOR

- PRINTED SIDE VIEW -

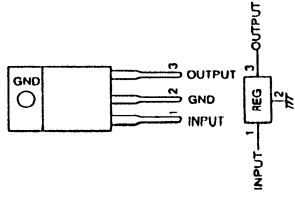


LM2990T:5.0 (NSC)
C-MOS NEGATIVE LOW DROPOUT REGULATOR

- PRINTED SIDE VIEW -

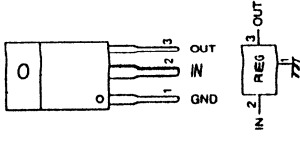


LM339NS
QUAD COMPARATORS

- TOP VIEW -

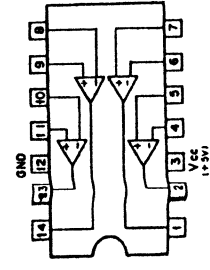


LM393P
LM393PS
μPC393G2

- TOP VIEW -

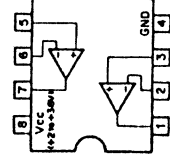


LM7812CT
T478155
POSITIVE VOLTAGE REGULATOR

- FRONT VIEW -

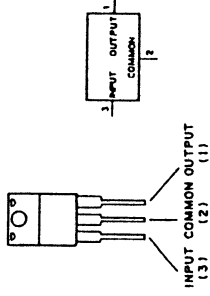


LM7912CT
NJM7912FA
NEGATIVE VOLTAGE REGULATOR

- FRONT VIEW -

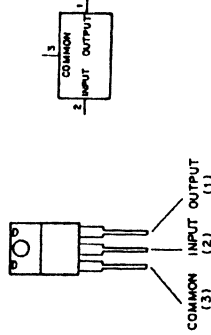

LTC485CS8
TC7W22FU

- TOP VIEW -






MB883468PEV (FUJITSU)
C-MOS DIA CONVERTER

- TOP VIEW -





MA2820 (SHINDEN)
POWER SUPPLY

- PRINTED SIDE VIEW -

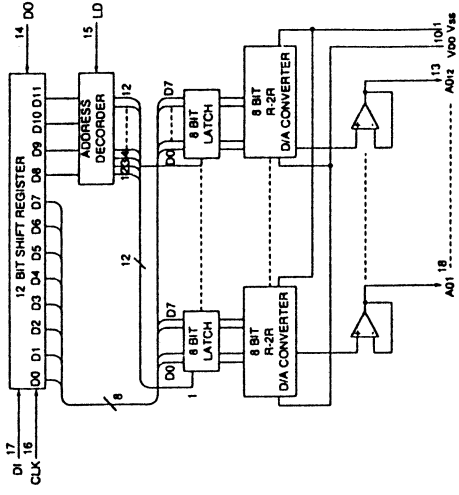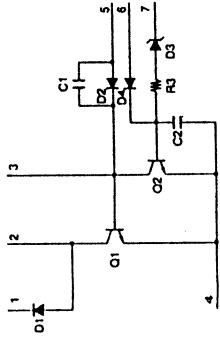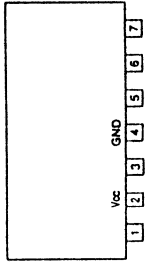

MAX202CS (MAXIM)
C-MOS RS-232 TRANSMITTER/RECEIVER

- TOP VIEW -

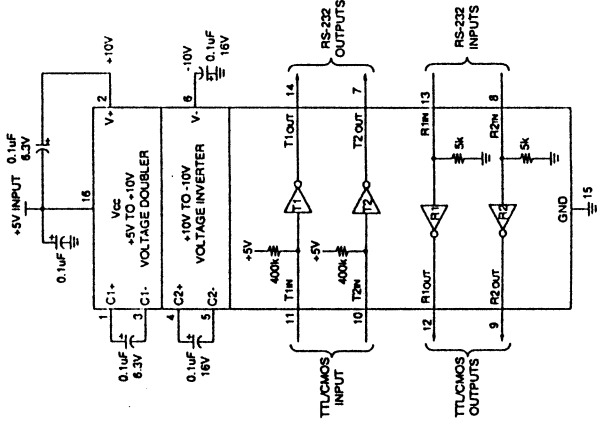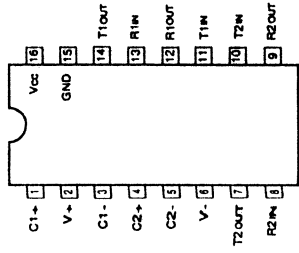


MAX877CSA

- TOP VIEW -



MB88351PVY (FUJITSU) FLAT PACKAGE
C-MOS 12-BIT D/A CONVERTER WITH OPERATIONAL AMPLIFIER

- TOP VIEW -

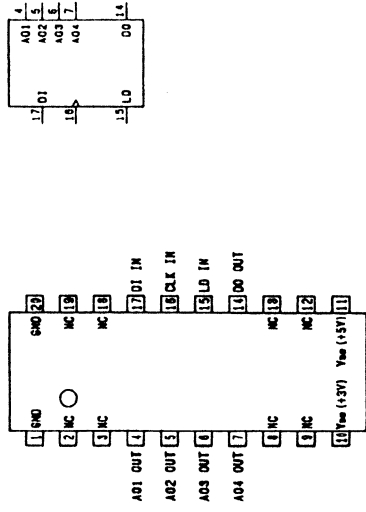

INPUT
: SHIFT CLOCK
CLK : SERIAL DATA
LD : DECODER AND D/A REGISTER TO LOAD



OUTPUT
A01 - A04 : ANALOG DATA
DOO : MSB BIT DATA IN 15-BIT SHIFT REGISTER

D12	D13	D14	ADDRESS SELECT
0	0	0	DONT CARE
0	0	1	A01 SELECT
0	1	0	A02 SELECT
0	1	1	A03 SELECT
1	0	0	A04 SELECT
1	0	1	DONT CARE
1	1	0	DONT CARE
1	1	1	DONT CARE

0 : LOW LEVEL
1 : HIGH LEVEL



MB89613PF (FUJITSU)
C-MOS 8 BIT ONE CHIP MICRO CONTROLLER

- TOP VIEW -

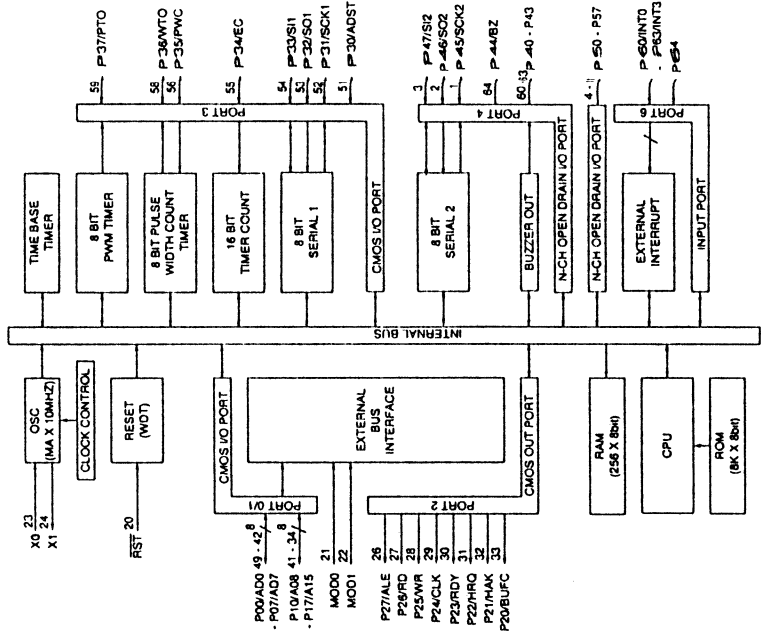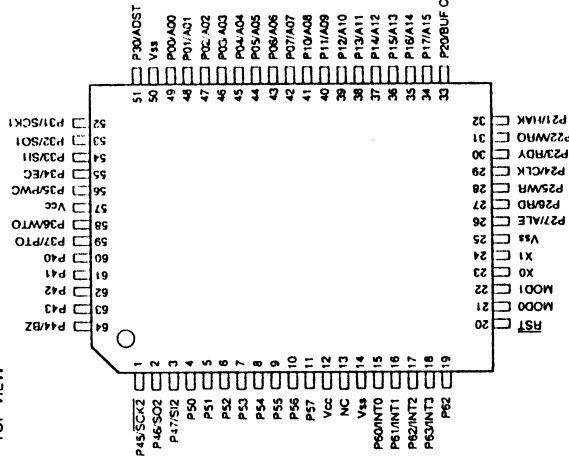


MC34061MEL
RS-422 LINE DRIVER/RECEIVER

- TOP VIEW -

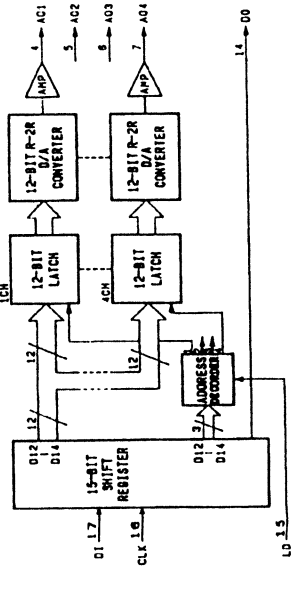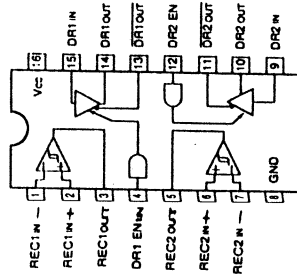


MC34051MEL
RS-422 LINE DRIVER/RECEIVER

- TOP VIEW -

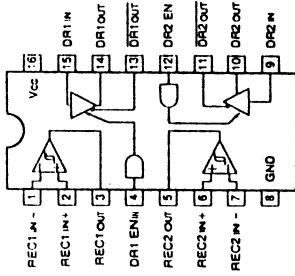

MC74HC02AF
SN74HC02ANS
C-MOS QUAD 2-INPUT NOR GATES

- TOP VIEW -

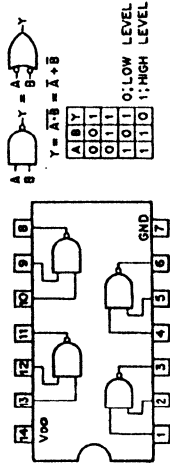


NOTE:

TYPE	V _{cc}
TC74HC02	+2 to +5.5V
TC74HC02	+5V
74HC02	+4.5 to +5.5V
OTHER TYPES	+2 to +6V

MC74HC02AF
SN74HC02ANS
C-MOS QUAD 2-INPUT NOR GATES

- TOP VIEW -

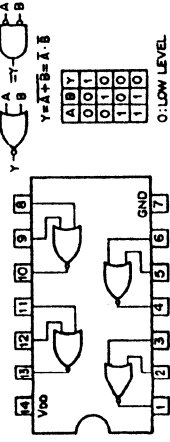


NOTE:

TYPE	V _{cc}
HC	+2 to +6V
AC/MC	+2 to +5.5V
HC/MCT	+5V

MC74HC08AF
C-MOS QUAD 2-INPUT AND GATES

- TOP VIEW -

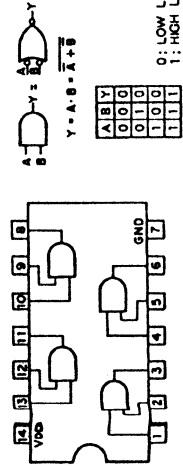


NOTE:

TYPE	V _{cc}
TC74HC08	+2 to +6.5V
MC74HC08M	+2 to +8V
TC408	+2 to +8V
OTHER TYPES	+2 to +6V

0: LOW LEVEL
1: HIGH LEVEL

MC74HC10F
C-MOS 3-INPUT NAND GATE

- TOP VIEW -

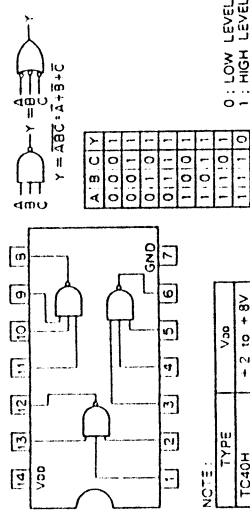


NOTE:

TYPE	V _{cc}
TC40H	+2 to +8V
OTHERS	+2 to +6V

0: LOW LEVEL
1: HIGH LEVEL

MC74HC11F
C-MOS 3-INPUT POSITIVE-AND GATES

- TOP VIEW -

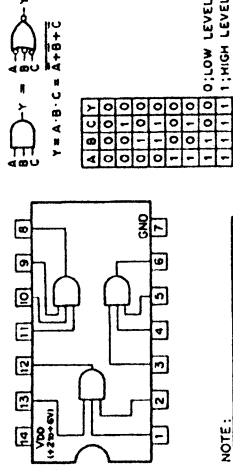


NOTE:

TYPE	V _{cc}
TC74HC11	+2V to +5.5V
OTHER TYPES	+2V to +6V

0: LOW LEVEL
1: HIGH LEVEL

MC74HC123AF
C-MOS DUAL RETRIGGERABLE MONOSTABLE MULTIVIBRATORS

- TOP VIEW -

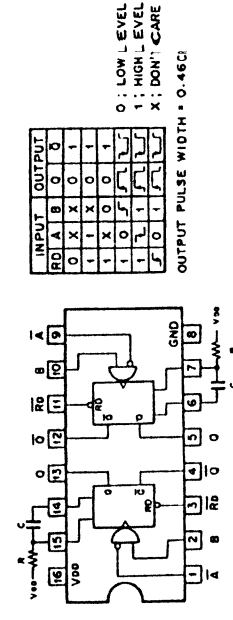


OUTPUT PULSE WIDTH = 0.46CI

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE

MC74HC125AF
TC74HC125AF
C-MOS BUS BUFFER GATES WITH 3-STATE OUTPUT

- TOP VIEW -

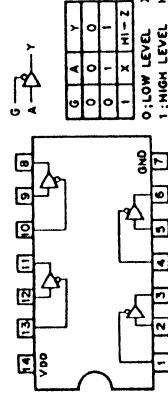


NOTE:

TYPE	V _{DD}
AC	+2 to +6V
HC	+2 to +5.5V
LVT	+2.7 to +3.6V

MC74HC163AF
MC74HC163AF
C-MOS PRESETTABLE SYNCHRONOUS 4-BIT BINARY COUNTER


- TOP VIEW -

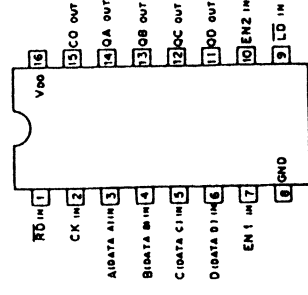

MODE SELECTION CONTROL INPUTS

RD	LD	TE	ENZ	MODE
0	X	X	X	RESET (SYNCHRONOUS)
1	0	X	X	PRESET (SYNCHRONOUS)
1	1	0	X	NO COUNT
1	1	1	0	NO COUNT
1	1	1	1	COUNT

CARRY OUTPUT "CO"




CO IS HIGH WHEN EN2 INPUT IS HIGH AND COUNT IS "15".

COUNT SEQUENCE

COUNT	Q0	Q1	Q2	Q3	QA
0	0	0	0	0	0
1	0	0	0	1	1
2	0	0	1	0	2
3	0	0	1	1	3
4	0	1	0	0	4
5	0	1	0	1	5
6	0	1	1	0	6
7	0	1	1	1	7
8	1	0	0	0	8
9	1	0	0	1	9
10	1	0	1	0	10
11	1	0	1	1	11
12	1	1	0	0	12
13	1	1	0	1	13
14	1	1	1	0	14
15	1	1	1	1	15


NOTE:

TYPE	V _{DD}
HC	+2 to +6V
AC/VHC	+2 to +5.5V
HCT/ACT/HCT	+5V



MC74HC138AF
C-MOS 3-TO-8 LINE DECODER/DEMUL TIPLEXER

- TOP VIEW -

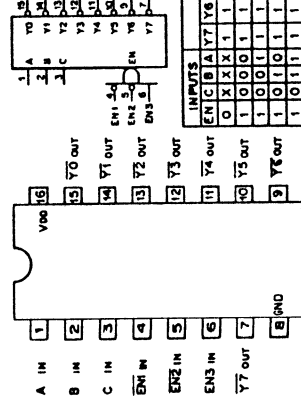

NOTE:

TYPE	V _{DD}
74HC138 TYPE	+5V
74ACT138 TYPE	+4.5 to +5.5V
TC74VHC138	+2 to +5.5V
OTHER TYPES	+2 to +6V


INPUTS

EN	C	B	A	Y0	Y1	Y2	Y3	Y4	Y5	Y6	Y7	Y0
0	X	X	X	1	1	1	1	1	1	1	1	1
1	0	0	0	1	1	1	1	1	1	1	1	0
1	0	0	1	1	1	1	1	1	1	1	0	1
1	0	1	0	1	1	1	1	1	1	1	0	1
1	0	1	1	1	1	1	1	1	1	1	0	1
1	1	0	0	1	1	1	1	1	1	1	0	1
1	1	0	1	1	1	1	1	1	1	1	0	1
1	1	1	0	1	1	1	1	1	1	1	0	1
1	1	1	1	1	1	1	1	1	1	1	0	1

EN = ENT, EN2, EN3
0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE

MC74HC164FL
C-MOS 8-BIT SERIAL-IN-PARALLEL-OUT SHIFT REGISTER

- TOP VIEW -

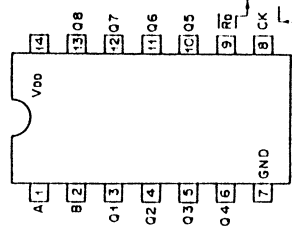

INPUTS

RD	CK	A	B	Q1	Q2	...Q8			
0	X	X	X	0	0	...0			
1	0	X	X	Q1	Q2	...Q8			
1	1	0	X	0	Q1	...Q8			
1	1	1	0	0	Q1	...Q8			
1	1	1	1	0	Q1	...Q8			
1	1	1	1	1	0	...Q8			
1	1	1	1	1	1	0	...Q8		
1	1	1	1	1	1	1	0	...Q8	
1	1	1	1	1	1	1	1	0	...Q8


0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE

NOTE

TYPE	V _{DD}
AC/VHC	+2 to +5.5V
HC	+2 to +6V
HCT	+5V


MC74HC14AF
C-MOS HEX SCHMITT TRIGGER INVERTERS

- TOP VIEW -

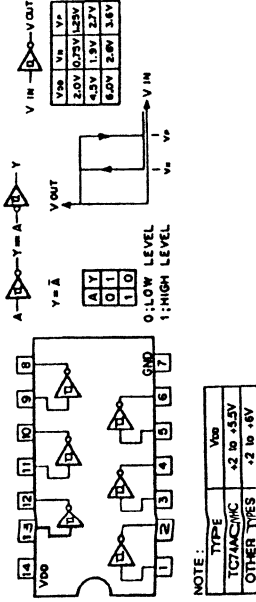

NOTE:



TYPE	V _{DD}
TC74VHC14	+2 to +5.5V
OTHER TYPES	+2 to +6V

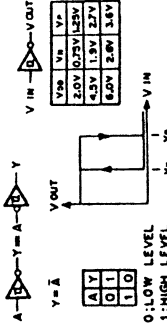


0: LOW LEVEL
1: HIGH LEVEL

MC74HC538AF
C-MOS DUAL RETRIGGERABLE/NON-RETRIGGERABLE MONOSTABLE MULTIVIBRATOR


- TOP VIEW -

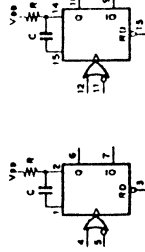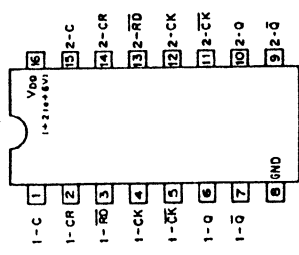


OUTPUT PULSE WIDTH = R · C · R

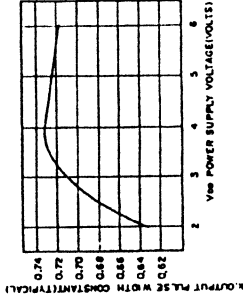

RETRIGGERABLE M.M.V.

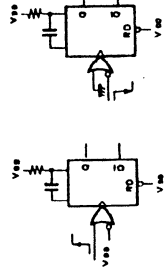


NON-RETRIGGERABLE M.M.V.

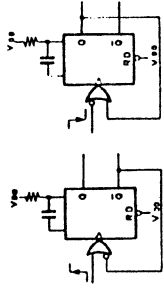

MC74HC68F
C-MOS QUAD EXCLUSIVE OR GATES

- TOP VIEW -

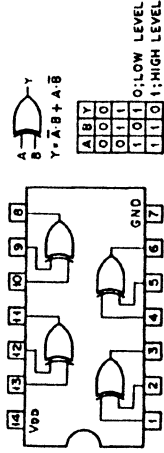


NOTE:

TYPE	V _{DD}
TCT74ACVHC	+2.10 to +5.5V
TCT74HCT	+5V
OTHER TYPES	+2.10 to +6V


MC74HC04F (MOTOROLA) FLAT PACKAGE
TTL INVERTER

- TOP VIEW -

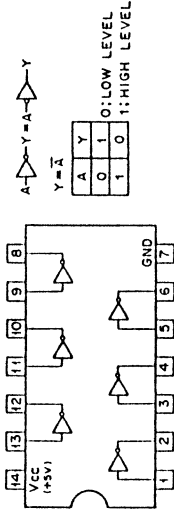

MC74HC541AFEL (MOTOROLA) FLAT PACKAGE
C-MOS BUFFER 5 AND LINE D

- TOP VIEW -

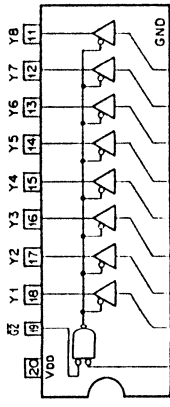

NOTE:


TYPE	V _{DD}
ACVHC	+2.10 to +5.5V
HC	+2.10 to +6V
ABT1ACT/BCT1HCT	+5V

G1	G2	A	Y
0	0	1	0
0	0	1	1
1	1	X	H ₁ -Z
1	1	X	H ₁ -Z

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE
H₁-Z: HIGH IMPEDANCE


MC74HC14AF
C-MOS DUAL D-TYPE FLIP-FLOPS WITH DIRECT SET/RESET

- TOP VIEW -

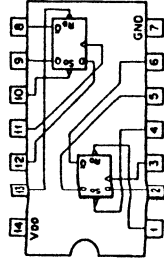

INPUTS	OUTPUTS
S ₁ M ₁ C ₁ D ₁	Q ₁ n+1 Q ₁ n+1
0 1 1 X 1	0
1 0 X 1	0
0 0 X 1	1
1 1 1 1	0
1 1 1 0	0
1 1 0 1	0
1 1 0 0	0

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE





NOTE:

TYPE	V _{DD}
HCT1ACT	+5V
TCT74ACVHC	+2.10 to +5.5V
OTHERS	+2.10 to +6V


MM10268FB
SYSTEM RESET

- TOP VIEW -

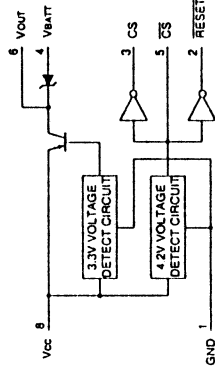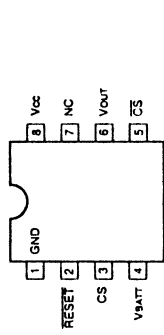



MP7670AS (MICRO POWER SYSTEMS)
C-MOS 8 BIT 8 CHANNEL D/A CONVERTER

- TOP VIEW -

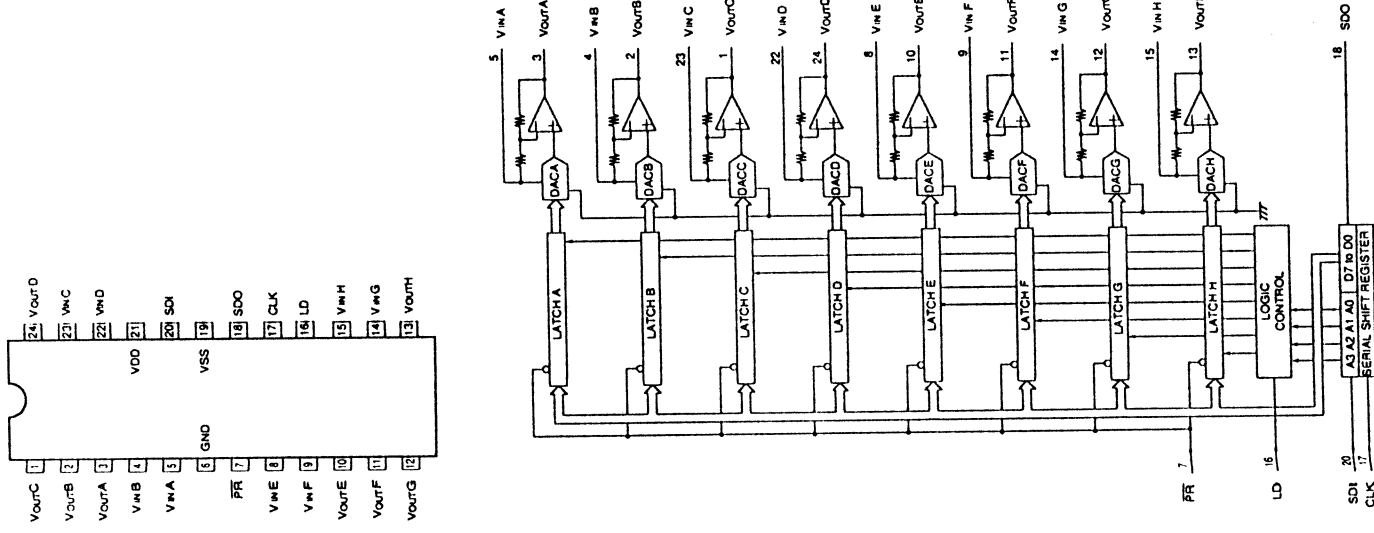


NJM1496M
DOUBLE BALANCED MODULATOR/DEMODULATOR

- TOP VIEW -

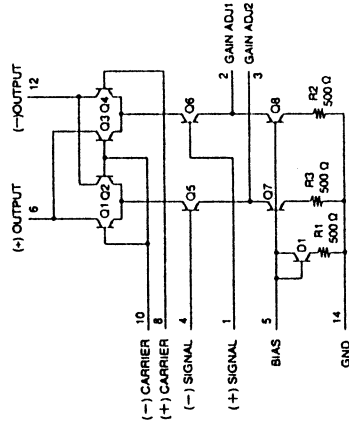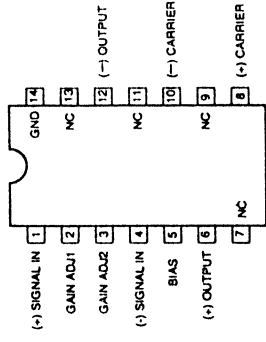


NJM4558M
DUAL OPERATIONAL AMPLIFIER

- TOP VIEW -

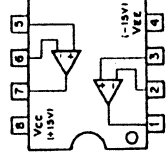


NJM79L05A (JRC) -5V (100mA)
NEGATIVE VOLTAGE REGULATOR

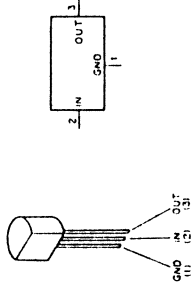


PC111YS (SHARP)
DETECTOR

- TOP VIEW -

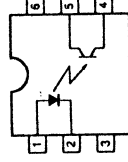


STK390-120 (SANYO)
POWER AMPLIFIER

- SIDE VIEW -

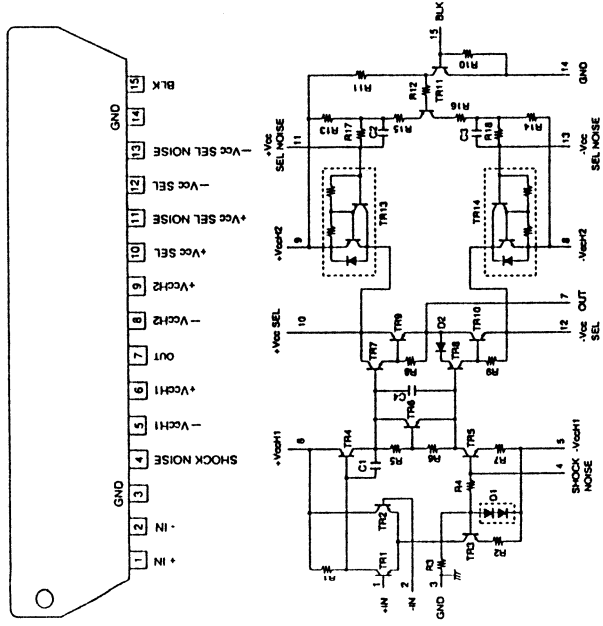


TC4W53FU (TOSHIBA) CHIP PACKAGE
C-MOS 2-CHANNEL MULTIPLEXER/DEMULTIPLEXER

- TOP VIEW -

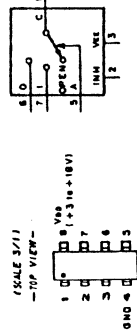

SCALE 3/1

- TOP VIEW -





0 : LOW LEVEL
1 : HIGH LEVEL
X : DON'T CARE

CONT. INPUT	ON CHANNEL
INH	A
0	0
1	1
0	1
1	X
	OPEN

TC74HC02AF
C-MOS QUAD 2-INPUT NOR GATES

- TOP VIEW -

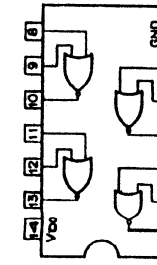

$Y = A + B$



A	B	Y
0	0	1
0	1	1
1	0	1
1	1	0

0 : LOW LEVEL
1 : HIGH LEVEL

TYPE	V _{DD}
HC	+2 to +6V
ACHC	+2 to +5.5V
ACTACT	+3V

TC74HC03AF
C-MOS 2-INPUT POSITIVE-NAND GATE WITH OPEN-DRAIN

- TOP VIEW -

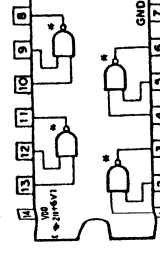



$Y = A \cdot B$

A	B	Y
0	0	0
0	1	0
1	0	0
1	1	1

0 : LOW LEVEL
1 : HIGH LEVEL
HI-Z : HIGH IMPEDANCE

TC74HC04AF
C-MOS HEX INVERTERS

- TOP VIEW -

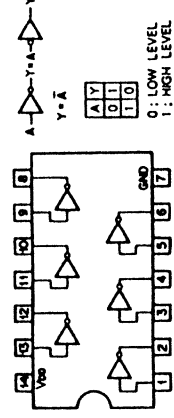



$Y = \bar{A}$

A	Y
0	1
1	0

0 : LOW LEVEL
1 : HIGH LEVEL

NOTE:	TYPE	V _{DD}
	74ACT04	+2 to +5V
	TC74AC04	+2 to +5.5V
	TC74VHC04	+4.5 to +5.5V
	OTHER TYPES	+2 to +6V

TC74HC138AF
C-MOS 3-TO-8 LINE DECODER/DEMULTIPLEXER

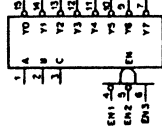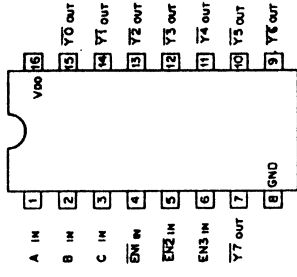



INPUTS	OUTPUTS
A B C	Y0 Y1 Y2 Y3 Y4 Y5 Y6 Y7
0 0 0	1 1 1 1 1 1 1 1
0 0 1	1 1 1 1 1 1 1 0
0 1 0	1 1 1 1 1 1 0 1
0 1 1	1 1 1 1 1 0 1 1
1 0 0	1 1 0 1 1 1 1 1
1 0 1	1 1 0 1 1 1 1 0
1 1 0	1 1 0 1 1 0 1 1
1 1 1	1 1 0 1 0 1 1 1
1 1 1	1 1 1 0 1 1 1 1
1 1 1	1 1 1 0 0 1 1 1
1 1 1	1 1 1 1 0 1 1 1
1 1 1	1 1 1 1 1 0 1 1
1 1 1	1 1 1 1 1 1 0 1
1 1 1	1 1 1 1 1 1 1 0

EN = EN1, EN2, EN3
0 : LOW LEVEL
1 : HIGH LEVEL
X : DON'T CARE

NOTE:	TYPE	V _{DD}
	74ACT138	+3V
	74ACT138	+4.5 to +5.5V
	TC74AC138	+2 to +5.5V
	TC74VHC138	+2 to +6V
	OTHER TYPES	+2 to +6V

TC74HC14AF
C-MOS HEX SCHMITT TRIGGER INVERTERS

- TOP VIEW -

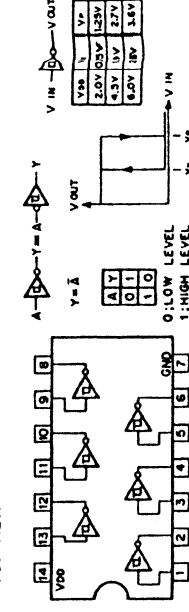

$Y = \bar{A}$


A	Y
0	1
1	0

0 : LOW LEVEL
1 : HIGH LEVEL

NOTE:	TYPE	V _{DD}
	TC74AC14	+2 to +5.5V
	OTHER TYPES	+2 to +6V

TC74HC02AF
C-MOS QUAD 2-INPUT NOR GATES

- TOP VIEW -




$Y = A + B$

A	B	Y
0	0	1
0	1	1
1	0	1
1	1	0

0 : LOW LEVEL
1 : HIGH LEVEL
HI-Z : HIGH IMPEDANCE

TC74HC148AF
C-MOS 8-TO-3-LINE PRIORITY ENCODER

- TOP VIEW -

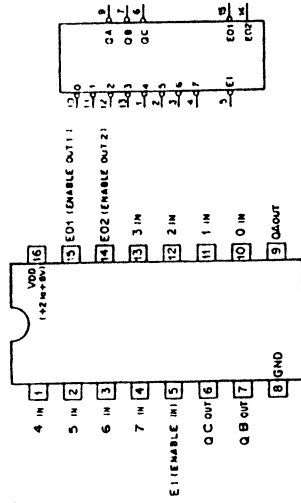


INPUTS			OUTPUTS		
E1	E2	E3	Qc	Qb	Qa
0	0	0	0	0	0
0	0	1	0	0	1
0	1	0	0	1	0
0	1	1	0	1	1
1	0	0	1	0	0
1	0	1	1	0	0
1	1	0	1	0	1
1	1	1	1	0	1
0	1	1	1	1	0
1	0	0	1	1	0
1	0	1	1	1	0
1	1	0	1	1	0
1	1	1	1	1	0
0	1	1	1	1	1
1	0	0	1	1	1
1	0	1	1	1	1
1	1	0	1	1	1
1	1	1	1	1	1

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE

TC74HC151AF (MOTOROLA) FLAT PACKAGE
C-MOS 8-LINE-TO-1-LINE DATA SELECTOR/MULTIPLEXER

- TOP VIEW -

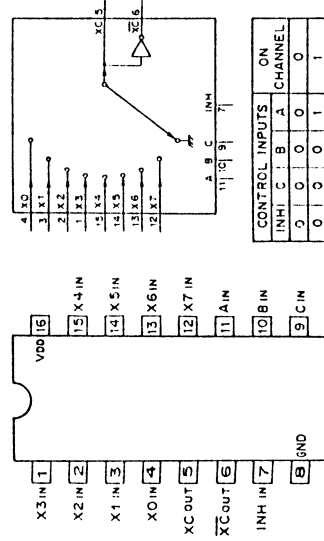

CONTROL INPUTS		ON CHANNEL	
INH	C	B	A
0	0	0	0
0	0	0	1
0	0	1	0
0	0	1	1
0	1	0	0
0	1	0	1
0	1	1	0
0	1	1	1
1	X	X	X


0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE

NOTE:


TYPE	V _{DD}
HC	+2.10 to +6V
AC/AVC	+2.10 to +5.5V
HCT/ACT/FCT	+5V

TC74HC166AF
C-MOS 8-BIT SHIFT REGISTER

- TOP VIEW -

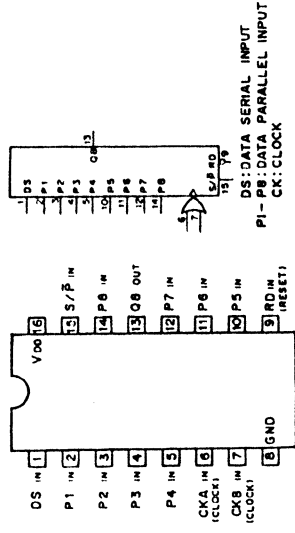

DS: DATA SERIAL INPUT
P1-P8: DATA PARALLEL INPUT
PI- CK: CLOCK

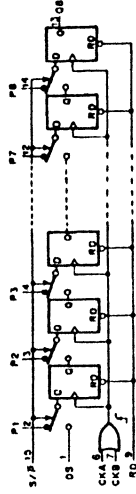

NOTE:


TYPE	V _{DD}
TC40H	+2.10 to +8V
OTHERS	+2.10 to +6V

CK/CKB/CK	RD/S/P/CK	DS/P1/P8	QB
0	0	0	0
1	X	X	X
1	X	0	0
1	0	X	0
1	1	1	0
1	1	1	1
1	1	0	0
1	1	0	1
1	1	1	1
1	1	1	0
1	1	1	1
1	1	1	0
1	1	1	1
1	1	1	0
1	1	1	1
1	1	1	0

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE

TC74HC244AF
C-MOS BUS BUFFER WITH 3-STATE OUTPUTS

- TOP VIEW -

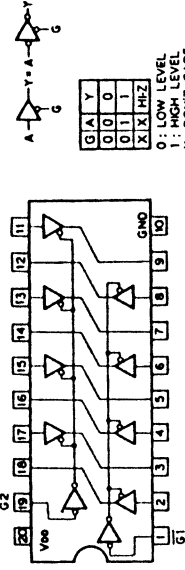


G	A	Y
0	0	0
0	1	1
1	1	1
X	X	X

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE
HZ: HIGH IMPEDANCE



NOTE:

TYPE	V _{DD}
AC	+2.10 to +8V
HC	+2.10 to +6V
40H	+5V
ACT	+5V
BCT	+5V
FCT	+5V
HCT	+5V
TC74AC244 TYPE	+2.10 to +5.5V
TC74VHC244	+2.10 to +5.5V

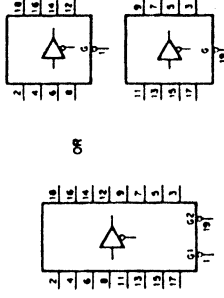

TC74HC245AF
C-MOS BILATERAL BUS TRANSCEIVERS WITH 3-STATE OUTPUTS

- TOP VIEW -

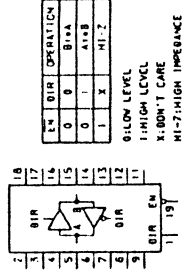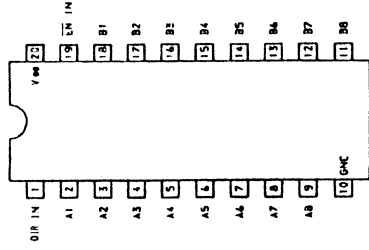


BIR	O/E	OPERATION
0	0	B1+A
0	1	A1+B
1	X	H1-Z

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE
H1-Z: HIGH IMPEDANCE

NOTE:


TYPE	V _{DD}
AC	+2.1 to +5V
MC	+5V
ACT	
BCT	
HCT	
TC74AC245F	+2.1 to +5.5V
TC74AC245P	
TC74VHC245	+2.7 to +5.5V
74VHC245	

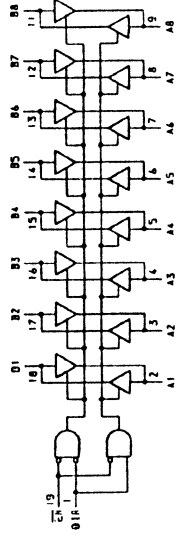

TC74HC574AF

C-MOS 3-STATE D-TYPE EDGE-TRIGGERED FLIP-FLOP

- TOP VIEW -

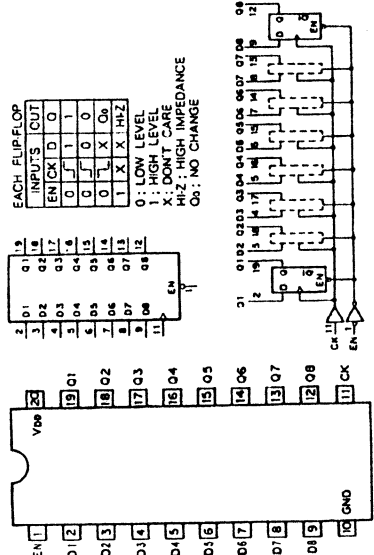

EACH FLIP-FLOP


INPUTS	OUTPUT
EN	X
CK	D
0	1
1	1
0	0
0	0
1	X
1	X
1	H-Z

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE
H-Z: HIGH IMPEDANCE

NOTE:

TYPE	V _{DD}
TAC/74HC	+2.1 to +6V
TAOC/74FC	+5V
TAOC/74HCT	
TC74AC574F	+2.1 to +5.5V
TC74VHC574	


TC7S00FU
TC7S02FU
TC7S22FU
C-MOS 2-INPUT NAND GATE

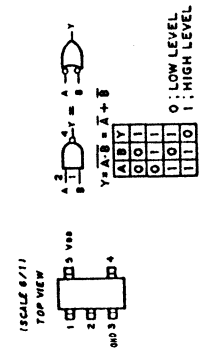

TYPE	V _{DD}
7S00F	+2.1 to +6V
7S00FU	
4S11F	+3.1 to +18V
4S11FU	
7S00FU	+2.1 to +5.5V



TD6101Q (PHILIPS)
TD6111Q (PHILIPS)
VIDEO OUTPUT AMPLIFIER

- LATTER SIDE -

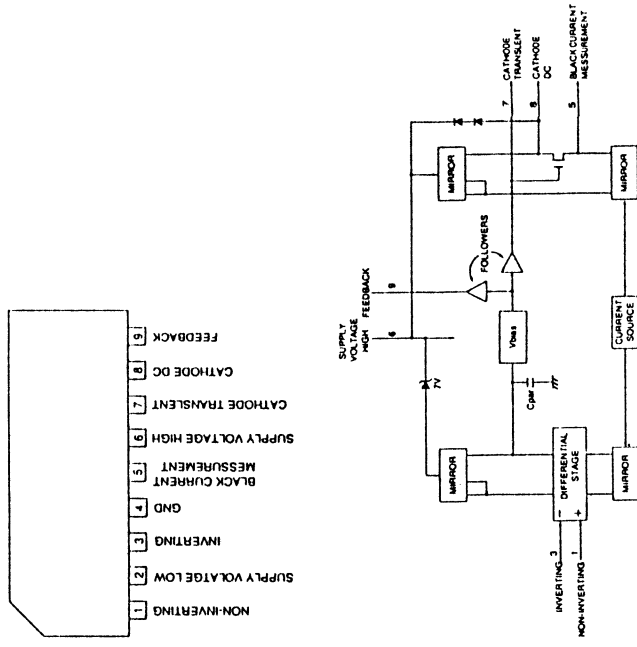


TD9102C (SGS)
HV PROCESSOR

- TOP VIEW -

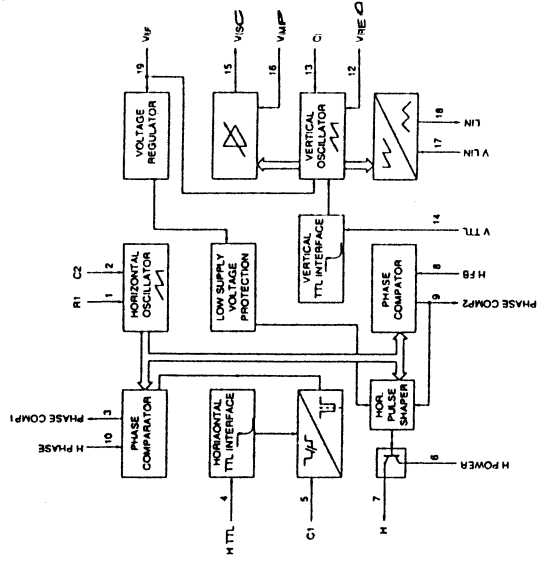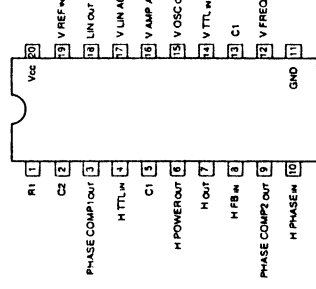



TK83854D
SWITCHING POWER MODULE

- TOP VIEW -

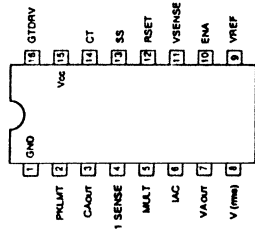


TL494CNS (TI)
PWM POWER CONTROL

- TOP VIEW -

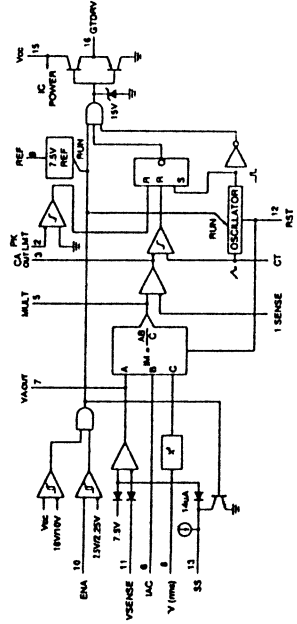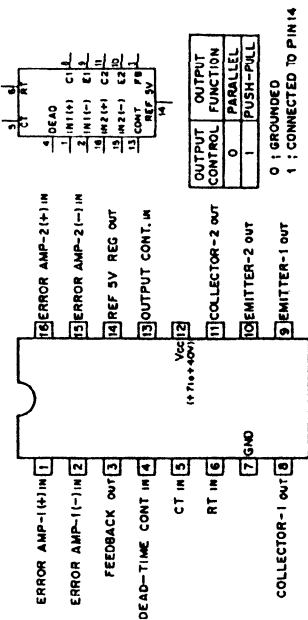


TL082C (TI)
OPERATIONAL AMPLIFIER (J FET INPUT)

- TOP VIEW -


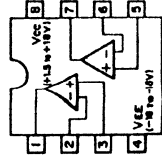


TL431C (TI) FLAT PACKAGE
ADJUSTABLE PRECISION SHUNT REGULATOR




TL431C (TI) FLAT PACKAGE
ADJUSTABLE PRECISION SHUNT REGULATOR

- TOP VIEW -

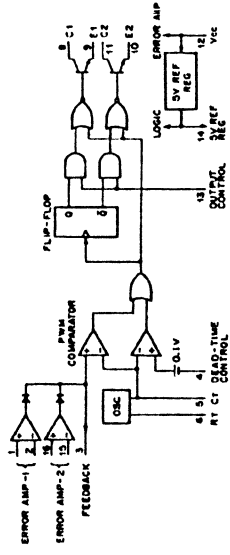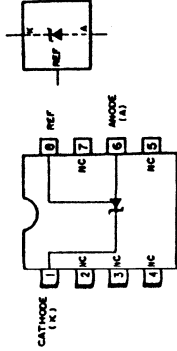


TLC2932IPW
C-MOS PHASE LOCKED LOOP

- TOP VIEW -

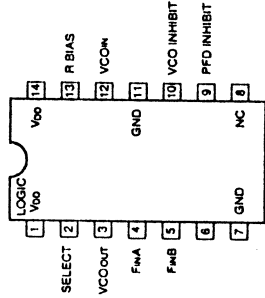


UC3854N (UNITRODE)
HIGH POWER FACTOR PREREGULATOR

- TOP VIEW -

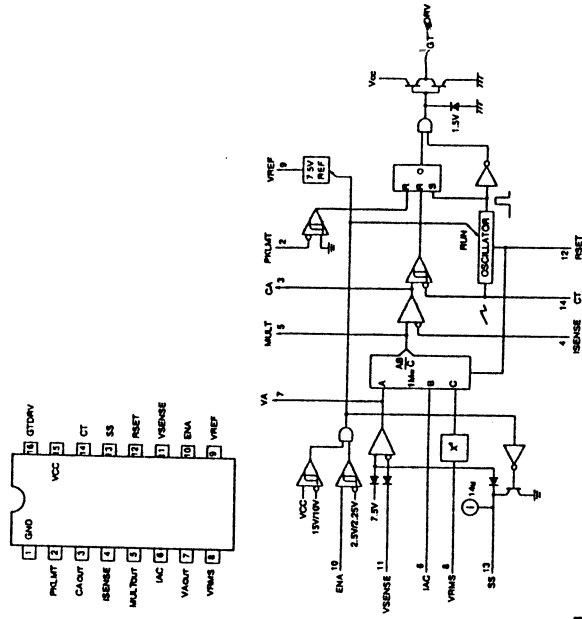


μPD6489GT (NEC) FLAT PACKAGE
C-MOS ON-SCREEN CHARACTER DISPLAY

- TOP VIEW -


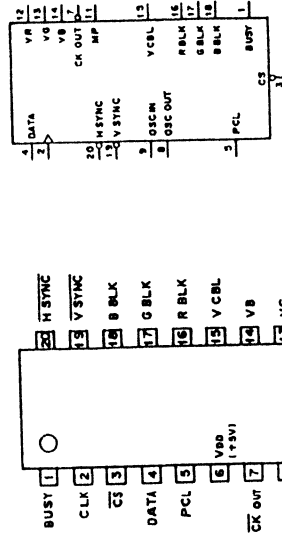


- INPUT**
 CLK: CLOCK
 CS: CHIP SELECT
 DATA: SERIAL DATA
 H SYNC: HORIZONTAL SYNC
 OSC IN: OSCILLATOR IN
 PCL: POWER ON CLEAR
 V SYNC: VERTICAL SYNC
- OUTPUT**
 B: B. R. G. BLANKING
 G: B. R. G. BLANKING
 BUSY: BUSY OUT
 CLK: CLOCK
 MP: MASK PULSE
 OSC OUT: OSCILLATOR OUT
 V_{BLK}: B. R. G. CHARACTER DATA
 V_{BLK}: VIDEO CUT BLANKING

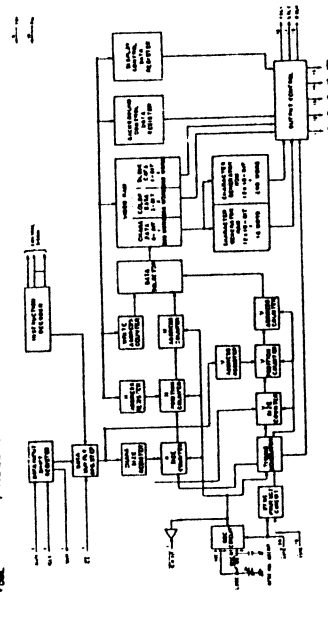



μPD71051GU
SERIAL CONTROL UNIT

- TOP VIEW -

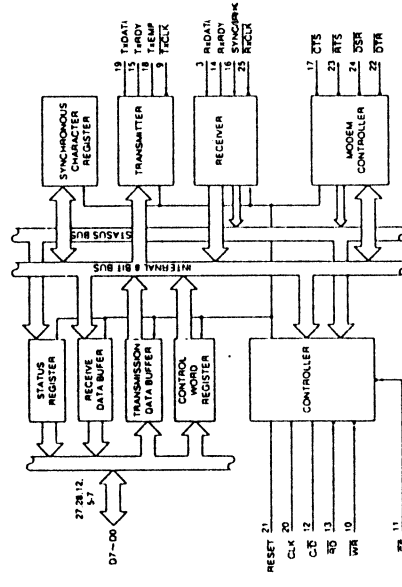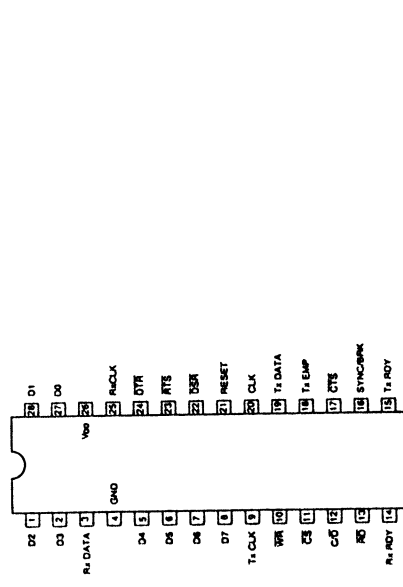


X25040S (XICOR)
C-MOS 4096 BIT SERIAL EEPROM

- TOP VIEW -

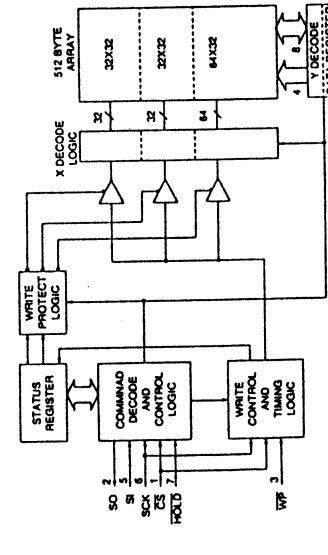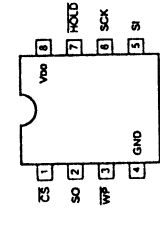

Z8612812PSC

- TOP VIEW -




TRANSISTOR, DIODE

DTA144EKA DTC144EKA 2SA1037K 2SA1462 2SC1654 2SC2412K 2SC3545 2SC4213A 2SK520		IRFP650LE		D1NS4 EGP10G RD10ES-B2 RD12ES-B RD15ES-B3 RD18ES-B2 RD3.9ES-B RD6.2ES-B RD7.5ES-B RD9.1ES-B 1SS119		ESAC39M-06C		EC1-0S04 SC311-6
DTA144ESA 2SA1175 2SC2785		IRFP450LF		D10SC6M D8LCA20		ESAC39M-06N		SEL6210S SEL6410E
DTC144ESA 2SC2668		ZSA1206S ZSC1890A ZSC2362KG ZSC2878A ZSC3622-M		D10SC6MR		CL-155Y/PG-CD		SSV860
IMT2	 (SCALE 6/1) TOP VIEW	ZSA1Z21 ZSB734-3 ZSB734-34 ZSC3209LK ZSD774-34		D5L60		LR002-01 SEL6910D		V11N V19C V19E
IMX2		ZSA893A		D8LCA20R		MA210 RD5.6S-B RD6.2SB RD6.2SB2 1SS352		
IMZ1		ZSC4686A ZSC4927		EPG10D ERC91-02 RH1AV1		RD12M-B1 RD12M-B2 RD18M-B2 RD22M RD22M-B3 RD3.0M-B RD3.3M-B1 RD5.6M-B RD5.6M-B2 RD6.8M-B1 RD6.8M-B3		
IRF19630GS ZSB860 ZSD1137 ZSD1138-C		ZSD1834		ERB91-02 HZT33-02 1SS83TA		RD6.6S-B2		

1. PACKAGE 2. PIN 3. VOLTAGE 4. WATTAGE

6-3. PICTURE TUBE (BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)

- : 7-682-564-09 +P 4x14
- △ : 7-682-548-04 +BVTT 3x8
- ▼ : 7-688-004-02 W 4
- ◇ : 7-682-661-01 +PS 4x8

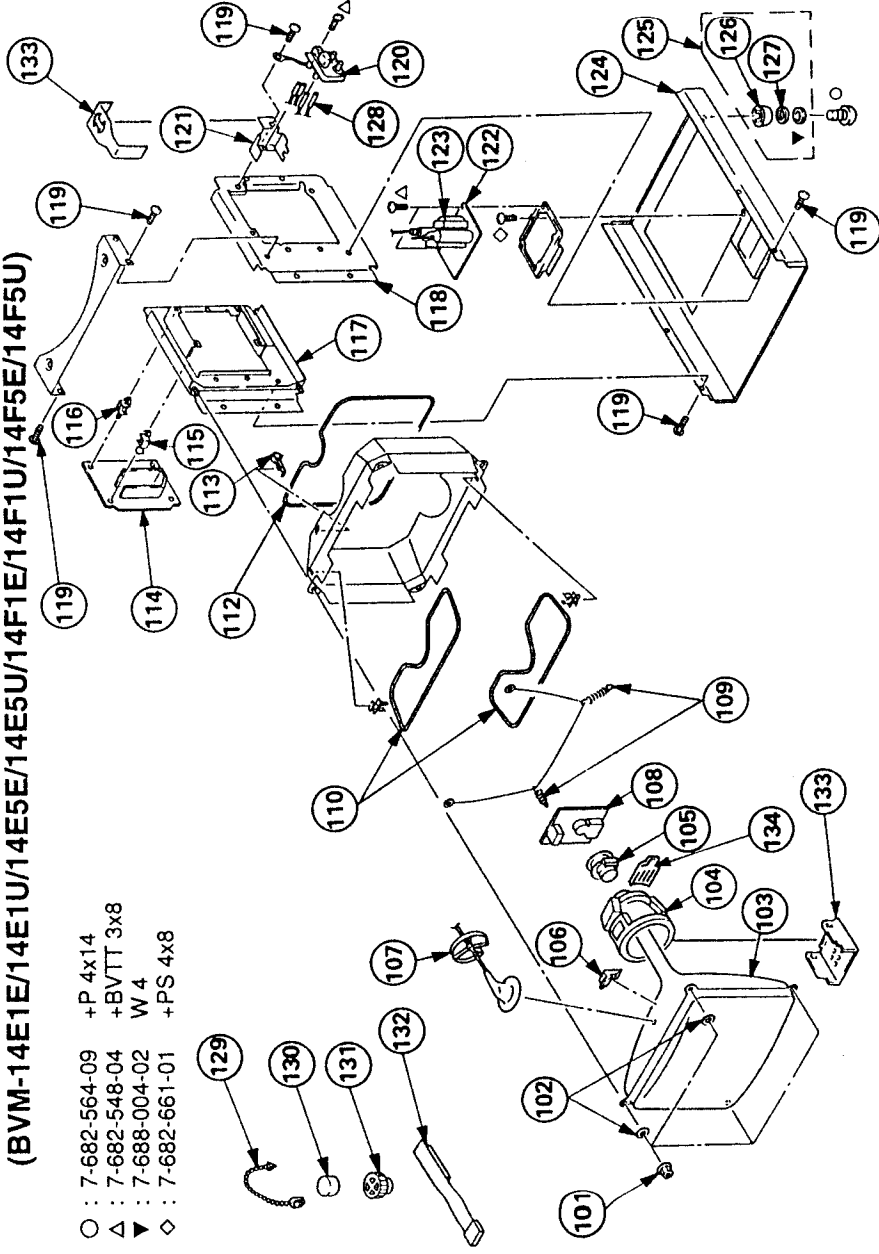


Les composants identifiés par une trame et une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked △ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
101	4-306-034-01	NUT.(B) (M5), FLANGE		115	* 3-703-141-11	HOLDER, PCB	
102	4-348-567-01	WASHER, CRT POSITION		116	* 4-353-620-11	HINGE, PC BOARD	
103 △	8-738-332-05	PICTURE TUBE 14MT1(BVM) (14F1E/14F5E)		117	4-050-927-01	CHASSIS (L) (14E5E/14E5U/14FE/14F5U)	
103 △	8-738-334-05	PICTURE TUBE 14MT3(BVM) (14F1U/14F5U)		118	4-050-926-01	CHASSIS (R) (14E5E/14E5U/14FE/14F5U)	
103 △	8-738-337-05	PICTURE TUBE 14MP1 (14E1E/14F14E5E)		119	4-050-962-01	CHASSIS (R) (14E1E/14E1U/14FE/14F1U)	
104 △	8-738-338-05	PICTURE TUBE 14MP3 (14E1U/14F14E5U)		119	7-685-881-01	SCREW +BVTT 4X8	
104 △	8-451-473-11	DY 3Y14MPDT		120 △	1-223-417-12	RESISTOR ASSY (HIGH-VOLTAGE)	
105 △	1-452-436-41	NECK ASSY, CRT (NA292)		121	* 4-050-921-01	BRACKET, FOCUS	
106	4-050-492-01	SPACER, DY		122	* A-1190-238-A	MOUNTED PCB, PC	
107	* 4-047-349-01	HOLDER, HV CABLE		123 △	X-4033-491-1	FBT ASSY, NX4201/1R4	
108	* A-1331-457-A	MOUNTED PCB, C (14F1E/14F1U/14F5E/14F5U)		124	* X-4033-129-2	CHASSIS ASSY, BOTTOM (14E5E/14E5U/14FE/14F5U)	
108	* A-1331-520-A	MOUNTED PCB, C (14E1E/14E1U/14E5E/14E5U)		124	X-4033-143-2	CHASSIS ASSY, BOTTOM (14E1E/14E1U/14FE/14F1U)	12.6, 127
109	4-303-774-03	SPRING		125	X-4033-117-1	FOOT ASSY	
110 △	L-411-660-31	COIL, DEMAGNETIC		126	X-4836-202-9	FOOT	
111	* 4-395-824-01	HOLDER, DEGAUSSING COIL		127	* 3-668-845-01	CUSHION, LEG	
112 △	L-411-658-11	COIL, LANDING CORRECTION		128	1-900-214-62	LEAD ASSY, FOCUS	
113	4-045-123-01	HOLDER, DEGAUSSING COIL		129	4-308-870-00	CLIP, LEAD WIRE	
114	* A-1195-098-B	COMPLETE PCB, PA (14F1E/14F1U/14F5E/14F5U)		130	1-452-032-11	MAGNET, DISK; 10MM Ø	
114	* A-1195-111-A	COMPLETE PCB, PA (14E1E/14E1U/14E5E/14E5U)		131	1-452-094-00	MAGNET, ROTA TABLE DISK; 10MM Ø	
				132	X-4308-815-8	PERMALLOY ASSY, CONVERGN	
				133	4-053-410-01	SHIELD, DY	
				134	X-2105-533-1	PLATE ASSY, CORRECTION, TL	

6-4. COVER (BVM-20E1E/20E1U/20F1E/20F1U)

- : 7-685-648-71 +BVTP 3x12
- ▲ : 7-685-872-09 +BVTT 3x8
- : 7-685-661-14 +BVTP 4x12
- ◆ : 7-682-566-04 +B 4x20
- ▽ : 7-682-561-09 +B 4x8

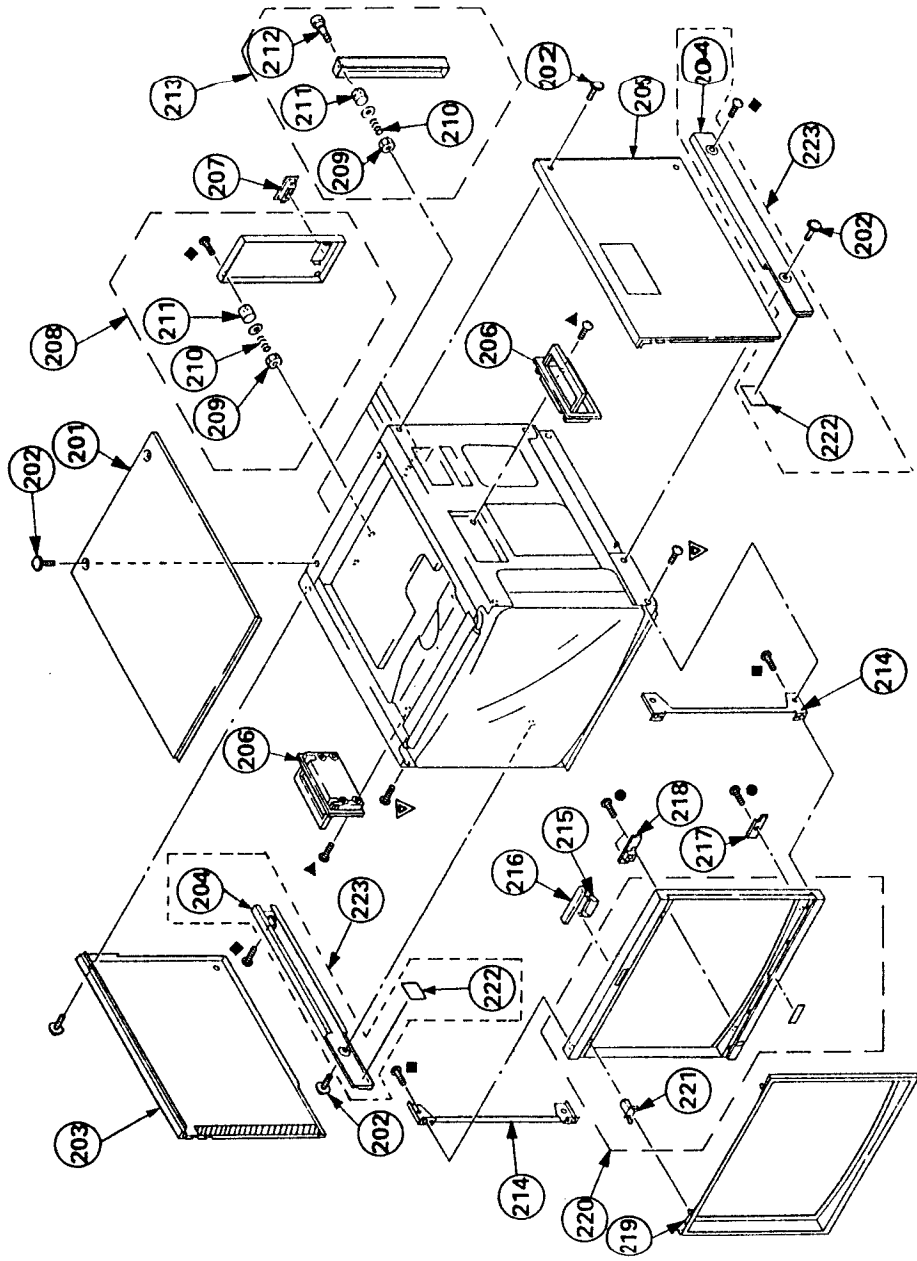


REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
201	X-4033-308-1	CABINET ASSY, TOP		213	* X-4033-104-1	PANEL ASSY, BLANK	20, 212
202	4-847-802-11	SCREW (OS), CASE, CLAW		214	* 4-050-830-01	BRACKET, BEZEL	
203	X-4033-310-1	CABINET ASSY, LEFT		215	* 4-050-876-02	PLATE, LIGHT INTERCEPTION	
204	4-050-836-01	COVER BLIND		216	* A-1373-523-A	MOUNTED PCB, YA	
205	X-4033-309-1	CABINET ASSY, RIGHT		217	* A-1373-524-A	MOUNTED PCB, YB	
206	X-3642-018-3	HANDLE ASSY		218	* A-1373-525-A	MOUNTED PCB, YC	
207	4-050-821-02	ESCUTCHEON		219	X-4033-112-1	MASK (4:3) ASSY	23
208	* X-4033-110-1	PANEL ASSY, REAR	209-211	220	X-4033-111-1	BEZEL ASSY	
209	* 3-648-057-01	NUT (ISO-4), U		221	4-051-061-02	HOLDER	
210	* 4-403-012-01	SPRING, STOPPER		222	3-342-839-02	CUSHION	
211	* 4-050-795-01	SPACER, REAR PANEL		223	X-4033-324-1	COVER ASSY, BLIND	20, 222
212	* 4-050-804-01	SCREW, PANEL STOPPER					

Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


The components identified by shading and marked Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)

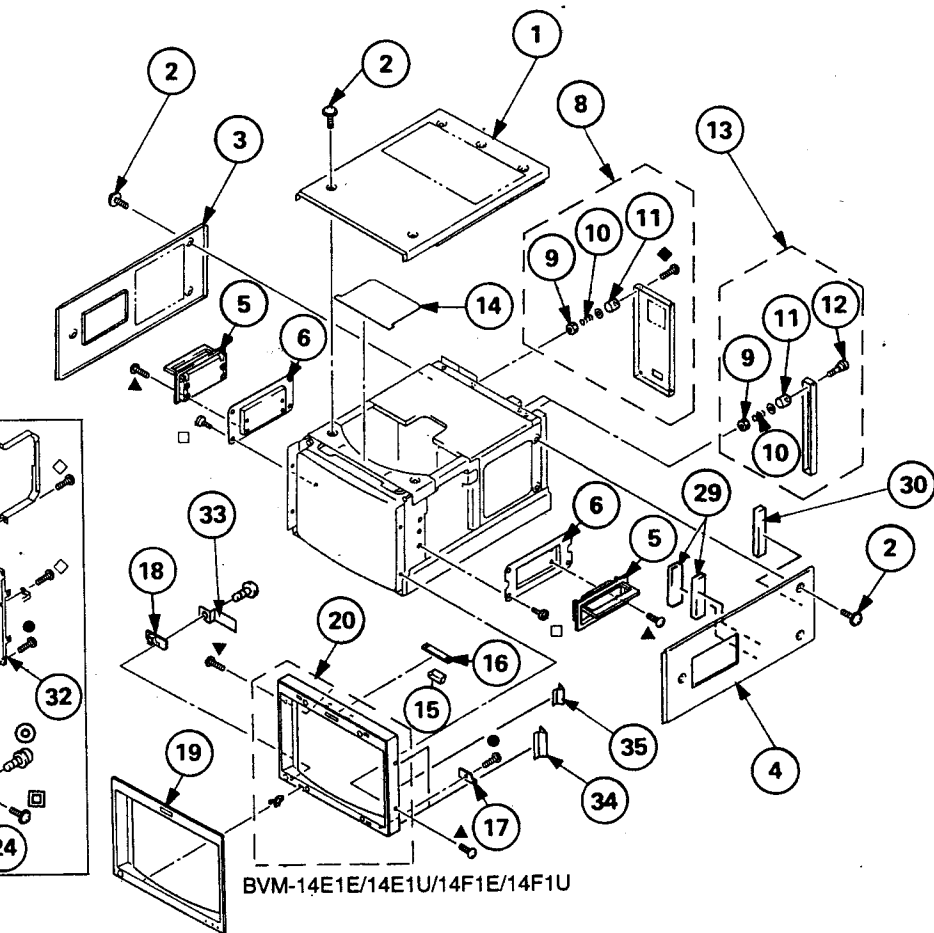

1	4-050-931-01	CABINET (UPPER) (14E5E/14E5U/14F5E/14F5U)
1	4-050-967-01	CABINET (UPPER) (14E1E/14E1U/14F1E/14F1U)
2	4-847-802-11	SCREW (OS), CASE, CLAW
3	4-050-933-01	CABINET (LEFT)
4	4-050-932-01	CABINET (RIGHT)
5	X-3642-018-3	HANDLE ASSY
6	* 4-050-928-01	BRACKET, HANDLE
8	* X-4033-110-2	PANEL ASSY, REAR (14E5E/14E5U/14F5E/14F5U) 9-11
8	* X-4033-144-1	PANEL ASSY, REAR (14E1E/14E1U/14F1E/14F1U) 9-11
9	* 3-648-057-01	NUT (ISO-4), U
10	* 4-403-012-01	SPRING, STOPPER
11	* 4-050-795-01	SPACER, REAR PANEL
12	* 4-050-804-01	SCREW, PANEL STOPPER
13	* X-4033-104-1	PANEL ASSY, BLANK
14	* 4-050-913-01	INSULATOR (ANODE)
15	* 4-050-876-02	PLATE, LIGHT INTERCEPTION
16	* A-1373-542-A	MOUNTED PCB, YA
17	* A-1373-543-A	MOUNTED PCB, YB
18	* A-1373-525-A	MOUNTED PCB, YC
19	X-4033-128-1	MASK (4:3) ASSY
20	X-4033-145-2	BEZEL ASSY (14E1E/14E1U/14F1E/14F1U)
22	X-4033-130-3	BEZEL ASSY (14E5E/14E5U/14F5E/14F5U)
23	4-337-212-12	HANDLE (14E5E/14E5U/14F5E/14F5U)
24	4-050-922-01	BASE, HANDLE (14E5E/14E5U/14F5E/14F5U)
25	4-050-851-01	KNOB, CONTROL (14E5E/14E5U/14F5E/14F5U)
26	* A-1372-133-A	MOUNTED PCB, HA (14E5E/14E5U/14F5E/14F5U)
27	* A-1372-134-A	MOUNTED PCB, HB (14E5E/14E5U/14F5E/14F5U)
28	* A-1375-149-A	COMPLETE PCB, HC (14E5E/14E5U/14F5E/14F5U)
29	* 4-053-255-01	GASKET (S), EMI
30	* 4-053-254-01	GASKET (L), EMI
31	4-050-924-01	BRACKET (LEFT), BEZEL (14E5E/14E5U/14F5E/14F5U)
32	4-050-925-01	BRACKET (RIGHT), BEZEL (14E5E/14E5U/14F5E/14F5U)
33	* 4-053-987-01	INSULATOR, YC PC BOARD
34	X-4033-276-1	GUARD ASSY, HARNESS (L) (14E1E/14E1U/14F1E/14F1U)
35	X-4033-277-1	GUARD ASSY, HARNESS (S) (14E1E/14E1U/14F1E/14F1U)

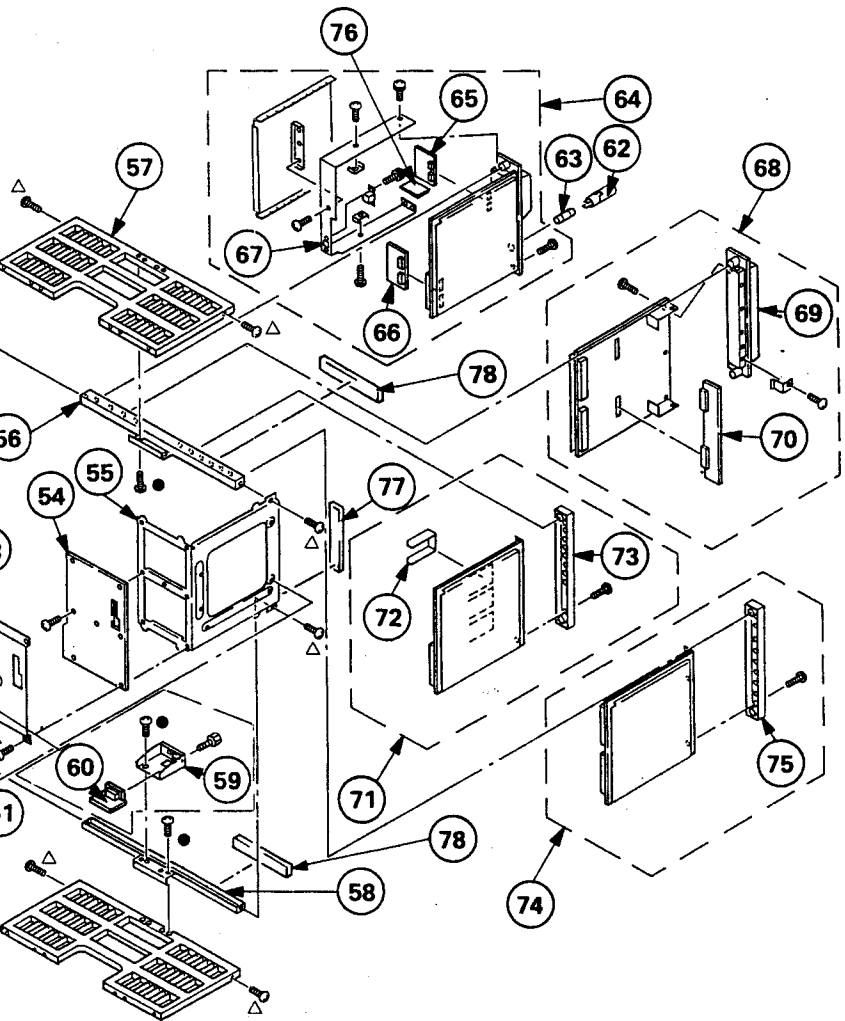

The components identified by shading and marked Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

51	* A-1390-532-A	MOUNTED PCB, TA (14E5E/14E5U/14F5E/14F5U)	
52	* 4-050-842-01	BRACKET (L), T (14E5E/14E5U/14F5E/14F5U)	
52	* 4-050-965-01	BRACKET (L), T (14E1E/14E1U/14F1E/14F1U)	
53	* 4-050-808-01	SHIELD, T (14E5E/14E5U/14F5E/14F5U)	
53	* 4-050-957-01	SHIELD, T (14E1E/14E1U/14F1E/14F1U)	
54	* A-1390-531-A	MOUNTED PCB, TB (14E1E/14E1U/14F1E/14F1U)	
54	* A-1390-606-A	MOUNTED PCB, TB (14E5E/14E5U/14F5E/14F5U)	
55	* 4-050-843-01	BRACKET (R), T (14E5E/14E5U/14F5E/14F5U)	
55	* 4-050-964-01	BRACKET (R), T (14E1E/14E1U/14F1E/14F1U)	
56	* 4-050-847-01	PLATE (UPPER), NUT (14E5E/14E5U/14F5E/14F5U)	
56	* 4-050-959-01	PLATE (UPPER), NUT (14E1E/14E1U/14F1E/14F1U)	
57	* 4-050-844-01	BOARD, CARD SLOT (14E5E/14E5U/14F5E/14F5U)	
57	* 4-050-969-01	BOARD, CARD SLOT (14E1E/14E1U/14F1E/14F1U)	
58	* 4-050-848-01	PLATE (LOWER), NUT (14E5E/14E5U/14F5E/14F5U)	
58	* 4-050-960-01	PLATE (LOWER), NUT (14E1E/14E1U/14F1E/14F1U)	
59	* 4-050-816-01	BRACKET, HD (14E1E/14E1U/14F1E/14F1U)	
60	* A-1372-136-A	MOUNTED PCB, HD (14E1E/14E1U/14F1E/14F1U)	
61	4-381-962-11	SCREW +BVTT 4X8 (S)	
62	1-533-702-11	HOLDER, FUSE	
63	Δ 1-532-746-11	FUSE, GLASS TUBE 4A/125V (14E1U/14E5U/14F1U/14F5U)	
63	Δ 1-576-230-31	FUSE (H.B.C) T3.15A/250V (14E1E/14E5E/14F1E/14F5E)	
64	* A-1316-258-A	COMPLETE PCB, G	65, 66, 76
65	* A-1311-432-A	MOUNTED PCB, GA	
66	* A-1311-433-A	MOUNTED PCB, GB	
67	* X-4033-116-2	FRAME ASSY, POWER	
68	* A-1346-357-B	COMPLETE PCB, E	69, 70
69	* X-4033-108-1	HEAT SINK (DEFLECTION) ASSY	
70	* A-1341-958-B	MOUNTED PCB, D	
71	* A-1135-861-B	COMPLETE PCB, BK	72, 73
72	X-4033-103-1	HEAT SINK ASSY (BK)	
73	* X-4033-105-1	PANEL (BK) ASSY, CONNECTOR	
74	* A-1135-825-B	COMPLETE PCB, BC	75
75	* X-4033-106-1	PANEL (BC) ASSY, CONNECTOR	
76	* A-1311-467-A	MOUNTED PCB GC	
77	* 4-053-287-01	GASKET	
78	* 4-053-287-11	GASKET (14E5E/14E5U/14F5E/14F5U)	
78	* 4-053-287-21	GASKET (14E1E/14E1U/14F1E/14F1U)	

6-3. PICTURE TUBE

(BVM-14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)

- : 7-682-564-09 +P 4x14
- △ : 7-682-548-04 +BVTT 3x8
- ▼ : 7-688-004-02 W 4
- ◇ : 7-682-661-01 +PS 4x8

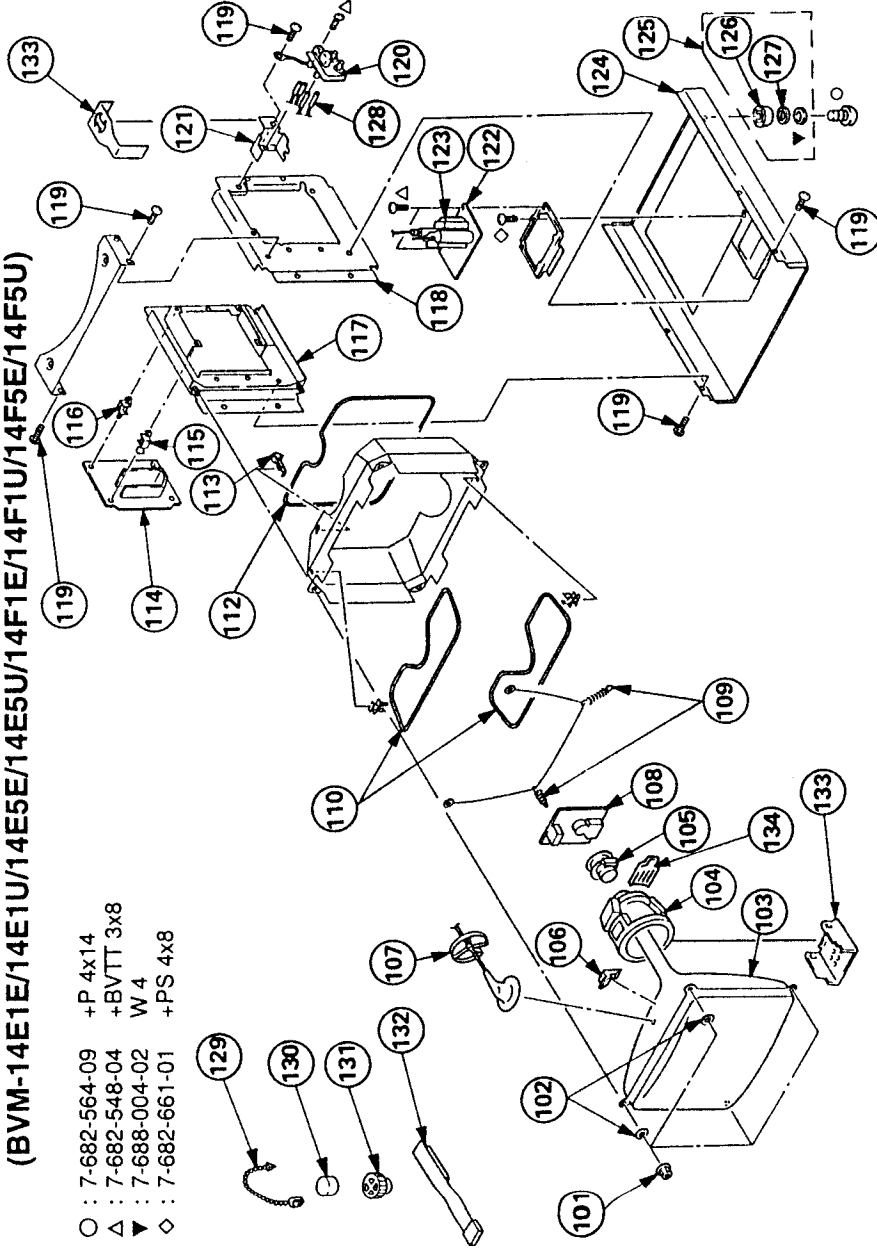


Les composants identifiés par une trame et une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked △ are critical for safety.
Replace only with part number specified

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
101	4-306-034-01	NUT,(B) (M5), FLANGE		115	* 3-703-141-11	HOLDER, PCB	
102	4-348-567-01	WASHER, CRT POSITION		116	* 4-553-620-11	HINGE, PC BOARD	
103 △	8-738-332-05	PICTURE TUBE 14MT1(BVM) (14F1E/14F5E)		117	4-050-927-01	CHASSIS (L) (14E5E/14E5U/14FE/14F5U)	
104 △	8-738-334-05	PICTURE TUBE 14MT3(BVM) (14F1U/14F5U)		118	4-050-926-01	CHASSIS (R) (14E5E/14E5U/14FE/14F5U)	
105 △	8-738-337-05	PICTURE TUBE 14MP1 (14E1E/14F1E5E)		119	4-050-926-01	CHASSIS (R) (14E1E/14E1U/14FE/14F1U)	
106 △	8-738-338-05	PICTURE TUBE 14MP3 (14E1U/14F1E5U)			7-685-881-01	SCREW +BVTT 4X8	
107 △	8-451-473-11	DY Y14MPDT		120 △	1-223-417-12	RESISTOR ASSY.(HIGH-VOLTAGE)	
108 △	1-452-436-41	NECK ASSY. CRT (NA292)		121	* 4-050-921-01	BACKET, FOCUS	
108	4-050-492-01	SPACER, DY		122	* A-1190-238-A	MOUNTED PCB, PC	
107	* 4-047-349-01	HOLDER, HV CABLE		123 △	X-4033-491-1	FBY ASSY. NX4201/31P4	
108	* A-1331-457-A	MOUNTED PCB, C (14F1E/14F1U/14F5E/14F5U)		124	* X-4033-129-2	CHASSIS ASSY, BOTTOM (14E5E/14E5U/14FE/14F5U)	
108	* A-1331-520-A	MOUNTED PCB, C (14E1E/14E1U/14E5E/14E5U)		124	X-4033-143-2	CHASSIS ASSY, BOTTOM (14E1E/14E1U/14FE/14F1U)	
109	4-303-774-03	SPRING		125	X-4033-117-1	FOOT ASSY	12-6, 127
110 △	1-411-660-11	COIL, DEMAGNETIC		126	X-4836-202-9	FOOT	
111	* 4-395-824-01	HOLDER, DEGAUSSING COIL		127	* 3-668-845-01	CUSHION, LEG	
112 △	1-411-658-11	COIL, LANDING CORRECTION		128	1-900-214-62	LEAD ASSY, FOCUS	
113	4-045-123-01	HOLDER, DEGAUSSING COIL		129	4-308-870-00	CLIP, LEAD WIRE	
114	* A-1195-098-B	COMPLETE PCB, PA (14F1E/14F1U/14F5E/14F5U)		130	1-452-032-11	MAGNET, DISK, 10MM Ø	
114	* A-1195-111-A	COMPLETE PCB, PA (14E1E/14E1U/14E5E/14E5U)		131	1-452-094-00	MAGNET, ROTA TABLE DISK; 14MM Ø	
				132	X-4308-815-8	PERMALLOY ASSY, CONVERGN CE	
				133	4-053-410-01	SHIELD, DY	
				134	X-2105-533-1	PLATE ASSY, CORRECTION, TLJ	

6-4. COVER
(BVM-20E1E/20E1U/20F1E/20F1U)


- : 7-685-648-71 +BVTP 3x12
- ▲ : 7-685-872-09 +BVTT 3x8
- : 7-685-661-14 +BVTP 4x12
- ◆ : 7-682-566-04 +B 4x20
- ▼ : 7-682-561-09 +B 4x8

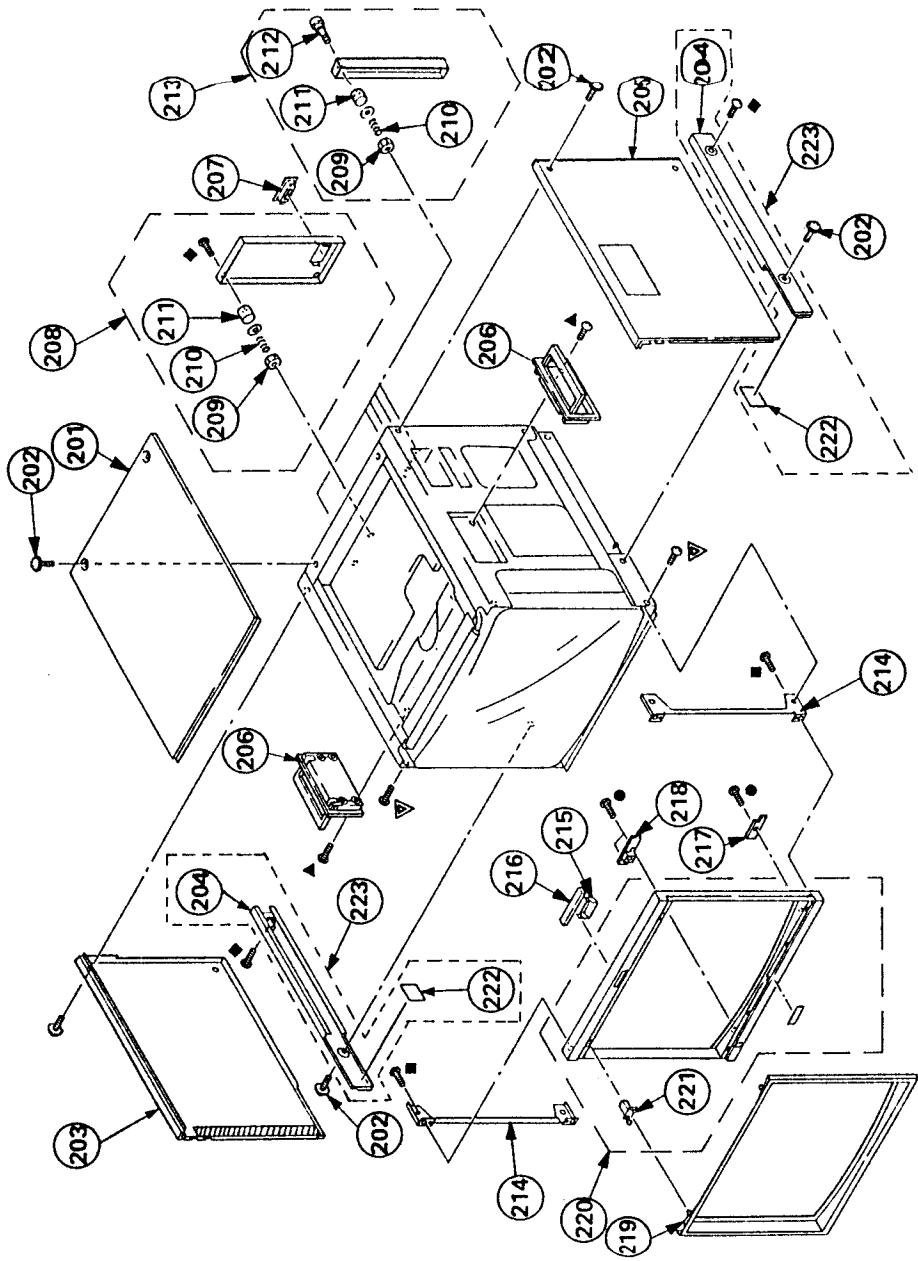

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
201	X-4033-308-1	CABINET ASSY, TOP		213	* X-4033-104-1	PANEL ASSY, BLANK	20-212
202	4-847-802-11	SCREW (OS), CASE, CLAW		214	* 4-050-830-01	BRACKET, BEZEL	
203	X-4033-310-1	CABINET ASSY, LEFT		215	* 4-050-876-02	PLATE, LIGHT INTERCEPTION	
204	4-050-836-01	COVER BLIND		216	* A-1373-523-A	MOUNTED PCB, YA	
205	X-4033-309-1	CABINET ASSY, RIGHT		217	* A-1373-524-A	MOUNTED PCB, YB	
206	X-3642-018-3	HANDLE ASSY		218	* A-1373-525-A	MOUNTED PCB, YC	
207	4-050-821-02	ESCUTCHEON		219	X-4033-112-1	MASK (4:3) ASSY	
208	* X-4033-110-1	PANEL ASSY, REAR	209-211	220	X-4033-111-1	BEZEL ASSY	21
209	* 3-648-057-01	NUT (ISO-4), U		221	4-051-061-02	HOLDER	
210	* 4-403-012-01	SPRING, STOPPER		222	3-342-839-02	CUSHION	
211	* 4-050-795-01	SPACER, REAR PANEL		223	X-4033-324-1	COVER ASSY, BLIND	20, 222
212	* 4-050-804-01	SCREW, PANEL STOPPER					

6-5. CHASSIS (BVM-20E1E/20E1U/20F1E/20F1U)

- : 7-685-648-71 +BVTP 3x12
- △ : 7-682-548-04 +BVTT 3x8

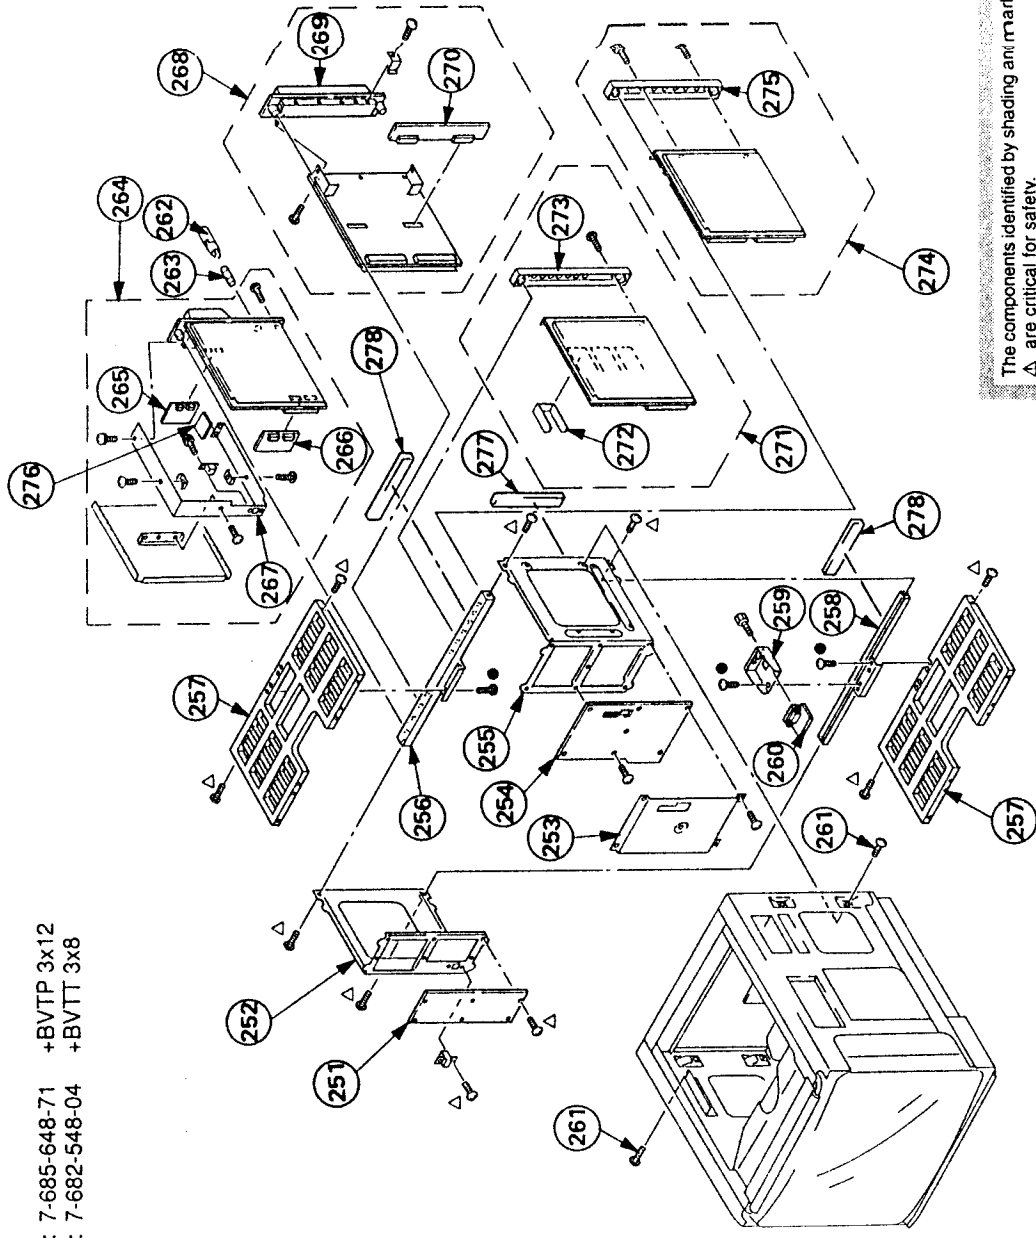


The components identified by shading are marked
△ are critical for safety.
Replace only with part number specified

Les composants identifiés par une trame et une
marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le
numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
251	* A-1390-532-A	MOUNTED PCB, TA		264	* A-1316-258-A	COMPLETE PCB, G	265, 266, 276
252	* 4-050-842-01	BRACKET (L), T		265	* A-1311-432-A	MOUNTED PCB, GA	
253	* 4-050-808-01	SHIELD, T		266	* A-1311-433-A	MOUNTED PCB, GB	
254	* A-1390-533-A	MOUNTED PCB, TB		267	* X-4033-116-2	FRAME ASSY, POWER	
255	* 4-050-843-01	BRACKET (R), T		268	* A-1346-356-B	COMPLETE PCB, E	269, 270
256	* 4-050-847-01	PLATE (UPPER), NUT		269	* X-4033-108-1	HEAT SINK (DEFLECTION) ASSY	
257	* 4-050-844-01	BOARD, CARD SLOT		270	* A-1341-958-B	MOUNTED PCB, D	
258	* 4-050-848-01	PLATE (LOWER), NUT		271	* A-1135-826-A	COMPLETE PCB, BK	
259	* 4-050-816-01	BRACKET, HD		272	X-4033-103-1	HEAT SINK ASSY (BK)	
260	* A-1372-136-A	MOUNTED PCB, HD		273	* X-4033-105-1	PANEL (BK) ASSY, CONNECTOR	
261	4-381-962-11	SCREW +BVTT4X8 (S)		274	* A-1135-825-B	COMPLETE PCB, BC	275
262	1-533-702-11	HOLDER, FUSE		275	* X-4033-106-1	PANEL (BC) ASSY, CONNECTOR	
263	1-536-230-01	FUSE (H/B/C) T3.15A/250V (20E1E/20F1E)		276	* A-1311-467-A	MOUNTED PCB, GC	
264	1-533-746-11	FUSE, GLASS TUBE 4A/125V (20E1U/20F1U)		277	4-053-287-01	GASKET	
				278	4-053-287-11	GASKET	

6-6. PICTURE TUBE (BVM-20E1E/20E1U/20F1E/20F1U)

- : 7-685-881-01 +BVT 4x8
- ◇ : 7-682-661-01 +PS 4x8
- △ : 7-685-872-01 +BVT 3x8
- ▽ : 7-682-665-09 +PS 4x16
- ◆ : 7-682-261-09 +K 4x8

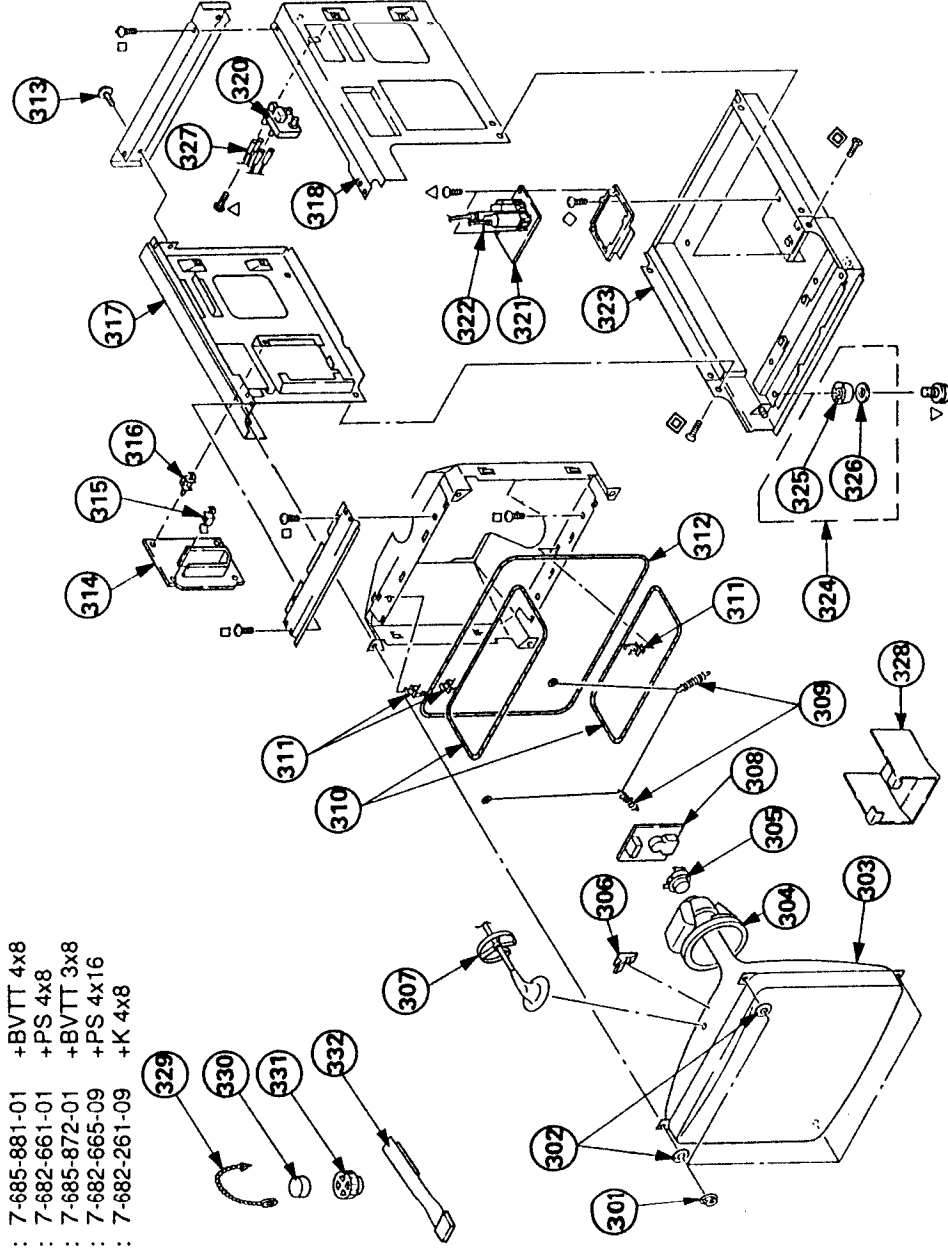


Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked Δ are critical for safety. Replace only with part number specified.


REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
301	4-306-034-01	NUT,(B) (M5), FLANGE		314	* A-1195-104-A	COMPLETE PCB, PA (20E1E/20E1U)	
302	4-348-567-01	WASHER, CRT POSITION		315	* 3-703-141-11	HOLDER, PCB	
303 Δ	8-736-375-05	PICTURE TUBE (COMPT) (20F1U)		316	* 4-353-620-11	HINGE, PC BOARD	
303 Δ	8-736-376-05	PICTURE TUBE (COMP) (20E1E)		317	* X-4033-114-1	CHASSIS ASSY, LEFT	
303 Δ	8-736-377-05	PICTURE TUBE (Y20MPDM) (20E1U)		318	* X-4033-115-1	CHASSIS ASSY, RIGHT	
303 Δ	8-736-374-05	PICTURE TUBE (20MT1) (20F1E: NORTH)		320 Δ	1-223-417-12	RESISTOR ASSY (HIGH-VOLTAGE)	
303 Δ	8-736-384-05	PICTURE TUBE (20MT1) (S) (20E1U: SOUTH)		321	* A-1190-229-A	MOUNTED PCB, PC	
304 Δ	8-511-470-11	DY Y20MPDM		322 Δ	X-4033-492-1	FBT ASSY, NX-20H/1E4	
305 Δ	8-453-003-11	NA 3012AM		323	* X-4033-113-1	PLATE ASSY, BOTTOM	
306	4-040-897-01	SPACER, DY		324	X-4033-117-1	FOOT ASSY	325, 26
307	* 4-047-349-01	HOLDER, HV CABLE		325	X-4836-202-9	FOOT	
308	* A-1331-457-A	MOUNTED PCB, C (20F1E/20F1U)		326	* 3-668-845-01	CUSHION, LEG	
308	* A-1331-520-A	MOUNTED PCB, C (20E1U)		327	1-900-214-33	LEAD ASSY, FOCUS	
309	* 4-303-774-XX	SPRING		328	* X-4033-336-3	SHILD ASSY, DY	
310 Δ	1-111-659-11	COIL DEMAGNETIC		329	4-308-870-00	CLIP, LEAD WIRE	
311	* 4-395-824-02	HOLDER, DEGAUSSING COIL		330	1-452-032-11	MAGNET, DISK; 10MM \emptyset	
312 Δ	1-111-657-11	COIL, LANDING CORRECTION		331	1-452-094-00	MAGNET, ROTA TABLE DISK; 15MM \emptyset	
313	4-847-802-11	SCREW (OS), CASE, CLAW		332	X-4309-608-7	PERMALLOY ASSY, CONVERGENC	
314	* A-1195-097-A	COMPLETE PCB, PA (20F1E/20F1U)					

6-7. CONTROL (BKM-10R)

- : 7-685-648-71 +BVTP 3x12
- : 7-682-561-04 +B 4x8
- ▽ : 7-682-665-09 +PS 4x16
- ◇ : 7-682-947-01 +PSW 3x6

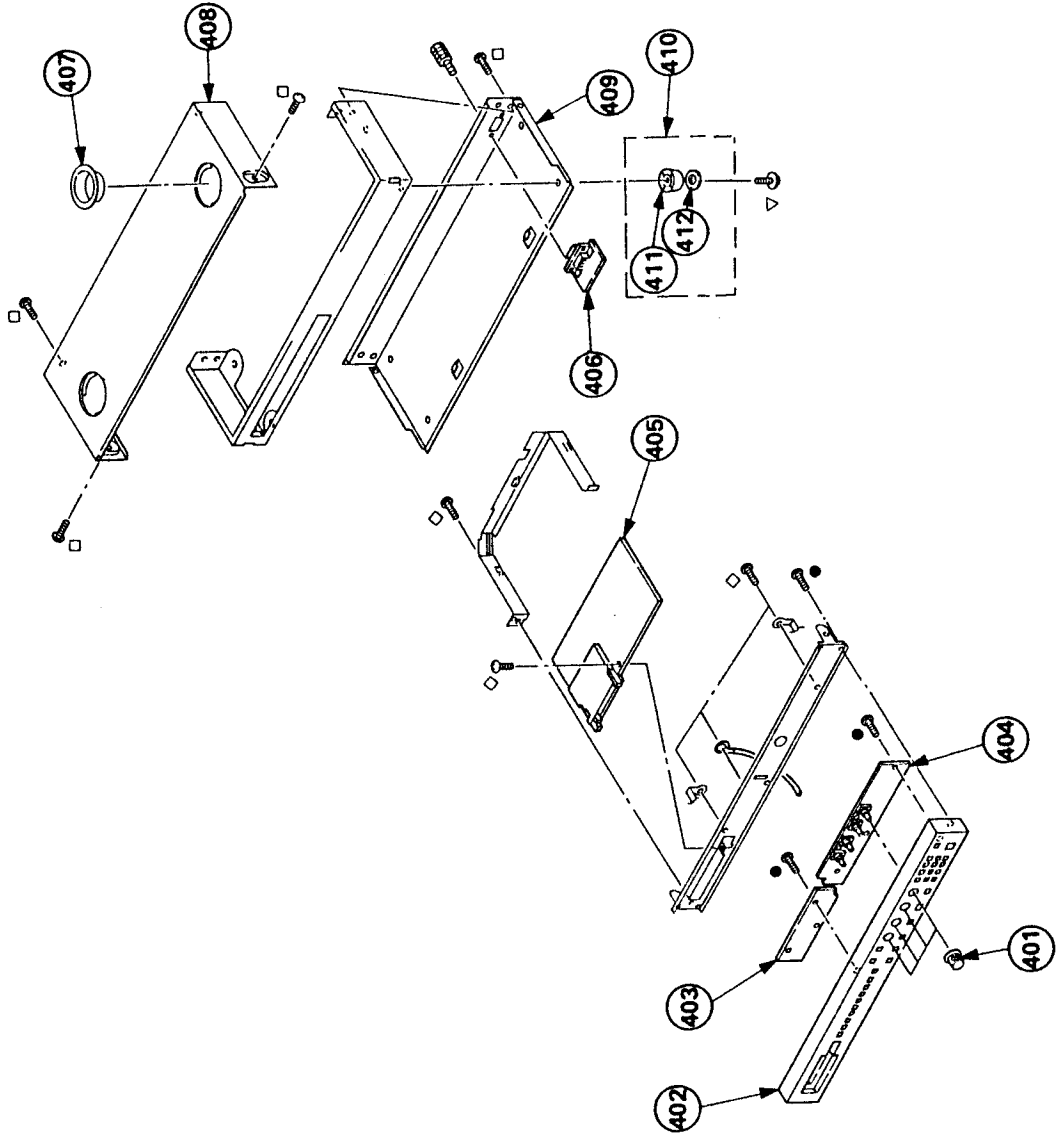

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
401	4-050-851-01	KNOB, CONTROL		407	4-050-852-01	HOLDER, FOOT	
402	X-4033-118-1	PANEL ASSY, CONTROL		408	4-050-858-01	COVER (TOP)	
403	* A-1372-134-A	MOUNTED PCB, HB		409	4-050-857-01	COVER (BOTTOM)	
404	* A-1372-133-A	MOUNTED PCB, HA		410	X-4033-117-1	FOOT ASSY	1, 412
405	* A-1375-149-A	COMPLETE PCB, HC		411	4-306-405-01	FOOT	
406	* A-1372-136-A	MOUNTED PCB, HD		412	* 3-668-845-01	CUSHION, LEG	

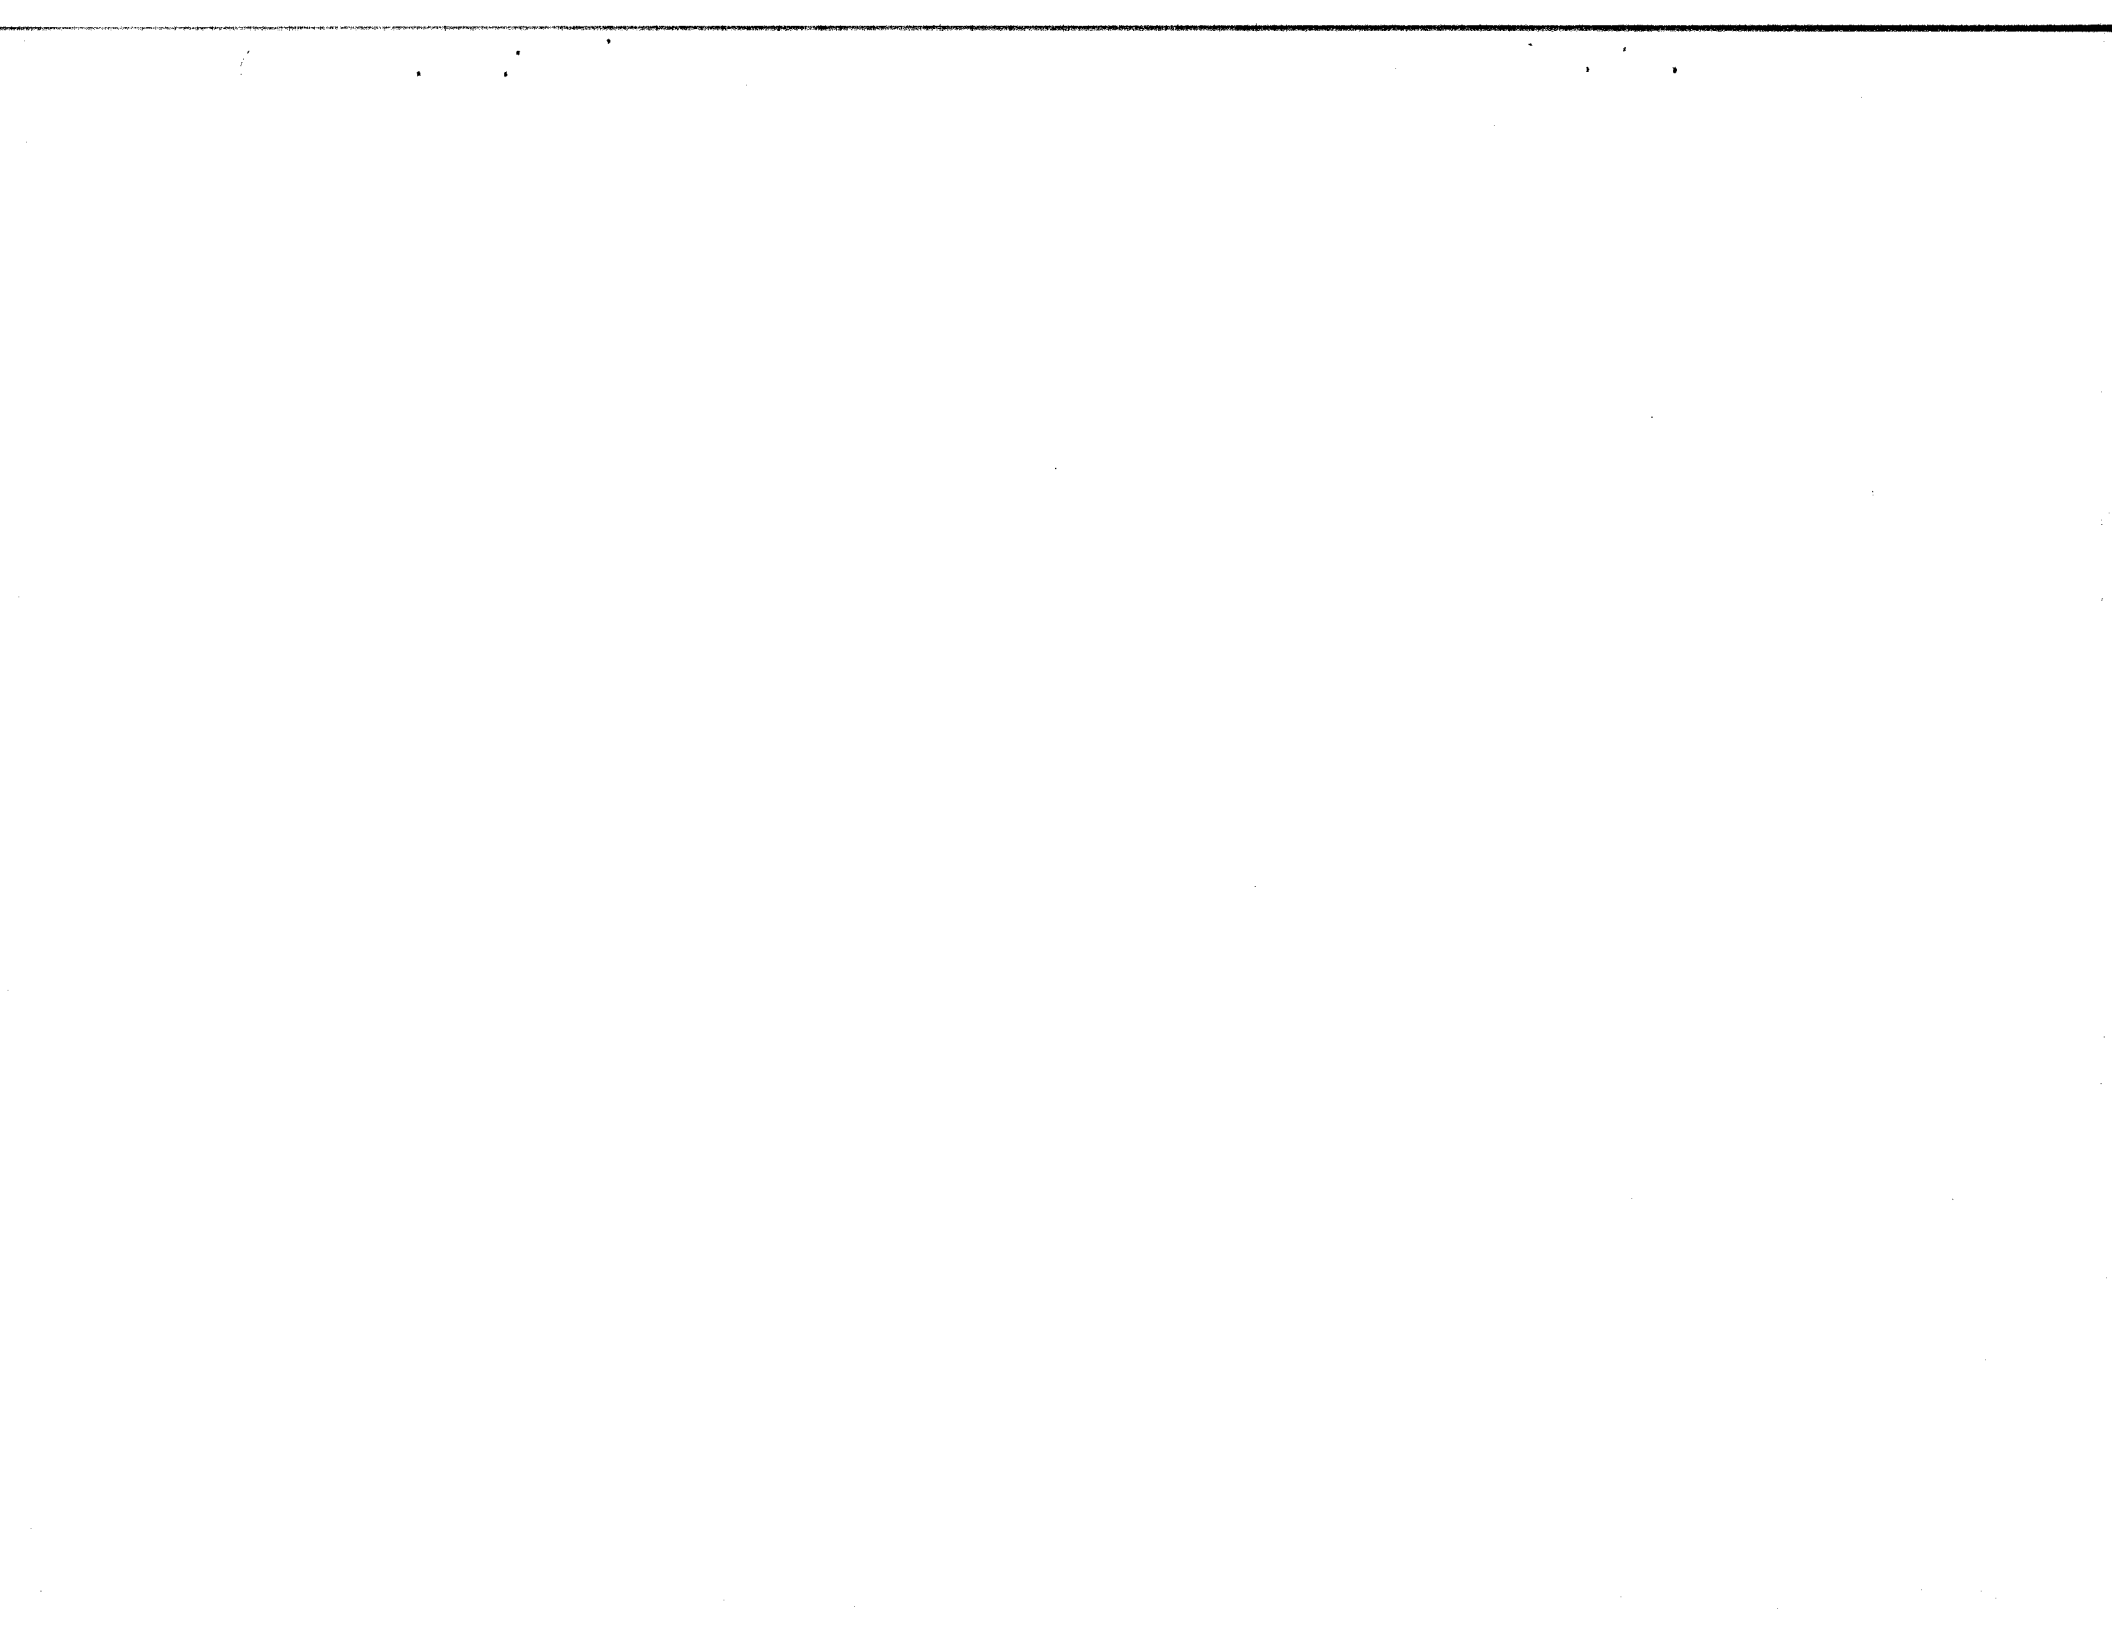

SECTION 7 ELECTRICAL PARTS LIST

BC

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

- The components identified by \square in this manual have been carefully factory-selected for each set in order of satisfy regulations regarding X-ray radiation.
- Should replacement be required, replace only with the value originally used.
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

RESISTORS

- All resistors are in ohms
- F : nonflammable

CAPACITORS

- PF : $\mu\mu\text{F}$

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
	*A-1135-825-B	COMPLETE PCB, BC *****		C44	1-163-038-91	CERAMIC CHIP	25V
	*X-4033-106-1	BATTERY, LITHIUM (BAT 1), (CR2025)		C45	1-163-038-91	CERAMIC CHIP	25V
	1-550-104-11	HOLDER, BATTERY		C46	1-163-235-11	CERAMIC CHIP	5%
	*4-050-795-01	SPACER, REAR PANEL		C47	1-163-235-11	CERAMIC CHIP	5%
	*4-050-804-01	SCREW, PANEL STOPPER		C101	1-163-031-11	CERAMIC CHIP	30V
	*4-050-814-01	SHIELD, PCB		C102	1-163-031-11	CERAMIC CHIP	30V
	*4-403-012-01	SPRING, STOPPER		C104	1-164-222-11	CERAMIC CHIP	25V
	7-432-114-11	SCREW LOCK		C105	1-163-235-11	CERAMIC CHIP	5%
	7-623-422-07	LW 3, TYPE B		C106	1-163-235-11	CERAMIC CHIP	5%
	7-685-871-01	SCREW +BVTT 3X6 (S)		C107	1-163-235-11	CERAMIC CHIP	5%
	7-682-548-09	SCREW +BVTT 3X8 (S)		C108	1-163-235-11	CERAMIC CHIP	5%
		< CAPACITOR >		C109	1-163-038-91	CERAMIC CHIP	25V
				C110	1-163-031-11	CERAMIC CHIP	30V
				C111	1-164-505-11	CERAMIC CHIP	16V
				C112	1-164-505-11	CERAMIC CHIP	16V
				C113	1-163-031-11	CERAMIC CHIP	30V
				C114	1-163-031-11	CERAMIC CHIP	30V
				C115	1-163-235-11	CERAMIC CHIP	5%
				C116	1-163-235-11	CERAMIC CHIP	5%
				C117	1-163-031-11	CERAMIC CHIP	16V
				C118	1-163-029-11	CERAMIC CHIP	30V
				C151	1-126-396-11	ELECT CHIP	20%
				C154	1-164-004-11	CERAMIC CHIP	10%
				C155	1-164-182-11	CERAMIC CHIP	10%
				C156	1-164-344-11	CERAMIC CHIP	10%
				C161	1-126-404-11	ELECT CHIP	20%
				C162	1-163-251-11	CERAMIC CHIP	5%
				C163	1-162-638-11	CERAMIC CHIP	16
				C164	1-163-141-00	CERAMIC CHIP	5%
				C165	1-162-637-11	CERAMIC CHIP	16
				C166	1-164-695-11	CERAMIC CHIP	5%
				C167	1-164-506-11	CERAMIC CHIP	16
				C168	1-164-506-11	CERAMIC CHIP	16
				C169	1-163-141-00	CERAMIC CHIP	5%
				C170	1-162-638-11	CERAMIC CHIP	16
				C171	1-162-638-11	CERAMIC CHIP	16
				C181	1-126-401-11	ELECT CHIP	20%
				C183	1-126-401-11	ELECT CHIP	20%
				C184	1-164-489-11	CERAMIC CHIP	10%
				C185	1-163-251-11	CERAMIC CHIP	5%
				C201	1-126-392-11	ELECT CHIP	20%
				C202	1-126-392-11	ELECT CHIP	20%
				C203	1-126-392-11	ELECT CHIP	20%
				C204	1-126-392-11	ELECT CHIP	20%
				C205	1-126-392-11	ELECT CHIP	20%

BC

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
C206	1-126-392-11	ELECT CHIP	100μ F	C322	1-163-031-11	CERAMIC CHIP	0.01μ F
C207	1-126-392-11	ELECT CHIP	100μ F	C323	1-163-031-11	CERAMIC CHIP	0.01μ F
C208	1-126-392-11	ELECT CHIP	100μ F	C324	1-163-031-11	CERAMIC CHIP	0.01μ F
C209	1-126-392-11	ELECT CHIP	100μ F	C325	1-163-031-11	CERAMIC CHIP	0.01μ F
C210	1-126-392-11	ELECT CHIP	100μ F	C326	1-163-031-11	CERAMIC CHIP	0.01μ F
C211	1-126-392-11	ELECT CHIP	100μ F	C327	1-163-031-11	CERAMIC CHIP	0.01μ F
C212	1-126-392-11	ELECT CHIP	100μ F	C328	1-163-031-11	CERAMIC CHIP	0.01μ F
C213	1-126-392-11	ELECT CHIP	100μ F	C329	1-163-031-11	CERAMIC CHIP	0.01μ F
C214	1-126-392-11	ELECT CHIP	100μ F	C330	1-163-031-11	CERAMIC CHIP	0.01μ F
C215	1-126-392-11	ELECT CHIP	100μ F	C331	1-163-031-11	CERAMIC CHIP	0.01μ F
C216	1-126-392-11	ELECT CHIP	100μ F	C332	1-163-031-11	CERAMIC CHIP	0.01μ F
C217	1-126-392-11	ELECT CHIP	100μ F	C333	1-163-031-11	CERAMIC CHIP	0.01μ F
C218	1-126-392-11	ELECT CHIP	100μ F	C334	1-163-031-11	CERAMIC CHIP	0.01μ F
C219	1-126-392-11	ELECT CHIP	100μ F	C335	1-163-031-11	CERAMIC CHIP	0.01μ F
C220	1-126-392-11	ELECT CHIP	100μ F	C336	1-163-031-11	CERAMIC CHIP	0.01μ F
C231	1-126-392-11	ELECT CHIP	100μ F	C337	1-163-031-11	CERAMIC CHIP	0.01μ F
C232	1-126-392-11	ELECT CHIP	100μ F	C338	1-163-031-11	CERAMIC CHIP	0.01μ F
C233	1-126-392-11	ELECT CHIP	100μ F	C339	1-163-031-11	CERAMIC CHIP	0.01μ F
C234	1-126-392-11	ELECT CHIP	100μ F	C340	1-163-031-11	CERAMIC CHIP	0.01μ F
C235	1-126-392-11	ELECT CHIP	100μ F	C341	1-135-216-11	TANTAL. CHIP	10μ F
C236	1-126-392-11	ELECT CHIP	100μ F	C342	1-135-216-11	TANTAL. CHIP	10μ F
C237	1-126-392-11	ELECT CHIP	100μ F	C343	1-135-216-11	TANTAL. CHIP	10μ F
C241	1-126-392-11	ELECT CHIP	100μ F	C344	1-135-216-11	TANTAL. CHIP	10μ F
C242	1-126-392-11	ELECT CHIP	100μ F	C351	1-163-031-11	CERAMIC CHIP	0.01μ F
C243	1-126-392-11	ELECT CHIP	100μ F	C352	1-163-031-11	CERAMIC CHIP	0.01μ F
C244	1-126-392-11	ELECT CHIP	100μ F	C357	1-163-031-11	CERAMIC CHIP	0.01μ F
C245	1-126-392-11	ELECT CHIP	100μ F	C358	1-163-031-11	CERAMIC CHIP	0.01μ F
C246	1-126-392-11	ELECT CHIP	100μ F	C359	1-163-031-11	CERAMIC CHIP	0.01μ F
C247	1-126-397-11	ELECT CHIP	3μ F	C360	1-163-031-11	CERAMIC CHIP	0.01μ F
C251	1-126-397-11	ELECT CHIP	3μ F	C362	1-163-031-11	CERAMIC CHIP	0.01μ F
C252	1-126-396-11	ELECT CHIP	47μ F	C363	1-163-031-11	CERAMIC CHIP	0.01μ F
C271	1-126-396-11	ELECT CHIP	47μ F	C364	1-163-031-11	CERAMIC CHIP	0.01μ F
C281	1-126-392-11	ELECT CHIP	100μ F	C365	1-163-031-11	CERAMIC CHIP	0.01μ F
C291	1-126-396-11	ELECT CHIP	47μ F	C366	1-163-031-11	CERAMIC CHIP	0.01μ F
C301	1-163-031-11	CERAMIC CHIP	0.01μ F	C367	1-163-031-11	CERAMIC CHIP	0.01μ F
C302	1-163-031-11	CERAMIC CHIP	0.01μ F	C368	1-163-031-11	CERAMIC CHIP	0.01μ F
C303	1-163-031-11	CERAMIC CHIP	0.01μ F	C369	1-163-031-11	CERAMIC CHIP	0.01μ F
C304	1-163-031-11	CERAMIC CHIP	0.01μ F	C370	1-163-031-11	CERAMIC CHIP	0.01μ F
C305	1-163-031-11	CERAMIC CHIP	0.01μ F	C371	1-163-031-11	CERAMIC CHIP	0.01μ F
C306	1-163-031-11	CERAMIC CHIP	0.01μ F	C372	1-163-031-11	CERAMIC CHIP	0.01μ F
C307	1-163-031-11	CERAMIC CHIP	0.01μ F	C373	1-163-031-11	CERAMIC CHIP	0.01μ F
C308	1-163-031-11	CERAMIC CHIP	0.01μ F	C374	1-163-031-11	CERAMIC CHIP	0.01μ F
C309	1-163-031-11	CERAMIC CHIP	0.01μ F	C375	1-163-031-11	CERAMIC CHIP	0.01μ F
C310	1-163-031-11	CERAMIC CHIP	0.01μ F	C376	1-163-031-11	CERAMIC CHIP	0.01μ F
C311	1-163-031-11	CERAMIC CHIP	0.01μ F	C377	1-164-505-11	CERAMIC CHIP	2.2μ F
C312	1-163-031-11	CERAMIC CHIP	0.01μ F	C391	1-163-031-11	CERAMIC CHIP	0.01μ F
C313	1-163-031-11	CERAMIC CHIP	0.01μ F	C392	1-163-031-11	CERAMIC CHIP	0.01μ F
C314	1-163-031-11	CERAMIC CHIP	0.01μ F	C401	1-163-251-11	CERAMIC	100pF
C315	1-163-031-11	CERAMIC CHIP	0.01μ F	C402	1-163-251-11	CERAMIC	100pF
C316	1-163-031-11	CERAMIC CHIP	0.01μ F			< CONNECTOR >	
C317	1-163-031-11	CERAMIC CHIP	0.01μ F	CN1	1-774-523-11	PIN, CONNECTOR (PC BOARD) 64P	
C318	1-163-031-11	CERAMIC CHIP	0.01μ F	CN2	1-774-523-11	PIN, CONNECTOR (PC BOARD) 64P	
C319	1-163-031-11	CERAMIC CHIP	0.01μ F	CN3	1-565-269-11	SOCKET, CONNECTOR (D-DUBL.) 9P	
C320	1-163-031-11	CERAMIC CHIP	0.01μ F			(REMARK 1 IN)	

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
CN4	1-565-269-11	SOCKET, CONNECTOR (D-DUB.L.) 9P (REMOTEL OUT)		IC10	8-759-926-11	IC SN74HC138ANS	
CN5	1-565-269-11	SOCKET, CONNECTOR (D-DUB.L.) 9P (REMOTEL)		IC11	8-759-981-48	IC TL082M	
CN6	1-565-269-11	SOCKET, CONNECTOR (D-DUB.L.) 9P (ISR)		IC12	8-759-232-44	IC TC74HC125AF	
D1	8-719-158-15	< DIODE >		IC13	8-759-926-11	IC SN74HC138ANS	
D2	8-719-158-15	DIODE RD5.6S-B		IC14	8-759-061-67	IC MC34051M	
D3	8-719-158-15	DIODE RD5.6S-B		IC15	8-759-925-74	IC SN74HC04ANS	
D4	8-719-158-15	DIODE RD5.6S-B		IC16	8-759-239-55	IC TC74HC123AF	
D5	8-719-158-15	DIODE RD5.6S-B		IC17	8-759-925-73	IC SN74HC03NS	
D12	8-719-109-92	DIODE RD6.2ES-B1		IC19	8-759-236-19	IC TC74HC151AF(EL)	
D13	8-719-104-46	DIODE MA110		IC20	8-759-236-19	IC TC74HC151AF(EL)	
D29	8-719-158-19	DIODE RD6.2SB		IC21	8-759-236-19	IC TC74HC151AF(EL)	
D30	8-719-158-19	DIODE RD6.2SB		IC22	8-759-346-05	IC μ PD71051IGU-10-E2	
D31	8-719-158-19	DIODE RD6.2SB		IC23	8-759-346-05	IC μ PD71051IGU-10-E2	
D32	8-719-158-19	DIODE RD6.2SB		IC24	8-759-346-05	IC μ PD71051IGU-10-E2	
D33	8-719-158-19	DIODE RD6.2SB		IC25	8-759-289-45	IC LTC485CS8	
D34	8-719-158-19	DIODE RD6.2SB		IC26	8-759-289-45	IC LTC485CS8	
D35	8-719-158-19	DIODE RD6.2SB		IC27	8-759-252-59	IC MAX202CSE	
D36	8-719-158-19	DIODE RD6.2SB		IC28	8-759-252-59	IC MAX202CSE	
D37	8-719-158-19	DIODE RD6.2SB		IC30	8-759-926-98	IC SN74HC4040ANS	
D38	8-719-158-19	DIODE RD6.2SB		IC31	8-759-925-74	IC SN74HC04ANS	
D39	8-719-158-19	DIODE RD6.2SB		IC32	8-759-925-75	IC SN74HC05ANS	
D40	8-719-158-19	DIODE RD6.2SB		IC33	8-759-925-75	IC SN74HC05ANS	
D41	8-719-158-19	DIODE RD6.2SB		IC34	8-759-007-56	IC MC74HC30F	
D103	8-719-404-46	DIODE MA110		IC35	8-759-296-77	IC MC74HC541AFEL	
D104	8-719-404-46	DIODE MA110		IC36	8-759-252-59	IC MAX202CSE	
D105	8-719-404-46	DIODE MA110		IC37	8-759-182-91	IC PQ12TZ5U	
D106	8-719-404-46	DIODE MA110		ICS1	8-759-700-65	IC NJM79L05A	
D107	8-719-404-46	DIODE MA110		ICS2	8-759-144-82	IC μ PC2405HF	
D108	8-719-404-46	DIODE MA110		IC101	8-759-514-57	IC BA7046F	
D109	8-719-404-46	DIODE MA110		IC102	8-752-064-20	IC CXA1727Q	
D111	8-719-404-46	DIODE MA110		IC103	8-752-353-22	IC CXD2122Q	
D112	8-719-404-46	DIODE MA110		IC104	8-759-926-98	IC SN74HC4040ANS	
D113	8-719-404-46	DIODE MA110		IC105	8-752-357-15	IC CXD2343S	
FU1	1-236-741-21	< FILTER >		IC106	8-759-037-80	IC MC74HC163AF-T1	
FU2	1-236-741-21	FILTER, EMI		IC109	8-752-334-64	IC CXD1171M	
FU3	1-236-741-21	FILTER, EMI		IC110	8-759-232-80	IC TC74HC166AF	
FU5	1-236-741-21	FILTER, EMI		IC111	8-759-011-65	IC MC74HC4053F	
FU6	1-236-071-11	ENCAPSULATED COMPONENT		IC113	8-759-032-23	IC MC74HC74AF	
IC1	8-759-333-47	< IC >		IC114	8-759-295-09	IC TLC2932IPW	
IC2	8-759-346-07	IC HD6475368CP-10		IC115	8-759-925-78	IC SN74HC10ANS	
IC3	8-759-395-43	IC MM10268FB		IC116	8-759-011-65	IC MC74HC4053F	
IC4	8-752-337-47	IC CAT28F020P		IC117	8-759-032-01	IC MC74HC00AF	
IC5	8-759-938-68	IC CXK58257AP-10LL		IC118	8-759-100-93	IC μ PC393G2	
IC6	8-759-938-68	IC CXD1095Q		IC119	8-759-011-65	IC MC74HC4053F	
IC7	8-759-054-57	IC CXD1095Q		IC120	8-752-321-16	IC CXD1030M	
IC8	8-759-925-75	IC μ PD6453GT-101		IC121	8-759-925-74	IC SN74HC04ANS	
IC9	8-759-082-59	IC SN74HC05ANS		IC122	8-759-032-11	IC MC74HC04AF	
		IC TC74HC32FU		IC123	8-759-032-23	IC MC74HC74AF	
				IC124	8-759-328-12	IC Z862812PSC	
				IC125	8-759-925-75	IC SN74HC05ANS	
				IC126	8-759-944-79	IC CXD1132Q	
						< IC SOCKET >	
				ICS1	1-540-222-11	SOCKET, IC (PCC PACKAGE) 84P	

BC

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
ICS3	*1-526-660-21	SOCKET, IC (DP) 32P		Q9	8-729-921-12	TRANSISTOR 2SD1834	
ICS4	*1-526-659-00	SOCKET, IC (DP) 28P		Q101	8-729-901-06	TRANSISTOR DTA144EK	
ICS107	*1-526-659-00	SOCKET, IC (DP) 28P		Q102	8-729-901-06	TRANSISTOR DTA144EK	
ICS108	*1-526-659-00	SOCKET, IC (DP) 28P		Q103	8-729-901-06	TRANSISTOR DTA144EK	
		< CHIP CONDUCTOR >		Q104	8-729-901-06	TRANSISTOR DTA144EK	
JR3	1-216-295-91	CONDUCTOR, CHIP (2012)		Q106	8-729-216-22	TRANSISTOR 2SA1162-G	
JR5	1-216-295-91	CONDUCTOR, CHIP (2012)		Q107	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR6	1-216-295-91	CONDUCTOR, CHIP (2012)		Q108	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR9	1-216-295-91	CONDUCTOR, CHIP (2012)		Q109	8-729-216-22	TRANSISTOR 2SA1162-G	
JR10	1-216-295-91	CONDUCTOR, CHIP (2012)		Q110	8-729-901-06	TRANSISTOR DTA144EK	
JR12	1-216-295-91	CONDUCTOR, CHIP (2012)		Q111	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR14	1-216-296-91	CONDUCTOR, CHIP (3216)		Q112	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR101	1-216-295-91	CONDUCTOR, CHIP (2012)		Q113	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR102	1-216-295-91	CONDUCTOR, CHIP (2012)		Q114	8-729-901-06	TRANSISTOR DTA144EK	
JR103	1-216-295-91	CONDUCTOR, CHIP (2012)		Q115	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR104	1-216-295-91	CONDUCTOR, CHIP (2012)		Q116	8-729-901-01	TRANSISTOR DTC144EK	
JR105	1-216-295-91	CONDUCTOR, CHIP (2012)		Q151	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR106	1-216-295-91	CONDUCTOR, CHIP (2012)		Q152	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR107	1-216-295-91	CONDUCTOR, CHIP (2012)		Q153	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR108	1-216-295-91	CONDUCTOR, CHIP (2012)		Q154	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
JR109	1-216-295-91	CONDUCTOR, CHIP (2012)		Q155	8-729-216-22	TRANSISTOR 2SA1162-G	
JR110	1-216-295-91	CONDUCTOR, CHIP (2012)				< RESISTOR >	
JR111	1-216-296-91	CONDUCTOR, CHIP (3216)		R1	1-216-073-00	METAL GLAZE	5% 1/10W
JR112	1-216-296-91	CONDUCTOR, CHIP (3216)		R2	1-216-073-00	METAL GLAZE	5% 1/10W
JR113	1-216-296-91	CONDUCTOR, CHIP (3216)		R3	1-216-073-00	METAL GLAZE	5% 1/10W
JR114	1-216-296-91	CONDUCTOR, CHIP (3216)		R4	1-216-073-00	METAL GLAZE	5% 1/10W
JR115	1-216-296-91	CONDUCTOR, CHIP (3216)		R5	1-216-073-00	METAL GLAZE	5% 1/10W
JR116	1-216-296-91	CONDUCTOR, CHIP (3216)		R6	1-216-073-00	METAL GLAZE	5% 1/10W
JR117	1-216-296-91	CONDUCTOR, CHIP (3216)		R7	1-216-097-91	METAL GLAZE	5% 1/10W
JR118	1-216-296-91	CONDUCTOR, CHIP (3216)		R10	1-216-121-91	METAL GLAZE	5% 1/10W
JR119	1-216-296-91	CONDUCTOR, CHIP (3216)		R11	1-216-073-00	METAL GLAZE	5% 1/10W
JR120	1-216-295-91	CONDUCTOR, CHIP (2012)		R12	1-216-049-91	METAL GLAZE	5% 1/10W
JR121	1-216-295-91	CONDUCTOR, CHIP (2012)		R13	1-216-049-91	METAL GLAZE	5% 1/10W
JR122	1-216-295-91	CONDUCTOR, CHIP (2012)		R14	1-216-049-91	METAL GLAZE	5% 1/10W
JR123	1-216-295-91	CONDUCTOR, CHIP (2012)		R15	1-216-049-91	METAL GLAZE	5% 1/10W
JR124	1-216-295-91	CONDUCTOR, CHIP (2012)		R16	1-216-073-00	METAL GLAZE	5% 1/10W
JR125	1-216-295-91	CONDUCTOR, CHIP (2012)		R17	1-216-073-00	METAL GLAZE	5% 1/10W
L1	1-410-202-51	INDUCTOR CHIP 6.8uH		R18	1-216-057-00	METAL GLAZE	5% 1/10W
L201	1-412-537-31	INDUCTOR 100uH		R19	1-216-069-00	METAL GLAZE	5% 1/10W
		< COIL >		R20	1-216-065-00	METAL GLAZE	5% 1/10W
LPF101	1-239-289-11	FILTER, LOW PASS		R21	1-216-077-00	METAL GLAZE	5% 1/10W
		< FILTER >		R22	1-216-073-00	METAL GLAZE	5% 1/10W
		< IC LINK >		R23	1-216-651-11	METAL CHIP	0.50% 1/10W
		LINK IC 15A150W		R24	1-216-651-11	METAL CHIP	0.50% 1/10W
		LINK IC 15A150W		R25	1-216-651-11	METAL CHIP	0.50% 1/10W
		< TRANSISTOR >		R26	1-216-651-11	METAL CHIP	0.50% 1/10W
Q1	8-729-901-01	TRANSISTOR DTC144EK		R27	1-216-049-91	METAL GLAZE	5% 1/10W
Q2	8-729-901-06	TRANSISTOR DTA144EK		R28	1-216-049-91	METAL GLAZE	5% 1/10W
Q3	8-729-901-06	TRANSISTOR DTA144EK		R29	1-216-295-91	CONDUCTOR, CHIP (2012)	
Q4	8-729-901-01	TRANSISTOR DTC144EK		R31	1-216-121-91	METAL GLAZE	5% 1/10W
Q5	8-729-901-01	TRANSISTOR DTC144EK		R32	1-216-097-91	METAL GLAZE	5% 1/10W
Q6	8-729-122-13	TRANSISTOR 2SA1221-K		R33	1-216-097-91	METAL GLAZE	5% 1/10W
Q7	8-729-122-13	TRANSISTOR 2SA1221-K		R34	1-216-097-91	METAL GLAZE	5% 1/10W
Q8	8-729-901-01	TRANSISTOR DTC144EK					

PS1 Δ 1-532-675-21 LINK IC 15A150W
PS2 Δ 1-532-675-21 LINK IC 15A150W

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R35	1-216-097-91	METAL GLAZE	100K	R111	1-216-061-00	METAL GLAZE	3.3K
R36	1-216-057-00	METAL GLAZE	2.2K	R112	1-216-065-00	METAL GLAZE	4.7K
R37	1-216-057-00	METAL GLAZE	2.2K	R113	1-216-061-00	METAL GLAZE	3.3K
R38	1-216-057-00	METAL GLAZE	2.2K	R114	1-216-033-00	METAL GLAZE	220
R39	1-216-628-11	METAL CHIP	110	R115	1-216-049-91	METAL GLAZE	1K
R40	1-216-628-11	METAL CHIP	110	R116	1-216-081-00	METAL GLAZE	22K
R41	1-216-097-91	METAL GLAZE	100K	R117	1-216-073-00	METAL GLAZE	10K
R42	1-216-097-91	METAL GLAZE	100K	R118	1-216-061-00	METAL GLAZE	3.3K
R43	1-216-097-91	METAL GLAZE	100K	R119	1-216-073-00	METAL GLAZE	10K
R44	1-216-097-91	METAL GLAZE	100K	R120	1-216-073-00	METAL GLAZE	10K
R45	1-216-097-91	METAL GLAZE	100K	R121	1-216-057-00	METAL GLAZE	2.2K
R46	1-216-097-91	METAL GLAZE	100K	R122	1-216-081-00	METAL GLAZE	22K
R47	1-216-097-91	METAL GLAZE	100K	R123	1-216-065-00	METAL GLAZE	4.7K
R48	1-216-097-91	METAL GLAZE	100K	R124	1-216-073-00	METAL GLAZE	10K
R51	1-216-049-91	METAL GLAZE	1K	R125	1-216-065-00	METAL GLAZE	4.7K
R52	1-216-049-91	METAL GLAZE	1K	R126	1-216-049-91	METAL GLAZE	1K
R53	1-216-049-91	METAL GLAZE	1K	R127	1-216-049-91	METAL GLAZE	1K
R54	1-216-049-91	METAL GLAZE	1K	R128	1-216-057-00	METAL GLAZE	2.2K
R55	1-216-049-91	METAL GLAZE	1K	R129	1-216-065-00	METAL GLAZE	4.7K
R56	1-216-049-91	METAL GLAZE	1K	R130	1-216-097-91	METAL GLAZE	100K
R57	1-216-049-91	METAL GLAZE	1K	R131	1-216-025-91	METAL GLAZE	100
R58	1-216-049-91	METAL GLAZE	1K	R132	1-216-081-00	METAL GLAZE	22K
R59	1-216-049-91	METAL GLAZE	1K	R133	1-216-065-00	METAL GLAZE	4.7K
R60	1-216-045-00	METAL GLAZE	680	R134	1-216-097-91	METAL GLAZE	100K
R61	1-216-047-91	METAL GLAZE	820	R135	1-216-025-91	METAL GLAZE	100
R62	1-216-053-00	METAL GLAZE	1.5K	R136	1-216-081-00	METAL GLAZE	22K
R63	1-216-057-00	METAL GLAZE	2.2K	R137	1-216-025-91	METAL GLAZE	100
R64	1-216-069-00	METAL GLAZE	6.8K	R138	1-216-081-00	METAL GLAZE	22K
R65	1-216-053-00	METAL GLAZE	1.5K	R139	1-216-065-00	METAL GLAZE	4.7K
R66	1-216-053-00	METAL GLAZE	1.5K	R140	1-216-097-91	METAL GLAZE	100K
R67	1-216-053-00	METAL GLAZE	1.5K	R141	1-216-025-91	METAL GLAZE	100
R68	1-216-053-00	METAL GLAZE	1.5K	R151	1-216-081-00	METAL GLAZE	22K
R69	1-216-053-00	METAL GLAZE	1.5K	R152	1-216-081-00	METAL GLAZE	22K
R70	1-216-049-91	METAL GLAZE	1K	R153	1-216-057-00	METAL GLAZE	2.2K
R71	1-216-049-91	METAL GLAZE	1K	R154	1-216-057-00	METAL GLAZE	2.2K
R72	1-216-655-11	METAL CHIP	1.5K	R155	1-216-059-00	METAL GLAZE	2.7K
R73	1-216-097-91	METAL GLAZE	100K	R156	1-164-004-11	CERAMIC CHIP	0.1
R74	1-216-073-00	METAL GLAZE	10K	R157	1-216-069-00	METAL GLAZE	6.8K
R75	1-216-073-00	METAL GLAZE	10K	R159	1-216-133-00	METAL GLAZE	3.3M
R76	1-216-073-00	METAL GLAZE	10K	R161	1-216-057-00	METAL GLAZE	2.2K
R77	1-216-073-00	METAL GLAZE	10K	R162	1-216-065-00	METAL GLAZE	4.7K
R84	1-216-033-00	METAL GLAZE	220	R163	1-216-065-00	METAL GLAZE	4.7K
R85	1-216-033-00	METAL GLAZE	220	R164	1-216-025-91	METAL GLAZE	100
R86	1-216-033-00	METAL GLAZE	220	R165	1-216-045-00	METAL GLAZE	680
R87	1-216-033-00	METAL GLAZE	220	R166	1-216-077-00	METAL GLAZE	15K
R88	1-216-033-00	METAL GLAZE	220	R167	1-216-077-00	METAL GLAZE	15K
R89	1-216-033-00	METAL GLAZE	220	R169	1-216-079-00	METAL GLAZE	18K
R90	1-216-073-00	METAL GLAZE	10K	R170	1-216-079-00	METAL GLAZE	18K
R102	1-216-085-00	METAL GLAZE	33K	R171	1-216-073-00	METAL GLAZE	10K
R103	1-216-073-00	METAL GLAZE	10K	R172	1-216-073-00	METAL GLAZE	10K
R104	1-216-097-91	METAL GLAZE	100K	R181	1-216-113-00	METAL GLAZE	470K
R105	1-216-097-91	METAL GLAZE	100K	R182	1-216-073-00	METAL GLAZE	10K
R109	1-216-073-00	METAL GLAZE	10K	R183	1-216-113-00	METAL GLAZE	470K
R110	1-216-079-00	METAL GLAZE	18K	R184	1-216-099-00	METAL GLAZE	120K
				R185	1-216-057-00	METAL GLAZE	2.2K

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C165	1-164-222-11	CERAMIC CHIP	0.22 μ F	C323	1-164-505-11	CERAMIC CHIP	16V
C166	1-164-700-11	CERAMIC CHIP	0.68 μ F	C324	1-163-031-11	CERAMIC CHIP	50V
C167	1-164-505-11	CERAMIC CHIP	2.2 μ F	C326	1-164-222-11	CERAMIC CHIP	25V
C168	1-104-559-11	FILM CHIP	0.047 μ F	C327	1-104-559-11	FILM CHIP	5%
C169	1-104-559-11	FILM CHIP	0.047 μ F	C328	1-104-752-11	TANTAL. CHIP	20%
C170	1-164-336-11	CERAMIC CHIP	0.33 μ F	C329	1-164-505-11	CERAMIC CHIP	16V
C171	1-163-031-11	CERAMIC CHIP	0.01 μ F	C330	1-164-505-11	CERAMIC CHIP	16V
C172	1-104-823-11	TANTAL. CHIP	47 μ F	C350	1-163-031-11	CERAMIC CHIP	50V
C173	1-164-005-11	CERAMIC CHIP	0.47 μ F	C351	1-163-031-11	CERAMIC CHIP	50V
C174	1-164-505-11	CERAMIC CHIP	2.2 μ F	C352	1-104-559-11	FILM CHIP	5%
C175	1-164-505-11	CERAMIC CHIP	2.2 μ F	C353	1-104-551-11	FILM CHIP	5%
C176	1-104-559-11	FILM CHIP	0.047 μ F	C354	1-163-031-11	CERAMIC CHIP	50V
C177	1-163-031-11	CERAMIC CHIP	0.01 μ F	C355	1-163-031-11	CERAMIC CHIP	50V
C178	1-163-031-11	CERAMIC CHIP	0.01 μ F	C356	1-126-392-11	ELECT CHIP	20%
C179	1-163-031-11	CERAMIC CHIP	0.01 μ F	C357	1-126-392-11	ELECT CHIP	20%
C180	1-163-031-11	CERAMIC CHIP	0.01 μ F	C360	1-163-031-11	CERAMIC CHIP	50V
C181	1-104-551-11	FILM CHIP	0.01 μ F	C361	1-163-031-11	CERAMIC CHIP	50V
C182	1-104-559-11	FILM CHIP	0.047 μ F	C362	1-163-249-11	CERAMIC CHIP	5%
C183	1-163-033-91	CERAMIC CHIP	0.022 μ F	C363	1-163-089-00	CERAMIC CHIP	0.5pF
C187	1-163-031-11	CERAMIC CHIP	0.01 μ F	C374	1-164-222-11	CERAMIC CHIP	25V
C188	1-163-038-91	CERAMIC CHIP	0.1 μ F	C375	1-164-700-11	CERAMIC CHIP	16V
C189	1-163-031-11	CERAMIC CHIP	0.01 μ F	C376	1-164-505-11	CERAMIC CHIP	16V
C190	1-164-222-11	CERAMIC CHIP	0.22 μ F	C377	1-163-031-11	CERAMIC CHIP	50V
C191	1-163-251-11	CERAMIC CHIP	100pF	C378	1-104-559-11	FILM CHIP	5%
C192	1-164-232-11	CERAMIC CHIP	0.01 μ F	C379	1-104-559-11	FILM CHIP	5%
C193	1-163-035-00	CERAMIC CHIP	2.2 μ F	C380	1-164-336-11	CERAMIC CHIP	25V
C194	1-106-367-00	MYLAR	0.01 μ F	C381	1-163-031-11	CERAMIC CHIP	50V
C195	1-164-505-11	CERAMIC CHIP	2.2 μ F	C382	1-104-823-11	TANTAL. CHIP	20%
C196	1-107-943-11	ELECT	10 μ F	C383	1-164-005-11	CERAMIC CHIP	25V
C197	1-163-031-11	CERAMIC CHIP	0.01 μ F	C384	1-163-505-11	CERAMIC CHIP	16V
C198	1-163-031-11	CERAMIC CHIP	0.01 μ F	C385	1-164-505-11	CERAMIC CHIP	16V
C199	1-163-031-11	CERAMIC CHIP	0.01 μ F	C386	1-104-559-11	FILM CHIP	5%
C200	1-164-505-11	CERAMIC CHIP	2.2 μ F	C387	1-163-031-11	CERAMIC CHIP	50V
C201	1-163-031-11	CERAMIC CHIP	0.01 μ F	C388	1-163-031-11	CERAMIC CHIP	50V
C202	1-163-031-11	CERAMIC CHIP	0.01 μ F	C389	1-163-031-11	CERAMIC CHIP	50V
C203	1-163-031-11	CERAMIC CHIP	0.01 μ F	C390	1-163-031-11	CERAMIC CHIP	50V
C204	1-163-031-11	CERAMIC CHIP	0.01 μ F	C391	1-104-551-11	FILM CHIP	5%
C205	1-163-127-00	CERAMIC CHIP	270pF	C392	1-104-559-11	FILM CHIP	5%
C206	1-126-392-11	ELECT CHIP	100 μ F	C393	1-163-033-91	CERAMIC CHIP	16V
C207	1-126-391-11	ELECT CHIP	47 μ F	C397	1-163-031-11	CERAMIC CHIP	50V
C208	1-126-391-11	ELECT CHIP	47 μ F	C398	1-163-038-91	CERAMIC CHIP	25V
C209	1-163-031-11	CERAMIC CHIP	0.01 μ F	C399	1-163-031-11	CERAMIC CHIP	50V
C210	1-163-227-11	CERAMIC CHIP	10pF	C400	1-164-222-11	CERAMIC CHIP	25V
C211	1-163-229-11	CERAMIC CHIP	12pF	C401	1-163-251-11	CERAMIC CHIP	5%
C212	1-115-155-21	ELECT CHIP	22 μ F	C402	1-164-232-11	CERAMIC CHIP	10%
C213	1-164-505-11	CERAMIC CHIP	2.2 μ F	C403	1-163-035-00	CERAMIC CHIP	50V
C214	1-104-559-11	FILM CHIP	0.047 μ F	C404	1-106-367-00	MYLAR	10%
C215	1-104-551-11	FILM CHIP	0.01 μ F	C405	1-164-505-11	CERAMIC CHIP	16V
C216	1-164-505-11	CERAMIC CHIP	2.2 μ F	C406	1-107-943-11	ELECT	20%
C217	1-164-505-11	CERAMIC CHIP	0.68 μ F	C407	1-163-031-11	CERAMIC CHIP	50V
C218	1-104-559-11	FILM CHIP	0.047 μ F	C409	1-164-505-11	CERAMIC CHIP	16V
C219	1-163-031-11	CERAMIC CHIP	0.01 μ F	C410	1-163-031-11	CERAMIC CHIP	50V
C220	1-163-031-11	CERAMIC CHIP	0.01 μ F	C411	1-163-031-11	CERAMIC CHIP	50V
C221	1-126-392-11	ELECT CHIP	100 μ F	C412	1-163-031-11	CERAMIC CHIP	20%

BK

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
C420	1-163-127-00	CERAMIC CHIP	270pF	C583	1-163-031-11	CERAMIC CHIP	0.01μF
C421	1-126-390-11	ELECT CHIP	22μF	C584	1-104-551-11	FILM CHIP	0.01μF
C430	1-126-392-11	ELECT CHIP	100μF	C585	1-104-539-11	FILM CHIP	0.047μF
C431	1-126-391-11	ELECT CHIP	47μF	C586	1-163-033-91	CERAMIC CHIP	0.022μF
C432	1-126-391-11	ELECT CHIP	47μF	C590	1-163-031-11	CERAMIC CHIP	0.01μF
C440	1-163-031-11	CERAMIC CHIP	0.01μF	C591	1-163-038-91	CERAMIC CHIP	0.1μF
C500	1-163-227-11	CERAMIC CHIP	10pF	C592	1-163-031-11	CERAMIC CHIP	0.01μF
C501	1-163-229-11	CERAMIC CHIP	12pF	C593	1-164-222-11	CERAMIC CHIP	0.22μF
C502	1-115-155-21	ELECT CHIP	22μF	C594	1-163-231-11	CERAMIC CHIP	100pF
C503	1-164-505-11	CERAMIC CHIP	2.2μF	C595	1-164-232-11	CERAMIC CHIP	0.01μF
C504	1-104-559-11	FILM CHIP	0.047μF	C596	1-163-035-00	CERAMIC CHIP	0.047μF
C505	1-104-551-11	FILM CHIP	0.01μF	C597	1-106-367-00	MYLAR	0.01μF
C507	1-164-505-11	CERAMIC CHIP	2.2μF	C598	1-164-505-11	CERAMIC CHIP	2.2μF
C508	1-164-505-11	CERAMIC CHIP	22μF	C599	1-107-943-11	ELECT	10μF
C509	1-164-700-11	CERAMIC CHIP	0.68μF	C600	1-163-031-11	CERAMIC CHIP	0.01μF
C510	1-104-559-11	FILM CHIP	0.047μF	C601	1-163-031-11	CERAMIC CHIP	0.01μF
C520	1-164-505-11	CERAMIC CHIP	2.2μF	C602	1-164-505-11	CERAMIC CHIP	2.2μF
C523	1-164-505-11	CERAMIC CHIP	2.2μF	C603	1-163-031-11	CERAMIC CHIP	0.01μF
C524	1-163-031-11	CERAMIC CHIP	0.01μF	C604	1-164-505-11	CERAMIC CHIP	2.2μF
C526	1-164-222-11	CERAMIC CHIP	0.22μF	C605	1-163-031-11	CERAMIC CHIP	0.01μF
C527	1-104-559-11	FILM CHIP	0.047μF	C620	1-163-127-00	CERAMIC CHIP	270pF
C528	1-104-752-11	TANTAL. CHIP	33μF	C621	1-164-505-11	CERAMIC CHIP	2.2μF
C529	1-164-505-11	CERAMIC CHIP	2.2μF	C630	1-126-392-11	ELECT CHIP	100μF
C530	1-164-505-11	CERAMIC CHIP	2.2μF	C631	1-126-391-11	ELECT CHIP	47μF
C540	1-163-031-11	CERAMIC CHIP	0.01μF	C632	1-126-391-11	ELECT CHIP	47μF
C541	1-163-031-11	CERAMIC CHIP	0.01μF	C640	1-163-031-11	CERAMIC CHIP	0.01μF
C542	1-104-559-11	FILM CHIP	0.047μF	C700	1-104-539-11	FILM CHIP	0.001μF
C543	1-104-551-11	FILM CHIP	0.01μF	C701	1-104-539-11	FILM CHIP	0.001μF
C544	1-163-031-11	CERAMIC CHIP	0.01μF	C702	1-163-031-11	CERAMIC CHIP	0.01μF
C545	1-163-031-11	CERAMIC CHIP	0.01μF	C703	1-163-031-11	CERAMIC CHIP	0.01μF
C546	1-126-392-11	ELECT CHIP	100μF	C704	1-126-391-11	ELECT CHIP	47μF
C547	1-126-392-11	ELECT CHIP	100μF	C705	1-163-031-11	CERAMIC CHIP	0.01μF
C548	1-126-392-11	ELECT CHIP	100μF	C706	1-107-905-11	ELECT	4.7μF
C549	1-126-392-11	ELECT CHIP	100μF	C707	1-163-031-11	CERAMIC CHIP	0.01μF
C560	1-163-031-11	CERAMIC CHIP	0.01μF	C708	1-115-153-11	ELECT CHIP	4.7μF
C561	1-163-031-11	CERAMIC CHIP	0.01μF	C709	1-107-960-11	ELECT	4.7μF
C562	1-163-249-11	CERAMIC CHIP	82pF	C710	1-106-367-00	MYLAR	0.01μF
C563	1-163-089-00	CERAMIC CHIP	6pF	C711	1-107-943-11	ELECT	10μF
C567	1-164-222-11	CERAMIC CHIP	0.22μF	C712	1-164-505-11	CERAMIC CHIP	2.2μF
C568	1-164-700-11	CERAMIC CHIP	0.68μF	C713	1-164-505-11	CERAMIC CHIP	2.2μF
C569	1-164-505-11	CERAMIC CHIP	2.2μF	C728	1-163-009-11	CERAMIC CHIP	0.001μF
C570	1-163-031-11	CERAMIC CHIP	0.01μF	C729	1-104-563-11	FILM CHIP	0.1μF
C571	1-104-559-11	FILM CHIP	0.047μF	C734	1-164-505-11	CERAMIC CHIP	2.2μF
C572	1-104-559-11	FILM CHIP	0.047μF	C751	1-126-396-11	ELECT CHIP	47μF
C573	1-164-336-11	CERAMIC CHIP	0.33μF	C770	1-163-031-11	CERAMIC CHIP	0.01μF
C574	1-163-031-11	CERAMIC CHIP	0.01μF	C782	1-163-031-11	CERAMIC CHIP	0.01μF
C575	1-104-823-11	TANTAL. CHIP	47μF	C783	1-163-031-11	CERAMIC CHIP	0.01μF
C576	1-164-005-11	CERAMIC CHIP	0.47μF	C800	1-163-229-11	CERAMIC CHIP	12pF
C577	1-164-505-11	CERAMIC CHIP	2.2μF	C801	1-163-229-11	CERAMIC CHIP	12pF
C578	1-164-505-11	CERAMIC CHIP	2.2μF	C802	1-163-031-11	CERAMIC CHIP	0.01μF
C579	1-104-559-11	FILM CHIP	0.047μF	C803	1-163-031-11	CERAMIC CHIP	0.01μF
C580	1-163-031-11	CERAMIC CHIP	0.01μF	C804	1-115-155-11	ELECT CHIP	22μF
C581	1-163-031-11	CERAMIC CHIP	0.01μF	C805	1-163-031-11	CERAMIC CHIP	0.01μF
C582	1-163-031-11	CERAMIC CHIP	0.01μF	C806	1-163-031-11	CERAMIC CHIP	0.01μF

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
C807	1-163-031-11	CERAMIC CHIP	0.01μ F	C926	1-163-031-11	CERAMIC CHIP	50V
C808	1-163-031-11	CERAMIC CHIP	0.01μ F	C927	1-126-391-11	ELECT CHIP	50V
C809	1-163-031-11	CERAMIC CHIP	0.01μ F	C928	1-164-346-11	CERAMIC CHIP	16V
C810	1-163-031-11	CERAMIC CHIP	0.01μ F	C929	1-126-391-11	ELECT CHIP	6.3V
C812	1-163-031-11	CERAMIC CHIP	0.01μ F	C930	1-126-390-11	ELECT CHIP	6.3V
C813	1-126-394-11	ELECT CHIP	10μ F	C931	1-163-038-91	CERAMIC CHIP	25V
C814	1-163-117-00	CERAMIC CHIP	100pF	C1000	1-163-031-11	CERAMIC CHIP	50V
C815	1-163-257-11	CERAMIC CHIP	180pF	C1001	1-126-392-11	ELECT CHIP	6.3V
C816	1-163-117-00	CERAMIC CHIP	100pF	C1002	1-163-031-11	CERAMIC CHIP	50V
C817	1-163-038-91	CERAMIC CHIP	0.1μ F	C1003	1-163-031-11	CERAMIC CHIP	50V
C818	1-126-390-11	ELECT CHIP	22μ F	C1004	1-164-505-11	CERAMIC CHIP	16V
C819	1-163-031-11	CERAMIC CHIP	0.01μ F	C1005	1-163-031-11	CERAMIC CHIP	50V
C820	1-163-038-91	CERAMIC CHIP	0.1μ F	C1006	1-163-031-11	CERAMIC CHIP	50V
C821	1-163-038-91	CERAMIC CHIP	0.1μ F	C1007	1-163-031-11	CERAMIC CHIP	50V
C822	1-163-038-91	CERAMIC CHIP	0.1μ F	C1008	1-163-031-11	CERAMIC CHIP	50V
C823	1-128-235-11	ELECT CHIP	0.47μ F	C1009	1-163-031-11	CERAMIC CHIP	50V
C824	1-164-346-11	CERAMIC CHIP	1μ F	C1010	1-163-031-11	CERAMIC CHIP	50V
C825	1-163-121-00	CERAMIC CHIP	150pF	C1011	1-164-505-11	CERAMIC CHIP	16V
C826	1-163-113-00	CERAMIC CHIP	68pF	C1012	1-163-031-11	CERAMIC CHIP	50V
C827	1-163-031-11	CERAMIC CHIP	0.01μ F	C1013	1-163-031-11	CERAMIC CHIP	50V
C828	1-163-133-00	CERAMIC CHIP	470pF	C1014	1-164-505-11	CERAMIC CHIP	16V
C829	1-163-017-00	CERAMIC CHIP	0.0047μ F	C1015	1-163-031-11	CERAMIC CHIP	50V
C830	1-163-133-00	CERAMIC CHIP	470pF	C1016	1-163-031-11	CERAMIC CHIP	50V
C831	1-163-017-00	CERAMIC CHIP	0.0047μ F	C1017	1-164-505-11	CERAMIC CHIP	16V
C832	1-163-133-00	CERAMIC CHIP	470pF	C1019	1-163-031-11	CERAMIC CHIP	50V
C833	1-163-133-00	CERAMIC CHIP	470pF	C1020	1-164-505-11	CERAMIC CHIP	16V
C834	1-163-133-00	CERAMIC CHIP	470pF	C1021	1-163-031-11	CERAMIC CHIP	50V
C835	1-163-117-00	CERAMIC CHIP	100pF	C1022	1-163-031-11	CERAMIC CHIP	50V
C836	1-163-133-00	CERAMIC CHIP	470pF	C1023	1-164-505-11	CERAMIC CHIP	16V
C837	1-164-222-11	CERAMIC CHIP	0.22μ F	C1024	1-163-031-11	CERAMIC CHIP	50V
C838	1-164-222-11	CERAMIC CHIP	0.22μ F	C1025	1-163-031-11	CERAMIC CHIP	50V
C847	1-163-031-11	CERAMIC CHIP	0.01μ F	C1026	1-163-031-11	CERAMIC CHIP	50V
C850	1-126-392-11	ELECT CHIP	100μ F	C1027	1-126-396-11	ELECT CHIP	16V
C851	1-126-168-11	ELECT	1000μ F	C1028	1-163-031-11	CERAMIC CHIP	50V
C852	1-126-391-11	ELECT CHIP	47μ F	C1029	1-163-031-11	CERAMIC CHIP	50V
C853	1-126-168-11	ELECT	1000μ F	C1030	1-163-031-11	CERAMIC CHIP	50V
C863	1-163-031-11	CERAMIC CHIP	0.01μ F	C1031	1-163-031-11	CERAMIC CHIP	50V
C900	1-163-031-11	CERAMIC CHIP	0.01μ F	C1032	1-163-031-11	CERAMIC CHIP	50V
C901	1-163-031-11	CERAMIC CHIP	0.01μ F	C1033	1-163-031-11	CERAMIC CHIP	50V
C902	1-163-031-11	CERAMIC CHIP	0.01μ F	C1034	1-163-031-11	CERAMIC CHIP	50V
C903	1-163-031-11	CERAMIC CHIP	0.01μ F	C1035	1-163-031-11	CERAMIC CHIP	50V
C904	1-163-031-11	CERAMIC CHIP	0.01μ F	C1036	1-163-031-11	CERAMIC CHIP	50V
C905	1-163-031-11	CERAMIC CHIP	0.01μ F	C1037	1-164-505-11	CERAMIC CHIP	16V
C907	1-163-031-11	CERAMIC CHIP	0.01μ F	C1038	1-163-031-11	CERAMIC CHIP	50V
C908	1-163-031-11	CERAMIC CHIP	0.01μ F	C1039	1-163-031-11	CERAMIC CHIP	50V
C909	1-163-031-11	CERAMIC CHIP	0.01μ F	C1200	1-163-031-11	CERAMIC CHIP	50V
C910	1-163-031-11	CERAMIC CHIP	0.01μ F	C1201	1-126-392-11	ELECT CHIP	6.3V
C911	1-163-031-11	CERAMIC CHIP	0.01μ F	C1208	1-164-505-11	CERAMIC CHIP	16V
C914	1-163-031-11	CERAMIC CHIP	0.01μ F	C1209	1-164-505-11	CERAMIC CHIP	16V
C915	1-163-031-11	CERAMIC CHIP	0.01μ F	C1210	1-163-031-11	CERAMIC CHIP	50V
C917	1-163-031-11	CERAMIC CHIP	0.01μ F	C1211	1-163-031-11	CERAMIC CHIP	50V
C918	1-164-161-11	CERAMIC CHIP	0.0022μ F	C1213	1-164-505-11	CERAMIC CHIP	16V
C921	1-163-031-11	CERAMIC CHIP	0.01μ F	C1215	1-163-031-11	CERAMIC CHIP	50V
C924	1-126-391-11	ELECT CHIP	47μ F	C1216	1-163-031-11	CERAMIC CHIP	50V
C925	1-126-391-11	ELECT CHIP	47μ F	C1217	1-163-031-11	CERAMIC CHIP	50V

BK

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
IC302	8-759-981-48	IC TL082M		IC528	8-759-981-48	IC TL082M	
IC303	8-752-054-80	IC CXA1521M		IC529	8-759-988-13	IC LM393PS	
IC304	8-759-011-65	IC MC74HC4053F		IC530	8-759-082-61	IC TC4W53FU	
IC305	8-752-053-21	IC CXA1211M		IC531	8-759-058-64	IC TC7S32FU(TE85R)	
IC306	8-759-981-48	IC TL082M		IC700	8-759-988-13	IC LM393PS	
IC307	8-759-082-61	IC TC4W53FU		IC701	8-759-011-65	IC MC74HC4053F	
IC310	8-759-011-65	IC MC74HC4053F		IC702	8-759-011-64	IC MC74HC4052F	
IC311	8-759-981-48	IC TL082M		IC703	8-759-988-13	IC LM393PS	
IC312	8-752-054-80	IC CXA1521M		IC704	8-759-981-48	IC TL082M	
IC313	8-759-011-65	IC MC74HC4053F		IC705	8-759-981-48	IC TL082M	
IC314	8-759-981-48	IC TL082M		IC706	8-759-346-42	IC TDA6101QN3	
IC315	8-759-700-95	IC NJM1496M		IC728	8-759-032-01	IC MC74HC00AF	
IC316	8-759-011-65	IC MC74HC4051F		IC730	8-759-925-72	IC SN74HC02ANS	
IC317	8-759-011-65	IC MC74HC4053F		IC731	8-759-925-80	IC SN74HC14ANS	
IC318	8-759-981-48	IC TL082M		IC732	8-759-007-80	IC MC74HC175F	
IC319	8-759-073-90	IC TDA6111Q		IC734	8-759-007-50	IC MC74HC11F	
IC320	8-759-981-48	IC TL082M		IC735	8-759-925-72	IC SN74HC02ANS	
IC321	8-759-981-48	IC TL082M		IC736	8-759-925-72	IC SN74HC02ANS	
IC322	8-759-981-48	IC TL082M		IC800	8-759-011-65	IC MC74HC4053F	
IC323	8-759-981-48	IC TL082M		IC801	8-759-008-45	IC MC74HC4538F	
IC324	8-759-011-65	IC MC74HC4053F		IC802	8-759-100-96	IC μ PC4558G2	
IC325	8-759-082-61	IC TC4W53FU		IC803	8-759-008-45	IC MC74HC4538F	
IC326	8-759-011-65	IC MC74HC4053F		IC804	8-759-008-45	IC MC74HC4538F	
IC327	8-759-981-48	IC TL082M		IC805	8-759-058-55	IC TC7S02FU-TE85L	
IC328	8-759-981-48	IC TL082M		IC900	8-759-032-26	IC MC74HC125AF	
IC329	8-759-988-13	IC LM393PS		IC901	8-759-981-48	IC TL082M	
IC330	8-759-082-61	IC TC4W53FU		IC902	8-759-346-47	IC MB89613R-236	
IC331	8-759-058-64	IC TC7S32FU(TE85R)		IC903	8-759-156-54	IC X25040SI	
IC300	8-759-011-65	IC MC74HC4053F		IC904	8-759-988-13	IC LM393PS	
IC501	8-759-011-65	IC MC74HC4053F		IC905	8-759-032-53	IC MC74HC244AF	
IC502	8-759-981-48	IC TL082M		IC906	8-759-059-50	IC MB88351PFV	
IC503	8-752-054-80	IC CXA1521M		IC907	8-759-059-50	IC MB88351PFV	
IC504	8-759-011-65	IC MC74HC4053F		IC908	8-759-064-36	IC MB88346BPEV	
IC506	8-759-981-48	IC TL082M		IC909	8-759-059-50	IC MB88351PFV	
IC507	8-759-082-61	IC TC4W53FU		IC910	8-759-064-36	IC MB88346BPEV	
IC508	8-759-082-61	IC TC4W53FU		IC911	8-759-059-50	IC MB88351PFV	
IC509	8-759-058-54	IC TC7S00FU(TE85R)		IC912	8-759-082-59	IC TC7W32FU	
IC510	8-759-011-65	IC MC74HC4053F		IC913	8-759-011-65	IC MC74HC4053F	
IC511	8-759-981-48	IC TL082M				< CHIP CONDUCTOR CHIP >	
IC512	8-752-054-80	IC CXA1521M		JR101	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC513	8-759-011-65	IC MC74HC4053F		JR301	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC514	8-759-981-48	IC TL082M		JR501	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC515	8-759-700-95	IC NJM1496M		JR901	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC516	8-759-011-65	IC MC74HC4051F		JR902	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC517	8-759-011-65	IC MC74HC4053F		JR903	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC518	8-759-981-48	IC TL082M		JR904	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC519	8-759-073-90	IC TDA6111Q		JR905	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC520	8-759-981-48	IC TL082M		JR906	1-216-295-91	CONDUCTOR, CHIP (2012)	
IC521	8-759-981-48	IC TL082M				< COIL >	
IC522	8-759-981-48	IC TL082M		L728	1-410-686-11	INDUCTOR 1mH	
IC523	8-759-981-48	IC TL082M		L900	1-412-002-31	INDUCTOR CHIP 4.7 μ H	
IC524	8-759-011-65	IC MC74HC4053F					
IC525	8-759-082-61	IC TC4W53FU					
IC526	8-759-011-65	IC MC74HC4053F					
IC527	8-759-981-48	IC TL082M					

BK

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
		< TRANSISTOR >					
Q100	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q379	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q101	8-729-027-38	TRANSISTOR DTA144EKA-T146		Q380	8-729-920-59	TRANSISTOR IMX2	
Q102	8-729-107-31	TRANSISTOR 2SC3545-T43		Q381	8-729-920-59	TRANSISTOR IMX2	
Q103	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q382	8-729-920-59	TRANSISTOR IMX2	
Q104	8-729-107-31	TRANSISTOR 2SC3545-T43		Q383	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q105	8-729-107-31	TRANSISTOR 2SC3545-T43		Q384	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q106	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q385	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q107	8-729-107-31	TRANSISTOR 2SC3545-T43		Q386	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q108	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q387	8-729-033-31	TRANSISTOR 2SK520K44K45-T1B	
Q109	8-729-107-31	TRANSISTOR 2SC3545-T43		Q388	8-729-033-31	TRANSISTOR 2SK520K44K45-T1B	
Q110	8-729-107-31	TRANSISTOR 2SC3545-T43		Q389	8-729-103-53	TRANSISTOR 2SC1654-N7	
Q141	8-729-107-31	TRANSISTOR 2SC3545-T43		Q390	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q142	8-729-107-31	TRANSISTOR 2SC3545-T43		Q400	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q143	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q500	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q144	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q501	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q164	8-729-107-31	TRANSISTOR 2SC3545-T43		Q502	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q165	8-729-107-31	TRANSISTOR 2SC3545-T43		Q503	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q166	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q504	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q167	8-729-107-31	TRANSISTOR 2SC3545-T43		Q505	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q168	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q506	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q169	8-729-107-31	TRANSISTOR 2SC3545-T43		Q507	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q170	8-729-920-59	TRANSISTOR IMX2		Q510	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q171	8-729-920-59	TRANSISTOR IMX2		Q540	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q172	8-729-920-59	TRANSISTOR IMX2		Q541	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q173	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q542	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q174	8-729-107-31	TRANSISTOR 2SC3545-T43		Q543	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q175	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q544	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q176	8-729-107-31	TRANSISTOR 2SC3545-T43		Q567	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q177	8-729-033-31	TRANSISTOR 2SK520K44K45-T1B		Q568	8-729-920-59	TRANSISTOR IMX2	
Q178	8-729-033-31	TRANSISTOR 2SK520K44K45-T1B		Q569	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q179	8-729-103-53	TRANSISTOR 2SC1654-N7		Q570	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q190	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q571	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q200	8-729-107-31	TRANSISTOR 2SC3545-T43		Q572	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q300	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q573	8-729-920-59	TRANSISTOR IMX2	
Q301	8-729-027-38	TRANSISTOR DTA144EKA-T146		Q574	8-729-920-59	TRANSISTOR IMX2	
Q302	8-729-107-31	TRANSISTOR 2SC3545-T43		Q575	8-729-920-59	TRANSISTOR IMX2	
Q303	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q576	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q304	8-729-107-31	TRANSISTOR 2SC3545-T43		Q577	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q305	8-729-107-31	TRANSISTOR 2SC3545-T43		Q578	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q306	8-729-107-31	TRANSISTOR 2SC3545-T43		Q579	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q307	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q580	8-729-033-31	TRANSISTOR 2SK520K44K45-T1B	
Q308	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q581	8-729-033-31	TRANSISTOR 2SK520K44K45-T1B	
Q309	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q582	8-729-103-53	TRANSISTOR 2SC1654-N7	
Q310	8-729-107-31	TRANSISTOR 2SC3545-T43		Q590	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q350	8-729-107-31	TRANSISTOR 2SC3545-T43		Q600	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q351	8-729-107-31	TRANSISTOR 2SC3545-T43		Q700	8-729-216-22	TRANSISTOR 2SA1162-G	
Q352	8-729-107-31	TRANSISTOR 2SC3545-T43		Q701	8-729-216-22	TRANSISTOR 2SA1162-G	
Q353	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q702	8-729-216-22	TRANSISTOR 2SA1162-G	
Q354	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q728	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q374	8-729-107-31	TRANSISTOR 2SC3545-T43		Q729	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q375	8-729-107-31	TRANSISTOR 2SC3545-T43		Q800	8-729-216-22	TRANSISTOR 2SA1162-G	
Q376	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q801	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q377	8-729-107-31	TRANSISTOR 2SC3545-T43		Q802	8-729-216-22	TRANSISTOR 2SA1162-G	
Q378	8-729-112-65	TRANSISTOR 2SA1462-Y33		Q803	8-729-920-59	TRANSISTOR IMX2	

BK

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q804	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R116	1-208-784-11	METAL CHIP	1.2K
Q805	8-729-920-59	TRANSISTOR IMX2		R117	1-216-045-00	METAL GLAZE	5%
Q806	8-729-216-22	TRANSISTOR 2SA1162-G		R118	1-216-009-00	METAL GLAZE	5%
Q807	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R119	1-216-073-00	METAL GLAZE	10K
Q808	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R121	1-216-063-91	METAL GLAZE	3.9K
Q809	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R122	1-216-049-91	METAL GLAZE	1K
Q810	8-729-925-42	TRANSISTOR IMT2		R123	1-216-049-91	METAL GLAZE	1K
Q811	8-729-925-42	TRANSISTOR IMT2		R124	1-216-025-91	METAL GLAZE	100
Q812	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R140	1-216-638-11	METAL CHIP	300
Q813	8-729-216-22	TRANSISTOR 2SA1162-G		R141	1-216-674-11	METAL CHIP	9.1K
Q814	8-729-216-22	TRANSISTOR 2SA1162-G		R142	1-216-647-11	METAL CHIP	680
Q815	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R143	1-216-047-91	METAL GLAZE	820
Q816	8-729-216-22	TRANSISTOR 2SA1162-G		R144	1-216-647-11	METAL CHIP	680
Q817	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R147	1-216-063-91	METAL GLAZE	3.9K
Q818	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R148	1-218-764-11	METAL CHIP	330K
Q819	8-729-216-22	TRANSISTOR 2SA1162-G		R149	1-216-025-91	METAL GLAZE	100
Q820	8-729-216-22	TRANSISTOR 2SA1162-G		R150	1-218-760-11	METAL CHIP	220K
Q821	8-729-027-59	TRANSISTOR DTC144EKA-T146		R151	1-208-806-11	METAL CHIP	10M
Q822	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R153	1-216-671-11	METAL CHIP	6.8K
Q823	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R155	1-216-650-11	METAL CHIP	910
Q824	8-729-216-22	TRANSISTOR 2SA1162-G		R156	1-216-651-11	METAL CHIP	1K
Q825	8-729-216-22	TRANSISTOR 2SA1162-G		R157	1-216-677-11	METAL CHIP	12K
Q826	8-729-202-38	TRANSISTOR 2SC3326N-A		R158	1-208-824-11	METAL CHIP	56K
Q827	8-729-202-38	TRANSISTOR 2SC3326N-A		R159	1-208-784-11	METAL CHIP	1.2K
Q828	8-729-027-59	TRANSISTOR DTC144EKA-T146		R160	1-216-025-91	METAL GLAZE	100
Q829	8-729-027-59	TRANSISTOR DTC144EKA-T146		R162	1-216-049-91	METAL GLAZE	1K
Q830	8-729-027-38	TRANSISTOR DTA144EKA-T146		R163	1-216-073-00	METAL GLAZE	10K
Q831		< RESISTOR >		R164	1-216-633-11	METAL CHIP	180
R10	1-216-025-91	METAL GLAZE	100	R165	1-216-627-11	METAL CHIP	100
R11	1-216-025-91	METAL GLAZE	100	R166	1-216-057-00	METAL GLAZE	2.2K
R12	1-216-025-91	METAL GLAZE	100	R167	1-216-057-00	METAL GLAZE	2.2K
R13	1-216-025-91	METAL GLAZE	100	R168	1-216-049-91	METAL GLAZE	1K
R14	1-216-025-91	METAL GLAZE	100	R169	1-216-053-00	METAL GLAZE	1.5K
R15	1-216-025-91	METAL GLAZE	100	R170	1-208-785-11	METAL CHIP	1.3K
R16	1-216-025-91	METAL GLAZE	100	R171	1-208-810-11	METAL CHIP	15K
R17	1-216-025-91	METAL GLAZE	100	R172	1-216-049-91	METAL GLAZE	1K
R20	1-249-400-11	CARBON	39	R173	1-216-025-91	METAL GLAZE	100
R100	1-216-085-00	METAL GLAZE	33K	R174	1-216-033-00	METAL GLAZE	220
R101	1-216-119-00	METAL GLAZE	820K	R175	1-216-065-00	METAL GLAZE	4.7K
R102	1-216-049-91	METAL GLAZE	1K	R176	1-216-073-00	METAL GLAZE	10K
R103	1-216-097-91	METAL GLAZE	100K	R177	1-208-789-11	METAL CHIP	2K
R104	1-216-025-91	METAL GLAZE	100	R178	1-216-662-11	METAL CHIP	3K
R105	1-216-057-00	METAL GLAZE	2.2K	R179	1-216-025-91	METAL GLAZE	100
R106	1-216-025-91	METAL GLAZE	100	R180	1-216-657-11	METAL CHIP	1.8K
R107	1-216-049-91	METAL GLAZE	1K	R181	1-208-784-11	METAL CHIP	1.2K
R108	1-216-049-91	METAL GLAZE	1K	R182	1-208-800-11	METAL CHIP	5.6K
R109	1-216-009-00	METAL GLAZE	22	R183	1-216-025-91	METAL GLAZE	100
R110	1-216-009-00	METAL GLAZE	22	R184	1-216-051-00	METAL GLAZE	1.2K
R111	1-216-657-11	METAL CHIP	1.8K	R185	1-208-806-11	METAL CHIP	10K
R112	1-216-663-11	METAL CHIP	3.3K	R186	1-208-806-11	METAL CHIP	10K
R113	1-216-025-91	METAL GLAZE	100	R187	1-216-671-11	METAL CHIP	6.8K
R114	1-216-651-11	METAL CHIP	1K	R188	1-216-049-91	METAL GLAZE	1K
R115	1-216-033-00	METAL GLAZE	220	R189	1-216-025-91	METAL GLAZE	100
				R190	1-208-806-11	METAL CHIP	10K

BK

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R191	1-216-665-11	METAL CHIP	3.9K	R252	1-216-689-11	METAL GLAZE	39K
R192	1-216-687-11	METAL CHIP	33K	R253	1-216-093-00	METAL GLAZE	68K
R193	1-208-810-11	METAL CHIP	15K	R254	1-216-055-00	METAL GLAZE	1.8K
R194	1-216-025-91	METAL GLAZE	100	R255	1-216-073-00	METAL GLAZE	10K
R195	1-208-784-11	METAL CHIP	1.2K	R256	1-216-073-00	METAL GLAZE	10K
R196	1-216-025-91	METAL GLAZE	100	R257	1-202-549-00	SOLID	100
R197	1-216-665-11	METAL CHIP	3.9K	R258	1-216-699-11	METAL CHIP	100K
R198	1-208-789-11	METAL CHIP	2K	R259	1-216-073-00	METAL GLAZE	10K
R199	1-216-661-11	METAL CHIP	2.7K	R272	1-216-025-91	METAL GLAZE	100
R201	1-208-806-11	METAL CHIP	10K	R273	1-216-073-00	METAL GLAZE	10K
R202	1-216-677-11	METAL CHIP	12K	R287	1-216-033-00	METAL GLAZE	220
R203	1-216-665-11	METAL CHIP	3.9K	R288	1-216-033-00	METAL GLAZE	220
R204	1-208-801-11	METAL CHIP	6.2K	R300	1-216-085-00	METAL GLAZE	33K
R205	1-216-025-91	METAL GLAZE	100	R301	1-216-119-00	METAL GLAZE	820K
R206	1-208-810-11	METAL CHIP	15K	R302	1-216-049-91	METAL GLAZE	1K
R207	1-216-649-11	METAL CHIP	820	R303	1-216-097-91	METAL GLAZE	100K
R208	1-216-647-11	METAL CHIP	680	R305	1-216-057-00	METAL GLAZE	2.2K
R210	1-216-647-11	METAL CHIP	680	R306	1-216-025-91	METAL GLAZE	100
R211	1-216-025-91	METAL GLAZE	100	R307	1-216-049-91	METAL GLAZE	1K
R212	1-216-025-91	METAL GLAZE	100	R308	1-216-049-91	METAL GLAZE	1K
R213	1-216-667-11	METAL CHIP	4.7K	R309	1-216-009-00	METAL GLAZE	22
R214	1-216-659-11	METAL CHIP	2.2K	R310	1-216-009-00	METAL GLAZE	22
R215	1-216-657-11	METAL CHIP	1.8K	R311	1-216-697-91	METAL CHIP	82K
R216	1-216-673-11	METAL CHIP	8.2K	R312	1-216-657-11	METAL CHIP	1.8K
R217	1-216-073-00	METAL GLAZE	10K	R313	1-216-663-11	METAL CHIP	3.3K
R218	1-216-025-91	METAL GLAZE	100	R314	1-216-009-00	METAL CHIP	22
R219	1-216-033-00	METAL GLAZE	220	R315	1-216-676-11	METAL CHIP	11K
R220	1-216-659-11	METAL CHIP	2.2K	R316	1-216-697-91	METAL CHIP	82K
R221	1-208-800-11	METAL CHIP	5.6K	R317	1-216-651-11	METAL CHIP	1K
R222	1-216-025-91	METAL GLAZE	100	R318	1-216-033-00	METAL GLAZE	220
R223	1-208-784-11	METAL CHIP	1.2K	R319	1-208-784-11	METAL CHIP	1.2K
R224	1-208-806-11	METAL CHIP	10K	R320	1-216-045-00	METAL GLAZE	680
R225	1-216-659-11	METAL CHIP	2.2K	R321	1-216-009-00	METAL GLAZE	22
R226	1-216-655-11	METAL CHIP	1.5K	R322	1-216-073-00	METAL GLAZE	10K
R227	1-208-784-11	METAL CHIP	1.2K	R324	1-216-025-91	METAL GLAZE	100
R228	1-216-025-91	METAL GLAZE	100	R327	1-216-025-91	METAL GLAZE	100
R229	1-216-659-11	METAL CHIP	2.2K	R328	1-216-073-00	METAL GLAZE	10K
R230	1-208-806-11	METAL CHIP	10K	R329	1-216-687-11	METAL CHIP	33K
R232	1-216-073-00	METAL GLAZE	10K	R330	1-216-687-11	METAL CHIP	33K
R236	1-216-697-91	METAL CHIP	82K	R331	1-216-695-11	METAL CHIP	68K
R237	1-216-667-11	METAL CHIP	4.7K	R332	1-216-667-11	METAL CHIP	4.7K
R238	1-216-073-00	METAL GLAZE	10K	R333	1-208-789-11	METAL CHIP	2K
R239	1-216-671-11	METAL CHIP	6.8K	R334	1-216-687-11	METAL CHIP	33K
R240	1-208-800-11	METAL CHIP	5.6K	R335	1-216-695-11	METAL CHIP	68K
R241	1-216-651-11	METAL CHIP	1K	R336	1-216-687-11	METAL CHIP	33K
R242	1-216-073-00	METAL GLAZE	10K	R337	1-216-661-11	METAL CHIP	2.7K
R243	1-208-803-11	METAL CHIP	7.5K	R338	1-216-650-11	METAL CHIP	910
R244	1-216-111-91	METAL GLAZE	390K	R340	1-216-651-11	METAL CHIP	1K
R245	1-216-033-00	METAL GLAZE	220	R342	1-216-663-11	METAL CHIP	3.3K
R246	1-208-800-11	METAL CHIP	5.6K	R343	1-216-025-91	METAL GLAZE	100
R247	1-208-801-11	METAL CHIP	6.2K	R344	1-216-063-00	METAL GLAZE	3.9K
R248	1-214-903-31	METAL	39K	R345	1-216-049-91	METAL GLAZE	1K
R249	1-208-800-11	METAL CHIP	5.6K	R346	1-208-806-11	METAL CHIP	10K
R250	1-216-033-00	METAL GLAZE	220	R350	1-216-638-11	METAL CHIP	300
R251	1-216-695-11	METAL CHIP	68K	R351	1-216-674-11	METAL CHIP	9.1K

BK

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R480	1-218-764-11	METAL CHIP	330K	R562	1-216-049-91	METAL GLAZE	1K
R481	1-208-854-11	METAL CHIP	1M	R563	1-216-049-91	METAL GLAZE	1K
R482	1-208-800-11	METAL CHIP	5.6K	R564	1-216-025-91	METAL GLAZE	100
R483	1-216-049-91	METAL GLAZE	1K	R565	1-216-073-00	METAL GLAZE	10K
R485	1-216-073-00	METAL GLAZE	10K	R566	1-216-097-91	METAL GLAZE	100K
R486	1-216-057-00	METAL GLAZE	2.2K	R567	1-216-097-91	METAL GLAZE	100K
R487	1-216-033-00	METAL GLAZE	220	R568	1-216-633-11	METAL CHIP	180
R488	1-216-033-00	METAL GLAZE	220	R569	1-216-627-11	METAL CHIP	100
R500	1-216-085-00	METAL GLAZE	33K	R570	1-216-057-00	METAL GLAZE	2.2K
R501	1-216-119-00	METAL GLAZE	830K	R571	1-216-057-00	METAL GLAZE	2.2K
R502	1-216-049-91	METAL GLAZE	1K	R572	1-216-049-91	METAL GLAZE	1K
R503	1-216-097-91	METAL GLAZE	100K	R573	1-216-053-00	METAL GLAZE	1.5K
R505	1-216-057-00	METAL GLAZE	2.2K	R574	1-216-049-91	METAL GLAZE	1K
R506	1-216-025-91	METAL GLAZE	100	R575	1-216-025-91	METAL GLAZE	100
R507	1-216-049-91	METAL GLAZE	1K	R576	1-216-057-00	METAL GLAZE	2.2K
R508	1-216-049-91	METAL GLAZE	1K	R577	1-216-065-11	METAL GLAZE	4.7K
R509	1-216-009-00	METAL GLAZE	22	R578	1-216-073-00	METAL GLAZE	10K
R510	1-216-009-00	METAL GLAZE	22	R579	1-208-789-11	METAL CHIP	2K
R511	1-216-697-91	METAL CHIP	82K	R580	1-208-814-11	METAL CHIP	22K
R512	1-216-657-11	METAL CHIP	1.8K	R581	1-216-687-11	METAL CHIP	33K
R513	1-216-663-11	METAL CHIP	3.3K	R582	1-216-662-11	METAL CHIP	3K
R514	1-216-009-00	METAL GLAZE	22	R583	1-216-025-91	METAL GLAZE	100
R515	1-216-674-11	METAL CHIP	9.1K	R584	1-216-657-11	METAL CHIP	1.8K
R516	1-216-697-91	METAL CHIP	82K	R585	1-208-784-11	METAL CHIP	1.2K
R517	1-216-651-11	METAL CHIP	1K	R586	1-208-800-11	METAL CHIP	5.6K
R518	1-216-033-00	METAL GLAZE	220	R587	1-216-025-91	METAL GLAZE	100
R519	1-208-784-11	METAL CHIP	1.2K	R588	1-216-051-00	METAL GLAZE	1.2K
R520	1-216-045-00	METAL GLAZE	680	R589	1-208-806-11	METAL CHIP	10K
R521	1-216-009-00	METAL GLAZE	22	R590	1-208-806-11	METAL CHIP	10K
R522	1-216-073-00	METAL GLAZE	10K	R591	1-216-671-11	METAL CHIP	6.8K
R524	1-216-025-91	METAL GLAZE	100	R592	1-216-049-91	METAL GLAZE	1K
R527	1-208-810-11	METAL CHIP	15K	R593	1-216-025-91	METAL GLAZE	100
R528	1-216-690-11	METAL CHIP	43K	R594	1-208-806-11	METAL CHIP	10K
R529	1-216-025-91	METAL GLAZE	100	R595	1-216-665-11	METAL CHIP	3.9K
R530	1-216-073-00	METAL GLAZE	10K	R596	1-216-687-11	METAL CHIP	33K
R531	1-216-063-91	METAL GLAZE	3.9K	R597	1-208-810-11	METAL CHIP	15K
R532	1-216-049-91	METAL GLAZE	1K	R598	1-216-025-91	METAL GLAZE	100
R540	1-216-637-11	METAL CHIP	270	R599	1-208-784-11	METAL CHIP	1.2K
R541	1-216-674-11	METAL CHIP	9.1K	R600	1-216-025-91	METAL GLAZE	100
R542	1-216-647-11	METAL CHIP	680	R601	1-216-665-11	METAL CHIP	3.9K
R543	1-216-047-91	METAL GLAZE	820	R602	1-208-789-11	METAL CHIP	2K
R544	1-216-647-11	METAL CHIP	680	R603	1-216-661-11	METAL CHIP	2.7K
R547	1-216-063-91	METAL GLAZE	3.9K	R605	1-208-806-11	METAL CHIP	10K
R548	1-218-764-11	METAL CHIP	330K	R606	1-216-677-11	METAL CHIP	12K
R549	1-216-025-91	METAL GLAZE	100	R607	1-216-665-11	METAL CHIP	3.9K
R550	1-218-760-11	METAL CHIP	220K	R608	1-208-801-11	METAL CHIP	6.2K
R551	1-208-806-11	METAL CHIP	10K	R609	1-216-025-91	METAL GLAZE	100
R552	1-208-854-11	METAL CHIP	1M	R610	1-208-810-11	METAL CHIP	15K
R553	1-216-671-11	METAL CHIP	6.8K	R611	1-216-649-11	METAL CHIP	830
R555	1-216-650-11	METAL CHIP	910	R612	1-216-647-11	METAL CHIP	680
R556	1-216-651-11	METAL CHIP	1K	R614	1-216-647-11	METAL CHIP	680
R557	1-216-677-11	METAL CHIP	12K	R615	1-216-025-91	METAL GLAZE	100
R558	1-208-824-11	METAL CHIP	56K	R616	1-216-025-91	METAL GLAZE	100
R559	1-208-784-11	METAL CHIP	1.2K	R617	1-216-667-11	METAL CHIP	4.7K
R560	1-216-025-91	METAL GLAZE	100	R618	1-216-659-11	METAL CHIP	2.2K

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R619	1-216-657-11	METAL CHIP	1.8K	R703	1-208-806-11	METAL CHIP	10K
R620	1-216-673-11	METAL CHIP	8.2K	R704	1-208-806-11	METAL CHIP	10K
R621	1-216-073-00	METAL GLAZE	10K	R705	1-208-806-11	METAL CHIP	10K
R622	1-216-025-91	METAL GLAZE	100	R706	1-208-806-11	METAL CHIP	10K
R623	1-216-033-00	METAL GLAZE	220	R707	1-208-806-11	METAL CHIP	10K
R624	1-216-659-11	METAL CHIP	2.2K	R708	1-208-806-11	METAL CHIP	10K
R625	1-208-800-11	METAL CHIP	5.6K	R709	1-216-677-11	METAL CHIP	12K
R626	1-216-025-91	METAL GLAZE	100	R710	1-216-671-11	METAL CHIP	6.8K
R627	1-208-784-11	METAL CHIP	1.2K	R711	1-216-677-11	METAL CHIP	12K
R628	1-208-806-11	METAL CHIP	10K	R712	1-216-671-11	METAL CHIP	6.8K
R629	1-216-659-11	METAL CHIP	2.2K	R713	1-216-049-91	METAL GLAZE	1K
R630	1-216-655-11	METAL CHIP	1.5K	R714	1-216-049-91	METAL GLAZE	1K
R631	1-208-784-11	METAL CHIP	1.2K	R715	1-216-067-00	METAL GLAZE	5.6K
R632	1-216-025-91	METAL GLAZE	100	R716	1-216-049-91	METAL GLAZE	1K
R633	1-216-659-11	METAL CHIP	2.2K	R717	1-216-097-91	METAL GLAZE	100K
R634	1-208-806-11	METAL CHIP	10K	R718	1-216-677-11	METAL CHIP	12K
R635	1-216-073-00	METAL GLAZE	10K	R719	1-216-671-11	METAL CHIP	6.8K
R636	1-216-697-91	METAL CHIP	82K	R720	1-216-049-91	METAL GLAZE	1K
R637	1-216-667-11	METAL CHIP	4.7K	R721	1-216-657-11	METAL CHIP	1.8K
R638	1-216-073-00	METAL GLAZE	10K	R722	1-216-049-91	METAL GLAZE	1K
R639	1-216-671-11	METAL CHIP	6.8K	R723	1-216-657-11	METAL CHIP	1.8K
R640	1-208-800-11	METAL CHIP	5.6K	R724	1-216-657-11	METAL CHIP	1.8K
R641	1-216-651-11	METAL CHIP	1K	R725	1-214-903-31	METAL	39K
R642	1-216-073-00	METAL GLAZE	10K	R726	1-216-121-91	METAL GLAZE	1M
R643	1-216-671-11	METAL CHIP	7.5K	R727	1-202-549-00	SOLID	100
R644	1-208-800-11	METAL CHIP	39K	R728	1-216-025-91	METAL GLAZE	100
R645	1-216-651-11	METAL CHIP	10K	R729	1-216-065-00	METAL GLAZE	4.7K
R646	1-216-073-00	METAL GLAZE	10K	R730	1-216-651-11	METAL CHIP	1K
R647	1-208-803-11	METAL CHIP	7.5K	R731	1-216-699-11	METAL CHIP	100K
R648	1-216-111-91	METAL GLAZE	390K	R732	1-216-049-91	METAL GLAZE	1K
R649	1-216-033-00	METAL GLAZE	220	R733	1-216-295-91	CONDUCTOR, CHIP (2012)	
R650	1-208-800-11	METAL CHIP	5.6K	R734	1-216-671-11	METAL CHIP	6.8K
R651	1-208-801-11	METAL CHIP	6.2K	R735	1-216-033-00	METAL GLAZE	220
R652	1-214-903-31	METAL	39K	R736	1-216-033-00	METAL GLAZE	220
R653	1-208-800-11	METAL CHIP	5.6K	R800	1-216-025-91	METAL GLAZE	100
R654	1-216-033-00	METAL GLAZE	220	R801	1-216-063-91	METAL GLAZE	3.9K
R655	1-216-695-11	METAL CHIP	68K	R802	1-216-085-00	METAL GLAZE	33K
R656	1-216-689-11	METAL GLAZE	39K	R803	1-216-049-91	METAL GLAZE	1K
R657	1-216-093-00	METAL GLAZE	68K	R804	1-216-063-91	METAL GLAZE	3.9K
R658	1-216-055-00	METAL GLAZE	1.8K	R805	1-216-091-00	METAL GLAZE	56K
R659	1-216-073-00	METAL GLAZE	10K	R806	1-216-049-91	METAL GLAZE	1K
R660	1-216-073-00	METAL GLAZE	10K	R807	1-216-079-00	METAL GLAZE	18K
R661	1-202-549-00	SOLID	100	R808	1-216-049-91	METAL GLAZE	1K
R662	1-216-699-11	METAL CHIP	100K	R809	1-216-049-91	METAL GLAZE	1K
R663	1-208-800-11	METAL CHIP	5.6K	R810	1-216-045-00	METAL GLAZE	680
R664	1-216-025-91	METAL GLAZE	100	R811	1-216-049-91	METAL GLAZE	1K
R665	1-216-073-00	METAL GLAZE	220	R812	1-216-063-91	METAL GLAZE	3.9K
R666	1-218-764-11	METAL CHIP	330K	R813	1-216-053-00	METAL GLAZE	1.5K
R667	1-208-854-11	METAL CHIP	1M	R814	1-216-065-00	METAL GLAZE	4.7K
R668	1-208-800-11	METAL CHIP	5.6K	R815	1-216-077-00	METAL GLAZE	15K
R669	1-216-049-91	METAL GLAZE	1K	R816	1-216-085-00	METAL GLAZE	33K
R670	1-216-073-00	METAL GLAZE	220	R817	1-216-097-91	METAL GLAZE	100K
R671	1-216-033-00	METAL GLAZE	220	R818	1-216-081-00	METAL GLAZE	22K
R672	1-218-764-11	METAL CHIP	330K	R819	1-216-085-00	METAL GLAZE	33K
R673	1-208-806-11	METAL CHIP	10K	R820	1-216-053-00	METAL GLAZE	1.5K
R674	1-216-073-00	METAL GLAZE	10K	R821	1-216-049-91	METAL GLAZE	1K
R675	1-216-057-00	METAL GLAZE	2.2K				
R676	1-208-854-11	METAL CHIP	1M				
R677	1-208-800-11	METAL CHIP	5.6K				
R678	1-216-049-91	METAL GLAZE	1K				
R679	1-216-073-00	METAL GLAZE	220				
R680	1-218-764-11	METAL CHIP	330K				
R681	1-208-854-11	METAL CHIP	1M				
R682	1-208-800-11	METAL CHIP	5.6K				
R683	1-216-049-91	METAL GLAZE	1K				
R684	1-216-073-00	METAL GLAZE	10K				
R685	1-216-073-00	METAL GLAZE	220				
R686	1-216-057-00	METAL GLAZE	2.2K				
R687	1-216-033-00	METAL GLAZE	220				
R688	1-216-033-00	METAL GLAZE	220				
R700	1-208-806-11	METAL CHIP	10K				
R701	1-208-806-11	METAL CHIP	10K				
R702	1-208-806-11	METAL CHIP	10K				

BK

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R822	1-216-081-00	METAL GLAZE	5% 1/10W	R900	1-216-025-91	METAL GLAZE	100 5%
R823	1-216-037-00	METAL GLAZE	5% 1/10W	R901	1-216-097-91	METAL GLAZE	100K 5%
R824	1-216-041-00	METAL GLAZE	5% 1/10W	R902	1-216-097-91	METAL GLAZE	100K 5%
R825	1-216-057-00	METAL GLAZE	5% 1/10W	R903	1-216-097-91	METAL GLAZE	100K 5%
R826	1-216-694-11	METAL CHIP	0.50% 1/10W	R904	1-216-025-91	METAL GLAZE	100 5%
R827	1-216-057-00	METAL GLAZE	5% 1/10W	R905	1-216-025-91	METAL GLAZE	100 5%
R828	1-216-037-00	METAL GLAZE	5% 1/10W	R906	1-216-025-91	METAL GLAZE	100 5%
R829	1-218-766-11	METAL CHIP	0.50% 1/10W	R907	1-216-097-91	METAL GLAZE	100K 5%
R830	1-218-755-11	METAL CHIP	0.50% 1/10W	R908	1-216-121-91	METAL GLAZE	1M 5%
R831	1-216-661-11	METAL CHIP	0.50% 1/10W	R909	1-216-097-91	METAL GLAZE	100K 5%
R832	1-216-637-11	METAL CHIP	0.50% 1/10W	R910	1-216-097-91	METAL GLAZE	100K 5%
R833	1-216-637-11	METAL CHIP	0.50% 1/10W	R911	1-216-097-91	METAL GLAZE	100K 5%
R834	1-216-659-11	METAL CHIP	0.50% 1/10W	R912	1-216-677-11	METAL CHIP	12K 0.50%
R835	1-216-069-00	METAL GLAZE	5% 1/10W	R913	1-208-812-11	METAL CHIP	18K 0.50%
R836	1-216-051-00	METAL GLAZE	5% 1/10W	R914	1-216-065-00	METAL GLAZE	4.7K 5%
R837	1-216-081-00	METAL GLAZE	5% 1/10W	R915	1-216-097-91	METAL GLAZE	100K 5%
R838	1-216-067-00	METAL GLAZE	5% 1/10W	R916	1-216-097-91	METAL GLAZE	100K 5%
R839	1-216-676-11	METAL CHIP	0.50% 1/10W	R917	1-216-097-91	METAL GLAZE	100K 5%
R840	1-216-079-00	METAL GLAZE	5% 1/10W	R918	1-216-097-91	METAL GLAZE	100K 5%
R841	1-216-097-91	METAL GLAZE	5% 1/10W	R919	1-216-661-11	METAL CHIP	2.7K 0.50%
R842	1-216-695-11	METAL CHIP	0.50% 1/10W	R920	1-216-097-91	METAL GLAZE	100K 5%
R843	1-216-057-00	METAL GLAZE	5% 1/10W	R921	1-216-667-11	METAL CHIP	4.7K 0.50%
R844	1-216-059-00	METAL GLAZE	5% 1/10W	R922	1-216-671-11	METAL CHIP	6.8K 0.50%
R845	1-216-697-91	METAL CHIP	0.50% 1/10W	R923	1-216-097-91	METAL GLAZE	100K 5%
R846	1-208-810-11	METAL CHIP	0.50% 1/10W	R924	1-216-097-91	METAL GLAZE	100K 5%
R847	1-216-073-00	METAL GLAZE	5% 1/10W	R925	1-216-097-91	METAL GLAZE	100K 5%
R848	1-216-095-00	METAL GLAZE	5% 1/10W	R926	1-216-097-91	METAL GLAZE	100K 5%
R849	1-216-037-00	METAL GLAZE	5% 1/10W	R927	1-216-097-91	METAL GLAZE	100K 5%
R850	1-216-699-11	METAL CHIP	0.50% 1/10W	R928	1-216-097-91	METAL GLAZE	100K 5%
R851	1-216-085-00	METAL GLAZE	5% 1/10W	R929	1-208-806-11	METAL CHIP	10K 0.50%
R852	1-216-094-00	METAL GLAZE	5% 1/10W	R930	1-208-806-11	METAL CHIP	10K 0.50%
R853	1-216-049-91	METAL GLAZE	5% 1/10W	R931	1-216-097-91	METAL GLAZE	100K 5%
R854	1-208-806-11	METAL CHIP	0.50% 1/10W	R932	1-216-073-00	METAL GLAZE	10K 5%
R855	1-216-649-11	METAL CHIP	0.50% 1/10W	R933	1-216-097-91	METAL GLAZE	100K 5%
R856	1-216-064-00	METAL GLAZE	5% 1/10W	R934	1-216-097-91	METAL GLAZE	100K 5%
R857	1-216-064-00	METAL GLAZE	5% 1/10W	R935	1-216-097-91	METAL GLAZE	100K 5%
R858	1-216-699-11	METAL CHIP	0.50% 1/10W	R936	1-216-097-91	METAL GLAZE	100K 5%
R859	1-216-065-00	METAL GLAZE	5% 1/10W	R937	1-216-097-91	METAL GLAZE	100K 5%
R860	1-216-065-00	METAL GLAZE	5% 1/10W	R938	1-216-097-91	METAL GLAZE	100K 5%
R861	1-216-667-11	METAL CHIP	0.50% 1/10W	R939	1-216-097-91	METAL GLAZE	100K 5%
R862	1-216-699-11	METAL CHIP	0.50% 1/10W	R940	1-216-097-91	METAL GLAZE	100K 5%
R863	1-216-674-11	METAL CHIP	0.50% 1/10W	R947	1-216-073-00	METAL GLAZE	10K 5%
R864	1-208-806-11	METAL CHIP	0.50% 1/10W	R948	1-216-073-00	METAL GLAZE	10K 5%
R865	1-216-649-11	METAL CHIP	0.50% 1/10W	R949	1-216-073-00	METAL GLAZE	10K 5%
R866	1-216-057-00	METAL GLAZE	5% 1/10W	R950	1-216-073-00	METAL GLAZE	10K 5%
R867	1-216-025-91	METAL GLAZE	5% 1/10W	R951	1-216-073-00	METAL GLAZE	10K 5%
R868	1-216-049-11	METAL GLAZE	5% 1/10W	R952	1-216-073-00	METAL GLAZE	10K 5%
R869	1-216-059-00	METAL GLAZE	5% 1/10W	R953	1-216-073-00	METAL GLAZE	10K 5%
R870	1-216-667-11	METAL CHIP	0.50% 1/10W	R955	1-216-073-00	METAL GLAZE	10K 5%
R871	1-216-089-91	METAL GLAZE	5% 1/10W	R956	1-216-073-00	METAL GLAZE	10K 5%
R872	1-216-073-00	METAL GLAZE	5% 1/10W	R957	1-216-073-00	METAL GLAZE	10K 5%
R873	1-216-089-91	METAL GLAZE	5% 1/10W	R960	1-216-049-91	METAL GLAZE	1K 5%
R874	1-216-073-00	METAL GLAZE	5% 1/10W	R970	1-216-073-00	METAL GLAZE	10K 5%
R875	1-216-067-00	METAL GLAZE	5% 1/10W	R980	1-216-065-00	METAL GLAZE	4.7K 5%
R876	1-216-061-00	METAL GLAZE	5% 1/10W				

The components identified by shading and marked Δ are critical for safety. Replace only with the part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

BK

PC

PA

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
TB1	I-537-959-11	< TERMINAL BOARD > TERMINAL BOARD ASSY. I/O		*A-1195-104-B	COMPLETE PCB. PA (20E1E/20E1U)		
TH00	I-807-796-11	< THERMISTOR > THERMISTOR		*A-1195-111-A	COMPLETE PCB. PA (14E1E/14E1U/14E5E/14E5U)		
X90	I-578-689-21	< CRYSTAL > VIBRATOR		< CAPACITOR >			
C1	I-106-367-00	MYLAR	0.01 μ F 10%	C101	I-126-934-11	ELECT	220 μ F 20%
C2	I-106-367-00	MYLAR	0.01 μ F 10%	C102	I-123-024-21	ELECT	33 μ F 10%
CNI	*1-573-986-11	PIN, CONNECTOR (PC BOARD) 5P		C103	I-106-359-00	MYLAR	0.0047 μ F 10%
CN2	*1-564-514-11	PLUG, CONNECTOR 11P		C104	I-136-111-00	FILM	1 μ F 5%
CN3	*1-508-766-00	PIN, CONNECTOR (5MM PITCH) 4P		C105	I-106-355-12	MYLAR	0.0033 μ F 10%
R1	I-215-437-00	METAL	4.7K 1%	C106	I-164-004-11	CERAMIC CHIP	0.1 μ F 10%
R2	I-215-437-00	METAL	4.7K 1%	C107	I-162-134-11	CERAMIC	470pf 10%
R3	I-215-428-00	METAL	2K 1%	C108	I-136-080-00	FILM	0.011 μ F 3%
R3	I-215-426-00	METAL	1.6K 1%	C109	I-107-912-11	ELECT	330 μ F 20%
R4	I-215-437-00	METAL	4.7K 1%	C110	I-107-912-11	ELECT	330 μ F 20%
R5	I-215-437-00	METAL	4.7K 1%	C201	I-126-934-11	ELECT	220 μ F 20%
R6	I-215-427-00	METAL	1.8K 1%	C302	I-164-232-11	CERAMIC CHIP	0.01 μ F 10%
R6	I-215-425-00	METAL	1.5K 1%	C203	I-162-114-00	CERAMIC	0.0047 μ F 10%
R7	I-216-393-00	METAL OXIDE	2.2 5%	C301	I-163-038-91	CERAMIC CHIP	0.1 μ F 5%
R7	I-216-389-11	METAL OXIDE	1 5%	C302	I-164-505-11	CERAMIC CHIP	2.2 μ F 10%
T1	*A-4033-491-1	TRANSFORMER		C303	I-163-093-00	CERAMIC CHIP	10pf 5%
T1	*A-4033-492-1	TRANSFORMER		C304	I-164-505-11	CERAMIC CHIP	2.2 μ F 10%
				C305	I-164-505-11	CERAMIC CHIP	2.2 μ F 10%
				C501	I-124-242-00	ELECT	33 μ F 20%
				C502	I-163-117-00	CERAMIC CHIP	100pf 5%
				C503	I-126-160-11	ELECT	1 μ F 20%
				C504	I-164-161-11	CERAMIC CHIP	0.0022 μ F 10%
				C505	I-124-234-00	ELECT	22 μ F 20%
				C506	I-163-009-11	CERAMIC CHIP	0.001 μ F 10%
				C507	I-164-004-11	CERAMIC CHIP	0.1 μ F 10%
				C508	I-163-125-00	CERAMIC CHIP	220pf 5%
				C509	I-126-157-11	ELECT	10 μ F 20%
				C510	I-124-242-00	ELECT	33 μ F 20%
				C511	I-164-346-11	CERAMIC CHIP	1 μ F 10%
				C512	I-164-232-11	CERAMIC CHIP	0.01 μ F 10%
				C513	I-164-346-11	CERAMIC CHIP	1 μ F 10%
				C514	I-164-346-11	CERAMIC CHIP	1 μ F 10%
				C515	I-164-232-11	CERAMIC CHIP	0.01 μ F 10%
				C516	I-164-346-11	CERAMIC CHIP	1 μ F 10%
				C517	I-126-964-11	ELECT	10 μ F 20%
				C518	I-107-701-11	ELECT	47 μ F 20%
				C521	I-164-346-11	CERAMIC CHIP	1 μ F 10%
				C522	I-126-163-11	ELECT	4.7 μ F 20%
				C801	I-126-160-11	ELECT	1 μ F 20%
				C802	I-130-481-00	MYLAR	0.0068 μ F 5%
				C811	I-164-004-11	CERAMIC CHIP	0.1 μ F 10%
				C901	I-128-526-11	ELECT	100 μ F 20%
				C902	I-128-526-11	ELECT	100 μ F 20%
				C903	I-164-232-11	CERAMIC CHIP	0.01 μ F 10%
				C904	I-164-232-11	CERAMIC CHIP	0.01 μ F 10%
				C907	I-107-639-11	ELECT	47 μ F 20%
				C911	I-104-664-11	ELECT	47 μ F 20%
				C912	I-164-004-11	CERAMIC CHIP	0.1 μ F 10%

PA

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C921	1-128-536-11	ELECT	100 μ F 20%	JR900	1-216-295-91	CONDUCTOR, CHIP (2012) (14F1E/14E1U/14E5E/14F5U/20F1E/20E1U)	
C923	1-164-232-11	CERAMIC CHIP	0.01 μ F 10%			< COIL >	
CN901	1-774-536-11	CONNECTOR PIN (PC BOARD) 34P		L101	1-429-284-11	TRANSFORMER, FERRITE (LOT)	
CN902	1-766-243-11	PIN, CONNECTOR (PC BOARD) 5P		L102	1-406-659-11	COIL, CHOKE 10 μ H	
CN903	1-766-241-11	PIN, CONNECTOR (PC BOARD) 3P				< TRANSISTOR >	
CN904	*1-564-514-11	PLUG, CONNECTOR 11P		Q101	8-729-019-57	TRANSISTOR 2SA1208S-TP	
CN905	1-766-240-11	PIN, CONNECTOR (PC BOARD) 2P		Q102	8-729-015-28	TRANSISTOR IRF19630GS	
CN906	*1-564-507-11	PLUG, CONNECTOR 4P		Q103	4-382-854-11	SCREW (M3X10), P. SW (+) (Q102)	
		< DIODE >		Q104	8-729-216-22	TRANSISTOR 2SA1162-G	
D101	8-719-404-46	DIODE MA110		Q105	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D102	8-719-106-71	DIODE RD12M-B2		Q107	8-729-266-82	TRANSISTOR 2SC2668-O	
D103	8-719-920-67	DIODE ERC91-02		Q108	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D104	8-719-404-46	DIODE MA110		Q109	8-729-216-22	TRANSISTOR 2SA1162-G	
D105	8-719-939-07	DIODE ERD38-06			8-729-020-64	TRANSISTOR IRFP650LF	
D106	8-719-939-07	DIODE ERD38-06			4-047-285-01	SHEET, INSULATING (Q109)	
D107	8-719-941-74	DIODE ERB91-02		Q111	4-382-854-11	SCREW (M3X10), P. SW (+) (Q109)	
D201	8-719-901-19	DIODE VT1N		Q112	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D202	8-719-404-46	DIODE MA110		Q113	8-729-216-22	TRANSISTOR 2SA1162-G	
D204	8-719-404-46	DIODE MA110		Q201	8-729-027-59	TRANSISTOR DTC144EKA-T146	
D205	8-719-404-46	DIODE MA110			8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	
D301	8-719-404-46	DIODE MA110		Q202	8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	
D302	8-719-404-46	DIODE MA110		Q301	8-729-216-22	TRANSISTOR 2SA1162-G	
D321	8-719-404-46	DIODE MA110		Q302	8-729-216-22	TRANSISTOR 2SA1162-G	
D322	8-719-404-46	DIODE MA110		Q303	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D401	8-719-404-46	DIODE MA110		Q304	8-729-140-96	TRANSISTOR 2SD774-34	
D501	8-719-404-46	DIODE MA110		Q305	8-729-140-97	TRANSISTOR 2SB734-34	
D502	8-719-404-46	DIODE MA110		Q321	8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	
D503	8-719-404-46	DIODE MA110		Q322	8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	
D511	8-719-404-46	DIODE MA110		Q401	8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	
D512	8-719-404-46	DIODE MA110				< RESISTOR >	
D513	8-719-105-38	DIODE RD3.0M-B1		R101	1-216-347-11	METAL OXIDE	0.68 5% W
D514	8-719-404-46	DIODE MA110		R102	1-216-635-11	METAL CHIP	220 0.50% W
D516	8-719-404-46	DIODE MA110		R103	1-218-762-11	METAL CHIP	270K 0.50% W
D517	8-719-105-38	DIODE RD3.0M-B1		R104	1-216-105-91	METAL GLAZE	220K 5% W
D518	8-719-404-46	DIODE MA110		R105	1-216-055-00	METAL GLAZE	1.8K 5% W
D519	8-719-404-46	DIODE MA110		R106	1-216-635-11	METAL CHIP	220 0.50% W
D521	8-719-404-46	DIODE MA110		R107	1-218-762-11	METAL CHIP	270K 0.50% W
D801	8-719-106-71	DIODE RD12M-B2		R108	1-216-073-00	METAL GLAZE	10K 5% W
D802	8-719-404-46	DIODE MA110		R109	1-216-081-00	METAL GLAZE	22K 5% W
D901 Δ 8-759-300-59		DIODE HZT33-02TA		R110	1-249-397-11	CARBON	22 5% W
D902 Δ 8-759-300-59		DIODE HZT33-02TA		R111	1-215-911-11	METAL OXIDE	100 5% W
		< IC >		R112	1-216-065-00	METAL GLAZE	4.7K 5% W
IC401	8-759-983-69	IC LM358PS		R113	1-216-065-00	METAL GLAZE	4.7K 5% W
IC901	8-759-346-56	IC FA5301N-TE1		R114	1-216-073-00	METAL GLAZE	10K 5% W
IC902	8-759-988-13	IC LM393PS		R115	1-216-065-00	METAL GLAZE	4.7K 5% W
IC801	8-759-981-48	IC TL082M		R116	1-216-073-00	METAL GLAZE	10K 5% W
IC901	8-759-231-58	IC TA7812S		R117	1-216-001-00	METAL GLAZE	10 5% W
		< CHIP CONDUCTOR >		R118	1-216-349-00	METAL OXIDE	1 5% W
R100	1-216-295-91	CONDUCTOR, CHIP (2012) (14F1E/14F1U/14F5E/14F5U/20F1E/20F1U)		R119	1-216-349-00	METAL OXIDE	1 5% W
				R201	1-216-089-91	METAL GLAZE	4.7K 5% W



Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
	*4-050-818-01	PANEL, POWER UNIT		C37	1-129-898-00	FILM	0.0022 μ F 5%
	*4-050-824-01	INSULATOR, POWER UNIT		C38	1-136-165-00	FILM	0.1 μ F 5%
				C40	1-136-165-00	FILM	0.1 μ F 5%
	*4-050-850-01	COVER, POWER UNIT		C42	1-107-929-11	ELECT	10 μ F 20%
	4-309-378-00	SPACER		C43	1-107-929-11	ELECT	10 μ F 20%
	4-382-854-01	SCREW (M3X8), P. SW (+)		C44	1-113-912-11	ELECT	0.0047 μ F 20%
	*4-403-012-01	SPRING, STOPPER		C45	1-113-912-11	ELECT	0.0047 μ F 20%
	*4-403-012-01	SPRING, STOPPER		C101	1-102-038-00	CERAMIC	0.001 μ F 500V
	*7-682-149-15	SCREW +P 3X10		C102	1-102-038-00	CERAMIC	0.001 μ F 500V
	*7-682-149-15	SCREW +P 3X10		C103	1-102-228-00	CERAMIC	470pF 10%
	7-682-566-04	SCREW +B 4X20		C104	1-102-228-00	CERAMIC	470pF 10%
	7-682-566-04	SCREW +B 4X20		C105	1-102-228-00	CERAMIC	470pF 10%
	7-682-661-01	SCREW +PS 4X8		C106	1-102-228-00	CERAMIC	470pF 10%
	7-682-950-09	SCREW +PSW 3X12		C107	1-107-877-11	ELECT	1000 μ F 20%
	7-685-871-01	SCREW +BVT 3X6 (S)		C108	1-107-877-11	ELECT	1000 μ F 20%
	7-682-548-09	SCREW +BVT 3X8 (S)		C109	1-107-877-11	ELECT	1000 μ F 20%
				C110	1-107-877-11	ELECT	1000 μ F 20%
		< CAPACITOR >		C111	1-102-038-00	CERAMIC	0.001 μ F 50V
C1	Δ 1-104-708-11	FILM	0.47μF 20%	C112	1-102-038-00	CERAMIC	0.001 μ F 50V
C2	Δ 1-113-912-51	ELECT	0.0047μF 20%	C113	1-102-228-00	CERAMIC	470pF 10%
	*4-374-846-01	COVER, CAPACITOR, CAP TYPE (C2)		C114	1-102-228-00	CERAMIC	470pF 10%
C3	Δ 1-113-912-51	ELECT	0.0047μF 20%	C115	1-102-228-00	CERAMIC	470pF 10%
	*4-374-846-01	COVER, CAPACITOR, CAP TYPE (C3)		C116	1-102-228-00	CERAMIC	470pF 10%
C4	Δ 1-113-912-51	ELECT	0.0047μF 20%	C117	1-128-528-11	ELECT	470 μ F 20%
	*4-374-846-01	COVER, CAPACITOR, CAP TYPE (C4)		C118	1-126-105-11	ELECT	1000 μ F 20%
C5	Δ 1-113-912-51	ELECT	0.0047μF 20%	C119	1-128-528-11	ELECT	470 μ F 20%
	*4-374-846-01	COVER, CAPACITOR, CAP TYPE (C5)		C120	1-126-105-11	ELECT	1000 μ F 20%
C6	Δ 1-104-708-11	FILM	0.47μF 20%	C121	1-102-228-00	CERAMIC	470pF 10%
C9	Δ 1-113-924-91	ELECT	0.0047μF 20%	C122	1-102-228-00	CERAMIC	470pF 10%
C10	Δ 1-113-924-91	ELECT	0.0047μF 20%	C123	1-107-877-11	ELECT	1000 μ F 20%
C11	Δ 1-113-924-91	ELECT	0.0047μF 20%	C124	1-126-771-11	ELECT	100 μ F 20%
C12	Δ 1-113-924-91	ELECT	0.0047μF 20%	C125	1-126-771-11	ELECT	100 μ F 20%
C13	1-137-484-11	FILM	0.47 μ F 10%	C126	1-136-165-00	FILM	0.1 μ F 5%
C14	1-104-664-11	ELECT	20%	C127	1-106-383-00	MYLAR	0.047 μ F 20V
C15	1-128-526-11	ELECT	20%	C128	1-107-880-11	ELECT	4700 μ F 20%
C16	1-104-664-11	ELECT	20%	C129	1-107-880-11	ELECT	4700 μ F 20%
C17	1-107-896-11	ELECT	20%	C130	1-107-880-11	ELECT	4700 μ F 20%
C18	1-101-001-00	CERAMIC	50V	C131	1-107-880-11	ELECT	4700 μ F 20%
C19	1-102-527-11	CERAMIC	50V	C132	1-128-339-11	ELECT	2200 μ F 10V
C20	1-130-471-00	FILM	5%	C133	1-128-339-11	ELECT	2200 μ F 10V
C21	1-136-177-00	FILM	5%	C134	1-128-528-11	ELECT	470 μ F 20%
C22	1-136-177-00	FILM	5%	C135	1-104-664-11	ELECT	47 μ F 20%
C23	1-136-165-00	FILM	5%	C136	1-128-528-11	ELECT	470 μ F 20%
C24	1-136-169-00	FILM	5%	C137	1-104-664-11	ELECT	47 μ F 20%
C25	1-130-471-00	FILM	5%	C138	1-107-929-11	ELECT	10 μ F 30%
C26	1-101-004-00	CERAMIC	50V	C139	1-107-929-11	ELECT	10 μ F 30%
C27	1-126-804-11	ELECT	35V	C140	1-136-175-00	FILM	0.68 μ F 5%
C28	1-113-707-11	ELECT	450V	C141	1-107-929-11	ELECT	10 μ F 20%
C29	1-126-325-51	ELECT	250V	C142	1-104-664-11	ELECT	47 μ F 20%
C30	1-126-325-51	ELECT	250V	C143	1-136-175-00	FILM	0.68 μ F 5%
C31	1-102-038-00	CERAMIC	500V	C144	1-107-924-11	ELECT	0.47 μ F 20%
C32	1-102-038-00	CERAMIC	500V				
C33	1-128-526-11	ELECT	16V				
C34	1-104-664-11	ELECT	20%	CN1	1-564-321-00	PIN, CONNECTOR 2P	
C35	1-107-889-11	ELECT	20%				

< CONNECTOR >

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.

Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

G

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
CN2	1-568-106-11	PIN, CONNECTOR 4P		FB1	1-410-396-41	< FERRITE BEAD >	
CN3	1-774-523-11	PIN, CONNECTOR (PC BOARD) 64P		FB2	1-410-396-41	FERRITE BEAD INDUCTOR	
CN4	1-774-530-11	CONNECTOR, BOARD TO BOARD 3P		FB3	1-410-396-41	FERRITE BEAD INDUCTOR	
CN5	1-774-531-11	CONNECTOR, BOARD TO BOARD 10P		FB4	1-410-396-41	FERRITE BEAD INDUCTOR	
CN6	1-774-532-11	CONNECTOR, BOARD TO BOARD 15P		FB5	1-410-396-41	FERRITE BEAD INDUCTOR	
CN7	1-774-532-11	CONNECTOR, BOARD TO BOARD 15P		FB6	1-410-396-41	FERRITE BEAD INDUCTOR	
		< DIODE >					
D1	Δ 8-719-505-60	DIODE 5YB60		IC1	8-759-191-54	IC UC3854N	
	*4-873-829-02	HEAT SINK (D1)		IC2	8-759-103-93	IC μ PC393C	
	7-682-951-01	SCREW +PSW 3X14 (D1)		IC3	8-759-231-59	IC TA7815S	
D2	Δ 8-719-921-20	DIODE ISS119-25TD		IC4	8-759-979-49	IC MA2820	
D3	8-719-911-19	DIODE ISS119-25			*4-050-802-01	HEAT SINK (IC4)	
D7	8-719-110-03	DIODE RD7 5ESB2		IC101	*4-386-664-01	SPRING (IC4)	
D8	8-719-510-02	DIODE DINS4		IC102	8-759-908-15	IC TL431CLP	
D9	8-719-510-02	DIODE DINS4		IC103	8-759-346-48	IC SE005N	
D10	8-719-029-04	DIODE D5L60		IC103	8-759-908-15	IC TL431CLP	
	*4-381-905-01	SPRING (D) (D10)		IC104	8-759-231-58	IC TA7812S	
D11	8-719-510-02	DIODE DINS4		IC105	8-759-929-65	IC LM7912CT	
D12	8-719-510-02	DIODE DINS4		IC106	8-759-103-93	IC μ PC393C	
D13	8-719-110-49	DIODE RD18ESB2		JR101	1-216-295-91	CONDUCTOR, CHIP (2012)	
D14	8-719-979-58	DIODE EGP10D				< CHIP CONDUCTOR >	
D16	8-719-992-24	DIODE SLR-305VC3F				< COIL >	
D17	8-719-979-58	DIODE EGP10D		L101	1-411-517-11	COIL, CHOKE 180 μ H	
D18	8-719-510-02	DIODE DINS4		L102	1-406-661-11	COIL, CHOKE 22 μ H	
D19	8-719-110-30	DIODE RD12ESB1		L103	1-411-517-11	COIL, CHOKE 180 μ H	
D20	8-719-992-24	DIODE SLR-305VC3F		L104	1-406-661-11	COIL, CHOKE 22 μ H	
D21	8-719-911-19	DIODE ISS119-25		L105	1-411-516-11	COIL, CHOKE 400 μ H	
D101	8-719-988-31	DIODE D10SC6MR		L106	1-406-661-11	COIL, CHOKE 22 μ H	
D102	8-719-510-09	DIODE D10SC6M		L107	1-411-516-11	COIL, CHOKE 400 μ H	
D103	8-719-500-42	DIODE D8LCA20R		L108	1-406-661-11	COIL, CHOKE 22 μ H	
D104	8-719-500-41	DIODE D8LCA20		L109	1-411-515-11	COIL, CHOKE 300mH	
D105	8-719-980-00	DIODE ESAC39M-06N		L110	1-406-661-11	COIL, CHOKE 22 μ H	
D106	8-719-971-08	DIODE ESAC39M-06C		L111	1-406-659-11	COIL, CHOKE 10 μ H	
D107	8-719-510-09	DIODE D10SC6M				< PHOTO COUPLER >	
	*4-050-800-01	PLETE (SMALL), NUT (D107)		PC1 Δ	8-749-923-50	PHOTO COUPLER PC11IYS	
D108	8-719-979-58	DIODE EGP10D		PC2 Δ	8-749-923-50	PHOTO COUPLER PC11IYS	
D109	8-719-110-42	DIODE RD15ESB3		PC3 Δ	8-749-923-50	PHOTO COUPLER PC11IYS	
D110	8-719-979-58	DIODE EGP10D		PC4 Δ	8-749-923-50	PHOTO COUPLER PC11IYS	
D111	8-719-110-42	DIODE RD15ESB3				< TRANSISTOR >	
D112	8-719-992-30	DIODE SLR-305MCS3F		Q1	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D113	8-719-911-19	DIODE ISS119-25		Q2	8-729-030-03	TRANSISTOR DTC144ESA-TP	
D114	8-719-911-19	DIODE ISS119-25		Q3	8-729-119-78	TRANSISTOR 2SC2785-HFE	
				Q4	8-729-119-76	TRANSISTOR 2SA1175-HFE	
				Q5	8-729-024-29	TRANSISTOR IRFP450LF	
D15	Δ 8-719-921-20	DIODE ISS119-25TD		Q6	8-729-024-29	TRANSISTOR IRFP450LF	
D116	8-719-109-72	DIODE RD3 9ESB2		Q7	8-729-024-29	TRANSISTOR IRFP450LF	
D117	8-719-109-93	DIODE RD6 2ESB2		Q8	8-729-034-17	TRANSISTOR 2SC3632-L	
D118	8-719-110-17	DIODE RD10ESB2					
		< FUSE >					
F1	Δ 1-532-746-11	FUSE GLASS, TUBE (4A)25V1					
	(14E1U/4E5U/14F1U/14F5U/20E11U/20F1U)						
F1	Δ 1-576-230-11	FUSE (H.C.) (3.15A)250V					
	(14E1E/14E5E/14F1E/14F5E/20E1E/20F1E)						
	*1-533-701-11	HOLDER, FUSE (F1)					



Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
 Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked Δ are critical for safety.
 Replace only with the part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q9	8-729-118-44	TRANSISTOR 2SA1413-K		R45	1-249-393-11	CARBON	10 5% 1/4W
Q10	8-729-030-03	TRANSISTOR DTC144ESA-TP		R46	1-249-429-11	CARBON	10K 5% 1/4W
Q11	8-729-029-56	TRANSISTOR DTA144ESA		R47	1-249-393-11	CARBON	10 5% 1/4W
Q12	8-729-030-03	TRANSISTOR DTC144ESA-TP		R48	1-249-429-11	CARBON	10K 5% 1/4W
Q13	8-729-030-03	TRANSISTOR DTC144ESA-TP		R49	1-219-728-11	WIREWOUND	0.22 10% 5W
Q14	8-729-030-03	TRANSISTOR DTC144ESA-TP		R50	1-249-417-11	CARBON	1K 5% 1/4W
Q15	8-729-029-56	TRANSISTOR DTA144ESA		R51	1-249-441-11	CARBON	100K 5% 1/4W
Q16	8-729-030-03	TRANSISTOR DTC144ESA-TP		R52	1-215-911-11	METAL OXIDE	100 5% 3W
Q17	8-729-029-56	TRANSISTOR DTA144ESA		R53	1-215-911-11	METAL OXIDE	100 5% 3W
Q101	8-729-030-03	TRANSISTOR DTC144ESA-TP		R59	1-202-719-00	SOLID	1M 20% 1/2W
Q103	8-729-030-03	TRANSISTOR DTC144ESA-TP		R61	1-215-904-11	METAL OXIDE	100K 5% 2W
Q104	8-729-119-78	TRANSISTOR 2SC2785-HFE		R62	1-249-409-11	CARBON	220 5% 1/4W
Q105	8-729-030-03	TRANSISTOR DTC144ESA-TP		R63	1-216-426-11	METAL OXIDE	82 5% 1W
Q107	8-729-119-78	TRANSISTOR 2SC2785-HFE		R64	1-216-426-11	METAL OXIDE	82 5% 1W
Q108	8-729-029-56	TRANSISTOR DTA144ESA		R65 Δ	1-202-725-51	METAL	3.3M 5% 1W
Q109	8-729-030-03	TRANSISTOR DTC144ESA-TP		R66	1-247-895-91	CARBON	220K 5% 1/4W
				R67	1-247-895-91	CARBON	220K 5% 1/4W
				R68	1-249-429-11	CARBON	10K 5% 1/4W
				R69	1-249-429-11	CARBON	10K 5% 1/4W
				R70	1-247-887-00	CARBON	220K 5% 1/4W
				R71	1-247-887-00	CARBON	220K 5% 1/4W
				R72	1-247-895-91	CARBON	470K 5% 1/4W
				R73	1-247-895-91	CARBON	470K 5% 1/4W
				R74	1-247-863-91	CARBON	22K 5% 1/4W
				R75	1-249-417-11	CARBON	1K 5% 1/4W
R1 Δ	1-202-884-91	SOLID	20%	R76 Δ	1-202-725-51	METAL	3.3M 10% 1/4W
R2 Δ	1-202-962-11	WIREWOUND	5%	R77	1-215-431-00	METAL OXIDE	2.7K 0.5% 1/4W
R3	1-247-737-11	CARBON	5%	R79	1-215-481-00	METAL	330K 0.5% 1/4W
R4	1-249-437-11	CARBON	5%	R101	1-215-884-11	METAL OXIDE	47 5% 2W
R5	1-247-863-91	CARBON	5%	R102	1-216-341-11	METAL OXIDE	0.22 5% 1W
R7	1-247-863-91	CARBON	5%	R103	1-216-341-11	METAL OXIDE	0.22 5% 1W
R8	1-249-417-11	CARBON	5%	R104	1-216-341-11	METAL OXIDE	0.22 5% 1W
R9	1-249-441-11	CARBON	5%	R105	1-216-341-11	METAL OXIDE	0.22 5% 1W
R10	1-249-429-11	CARBON	5%	R106	1-216-341-11	METAL OXIDE	0.22 5% 1W
R11	1-249-429-11	CARBON	5%	R107	1-216-341-11	METAL OXIDE	0.22 5% 1W
R12	1-247-863-91	CARBON	5%	R108	1-215-884-11	METAL OXIDE	47 5% 2W
R13	1-249-425-11	CARBON	5%	R109	1-216-341-11	METAL OXIDE	0.22 5% 1W
R14	1-215-449-51	METAL	1%	R110	1-216-341-11	METAL OXIDE	0.22 5% 1W
R15	1-215-445-00	METAL	1%	R111	1-216-341-11	METAL OXIDE	0.22 5% 1W
R16	1-215-445-00	METAL	1%	R112	1-216-341-11	METAL OXIDE	0.22 5% 1W
R18	1-215-423-00	METAL	1%	R113	1-216-736-11	METAL	270 1% 10W
R19	1-215-442-00	METAL	1%	R114	*4050-800-01	PLETE (SMALL), NUT (R113)	0.22 10% 5W
R20	1-247-863-91	CARBON	5%	R115	1-215-901-00	METAL OXIDE	33K 5% 2W
R21	1-215-435-00	METAL	1%	R116	1-249-429-11	CARBON	10K 5% 1/4W
R22	1-215-435-00	METAL	1%	R117	1-249-409-11	CARBON	220 5% 1/4W
R23	1-247-887-00	CARBON	5%	R118	1-249-413-11	CARBON	470 5% 1/4W
R24	1-247-895-91	CARBON	5%	R119	1-214-905-00	METAL	47K 1% 1/3W
R25	1-247-895-91	CARBON	5%	R120	1-214-905-00	METAL	47K 1% 1/3W
R26	1-247-895-91	CARBON	5%	R121	1-215-427-00	METAL	1.8K 1% 1/4W
R27	1-247-895-91	CARBON	5%	R122	1-215-397-00	METAL	100 1% 1/4W
R28	1-247-887-00	CARBON	5%	R123	1-214-921-00	METAL	220K 1% 1/3W
R29	1-247-863-91	CARBON	5%	R125	1-249-417-11	CARBON	1K 5% 1/4W
R30	1-247-863-91	CARBON	5%	R129	1-249-413-11	CARBON	470 5% 1/4W
R31	1-247-887-00	CARBON	5%				
R32	1-215-447-00	METAL	1%				
R33	1-249-393-11	CARBON	5%				
R34	1-249-429-11	CARBON	5%				
R39	1-215-481-00	METAL	1%				
R40	1-215-481-00	METAL	1%				
R42	1-219-440-11	WIREWOUND	10%				
R43	1-219-440-11	WIREWOUND	10%				

< RESISTOR >

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R121	1-216-001-00	METAL GLAZE	10 5% 1/10W	IC201	8-759-908-15	< IC >	
*****A-1311-433-A *****							
***** MOUNTED PCB, GB *****							
***** < CAPACITOR > *****							
C201	1-164-004-11	CERAMIC CHIP	0.1μ F 10% 25V	IC202	8-759-988-13	IC TL431CLP	
C202	1-124-779-00	ELECT	10μ F 20% 16V	IC203	8-759-085-67	IC LM339PS	
C203	1-164-004-11	CERAMIC CHIP	0.1μ F 10% 25V	IC204	8-759-085-67	IC LM339NS	
C204	1-124-779-00	ELECT	10μ F 20% 16V	IC301	8-759-926-14	IC SN74HC148NS	
C205	1-164-232-11	CERAMIC CHIP	0.01μ F 10% 50V	IC302	8-759-926-14	IC SN74HC148NS	
C206	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	IC303	8-759-032-14	IC MC74HC08AF	
C207	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	< TRANSISTOR >			
C208	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q301	8-729-907-46	TRANSISTOR IMZI	
C209	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q302	8-729-907-46	TRANSISTOR IMZI	
C210	1-126-935-11	ELECT	470μ F 20% 6.3V	Q303	8-729-907-46	TRANSISTOR IMZI	
C301	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q304	8-729-907-46	TRANSISTOR IMZI	
C302	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q305	8-729-907-46	TRANSISTOR IMZI	
C303	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q306	8-729-907-46	TRANSISTOR IMZI	
C304	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q307	8-729-907-46	TRANSISTOR IMZI	
C305	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q308	8-729-907-46	TRANSISTOR IMZI	
C306	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q309	8-729-907-46	TRANSISTOR IMZI	
C307	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q310	8-729-907-46	TRANSISTOR IMZI	
C308	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q311	8-729-216-22	TRANSISTOR 2SA1162-G	
C309	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q312	8-729-027-38	TRANSISTOR DTA144EKA-T146	
C310	1-128-007-11	ELECT CHIP	2.2μ F 20% 35V	Q313	8-729-027-38	TRANSISTOR DTA144EKA-T146	
C311	1-164-004-11	CERAMIC CHIP	0.1μ F 10% 25V	< RESISTOR >			
C312	1-126-964-51	ELECT	10μ F 20% 50V	R201	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
< CONNECTOR >							
CN301	1-774-553-11	CONNECTOR, BOARD TO BOARD 15P		R202	1-216-661-11	METAL CHIP	2.7K 0.50% 1/10W
CN302	1-774-553-11	CONNECTOR, BOARD TO BOARD 15P		R203	1-216-639-11	METAL CHIP	330 0.50% 1/10W
< DIODE >							
D201	8-719-105-91	DIODE RD5.6M-B2		R204	1-216-037-00	METAL GLAZE	330 5% 1/10W
D202	8-719-404-46	DIODE MA110		R205	1-216-081-00	METAL GLAZE	22K 5% 1/10W
D203	8-719-404-46	DIODE MA110		R207	1-216-674-11	METAL CHIP	9.1K 0.50% 1/10W
D204	8-719-404-46	DIODE MA110		R208	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
D205	8-719-404-46	DIODE MA110		R209	1-216-081-00	METAL GLAZE	22K 5% 1/10W
D206	8-719-105-91	DIODE RD5.6M-B2		R210	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W
D301	8-719-404-46	DIODE MA110		R211	1-208-801-11	METAL CHIP	6.2K 0.50% 1/10W
D302	8-719-404-46	DIODE MA110		R212	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W
D303	8-719-404-46	DIODE MA110		R213	1-216-699-11	METAL CHIP	100K 0.50% 1/10W
D304	8-719-404-46	DIODE MA110		R214	1-208-801-11	METAL CHIP	6.2K 0.50% 1/10W
D305	8-719-404-46	DIODE MA110		R215	1-216-089-91	METAL GLAZE	47K 5% 1/10W
D306	8-719-404-46	DIODE MA110		R216	1-216-077-00	METAL GLAZE	15K 5% 1/10W
D307	8-719-404-46	DIODE MA110		R217	1-216-081-00	METAL GLAZE	22K 5% 1/10W
D308	8-719-404-46	DIODE MA110		R218	1-216-677-11	METAL CHIP	12K 0.50% 1/10W
D309	8-719-404-46	DIODE MA110		R219	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W
D310	8-719-404-46	DIODE MA110		R220	1-216-081-00	METAL GLAZE	22K 5% 1/10W
				R221	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W
				R222	1-208-801-11	METAL CHIP	6.2K 0.50% 1/10W
				R223	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W
				R224	1-216-699-11	METAL CHIP	100K 0.50% 1/10W
				R225	1-208-801-11	METAL CHIP	6.2K 0.50% 1/10W
				R226	1-216-089-91	METAL GLAZE	47K 5% 1/10W
				R227	1-216-077-00	METAL GLAZE	15K 5% 1/10W
				R228	1-216-081-00	METAL GLAZE	22K 5% 1/10W
				R229	1-216-677-11	METAL CHIP	12K 0.50% 1/10W
				R230	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W

C **D**

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and marked Δ are critical for safety.
Replace only with the part number specified.

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
	*A-1331-457-A	MOUNTED PCB. C. (14F1E/14F1U/14F5E/14F5U/20F1E/20F1U)		R11	1-202-537-00	SOLID	33 20% 1/2W
		*****		R12	1-202-537-00	SOLID	33 20% 1/2W
		*****		R13	1-202-559-00	SOLID	270 20% 1/2W
		*****		R14	1-202-559-00	SOLID	270 20% 1/2W
		*****		R15	1-202-559-00	SOLID	270 20% 1/2W
	*A-1331-520-A	MOUNTED PCB. C. (14E1E/14E1U/14E5E/14E5U/20E1E/20E1U)		R16	1-202-842-11	SOLID	220K 20% 1/2W
		*****		R17	1-249-430-11	CARBON	12K 5% 1/4W
		*****		R18	1-249-426-11	CARBON	5.6K 5% 1/4W
		< CAPACITOR >		RV1	1-223-410-11	RES. ADJ. METAL FILM 110M (H STAT)	
C1	1-102-316-00	CERAMIC	15pF 5% 500V			< VARIABLE RESISTOR >	
C2	1-102-316-00	CERAMIC	15pF 5% 500V			RES. ADJ. METAL FILM 110M (H STAT)	
C3	1-102-316-00	CERAMIC	15pF 5% 500V			< SPARK GAP >	
C4	1-162-114-00	CERAMIC	0.0047µ F 2KV	SG1	1-519-422-11	GAP. SPARK	
C5	1-162-114-00	CERAMIC	0.0047µ F 2KV	SG2	1-519-421-11	GAP. DISCHARGE	
C6	1-162-114-00	CERAMIC	0.0047µ F 2KV	SG3	1-519-421-11	GAP. DISCHARGE	
C7	1-124-907-11	ELECT	10µ F 20% 50V	SG4	1-519-421-11	GAP. DISCHARGE	
C8	1-124-907-11	ELECT	10µ F 20% 50V	SG5	1-519-421-11	GAP. DISCHARGE	
CN1	*1-508-786-00	PIN. CONNECTOR (5MM PITCH) 2P		SG6	1-519-421-11	GAP. DISCHARGE	
CN2	*1-508-784-00	PIN. CONNECTOR (5MM PITCH) 1P		SG7	1-519-421-11	GAP. DISCHARGE	
CN3	*1-766-241-11	PIN. CONNECTOR (PC BOARD) 3P		SG8	1-519-422-11	GAP. SPARK	
CN4	*1-564-507-11	PLUG. CONNECTOR 4P					
CN5	*1-564-507-11	PLUG. CONNECTOR 4P					
CN6	*1-564-507-11	PLUG. CONNECTOR 4P					
CN7	*1-564-506-11	PLUG. CONNECTOR 3P					
CN8	*1-564-507-11	PLUG. CONNECTOR 4P					
D1	8-719-979-58	DIODE EGP10D					
D2	8-719-110-63	DIODE RD-4ESB3 (14F1E/14F1U/14F5E/14F5U/20F1E/20F1U)					
		< SOCKET >					
		IT A 1-251-116-12 SOCKET CRT					
		< COIL >					
L1	1-408-401-00	INDUCTOR 2.2µ H		C103	1-126-396-11	ELECT CHIP	47µ F 20% 1V
L2	1-408-401-00	INDUCTOR 2.2µ H		C104	1-126-396-11	ELECT CHIP	47µ F 20% 1V
L3	1-408-401-00	INDUCTOR 2.2µ H		C109	1-126-401-11	ELECT CHIP	1µ F 20% 5V
		< TRANSISTOR >		C114	1-163-031-11	CERAMIC CHIP	0.01µ F 5V
Q1	8-729-140-97	TRANSISTOR 2SB734-34		C115	1-163-031-11	CERAMIC CHIP	0.01µ F 5V
		< RESISTOR >		C116	1-126-396-11	ELECT CHIP	47µ F 20% 1V
R1	1-202-561-00	SOLID	330 20% 1/2W	C118	1-163-038-91	CERAMIC CHIP	0.1µ F 2V
R2	1-202-561-00	SOLID	330 20% 1/2W	C121	1-126-391-11	ELECT CHIP	47µ F 20% 6.3V
R3	1-202-561-00	SOLID	330 20% 1/2W	C122	1-104-555-11	FILM CHIP	0.022µ F 5% 1V
R4	1-202-820-11	SOLID	1.5K 20% 1/2W	C123	1-107-561-11	FILM CHIP	0.01µ F 5% 5V
R5	1-202-820-11	SOLID	1.5K 20% 1/2W	C124	1-163-031-11	CERAMIC CHIP	0.01µ F 5V
R6	1-202-820-11	SOLID	1.5K 20% 1/2W	C126	1-104-563-11	FILM CHIP	0.1µ F 5% 1V
R7	1-219-696-11	METAL OXIDE	30M 1W	C127	1-163-031-11	CERAMIC CHIP	0.01µ F 5V
R8	1-202-838-00	SOLID	100K 20% 1/2W	C128	1-163-031-11	CERAMIC CHIP	0.01µ F 5V
R9	1-202-719-00	SOLID	1M 10% 1/2W	C131	1-107-682-11	CERAMIC CHIP	1µ F 10% 1V
R10	1-202-537-00	SOLID	33 20% 1/2W	C132	1-104-559-11	FILM CHIP	0.047µ F 5% 1V
				C133	1-107-682-11	CERAMIC CHIP	1µ F 10% 1V
				C134	1-163-038-91	CERAMIC CHIP	0.1µ F 2V
				C135	1-163-031-11	CERAMIC CHIP	0.01µ F 5V
				C136	1-126-391-11	ELECT CHIP	47µ F 20% 6.3V
				C137	1-163-038-91	CERAMIC CHIP	0.1µ F 2V
				C138	1-163-038-91	CERAMIC CHIP	0.1µ F 2V
				C139	1-163-038-91	CERAMIC CHIP	0.1µ F 2V
				C140	1-163-031-11	CERAMIC CHIP	0.01µ F 5V
				C143	1-126-391-11	ELECT CHIP	47µ F 20% 6.3V
				C145	1-163-031-11	CERAMIC CHIP	0.01µ F 5V

D

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C149	1-163-059-91	CERAMIC CHIP	0.01μ F	IC102	8-759-100-96	IC μ PC4558G2	
C150	1-126-391-11	ELECT CHIP	47μ F	IC103	8-759-100-96	IC μ PC4558G2	
C151	1-163-009-11	CERAMIC CHIP	0.001μ F	IC105	8-752-065-79	IC CXA1470AM-T6	
C155	1-163-038-91	CERAMIC CHIP	0.1μ F	IC106	8-759-988-13	IC LM393PS	
C156	1-163-031-11	CERAMIC CHIP	0.01μ F	IC108	8-752-066-34	IC CXA1726M-T6	
C157	1-163-038-91	CERAMIC CHIP	0.1μ F	IC111	8-759-100-96	IC μ PC4558G2	
C158	1-163-031-11	CERAMIC CHIP	0.01μ F	IC112	8-759-158-86	IC CXA8021M-T6	
C159	1-163-031-11	CERAMIC CHIP	0.01μ F	IC113	8-759-988-13	IC LM393PS	
C160	1-163-009-11	CERAMIC CHIP	0.001μ F	IC114	8-759-100-96	IC μ PC4558G2	
C161	1-163-009-11	CERAMIC CHIP	0.001μ F	IC115	8-759-158-86	IC CXA8021M-T6	
C162	1-163-031-11	CERAMIC CHIP	0.01μ F	IC118	8-759-326-65	IC MP7670AS-TE2	
C163	1-163-031-11	CERAMIC CHIP	0.01μ F	IC119	8-759-981-48	IC TL082M	
C164	1-163-031-11	CERAMIC CHIP	0.01μ F	IC120	8-759-929-26	IC TL431CPS	
C167	1-163-059-91	CERAMIC CHIP	0.01μ F	IC203	8-759-100-96	IC μ PC4558G2	
C168	1-163-031-11	CERAMIC CHIP	0.01μ F	IC301	8-752-066-34	IC CXA1726M-T6	
C169	1-163-031-11	CERAMIC CHIP	0.01μ F			< TRANSISTOR >	
C175	1-163-031-11	CERAMIC CHIP	0.01μ F	Q101	8-729-216-22	TRANSISTOR 2SA1162-G	
C177	1-163-031-11	CERAMIC CHIP	0.01μ F	Q102	8-729-216-22	TRANSISTOR 2SA1162-G	
C178	1-163-227-11	CERAMIC CHIP	10pF	Q601	8-729-216-22	TRANSISTOR 2SA1162-G	
C179	1-104-559-11	FILM CHIP	0.047μ F	Q602	8-729-216-22	TRANSISTOR 2SA1162-G	
C180	1-163-059-91	CERAMIC CHIP	0.01μ F	Q603	8-729-216-22	TRANSISTOR 2SA1162-G	
C181	1-163-031-11	CERAMIC CHIP	0.01μ F	Q604	8-729-116-05	TRANSISTOR 2SK160-K5	
C201	1-104-555-11	FILM CHIP	0.022μ F			< RESISTOR >	
C301	1-163-227-11	CERAMIC CHIP	10pF	R101	1-216-025-91	METAL GLAZE	5%
C302	1-163-009-11	CERAMIC CHIP	0.001μ F	R102	1-216-097-91	METAL GLAZE	5%
C602	1-163-031-11	CERAMIC CHIP	0.01μ F	R103	1-216-025-91	METAL GLAZE	5%
C603	1-163-059-91	CERAMIC CHIP	0.01μ F	R104	1-216-025-91	METAL GLAZE	5%
C612	1-163-038-91	CERAMIC CHIP	0.1μ F	R105	1-216-025-91	METAL GLAZE	5%
C613	1-163-038-91	CERAMIC CHIP	0.1μ F	R106	1-216-025-91	METAL GLAZE	5%
C614	1-163-038-91	CERAMIC CHIP	0.1μ F	R107	1-216-073-00	METAL GLAZE	5%
C615	1-163-038-91	CERAMIC CHIP	0.1μ F	R108	1-216-097-91	METAL GLAZE	5%
C616	1-163-222-11	CERAMIC CHIP	5pF	R109	1-216-025-91	METAL GLAZE	5%
C622	1-163-275-11	CERAMIC CHIP	0.001μ F	R110	1-216-097-91	METAL GLAZE	5%
C623	1-126-391-11	ELECT CHIP	47μ F	R111	1-216-097-91	METAL GLAZE	5%
C624	1-163-031-11	CERAMIC CHIP	0.01μ F	R112	1-216-089-91	METAL GLAZE	5%
C625	1-163-031-11	CERAMIC CHIP	0.01μ F	R113	1-216-097-91	METAL GLAZE	5%
C721	1-163-031-11	CERAMIC CHIP	0.01μ F	R114	1-208-822-11	METAL CHIP	0.50%
C722	1-163-031-11	CERAMIC CHIP	0.01μ F	R115	1-216-671-11	METAL CHIP	0.50%
C724	1-163-038-91	CERAMIC CHIP	0.1μ F	R116	1-208-806-11	METAL CHIP	6.8K
C725	1-163-038-91	CERAMIC CHIP	0.1μ F	R117	1-208-806-11	METAL CHIP	10K
C801	1-163-009-11	CERAMIC CHIP	0.001μ F	R118	1-216-025-91	METAL GLAZE	100
C802	1-163-038-91	CERAMIC CHIP	0.1μ F	R119	1-216-025-91	METAL GLAZE	100
C803	1-163-009-11	CERAMIC CHIP	0.001μ F	R120	1-216-685-11	METAL CHIP	27K
C821	1-163-222-11	CERAMIC CHIP	5pF	R123	1-216-049-91	METAL GLAZE	1K
C822	1-162-638-11	CERAMIC CHIP	1μ F	R124	1-216-049-91	METAL GLAZE	1K
C861	1-163-031-11	CERAMIC CHIP	0.01μ F	R127	1-208-822-11	METAL CHIP	47K
C862	1-163-031-11	CERAMIC CHIP	0.01μ F	R129	1-216-699-11	METAL CHIP	100K
		< CONNECTOR >		R130	1-208-812-11	METAL CHIP	18K
CN101	1-774-415-11	CONNECTOR, BOARD TO BOARD 20P		R132	1-208-823-11	METAL CHIP	51K
CN102	1-774-415-11	CONNECTOR, BOARD TO BOARD 20P		R133	1-216-663-11	METAL CHIP	3.3K
		< IC >		R134	1-216-659-11	METAL CHIP	2.2K
IC101	8-759-981-48	IC TL082M		R136	1-208-812-11	METAL CHIP	18K

D E

REF NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R141	1-216-065-00	METAL GLAZE	4.7K	R637	1-216-073-00	METAL GLAZE	10K
R151	1-208-800-11	METAL CHIP	5.6K	R638	1-216-689-11	METAL CHIP	39K
R152	1-208-806-11	METAL CHIP	10K	R639	1-216-089-91	METAL GLAZE	4.7K
R153	1-208-822-11	METAL CHIP	4.7K	R801	1-208-814-11	METAL GLAZE	2.2K
R154	1-208-814-11	METAL CHIP	2.2K	R802	1-216-667-11	METAL CHIP	4.7K
R158	1-208-806-11	METAL CHIP	10K	R803	1-208-814-11	METAL CHIP	2.2K
R159	1-216-677-11	METAL CHIP	1.2K	R804	1-208-814-11	METAL CHIP	2.2K
R160	1-208-806-11	METAL CHIP	10K	R805	1-208-814-11	METAL CHIP	2.2K
R163	1-216-587-11	METAL CHIP	3.3K	R806	1-208-814-11	METAL CHIP	2.2K
R166	1-208-806-11	METAL CHIP	10K	R807	1-208-814-11	METAL CHIP	2.2K
R167	1-208-806-11	METAL CHIP	10K	R808	1-208-814-11	METAL CHIP	2.2K
R170	1-208-814-11	METAL CHIP	2.2K	R821	1-208-814-11	METAL CHIP	2.2K
R171	1-208-806-11	METAL CHIP	10K	R822	1-208-814-11	METAL CHIP	2.2K
R172	1-208-806-11	METAL CHIP	10K	R823	1-208-814-11	METAL CHIP	2.2K
R173	1-208-806-11	METAL CHIP	10K	R824	1-208-806-11	METAL CHIP	10K
R174	1-216-065-00	METAL GLAZE	4.7K	R825	1-216-665-11	METAL CHIP	3.9K
R175	1-208-814-11	METAL CHIP	2.2K	R826	1-216-089-91	METAL GLAZE	4.7K
R176	1-208-806-11	METAL CHIP	10K	R827	1-216-073-00	METAL GLAZE	10K
R177	1-208-814-11	METAL CHIP	2.2K	R828	1-216-025-91	METAL GLAZE	100
R196	1-216-025-91	METAL GLAZE	100	R829	1-208-814-11	METAL CHIP	2.2K
R197	1-208-814-11	METAL CHIP	2.2K	R830	1-208-814-11	METAL CHIP	2.2K
R198	1-208-814-11	METAL CHIP	2.2K	R831	1-208-806-11	METAL CHIP	10K
R201	1-208-799-11	METAL CHIP	5.1K	R832	1-216-667-11	METAL CHIP	4.7K
R202	1-208-814-11	METAL CHIP	2.2K	R833	1-216-699-11	METAL CHIP	100K
R205	1-216-025-91	METAL GLAZE	100	R834	1-208-822-11	METAL CHIP	4.7K
R206	1-216-025-91	METAL GLAZE	100	R835	1-208-822-11	METAL CHIP	4.7K
R207	1-216-025-91	METAL GLAZE	100	R861	1-208-806-11	METAL CHIP	10K
R208	1-216-025-91	METAL GLAZE	100	R862	1-208-806-11	METAL CHIP	10K
R209	1-216-025-91	METAL GLAZE	100	R863	1-208-806-11	METAL CHIP	10K
R210	1-216-079-00	METAL GLAZE	18K	R864	1-216-121-91	METAL GLAZE	1M
R211	1-216-025-91	METAL GLAZE	100	R865	1-216-065-00	METAL GLAZE	4.7K
R213	1-216-025-91	METAL GLAZE	100	R866	1-216-049-91	METAL GLAZE	1K
R501	1-216-121-91	METAL GLAZE	1M	R867	1-208-824-11	METAL CHIP	56K
R615	1-208-806-11	METAL CHIP	10K	R868	1-208-806-11	METAL CHIP	10K
R616	1-208-806-11	METAL CHIP	10K	R869	1-216-677-11	METAL CHIP	12K
R617	1-208-806-11	METAL CHIP	10K	R870	1-216-049-91	METAL GLAZE	1K
R618	1-208-806-11	METAL CHIP	10K				
R619	1-216-661-11	METAL CHIP	2.7K				
R620	1-208-806-11	METAL CHIP	10K				
R621	1-208-806-11	METAL CHIP	10K				
R622	1-216-663-11	METAL CHIP	3.3K				
R623	1-216-049-91	METAL GLAZE	1K				
R624	1-216-049-91	METAL GLAZE	1K				
R625	1-216-049-91	METAL GLAZE	1K				
R626	1-216-049-91	METAL GLAZE	1K				
R628	1-216-025-91	METAL GLAZE	100				
R629	1-208-806-11	METAL CHIP	10K				
R630	1-216-033-00	METAL GLAZE	2.2K				
R631	1-216-025-91	METAL GLAZE	100				
R632	1-216-025-91	METAL GLAZE	100				
R633	1-216-025-91	METAL GLAZE	100				
R634	1-216-025-91	METAL GLAZE	100				
R635	1-216-025-91	METAL GLAZE	100				
R636	1-216-089-91	METAL GLAZE	4.7K				

* A-1346-357-B COMPLETE PCB, E (include D mounted)
(14E1E/14E1U/14E5E/4E5U/
14F1E/14F1U/14F5E/14F5U)

* A-1346-356-A COMPLETE PCB, E (include D mounted)
(20E1E/20E1U/20F1E/0F1U)

* X-4033-108-1 HEATSINK (DEFLECTION) ASSY
* 3-648-057-00 NUT (ISO-4), u
* 4-050-794-01 INSULATOR
* 4-050-814-01 SHIELD, PCB
4-051-217-01 SHEET, RADIATION
* 4-053-101-01 SPACER, DY CONNECTOR
* 4-381-905-01 SPRING (D)
* 4-381-905-01 SPRING (D) (20E1E/20E1U/20F1E/20F1U)
4-382-854-01 SCREW (M3X8), P.SW (+)
4-382-854-01 SCREW (M3X8), P.SW (+)

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
	4-382-854-01	SCREW (M3X8), P. SW (+)		C307	1-107-909-11	ELECT	47µ F 20% 50V (20E1E/20E1U/20F1E/20F1U)
	4-382-854-01	SCREW (M3X8), P. SW (+)		C308	1-102-114-00	CERAMIC	470pF 10% 50V (20E1E/20E1U/20F1E/20F1U)
	4-382-854-01	SCREW (M3X8), P. SW (+)		C309	1-128-526-11	ELECT	100µ F 20% 16V (20E1E/20E1U/20F1E/20F1U)
	4-382-854-01	SCREW (M3X8), P. SW (+)		C310	1-102-114-00	CERAMIC	470pF 10% 50V (20E1E/20E1U/20F1E/20F1U)
	*4-403-012-01	SPRING, STOPPER		C311	1-128-526-11	ELECT	100µ F 20% 16V (20E1E/20E1U/20F1E/20F1U)
	7-322-065-19	RUBBER, SILICON RIV (KE490W)		C312	1-164-161-11	CERAMIC CHIP	0.0022µ F 10% 50V (20E1E/20E1U/20F1E/20F1U)
	7-682-566-04	SCREW +B 4X20		C401	1-136-165-00	FILM	0.1µ F 5% 50V (20E1E/20E1U/20F1E/20F1U)
	7-685-871-01	SCREW +B VTT 3X6 (S)		C402	1-137-370-11	FILM	0.01µ F 5% 50V (20E1E/20E1U/20F1E/20F1U)
		< CAPACITOR >		C403	1-164-004-11	CERAMIC CHIP	0.1µ F 10% 25 (20E1E/20E1U/20F1E/20F1U)
C25	1-162-115-00	CERAMIC	330pF 10% 2KV	C405	1-128-526-11	ELECT	100µ F 20% 25V (20E1E/20E1U/20F1E/20F1U)
C26	1-137-350-11	FILM	0.015µ F 5% 100V	C408	1-137-370-11	FILM	0.01µ F 5% 50V (20E1E/20E1U/20F1E/20F1U)
C27	1-163-614-11	CERAMIC CHIP	220pF 5% 50V	C409	1-136-165-00	FILM	0.1µ F 5% 50V (20E1E/20E1U/20F1E/20F1U)
C43	1-109-915-11	FILM	2.2µ F 3% 200V (20E1E/20E1U/20F1E/20F1U)	C410	1-128-526-11	ELECT	100µ F 20% 25V (20E1E/20E1U/20F1E/20F1U)
C43	1-104-494-11	FILM	3.9µ F 3% 200V (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	C503	1-163-031-11	CERAMIC CHIP	0.01µ F 50V
C44	1-104-496-11	FILM	3.3µ F 3% 200V (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	C505	1-126-401-11	ELECT CHIP	1µ F 20% 50V
C45	1-109-921-11	CERAMIC	0.0015µ F 10% 500V (20E1E/20E1U/20F1E/20F1U)	C506	1-164-346-11	CERAMIC CHIP	1µ F 16V
C45	1-102-002-00	CERAMIC	680p F 10% 500V (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	C507	1-126-398-11	ELECT CHIP	4.7µ F 20% 35V
C46	1-104-664-11	ELECT	47µ F 20% 25V	C530	1-106-367-00	MYLAR	0.01µ F 10% 100V
C65	1-110-641-51	ELECT	33µ F 20% 200V	C531	1-136-153-00	FILM	0.01µ F 5% 50V
C66	1-126-600-11	ELECT	100µ F 20% 160V	C601	1-136-157-00	FILM	0.022µ F 5% 50V
C001	1-136-165-00	FILM	0.1µ F 5% 50V	C602	1-128-526-11	ELECT	100µ F 20% 25V
C002	1-163-117-00	CERAMIC CHIP	100pF 5% 50V	C603	1-107-910-11	ELECT	100µ F 20% 35V
C003	1-102-030-00	CERAMIC	330pF 10% 500V	C604	1-128-526-11	ELECT	100µ F 20% 50V
C004	1-107-943-11	ELECT	10µ F 20% 160V	C605	1-106-228-00	MYLAR	0.22µ F 10% 100V
C008	1-161-753-00	CERAMIC	470pF 10% 3KV	C701	1-163-031-11	CERAMIC CHIP	0.01µ F 50V
C101	1-128-526-11	ELECT	100µ F 20% 25V	C702	1-126-396-11	ELECT CHIP	47µ F 20% 16V
C102	1-128-526-11	ELECT	100µ F 20% 25V	C703	1-137-502-11	FILM CHIP	0.1µ F 5% 25V
C103	1-101-004-00	CERAMIC	0.01µ F 50V	C705	1-126-394-11	ELECT CHIP	10µ F 20% 16V
C104	1-101-004-00	CERAMIC	0.01µ F 50V	C706	1-163-117-00	CERAMIC CHIP	100pF 5% 50V
C151	1-163-141-00	CERAMIC CHIP	0.001µ F 5% 50V	C707	1-126-401-11	ELECT CHIP	1µ F 20% 50V
C152	1-101-880-00	CERAMIC	47pF 5% 50V	C708	1-164-695-11	CERAMIC	0.0022µ F 5% 50V
C155	1-163-133-00	CERAMIC CHIP	470pF 5% 50V	C709	1-126-405-11	ELECT CHIP	10µ F 20% 50V
C156	1-102-074-00	CERAMIC	0.001µ F 10% 50V	C710	1-126-396-11	ELECT CHIP	47µ F 20% 16V
C159	1-163-031-11	CERAMIC CHIP	0.01µ F 50V	C711	1-163-038-91	CERAMIC CHIP	0.1µ F 25V
C160	1-136-165-00	FILM	0.1µ F 5% 50V	C801	1-136-165-00	FILM	0.1µ F 5% 50V
C301	1-163-141-00	CERAMIC CHIP	100pF 5% 50V (20E1E/20E1U/20F1E/20F1U)	C802	1-128-526-11	ELECT	100µ F 20% 16V
C302	1-163-129-00	CERAMIC CHIP	330pF 5% 50V (20E1E/20E1U/20F1E/20F1U)	C803	1-128-526-11	ELECT	100µ F 20% 16V
C303	1-104-664-11	ELECT	47µ F 20% 25V (20E1E/20E1U/20F1E/20F1U)	C804	1-136-165-00	FILM	0.1µ F 5% 50V
C304	1-107-909-11	ELECT	47µ F 20% 50V (20E1E/20E1U/20F1E/20F1U)	C805	1-137-370-11	FILM	0.01µ F 5% 50V
C305	1-107-909-11	ELECT	47µ F 20% 50V (20E1E/20E1U/20F1E/20F1U)	C806	1-137-370-11	FILM	0.01µ F 5% 50V
C306	1-107-909-11	ELECT	47µ F 20% 50V (20E1E/20E1U/20F1E/20F1U)	C807	1-164-004-11	CERAMIC CHIP	0.1µ F 10% 25V
				C1001	1-128-527-11	ELECT	330µ F 20% 2.5V

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
FLI002	1-239-183-11	< FILTER >		Q28	8-729-141-30	TRANSISTOR 2SC3623A-LK	
FLI006	1-236-164-11	FILTER, EMI		Q51	8-729-015-28	TRANSISTOR IRF19630GS	
FLI007	1-236-164-11	ENCAPSULATED COMPONENT		Q52	8-729-019-57	TRANSISTOR 2SA1208S-TP	
		ENCAPSULATED COMPONENT		Q54	8-729-027-38	TRANSISTOR DTA144EKA-T146	
				Q55	8-729-027-59	TRANSISTOR DTC144EKA-T146	
		< IC >		Q56	8-729-027-38	TRANSISTOR DTA144EKA-T146	
IC101	8-759-100-96	IC μ PC4538G2		Q57	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC301	8-749-924-04	IC STK390-120 (20E1E/20E1U/20F1E/20F1U)		Q58	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC401	8-759-822-38	IC LA6510 (20E1E/20E1U/20F1E/20F1U)		Q101	8-729-017-06	TRANSISTOR 2SC4793	
IC501	8-759-988-13	IC LM393PS		Q102	8-729-385-82	TRANSISTOR 2SB858-C	
IC601	8-759-280-35	IC LA7845		Q103	8-729-119-76	TRANSISTOR 2SA1175-HFE	
IC701	8-759-346-56	IC FA530IN-TE1		Q104	8-729-800-32	TRANSISTOR 2SC2362K-G	
IC801	8-759-822-38	IC LA6510		Q105	8-729-800-32	TRANSISTOR 2SC2362K-G	
IC1001	8-759-929-65	IC LM7912CT		Q151	8-729-309-36	TRANSISTOR 2SA893A	
IC1002	8-759-231-58	IC TA7812S		Q152	8-729-309-36	TRANSISTOR 2SA893A	
IC1003	8-759-144-82	IC μ PC2405HF		Q155	8-729-140-96	TRANSISTOR 2SD774-34	
IC1004	8-759-247-67	IC LM2990T-5.0		Q156	8-729-255-12	TRANSISTOR 2SC2551-O	
IC2001	8-759-925-80	IC SN74HC14ANS		Q157	8-729-309-36	TRANSISTOR 2SA893A-EV	
IC2002	8-759-008-48	IC MC74HC86F		Q158	8-729-017-06	TRANSISTOR 2SC4793	
IC2003	8-759-032-01	IC MC74HC00AF			4-393-406-01	SHEET (R), RADIATION (Q158)	
IC2007	8-759-191-50	IC TDA9102C		Q159	8-729-017-06	TRANSISTOR 2SC4793	
IC2011	8-759-988-13	IC LM393PS			4-393-406-01	SHEET (R), RADIATION (Q159)	
IC2012	8-759-008-45	IC MC74HC4538F		Q501	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC2015	8-759-100-96	IC μ PC4538G2		Q502	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC2016	8-759-008-45	IC MC74HC4538F		Q505	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC2017	8-759-008-45	IC MC74HC4538F		Q507	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC2019	8-759-032-23	IC MC74HC74AF		Q701	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC2701	8-759-926-37	IC SN74HC193ANS		Q702	8-729-216-22	TRANSISTOR 2SA1162-G	
IC2702	8-759-926-37	IC SN74HC193ANS		Q2001	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC2703	8-759-926-37	IC SN74HC193ANS		Q2002	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC2704	8-759-926-98	IC SN74HC4040ANS		Q2003	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC2705	8-759-013-92	IC MC74HC164F		Q5000	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC7001	8-759-346-47	IC MB89613R-236		Q7001	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC7002	8-759-032-26	IC MC74HC125AF		Q7002	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC7003	8-759-032-53	IC MC74HC244AF		Q7003	8-729-027-59	TRANSISTOR DTC144EKA-T146	
IC7004	8-759-156-54	IC X25040S1			< RESISTOR >		
IC7005	8-759-064-36	IC MB88346BPFV		R10	1-215-916-00	METAL OXIDE	680 5% 3W F
		< COIL >		R11	1-215-916-00	METAL OXIDE	680 5% 3W F
L41	1-411-667-11	COIL, HORIZONTAL LINEARITY (20E1E/20E1U/20F1E/20F1U)		R25	1-216-025-91	METAL GLAZE	100 5% 1/10W
L41	1-411-668-11	COIL, HORIZONTAL LINEARITY (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)		R26	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
L50	1-459-433-00	COIL (WITH CORE)		R27	1-216-025-91	METAL GLAZE	100 5% 1/10W
L55	1-411-515-11	COIL, CHOKE 300mH		R28	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
L101	1-459-148-00	COIL		R29	1-216-073-00	METAL GLAZE	10K 5% 1/10W
		< TRANSISTOR >		R30	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
Q1	8-729-119-80	TRANSISTOR 2SC2688-LK		R31	1-216-097-91	METAL GLAZE	100K 5% 1/10W
Q2	8-729-016-32	TRANSISTOR 2SC4927-01		R45	1-215-913-11	METAL OXIDE (20E1E/20E1U/20F1E/20F1U)	220 5% 3W F
Q5	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R45	1-215-911-11	METAL OXIDE	100 5% 3W F
Q26	8-729-216-22	TRANSISTOR 2SA1162-G		R51	1-216-393-00	METAL OXIDE	2.2 5% 2W F
Q27	8-729-141-30	TRANSISTOR 2SC3623A-LK		R62	1-215-455-00	METAL	27K 1% 1/4W
				R63	1-215-447-00	METAL	12K 1% 1/4W
				R67	1-249-425-11	CARBON	4.7K 5% 1/4W
				R68	1-247-883-00	CARBON	150K 5% 1/4W

E

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R69	1-247-863-91	CARBON	22K	R401	1-249-414-11	CARBON	560
R70	1-216-369-00	METAL OXIDE	1				(20E1E/20E1U/20F1E/20F1U)
R71	1-216-049-91	METAL GLAZE	1K	R402	1-249-393-11	CARBON	10
R72	1-216-049-91	METAL GLAZE	1K				(20E1E/20E1U/20F1E/20F1U)
R73	1-216-049-91	METAL GLAZE	1K	R403	1-249-377-11	CARBON	0.47
R001	1-216-017-91	METAL GLAZE	47				(20E1E/20E1U/20F1E/20F1U)
R002	1-216-073-00	METAL GLAZE	10K	R404	1-249-385-11	CARBON	2.2
R003	1-216-025-91	METAL GLAZE	100				(20E1E/20E1U/20F1E/20F1U)
R004	1-249-389-11	CARBON	4.7	R405	1-216-079-00	METAL GLAZE	18K
R005	1-249-423-11	CARBON	3.3K				(20E1E/20E1U/20F1E/20F1U)
R006	1-215-916-00	METAL OXIDE	680	R406	1-216-085-00	METAL GLAZE	33K
R007	1-216-385-11	METAL OXIDE	0.47				(20E1E/20E1U/20F1E/20F1U)
R008	1-249-401-11	CARBON	47	R407	1-216-101-00	METAL GLAZE	150K
R101	1-215-889-00	METAL OXIDE	330				(20E1E/20E1U/20F1E/20F1U)
R102	1-249-474-11	CARBON	1	R408	1-208-806-11	METAL CHIP	10K
R103	1-249-474-11	CARBON	1				(20E1E/20E1U/20F1E/20F1U)
R104	1-215-437-00	CARBON	4.7K	R409	1-216-049-91	METAL GLAZE	1K
R105	1-215-421-00	CARBON	1K				(20E1E/20E1U/20F1E/20F1U)
R106	1-215-429-00	METAL	2.2K	R411	1-216-671-11	METAL CHIP	6.8K
R107	1-216-671-11	METAL CHIP	6.8K				(20E1E/20E1U/20F1E/20F1U)
R108	1-216-049-91	METAL GLAZE	1K	R412	1-208-806-11	METAL CHIP	10K
R109	1-215-429-00	METAL	2.2K				(20E1E/20E1U/20F1E/20F1U)
R110	1-216-671-11	METAL CHIP	6.8K	R413	1-216-667-11	METAL CHIP	4.7K
R111	1-216-049-91	METAL GLAZE	1K				(20E1E/20E1U/20F1E/20F1U)
R112	1-249-381-11	CARBON	1	R416	1-216-661-11	METAL CHIP	2.7K
R113	1-249-381-11	CARBON	1				(20E1E/20E1U/20F1E/20F1U)
R151	1-208-806-11	METAL CHIP	10K	R417	1-249-385-11	CARBON	2.2
R152	1-216-295-91	CONDUCTOR, CHIP (2012)					(20E1E/20E1U/20F1E/20F1U)
R153	1-249-418-11	CARBON	1.2K	R418	1-249-377-11	CARBON	0.47
R154	1-249-421-11	CARBON	2.2K				(20E1E/20E1U/20F1E/20F1U)
R157	1-249-422-11	CARBON	2.7K	R419	1-249-407-11	CARBON	150
R158	1-215-431-00	METAL	2.7K				(20E1E/20E1U/20F1E/20F1U)
R160	1-249-414-11	CARBON	560	R420	1-249-392-11	CARBON	8.2
R161	1-215-453-00	METAL	22K				(20E1E/20E1U/20F1E/20F1U)
R162	1-216-365-00	METAL OXIDE	0.47	R421	1-249-393-11	CARBON	10
R163	1-216-365-00	METAL OXIDE	0.47				(20E1E/20E1U/20F1E/20F1U)
R165	1-216-385-11	METAL OXIDE	0.47	R422	1-249-393-11	CARBON	10
R301	1-216-651-11	METAL CHIP	1K				(20E1E/20E1U/20F1E/20F1U)
R302	1-208-806-11	METAL CHIP	10K	R505	1-216-073-00	METAL GLAZE	10K
R303	1-216-025-91	METAL GLAZE	100	R506	1-216-073-00	METAL GLAZE	10K
R304	1-208-806-11	METAL CHIP	4.7K	R507	1-216-073-00	METAL GLAZE	10K
R305	1-215-863-11	METAL OXIDE	100	R508	1-216-121-91	METAL GLAZE	1M
R306	1-215-863-11	METAL OXIDE	100	R512	1-216-089-91	METAL GLAZE	47K
R307	1-216-426-11	METAL OXIDE	82				(20E1E/20E1U/20F1E/20F1U)
R308	1-216-349-00	METAL OXIDE	1	R513	1-216-105-91	METAL GLAZE	220K
R309	1-216-065-00	METAL GLAZE	4.7K	R514	1-216-073-00	METAL GLAZE	10K
			(20E1E/20E1U/20F1E/20F1U)	R515	1-216-073-00	METAL GLAZE	10K
			(20E1E/20E1U/20F1E/20F1U)	R516	1-216-073-00	METAL GLAZE	10K
			(20E1E/20E1U/20F1E/20F1U)	R518	1-216-073-00	METAL GLAZE	10K
			(20E1E/20E1U/20F1E/20F1U)	R519	1-216-073-00	METAL GLAZE	10K
			(20E1E/20E1U/20F1E/20F1U)	R520	1-216-049-91	METAL GLAZE	1K
			(20E1E/20E1U/20F1E/20F1U)	R521	1-216-097-91	METAL GLAZE	100K
			(20E1E/20E1U/20F1E/20F1U)	R530	1-249-417-11	CARBON	1K
			(20E1E/20E1U/20F1E/20F1U)	R532	1-247-883-00	CARBON	150K
			(20E1E/20E1U/20F1E/20F1U)	R533	1-216-105-91	METAL GLAZE	220K
			(20E1E/20E1U/20F1E/20F1U)	R551	1-216-699-11	METAL CHIP	100K
			(20E1E/20E1U/20F1E/20F1U)				(20E1E/20E1U/20F1E/20F1U)

E

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R552	1-208-806-11	METAL CHIP	10K 0.50% 1/10W	R807	1-249-401-11	CARBON	47 5% 1/4W F (20E1E/20E1U/20F1E/20F1U)
R553	1-216-673-11	METAL CHIP	8.2K 0.50% 1/10W	R807	1-249-392-11	CARBON	8.2 5% 1/4W F
R601	1-216-676-11	METAL CHIP	11K 0.50% 1/10W (20E1E/20E1U/20F1E/20F1U)	R808	1-249-393-11	CARBON	10 5% 1/4W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)
R601	1-216-674-11	METAL CHIP	9.1K 0.50% 1/10W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R809	1-249-377-11	CARBON	0.47 5% 1/4W F
R602	1-215-431-00	METAL	2.7K 1% 1/4W	R810	1-249-425-11	CARBON	4.7K 5% 1/4W F (20E1E/20E1U/20F1E/20F1U)
R603	1-249-411-11	CARBON	330 5% 1/4W F (20E1E/20E1U/20F1E/20F1U)	R810	1-249-418-11	CARBON	1.2K 5% 1/4W F (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)
R603	1-216-432-00	METAL OXIDE	820 5% 1W F (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R811	1-249-392-11	CARBON	8.2 5% 1/4W F (20E1E/20E1U/20F1E/20F1U)
R605	1-249-377-11	CARBON	0.47 5% 1/4W F	R811	1-249-385-11	CARBON	2.2 5% 1/4W F
R606	1-214-799-11	METAL OXIDE	2 5% 1W F (20E1E/20E1U/20F1E/20F1U)	R812	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W (20E1E/20E1U/20F1E/20F1U)
R606	1-214-807-55	METAL OXIDE	4.3 1% 1/2W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R812	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)
R608	1-249-383-11	CARBON	1.5 5% 1/4W F	R813	1-249-385-11	CARBON	2.2 5% 1/4W
R610	1-216-659-11	METAL CHIP	2.2K 0.50% 1/10W	R814	1-249-393-11	CARBON	10 5% 1/4W
R611	1-249-377-11	CARBON	0.47 5% 1/4W F	R815	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R612	1-249-377-11	CARBON	0.47 5% 1/4W F	R816	1-249-385-11	CARBON	2.2 5% 1/4W
R613	1-214-799-11	METAL	2 1% 1/2W (20E1E/20E1U/20F1E/20F1U)	R817	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R613	1-214-807-55	METAL	4.3 1% 1/2W F (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R818	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W (20E1E/20E1U/20F1E/20F1U)
R700	1-216-041-00	METAL GLAZE	470 5% 1/10W	R818	1-216-047-91	METAL GLAZE	820 5% 1/10W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)
R701	1-208-806-11	METAL CHIP	22K 0.50% 1/10W	R819	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R702	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W (20E1E/20E1U/20F1E/20F1U)	R2001	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R702	1-216-671-11	METAL CHIP	6.8K 0.50% 1/10W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R2010	1-216-695-11	METAL CHIP	68K 0.50% 1/10W
R703	1-208-800-11	METAL CHIP	5.6K 0.50% 1/10W	R2011	1-208-801-11	METAL CHIP	6.2K 0.50% 1/10W
R704	1-216-093-11	METAL GLAZE	68K 5% 1/10W	R2012	1-208-822-11	METAL CHIP	47K 0.50% 1/10W
R705	1-216-663-11	METAL CHIP	3.3K 0.50% 1/10W	R2013	1-216-641-11	METAL CHIP	390 0.50% 1/10W
R706	1-216-665-11	METAL CHIP	3.9K 0.50% 1/10W	R2014	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R707	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R2015	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R708	1-216-049-91	METAL GLAZE	1K 5% 1/10W	R2016	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R709	1-216-685-11	METAL CHIP	27K 0.5% 1/10W	R2017	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R710	1-216-083-00	METAL GLAZE	27K 5% 1/10W	R2018	1-216-689-11	METAL CHIP	39K 0.50% 1/10W
R711	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W	R2019	1-216-697-91	METAL CHIP	82K 0.50% 1/10W
R712	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R2020	1-216-045-91	METAL GLAZE	1K 5% 1/10W
R713	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R2021	1-208-806-11	METAL CHIP	10K 0.50% 1/10W
R802	1-216-663-11	METAL CHIP	3.3K 0.50% 1/10W (20E1E/20E1U/20F1E/20F1U)	R2022	1-208-806-11	METAL CHIP	10K 0.50% 1/10W
R802	1-216-657-11	METAL CHIP	1.8K 0.50% 1/10W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R2023	1-208-806-11	METAL CHIP	10K 0.50% 1/10W
R803	1-208-806-11	METAL CHIP	10K 0.50% 1/10W	R2024	1-208-806-11	METAL CHIP	10K 0.50% 1/10W
R804	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W (20E1E/20E1U/20F1E/20F1U)	R2025	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R804	1-216-659-11	METAL CHIP	2.2K 0.50% 1/10W (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R2026	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R805	1-249-377-11	CARBON	0.47 5% 1/4W F	R2027	1-216-699-91	METAL CHIP	100K 0.50% 1/10W
R806	1-249-433-11	CARBON	22K 5% 1/4W F (20E1E/20E1U/20F1E/20F1U)	R2028	1-218-766-11	METAL CHIP	390K 0.50% 1/10W
R806	1-249-424-11	CARBON	3.9K 5% 1/4W F (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)	R2029	1-216-097-91	METAL GLAZE	100K 5% 1/10W
				R2030	1-216-041-00	METAL GLAZE	470 5% 1/10W
				R2032	1-216-695-11	METAL CHIP	68K 0.50% 1/10W
				R2033	1-218-754-11	METAL CHIP	120K 0.50% 1/10W
				R2035	1-216-687-11	METAL CHIP	33K 0.50% 1/10W
				R2036	1-216-025-91	METAL GLAZE	100 5% 1/10W
				R2037	1-216-073-00	METAL GLAZE	10K 5% 1/10W

E

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R2038	1-208-806-11	METAL CHIP	10K	R6577	1-216-025-91	METAL GLAZE	5%
R2039	1-208-824-11	METAL CHIP	56K	R6578	1-216-025-91	METAL GLAZE	5%
R2040	1-216-049-91	METAL GLAZE	1K	R6579	1-216-025-91	METAL GLAZE	5%
R2041	1-216-049-91	METAL GLAZE	1K	R6580	1-216-025-91	METAL GLAZE	5%
R2043	1-216-049-91	METAL GLAZE	1K	R6581	1-216-025-91	METAL GLAZE	5%
R2044	1-208-806-11	METAL CHIP	10K	R7001	1-216-097-91	METAL GLAZE	5%
R2045	1-216-057-00	METAL GLAZE	2.2K	R7002	1-216-097-91	METAL GLAZE	5%
R2046	1-216-684-91	METAL CHIP	24K	R7003	1-216-097-91	METAL GLAZE	5%
R2047	1-208-822-11	METAL CHIP	47K	R7004	1-216-097-91	METAL GLAZE	5%
R2048	1-216-049-91	METAL GLAZE	1K	R7005	1-216-025-91	METAL GLAZE	5%
R2049	1-216-049-91	METAL GLAZE	1K	R7006	1-216-025-91	METAL GLAZE	5%
R2050	1-218-754-11	METAL CHIP	120K	R7007	1-216-025-91	METAL GLAZE	5%
R2052	1-216-677-11	METAL CHIP	12K	R7008	1-216-025-91	METAL GLAZE	5%
R2055	1-216-678-11	METAL CHIP	13K	R7009	1-216-097-91	METAL GLAZE	5%
R2062	1-208-806-11	METAL CHIP	10K	R7010	1-216-097-91	METAL GLAZE	5%
R2063	1-216-682-11	METAL CHIP	20K	R7011	1-216-097-91	METAL GLAZE	5%
R2064	1-216-690-11	METAL CHIP	43K	R7012	1-216-097-91	METAL GLAZE	5%
R2065	1-216-690-11	METAL CHIP	43K	R7013	1-216-073-00	METAL GLAZE	5%
R2066	1-216-049-91	METAL GLAZE	1K	R7014	1-216-097-91	METAL GLAZE	5%
R2067	1-216-073-00	METAL GLAZE	10K	R7015	1-216-097-91	METAL GLAZE	5%
R2070	1-216-123-11	METAL GLAZE	1.2M	R7016	1-216-097-91	METAL GLAZE	5%
R2963	1-216-657-11	METAL CHIP	1.8K	R7017	1-216-097-91	METAL GLAZE	5%
R5002	1-249-397-11	CARBON	22	R7018	1-216-097-91	METAL GLAZE	5%
R5003	1-216-065-00	METAL GLAZE	4.7K	R7019	1-216-097-91	METAL GLAZE	5%
R5006	1-247-863-91	CARBON	22K	R7020	1-216-097-91	METAL GLAZE	5%
R6001	1-208-774-11	METAL GLAZE	470	R7021	1-216-097-91	METAL GLAZE	5%
R6003	1-216-041-00	METAL GLAZE	470	R7022	1-216-097-91	METAL GLAZE	5%
R6004	1-216-041-00	METAL GLAZE	470	R7023	1-216-097-91	METAL GLAZE	5%
R6006	1-216-041-00	METAL GLAZE	470	R7024	1-216-097-91	METAL GLAZE	5%
R6011	1-216-097-91	METAL GLAZE	100K	R7025	1-216-097-91	METAL GLAZE	5%
R6531	1-216-041-00	METAL GLAZE	470	R7026	1-216-097-91	METAL GLAZE	5%
R6532	1-216-041-00	METAL GLAZE	470	R7030	1-216-073-00	METAL GLAZE	5%
R6533	1-216-041-00	METAL GLAZE	470	R7031	1-216-073-00	METAL GLAZE	5%
R6534	1-216-041-00	METAL GLAZE	470	R7032	1-216-041-00	METAL GLAZE	5%
R6535	1-216-025-91	METAL GLAZE	100	R7037	1-216-065-00	METAL GLAZE	5%
R6536	1-216-025-91	METAL GLAZE	100				
R6537	1-216-061-00	METAL GLAZE	3.3K				
R6538	1-216-025-91	METAL GLAZE	100	T5000	1-426-668-11	TRANSFORMER, FERRITE (HDT)	
R6539	1-216-025-91	METAL GLAZE	100	T5001	1-429-350-11	TRANSFORMER, FERRITE (HMT)	
R6560	1-216-025-91	METAL GLAZE	100	T5002	1-429-349-11	TRANSFORMER, FERRITE (HOT)	
R6561	1-216-025-91	METAL GLAZE	100				
R6562	1-216-025-91	METAL GLAZE	100				
R6564	1-216-025-91	METAL GLAZE	100	TP7	1-537-864-11	PIN, POST	
R6565	1-216-025-91	METAL GLAZE	100	TP8	1-537-864-11	PIN, POST	
R6566	1-216-025-91	METAL GLAZE	100	TP2011	1-537-864-11	PIN, POST	
R6567	1-216-025-91	METAL GLAZE	100	TP2012	1-537-864-11	PIN, POST (20E1E20E1U/20F1E20F1U)	
R6568	1-216-025-91	METAL GLAZE	100	TP2013	1-537-864-11	PIN, POST	
R6569	1-216-025-91	METAL GLAZE	100	TP2014	1-537-864-11	PIN, POST	
R6571	1-216-025-91	METAL GLAZE	100	TP2015	1-537-864-11	PIN, POST (20E1E20E1U/20F1E20F1U)	
R6572	1-216-025-91	METAL GLAZE	100	TP2018	1-537-864-11	PIN, POST	
R6574	1-216-025-91	METAL GLAZE	100	TP2024	1-537-864-11	PIN, POST	
R6575	1-216-025-91	METAL GLAZE	100				
R6576	1-216-025-91	METAL GLAZE	100	X7001	1-578-689-21	VIBRATOR	

< TRANSFORMER >

< TEST PIN >

< CRYSTAL >

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
	* A-1372-133-A	MOUNTED PCB, HA (14E5E/14E5U/14F5E/14F5U/ BKM-10R) *****		D223	8-719-987-45	DIODE CL-155Y/PG-CD (CONTRAST)	
		< CAPACITOR >		D224	8-719-987-45	DIODE CL-155Y/PG-CD (BRIGHT)	
C201	1-126-206-11	ELECT	100µ F 20%	D225	8-719-987-45	DIODE CL-155Y/PG-CD (CHROMIA)	
C202	1-126-206-11	ELECT	100µ F 20%	D226	8-719-987-45	DIODE CL-155Y/PG-CD (PHASE)	
C203	1-126-206-11	ELECT	100µ F 20%		< IC >		
C204	1-126-206-11	ELECT	100µ F 20%	IC201	8-752-842-86	IC CXP2003M	
C205	1-126-206-11	ELECT	100µ F 20%	IC202	8-752-842-86	IC CXP2003M	
C206	1-126-206-11	ELECT	100µ F 20%		< TRANSISTOR >		
C207	1-126-206-11	ELECT	100µ F 20%	Q201	8-729-901-01	TRANSISTOR DTC144EK	
C211	1-163-031-11	CERAMIC CHIP	0.01µ F	Q202	8-729-921-12	TRANSISTOR 2SD1834	
C212	1-163-031-11	CERAMIC CHIP	0.01µ F	Q203	8-729-921-12	TRANSISTOR 2SD1834	
C213	1-163-031-11	CERAMIC CHIP	0.01µ F		< RESISTOR >		
C214	1-163-031-11	CERAMIC CHIP	0.01µ F	R201	1-216-043-91	METAL GLAZE 560	5% 11OW
C215	1-163-031-11	CERAMIC CHIP	0.01µ F	R202	1-216-043-91	METAL GLAZE 560	5% 11OW
C216	1-163-031-11	CERAMIC CHIP	0.01µ F	R203	1-216-043-91	METAL GLAZE 560	5% 11OW
C217	1-163-031-11	CERAMIC CHIP	0.01µ F	R204	1-216-043-91	METAL GLAZE 560	5% 11OW
C2301	1-163-031-11	CERAMIC CHIP	0.01µ F	R205	1-216-097-91	METAL GLAZE 100K	5% 11OW
C302	1-163-031-11	CERAMIC CHIP	0.01µ F	R206	1-216-049-91	METAL GLAZE 1K	5% 11OW
C303	1-163-031-11	CERAMIC CHIP	0.01µ F	R207	1-216-049-91	METAL GLAZE 1K	5% 11OW
C304	1-163-031-11	CERAMIC CHIP	0.01µ F	R208	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
C305	1-163-031-11	CERAMIC CHIP	0.01µ F	R209	1-216-049-91	METAL GLAZE 1K	5% 11OW
C306	1-163-031-11	CERAMIC CHIP	0.01µ F	R210	1-216-097-91	METAL GLAZE 100K	5% 11OW
C307	1-163-031-11	CERAMIC CHIP	0.01µ F	R211	1-216-085-00	METAL GLAZE 33K	5% 11OW
C308	1-163-031-11	CERAMIC CHIP	0.01µ F	R212	1-216-095-00	METAL GLAZE 82K	5% 11OW
		< CONNECTOR >		R213	1-216-085-00	METAL GLAZE 33K	5% 11OW
CN201	*1-564-005-11	PIN, CONNECTOR 6P		R214	1-216-095-00	METAL GLAZE 82K	5% 11OW
CN202	*1-564-009-11	PIN, CONNECTOR 10P		R215	1-216-089-91	METAL GLAZE 47K	5% 11OW
		< DIODE >		R216	1-216-089-91	METAL GLAZE 47K	5% 11OW
D201	8-719-404-46	DIODE MA110		R217	1-216-089-91	METAL GLAZE 47K	5% 11OW
D202	8-719-404-46	DIODE MA110		R301	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D203	8-719-404-46	DIODE MA110		R302	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D204	8-719-404-46	DIODE MA110		R303	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D205	8-719-404-46	DIODE MA110		R304	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D206	8-719-404-46	DIODE MA110		R305	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D207	8-719-404-46	DIODE MA110		R306	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D208	8-719-404-46	DIODE MA110		R307	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D209	8-719-404-46	DIODE MA110		R308	1-216-065-00	METAL GLAZE 4.7K	5% 11OW
D210	8-719-404-46	DIODE MA110			< SWITCH >		
D211	8-719-404-46	DIODE MA110		S201	1-692-037-31	SWITCH, KEY BOARD (POWER)	
D212	8-719-404-46	DIODE MA110		S202	1-692-037-31	SWITCH, KEY BOARD (DEGAUSS)	
D213	8-719-404-46	DIODE MA110		S203	1-692-037-31	SWITCH, KEY BOARD (1)	
D214	8-719-404-46	DIODE MA110		S204	1-692-037-31	SWITCH, KEY BOARD (2)	
D215	8-719-404-46	DIODE MA110		S205	1-692-037-31	SWITCH, KEY BOARD (3)	
D216	8-719-404-46	DIODE MA110		S206	1-692-037-31	SWITCH, KEY BOARD (Del)	
D217	8-719-404-46	DIODE MA110		S207	1-692-037-31	SWITCH, KEY BOARD (4)	
D218	8-719-404-46	DIODE MA110		S208	1-692-037-31	SWITCH, KEY BOARD (5)	
D219	8-719-404-46	DIODE MA110		S209	1-692-037-31	SWITCH, KEY BOARD (6)	
D220	8-719-404-46	DIODE MA110		S210	1-692-037-31	SWITCH, KEY BOARD (0)	
D221	8-719-404-46	DIODE MA110		S211	1-692-037-31	SWITCH, KEY BOARD (7)	
D222	8-719-404-46	DIODE MA110		S212	1-692-037-31	SWITCH, KEY BOARD (8)	
				S213	1-692-037-31	SWITCH, KEY BOARD (9)	

HA HB HC

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
S214	1-692-037-31	SWITCH, KEY BOARD (EMT)		Q101	8-729-921-12	< TRANSISTOR >	
S215	1-692-037-31	SWITCH, KEY BOARD (MANUAL CONTRAST)		Q102	8-729-921-12	TRANSISTOR 2SD1834	
S216	1-692-037-31	SWITCH, KEY BOARD (MANUAL BRIGHT)		Q103	8-729-901-01	TRANSISTOR 2SD1834	
S217	1-692-037-31	SWITCH, KEY BOARD (MANUAL CHROMA)				TRANSISTOR DTC14EK	
S218	1-692-037-31	SWITCH, KEY BOARD (MANUAL PHASE)				< RESISTOR >	
S219	1-692-037-31	SWITCH, KEY BOARD (MENU)		R101	1-216-043-91	METAL GLAZE	5% 1/10W
S220	1-692-037-31	SWITCH, KEY BOARD (ENTER)		R102	1-216-043-91	METAL GLAZE	5% 1/10W
S221	1-692-037-31	SWITCH, KEY BOARD (UP)		R103	1-216-043-91	METAL GLAZE	5% 1/10W
S222	1-692-037-31	SWITCH, KEY BOARD (DOWN)		R104	1-216-043-91	METAL GLAZE	5% 1/10W
S231	1-473-469-11	ENCODER, ROTARY (CONTRAST)		R105	1-216-043-91	METAL GLAZE	5% 1/10W
S232	1-473-469-11	ENCODER, ROTARY (BRIGHT)		R106	1-216-043-91	METAL GLAZE	5% 1/10W
S233	1-473-469-11	ENCODER, ROTARY (CHROMA)		R107	1-216-043-91	METAL GLAZE	5% 1/10W
S234	1-473-469-11	ENCODER, ROTARY (PHASE)		R108	1-216-043-91	METAL GLAZE	5% 1/10W

* A-1372-134-A MOUNTED PCB, HB (14ESE/14ESU/14F5E/14F5U/							
BKM-10R)							

< CAPACITOR >							
C101	1-126-391-11	ELECT CHIP	47µ F 20%	R110	1-216-043-91	METAL GLAZE	5% 1/10W
C102	1-126-391-11	ELECT CHIP	47µ F 20%	R112	1-216-097-91	METAL GLAZE	100K 1/10W
C111	1-163-031-11	CERAMIC CHIP	0.01µ F 50V	R113	1-216-049-91	METAL GLAZE	1K 5% 1/10W
C112	1-163-031-11	CERAMIC CHIP	0.01µ F 50V	R114	1-216-049-91	METAL GLAZE	1K 5% 1/10W
C113	1-163-031-11	CERAMIC CHIP	0.01µ F 50V	R115	1-216-049-91	METAL GLAZE	1K 5% 1/10W
< CONNECTOR >							
CN101	1-506-471-11	PIN, CONNECTOR 6P		R116	1-216-097-91	METAL GLAZE	100K 5% 1/10W
< DIODE >							
D101	8-719-404-46	DIODE MA110		R117	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
D102	8-719-404-46	DIODE MA110		R121	1-216-085-00	METAL GLAZE	33K 5% 1/10W
D103	8-719-404-46	DIODE MA110		R122	1-216-095-00	METAL GLAZE	82K 5% 1/10W
D104	8-719-404-46	DIODE MA110		R123	1-216-085-00	METAL GLAZE	33K 5% 1/10W
D105	8-719-404-46	DIODE MA110		R124	1-216-095-00	METAL GLAZE	82K 5% 1/10W
D106	8-719-404-46	DIODE MA110		R125	1-216-089-91	METAL GLAZE	47K 5% 1/10W
D107	8-719-404-46	DIODE MA110		R126	1-216-089-91	METAL GLAZE	47K 5% 1/10W
D108	8-719-404-46	DIODE MA110		R127	1-216-089-91	METAL GLAZE	47K 5% 1/10W
D109	8-719-404-46	DIODE MA110		< SWITCH >			
D110	8-719-404-46	DIODE MA110		S101	1-692-037-31	SWITCH, KEY BOARD (SHIFT)	
D121	8-719-987-45	DIODE CL-155Y/PG-CD		S102	1-692-037-31	SWITCH, KEY BOARD () (16:9)	
D122	8-719-987-45	DIODE CL-155Y/PG-CD		S103	1-692-037-31	SWITCH, KEY BOARD () (SYNC)	
D123	8-719-987-45	DIODE CL-155Y/PG-CD		S104	1-692-037-31	SWITCH, KEY BOARD () (BLUE ONLY)	
D124	8-719-987-45	DIODE CL-155Y/PG-CD		S105	1-692-037-31	SWITCH, KEY BOARD (COMB(R))	
D125	8-719-987-45	DIODE CL-155Y/PG-CD		S106	1-692-037-31	SWITCH, KEY BOARD (APT(G))	
D126	8-719-987-45	DIODE CL-155Y/PG-CD		S107	1-692-037-31	SWITCH, KEY BOARD (MONO(B))	
D127	8-719-987-45	DIODE CL-155Y/PG-CD		S108	1-692-037-31	SWITCH, KEY BOARD (F1(F3))	
D128	8-719-987-45	DIODE CL-155Y/PG-CD		S109	1-692-037-31	SWITCH, KEY BOARD (F2(F4))	
D129	8-719-987-45	DIODE CL-155Y/PG-CD		S110	1-692-037-31	SWITCH, KEY BOARD (REMOTE(SAFE-A))	
D130	8-719-987-45	DIODE CL-155Y/PG-CD		*****			
* A-1375-149-A COMPLETE PCB, HC (14ESE/14ESU/14F5E/14F5U							
/8KM-10R)							

< IC >							
IC101	8-752-842-86	IC CXP2003M		C1	1-163-227-11	CERAMIC CHIP	10pF 50V
IC102	8-752-842-86	IC CXP2003M		C2	1-163-227-11	CERAMIC CHIP	10pF 50V

INSULATOR							
SCREW +PS 2X8							
W 2, SMALL							
< CAPACITOR >							
C1	1-163-227-11	CERAMIC CHIP	10pF	C3	1-163-031-11	CERAMIC CHIP	0.01µ F 50V
C2	1-163-227-11	CERAMIC CHIP	10pF	C4	1-163-031-11	CERAMIC CHIP	0.01µ F 50V
C3	1-163-031-11	CERAMIC CHIP	0.01µ F	C7	1-163-031-11	CERAMIC CHIP	0.01µ F 50V
C4	1-163-031-11	CERAMIC CHIP	0.01µ F	*****			
C7	1-163-031-11	CERAMIC CHIP	0.01µ F	* A-1375-149-A COMPLETE PCB, HC (14ESE/14ESU/14F5E/14F5U			
/8KM-10R)							

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
C8	1-163-031-11	CERAMIC CHIP	0.01μF	50V			
C50	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC1	< IC >	
C51	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC2	IC HD6473258P10-EG1.0	
C52	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC3	IC PST529CMT	
C53	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC4	IC TC74HC138AF (EL)	
C54	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC5	IC TC74HC245AF (EL)	
C55	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC6	IC TC74HC541AF (EL)	
C56	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC7	IC TC74HC574AF (EL)	
C57	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC8	IC TC74HC245AF (EL)	
C58	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC9	IC TC74HC14AF (EL)	
C59	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC10	IC TC74HC14AF (EL)	
C60	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC11	IC TC74HC574AF (EL)	
C61	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC12	IC TC74HC244AF (EL)	
C62	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC13	IC MC34051M	
C63	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC14	IC SN74HC02ANS	
C64	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC16	IC MAX877CSA	
C65	1-163-031-11	CERAMIC CHIP	0.01μF	50V	IC21	IC MC74HC125AF	
C66	1-163-031-11	CERAMIC CHIP	0.01μF	50V		< IC SOCKET >	
C67	1-163-031-11	CERAMIC CHIP	0.01μF	50V	ICS1	SOCKET, IC	
C68	1-163-031-11	CERAMIC CHIP	0.01μF	50V		< CHIP CONDUCTOR >	
C69	1-163-031-11	CERAMIC CHIP	0.01μF	50V	JR1	CONDUCTOR, CHIP (3216)	
C81	1-126-206-11	ELECT	100μF	6.3V		< COIL >	
C82	1-126-206-11	ELECT	100μF	6.3V	L1	INDUCTOR 150μH	
C83	1-126-206-11	ELECT	100μF	6.3V	L2	INDUCTOR 100μH	
C84	1-126-206-11	ELECT	100μF	6.3V	L3	INDUCTOR 33μH	
C85	1-126-206-11	ELECT	100μF	6.3V		< TRANSISTOR >	
C86	1-126-206-11	ELECT	100μF	6.3V	Q1	TRANSISTOR DTC144EK	
C87	1-126-206-11	ELECT	100μF	6.3V	Q2	TRANSISTOR DTC144EK	
C88	1-126-206-11	ELECT	100μF	6.3V	Q3	TRANSISTOR 2SA1221-K	
C89	1-126-206-11	ELECT	100μF	6.3V	Q4	TRANSISTOR 2SA1221-K	
C90	1-126-206-11	ELECT	100μF	6.3V	Q5	TRANSISTOR DTC144EK	
C91	1-126-396-11	ELECT CHIP	47μF	16V	Q6	TRANSISTOR DTC144EK	
C92	1-126-396-11	ELECT CHIP	47μF	16V		< RESISTOR >	
C93	1-126-396-11	ELECT CHIP	47μF	16V	R1	METAL GLAZE 10K	5% /1 OW
CN1	1-774-534-11	CONNECTOR, IC CARD			R2	CONDUCTOR, CHIP (2012)	5% /1 OW
CN2	1-506-474-11	PIN, CONNECTOR 9P			R3	METAL GLAZE 10K	5% /1 OW
CN3	*1-564-009-11	PIN, CONNECTOR 10P			R4	METAL GLAZE 10K	5% /1 OW
CN4	*1-564-005-11	PIN, CONNECTOR 6P			R5	METAL GLAZE 10K	5% /1 OW
CN5	1-506-471-11	PIN, CONNECTOR 6P			R6	METAL GLAZE 10K	5% /1 OW
D1	8-719-037-00	< DIODE >			R7	METAL GLAZE 10K	5% /1 OW
D2	8-719-037-00	DIODE RD6.2SB2-T1			R8	METAL GLAZE 4.7K	5% /1 OW
D3	8-719-037-00	DIODE RD6.2SB2-T1			R9	METAL GLAZE 15K	5% /1 OW
D4	8-719-037-00	DIODE RD6.2SB2-T1			R10	METAL GLAZE 2.2K	5% /1 OW
D5	8-719-037-00	DIODE RD6.2SB2-T1			R11	METAL GLAZE 6.8K	5% /1 OW
D6	8-719-037-00	DIODE RD6.2SB2-T1			R12	METAL GLAZE 10K	5% /1 OW
D7	8-719-037-00	DIODE RD6.2SB2-T1			R13	METAL GLAZE 10K	5% /1 OW
D8	8-719-037-00	DIODE RD6.2SB2-T1			R14	METAL GLAZE 10K	5% /1 OW
D10	8-719-210-39	DIODE EC100S-04			R15	METAL GLAZE 10K	5% /1 OW
					R16	METAL GLAZE 10K	5% /1 OW

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

The components identified by shading and marked Δ are critical for safety. Replace only with the part number specified.

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
Δ	1-411-657-11	COIL, LANDING CORRECTION (20E1E/20E1U/20F1E/20F1U)			*4-051-300-01	INDIVIDUAL CARTON (BKM-10R)	
Δ	1-411-658-11	COIL, LANDING CORRECTION (14E1E/14E1U/4E5E/14E5U/14F1E/14F1U/14F5E/14F5U)			*4-051-321-03	INDIVIDUAL CARTON (20F1U)	
					*4-051-322-02	TRAY (20E1E/20E1U/20F1E/20F1U)	
Δ	1-411-659-11	COIL, DEMAGNETIC (20E1E/20E1U/20F1E/20F1U)			4-051-484-01	LABEL, TALLY (20E1E/20E1U/20F1E/20F1U)	
Δ	1-411-660-11	COIL, DEMAGNETIC (14E1E/14E1U/4E5E/14E5U/4F1E/14F1U/4F5E/14F5U)			*4-051-574-01	CUSHION (UPPER) (ASSY) (14E1E/14E1U/14F1E/14F1U)	
	1-900-214-33	LEADASSY, FOCUS (20E1E/20E1U/20F1E/20F1U)			*4-051-575-01	CUSHION (LOWER) (ASSY) (14E1E/14E1U/14F1E/14F1U)	
	1-900-214-62	LEADASSY, FOCUS (14E1E/14E1U/4E5E/14E5U/14F1E/14F1U/14F5E/14F5U)			*4-051-580-01	CUSHION (UPPER) (ASSY) (14E5E/14E5U/14F5E/14F5U)	
	1-452-032-11	MAGNET, DISK; 10MM \emptyset			*4-051-581-01	CUSHION (LOWER) (ASSY) (14E5E/14E5U/14F5E/14F5U)	
	1-452-094-00	MAGNET, ROTA TABLE DISK; 15MM \emptyset			*4-051-603-03	INDIVIDUAL CARTON (20F1E)	
X	X-308-815-8	PERMALLOY ASSY, CONVERGENCE (14E1E/14E1U/14E5E/14E5U/14F1E/14F1U/14F5E/14F5U)			*4-051-705-01	INDIVIDUAL CARTON (14F1U)	
X	X-4309-608-7	PERMALLOY ASSY, CONVERGENCE (20E1E/20E1U/20F1E/20F1U)			*4-051-706-01	INDIVIDUAL CARTON (14F1E)	
	1-532-746-11	FUSE, GLASS TUBE 4A/125V (14E1U/4E5U/4F1U/4F5U/20E1F/20E1U)			*4-051-708-01	INDIVIDUAL CARTON (14F5U)	
F1	Δ 1-576-230-31	FUSE (H.B.C) T3.15A/250V (14E1E/14E5E/14F1E/14F5E/20E1E/20F1E)			*4-051-709-01	INDIVIDUAL CARTON (14F5E)	
	1-533-702-11	HOLDER, FUSE (F1)			4-051-743-01	PLATE, TALLY (14E1E/14E1U/4E5E/14E5U/4F1E/14F1U/14F5E/14F5U)	
S901	Δ 1-762-300-11	SWITCH, AC POWER SEESAW			*4-051-772-01	BAG, PROTECTION (14E1E/14E1U/14F1E/14F1U)	
V901	Δ 8-736-374-05	PICTURE TUBE (20MT1) (20F1E; NORTH)			*4-051-773-01	BAG, PROTECTION (14E5E/14E5U/14F5E/14F5U)	
V901	Δ 8-736-375-05	PICTURE TUBE (20MT3) (20F1U)			*4-052-544-02	INDIVIDUAL CARTON (20E1U)	
V901	Δ 8-736-376-05	PICTURE TUBE (20MT1) (20E1E)			4-054-304-01	INDIVIDUAL CARTON (14E1U)	
V901	Δ 8-736-384-05	PICTURE TUBE (20MT1 (S)) (20F1E; SOUTH)			*4-054-305-01	INDIVIDUAL CARTON (14E1E)	
V901	Δ 8-738-334-05	PICTURE TUBE (14MT3) (BYVM) (14F1U/14F5U)			*4-054-307-01	INDIVIDUAL CARTON (14E5U)	
V901	Δ 8-738-332-05	PICTURE TUBE (14MT1) (BYVM) (14F1E/14F5E)			*4-054-308-01	INDIVIDUAL CARTON (14E5E)	
V901	Δ 8-738-337-05	PICTURE TUBE (14MP1) (14E1E/14E5E)			*4-054-360-01	INDIVIDUAL CARTON (20E1E)	
V901	Δ 8-738-338-05	PICTURE TUBE (14MP3) (14E1U/14E5U)			*4-381-155-01	BAG, PROTECTION (20E1E/20E1U/20F1E/20F1U)	
V901	Δ 8-736-377-05	PICTURE TUBE (Y20MPD6) (20E1U)			*4-396-077-01	JOINT (20E1E/20E1U/20F1E/20F1U)	
					7-682-564-04	SCREW +B 4X14 (BKM-10R)	

ACCESSORIES AND PACKING MATERIALS							

Δ	1-532-746-11	FUSE, GLASS TUBE (4A/125V)					
Δ	1-543-653-21	CORE ASSY, READ (DIVISION TYPE)					
Δ	1-551-912-11	CORD, POWER (7A/125V) (14E1U/4E5U/14F1U/14F5U/20E1F/20E1U)					
Δ	1-576-230-31	FUSE (H.B.C) (T3.15A/250V)					
Δ	1-590-151-11	CORD SET, POWER (14E1E/14E5E/14F1E/14F5E/20E1E/20F1E)					
	3-170-078-01	HOLDR (B), PLUG					
*	3-704-334-01	SHEET (STANDARD), PROTECTION (BKM-10R)					
	3-800-958-02	MANUAL, OPERATION (14E1E/14E1U/14F1E/14F1U/20E1E/20E1U/20F1E/20F1U)					
	3-800-959-02	MANUAL, OPERATION (BKM-10R) (/JAPANESE/ENGLISH)					
	3-800-993-12	MANUAL, OPERATION (14E5E/14E5U/14F5E/14F5U)					
*	4-051-298-02	CUSHION (UPPER) (ASSY) (20E1E/20E1U/20F1E/20F1U)					
*	4-051-299-02	CUSHION (LOWER) (ASSY) (20E1E/20E1U/20F1E/20F1U)					