




SONY - SP0402

SERVICE MANUAL

<u>MODEL</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
PVM-20M2U	US Canadian	SCC-G61H-A	PVM-20M4E	AEP	SCC-G62E-A
PVM-20M4U	US Canadian	SCC-G61F-A	PVM-20M4A	Australian	SCC-N17C-A
PVM-20M2E	AEP	SCC-G62GA			

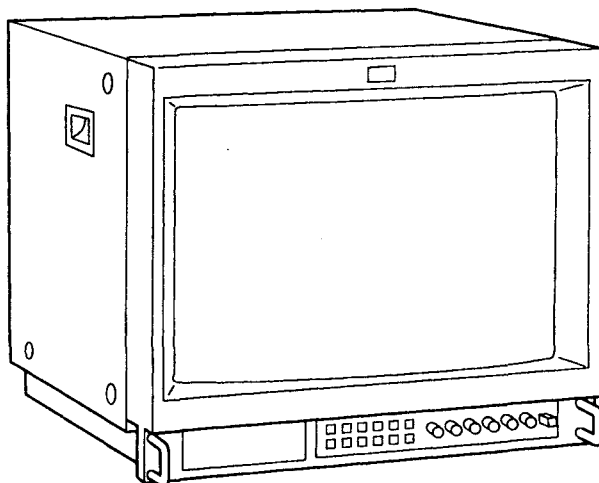

Trinitron

PVM-20M4U/20M4E

Trinitron

PVM-20M2U/20M2E

TRINITRON® COLOR VIDEO MONITOR

SONY®

SPECIFICATIONS

Video signal

For PVM-14M4U/14M4E/20M4U/20M4E:

Color system	NTSC, PAL, SECAM, NTSC ^{4.43}
Resolution	800 TV lines
Aperture correction	0 dB to +6 dB
Frequency response	
LINE	10 MHz ± 3 dB (Y signal)
RGB	10 MHz ± 3 dB
Synchronization	AFC time constant 1.0 msec.

For PVM-14M2U/14M2E/20M2U/20M2E:

Color system	NTSC, PAL, SECAM, NTSC ^{4.43}
Resolution	600 TV lines
Aperture correction	0 dB to +6 dB
Frequency response	
LINE	10 MHz ± 3 dB (Y signal)
RGB	10 MHz ± 3 dB
Synchronization	AFC time constant 1.0 msec.

Picture performance

For PVM-14M4U/14M4E/14M2U/14M2E:

Normal scan	7 % over scan of CRT effective screen area
Under scan	5 % underscan of CRT effective screen area
H. linearity	Less than 4.0 % (typical)
V. linearity	Less than 4.0 % (typical)
Convergence	
Central area:	0.4 mm (typical)
Peripheral area:	0.5 mm (typical)
Raster size stability	H: 1.0%, V: 1.5%
High voltage regulation	3.5 %
Color temperature	D65/D93, selectable USER (3,200K–10,000K, factory setting is D65)

For PVM-20M4U/20M4E:

Normal scan	7 % over scan of CRT effective screen area
Under scan	5 % underscan of CRT effective screen area
H. linearity	Less than 5.0 % (typical)
V. linearity	Less than 5.0 % (typical)
Convergence	
Central area:	0.5 mm (typical)
Peripheral area:	0.7 mm (typical)
Raster size stability	H: 1.0%, V: 1.5%
High voltage regulation	4.0 %
Color temperature	D65/D93, selectable USER (3,200K–10,000K, factory setting is D65)

For PVM-20M2U/20M2E

Normal scan	7 % over scan of CRT effective screen area
Under scan	5 % underscan of CRT effective screen area
H. linearity	Less than 5.0 % (typical)
V. linearity	Less than 5.0 % (typical)
Convergence	
Central area:	0.6 mm (typical)
Peripheral area:	1.0 mm (typical)
Raster size stability	H: 1.0%, V: 1.5%
High voltage regulation	4.0 %
Color temperature	D65/D93, selectable USER (3,200K–10,000K, factory setting is D65)

Inputs

For PVM-14M4U/14M4E/20M4U/20M4E:

LINE A/B	
VIDEO IN	BNC connector (×2), 1Vp-p ±6 dB, sync negative Automatic 75 ohms termination
AUDIO IN	Phono jack (×2), -5 dBu ^a , more than 47 kilo-ohms
LINE C	
Y/C IN	4-pin mini-DIN (×1) See the pin assignment on page 19.
AUDIO IN	Phono jack (×1), -5 dBu ^a , more than 47 kilo-ohms
RGB/COMPONENT	
R/R-Y,G/Y,B/B-Y IN:	BNC connector (×3) R, G, B channels: 0.7 Vp-p, ±6 dB Sync on green: 0.3 Vp-p, negative R-Y, B-Y channels: 0.7 Vp-p, ±6 dB Y channel: 0.7 Vp-p, ±6 dB (Standard color bar signal of 75% chrominance) Automatic 75 ohms termination
AUDIO IN	Phono jack (×1), -5 dBu ^a , more than 47 kilo-ohms
EXT SYNC IN	BNC connector (×1) 4 Vp-p, ±6 dB, sync negative
REMOTE	20-pin connector (×1) See the pin assignment on page 19.

a) 0 dBu = 0.775 Vr.m.s.

For PVM-14M2U/14M2E/20M2U/20M2E:

LINE A/B

VIDEO IN BNC connector (x2), 1 Vp-p
± 6dB, sync negative
Automatic 75 ohms termination

AUDIO IN Phono jack (x2), -5 dBu^a, more than
47 kilo-ohms

LINE C

Y/C IN 4-pin mini-DIN (x1)
See the pin assignment on page 19.

AUDIO IN Phono jack (x1), -5 dBu^a, more than
47 kilo-ohms

RGB/COMPONENT

R/R-Y,G/Y,B/B-Y IN: BNC connector (x3)
R, G, B channels: 0.7 Vp-p ± 6dB
Sync on green: 0.3 Vp-p negative
R-Y, B-Y channel: 0.7 Vp-p ± 6dB
Y channel: 0.7 Vp-p ± 6dB
(Standard color bar signal of 75%
chrominance)

Automatic 75 ohms termination

AUDIO IN Phono jack (x1), -5 dBu^a, more than
47 kilo-ohms

EXT SYNC IN BNC connector (x1)
4 Vp-p, ±6 dB, sync negative

REMOTE 20-pin connector (x1)
See the pin assignment on page 19.

a) 0 dBu = 0.775 Vr.m.s.

Outputs (common to all models)

LINE A/B

VIDEO OUT BNC connector (x2) loop-through,
Automatic 75 ohms termination

AUDIO OUT Phono jack (x2) loop-through

LINE C

Y/C OUT 4-pin mini-DIN (x1) loop-through,
Automatic 75 ohms termination

AUDIO OUT Phono jack (x1) loop-through

RGB/COMPONENT

R/R-Y,G/Y,B/B-Y OUT: BNC connector (x3)
loop-through
Automatic 75 ohms termination

AUDIO OUT Phono jack (x1) loop-through

EXT SYNC OUT BNC connector (x1)
Automatic 75 ohms termination

Speaker output Output level: 0.8 W

General

For PVM-14M4U:

CRT SMPTE-C phosphor

Power consumption 90 Wh (with SDI: 99 Wh)

Power requirements 120 V AC, 50/60Hz

Operating temperature 0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F)

Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. 346 × 340 × 431 mm
(13⁵/₈ × 13¹/₂ × 17 inches)
not incl. projecting parts and controls

Mass Approx. 16.7kg (36 lb 13 oz)

Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)

For PVM-14M4E:

CRT EBU phosphor

Power consumption 90 Wh (with SDI: 99 Wh)

Power requirements 100 to 240 V AC, 50/60Hz

Operating temperature 0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F)

Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. 346 × 340 × 431 mm
(13⁵/₈ × 13¹/₂ × 17 inches)
not incl. projecting parts and controls

Mass Approx. 16.7kg (36 lb 13 oz)

Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)

For PVM-14M2U:

CRT P-22 phosphor

Power consumption 90 Wh (with SDI: 99 Wh)

Power requirements 120 V AC, 50/60Hz

Operating temperature 0 to +35°C (32 to 95°F)

Storage temperature -10 to +40°C (14 to 104°F)

Operating humidity 35 to 85% (no condensation)

Storage humidity 0 to 90%

Dimensions (w/h/d) Approx. 346 × 340 × 431 mm
(13⁵/₈ × 13¹/₂ × 17 inches)
not incl. projecting parts and controls

Mass Approx. 16.7kg (36 lb 13 oz)

Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)

For PVM-14M2E:

CRT P-22 phosphor
Power consumption 90 Wh (with SDI: 99 Wh)
Power requirements 100 to 240 V AC, 50/60Hz
Operating temperature 0 to +35°C (32 to 95°F)
Storage temperature -10 to +40°C (14 to 104°F)
Operating humidity 35 to 85% (no condensation)
Storage humidity 0 to 90%
Dimensions (w/h/d) Approx. 346 × 340 × 431 mm
(13³/₈ × 13¹/₂ × 17 inches)
not incl. projecting parts and controls
Mass Approx. 16.7kg (36 lb 13 oz)
Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)

For PVM-20M4U:

CRT SMPTE-C phosphor
Power consumption 125 Wh (with SDI: 135 Wh)
Power requirements 120 V AC, 50/60Hz
Operating temperature 0 to +35°C (32 to 95°F)
Storage temperature -10 to +40°C (14 to 104°F)
Operating humidity 35 to 85% (no condensation)
Storage humidity 0 to 90%
Dimensions (w/h/d) Approx. 450 × 458 × 503 mm
(17³/₄ × 18¹/₈ × 19⁷/₈ inches)
not incl. projecting parts and controls
Mass Approx. 30.0 kg (66 lb 2 oz)
Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)

For PVM-20M4E:

CRT EBU phosphor
Power consumption 130 Wh (with SDI: 140 Wh)
Power requirements 100 to 240 V AC, 50/60Hz
Operating temperature 0 to +35°C (32 to 95°F)
Storage temperature -10 to +40°C (14 to 104°F)
Operating humidity 35 to 85% (no condensation)
Storage humidity 0 to 90%
Dimensions (w/h/d) Approx. 450 × 458 × 503 mm
(17³/₄ × 18¹/₈ × 19⁷/₈ inches)
not incl. projecting parts and controls
Mass Approx. 30.0 kg (66 lb 2 oz)
Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)

For PVM-20M2U:

CRT P-22 phosphor
Power consumption 115 Wh (with SDI: 125 Wh)
Power requirements 120 V AC, 50/60Hz
Operating temperature 0 to +35°C (32 to 95°F)
Storage temperature -10 to +40°C (14 to 104°F)
Operating humidity 35 to 85% (no condensation)
Storage humidity 0 to 90%
Dimensions (w/h/d) Approx. 450 × 458 × 503 mm
(17³/₄ × 18¹/₈ × 19⁷/₈ inches)
not incl. projecting parts and controls
Mass Approx. 30.0 kg (66 lb 2 oz)
Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)


For PVM-20M2E:

CRT P-22 phosphor
Power consumption 120 Wh (with SDI: 130 Wh)
Power requirements 100 to 240 V AC, 50/60Hz
Operating temperature 0 to +35°C (32 to 95°F)
Storage temperature -10 to +40°C (14 to 104°F)
Operating humidity 35 to 85% (no condensation)
Storage humidity 0 to 90%
Dimensions (w/h/d) Approx. 450 × 458 × 503 mm
(17³/₄ × 18¹/₈ × 19⁷/₈ inches)
not incl. projecting parts and controls
Mass Approx. 30.0 kg (66 lb 2 oz)
Accessory supplied AC power cord (1)
AC plug holder (1)
Tally label (1)
Cable with a 20-pin connector (1)

Design and specifications are subject to change without notice.


Pin assignment

Y/C IN connector (4-pin mini-DIN)

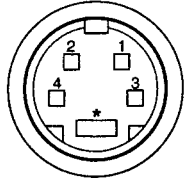

Pin No.	Signal	Description
1	Y-input	1 Vp-p, sync negative, 75 ohms
2	CHROMA subcarrier-input	300m Vp-p, burst Delay time between Y and C: within 0 ± 100 nsec., 75 ohms
3	GND for Y-input	GND
4	GND for CHROMA-input	GND

REMOTE connector (20-pin)

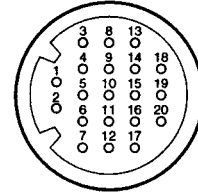

Pin No.	Signal	Wire color
1	Blue only	Brown
2	H/V DELAY	Red
3	MAIN/SUB*	Orange
4	EXT SYNC	Yellow
5	DEGAUSS	Green
6	R ch ON/OFF*	Blue
7	TALLY	Purple
8	LINE B	Grey
9	GND	White
10	GND	Black
11	GND	Pink
12	GND	Light Blue
13	LINE A	Spiral Orange
14	LINE/RGB	Spiral Yellow
15	GND	Spiral Green
16	L ch ON/OFF*	Spiral Blue
17	REMOTE	Spiral Purple
18	LINE C	Spiral Grey
19	UNDER SCAN	Spiral Pink
20	16:9	Spiral Light Blue

(* For digital audio control)

How to connect a remote control unit

Connect No.17 pin to one of the GND pins (No.9 – 12, and 15), then connect pins for the functions you want to use to other GND pins (No.9 – 12, and 15).

How to light the tally lamp

Connect No.7 pin to one of the GND pins (No.9 – 12, and 15).

SAFETY CHECK-OUT (US Model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the metal trim, metallized knobs, screws, and all other exposed metal parts for AC leakage.
Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufactures' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

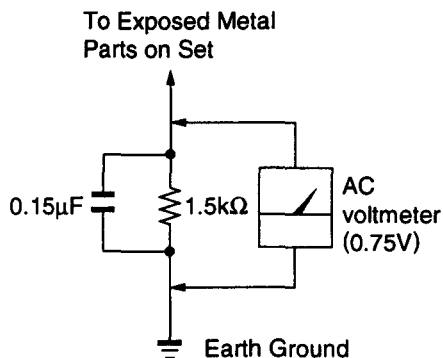


Fig. A. Using an AC voltmeter to check AC leakage.

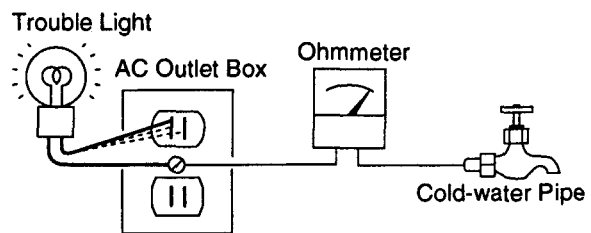


Fig. B. Checking for earth ground.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			5. CIRCUIT ADJUSTMENTS		
	Features	8	5-1.	A Board Adjustments	27
	Location and Function of Parts and Controls	9	6. DIAGRAMS		
	Using On-screen Menus	11	6-1.	Block Diagrams (1)	39
	Connections	13		Block Diagrams (2)	44
2. DISASSEMBLY			6-2.	Frame Schematic Diagram	49
2-1.	Top Cover and Rear Cover Removal	14	6-3.	Circuit Boards Location	52
2-2.	Terminal Board Removal	14	6-4.	Printed Wiring Boards and Schematic Diagrams	52
2-3.	J and H Boards Removal	14		• A Board (1/3)	59
2-4.	Picture Tube Removal	14		• A Board (2/3)	66
2-5.	Service Position	15		• A Board (3/3)	69
3. SET-UP ADJUSTMENTS				• Q Board	74
3-1.	Preparations (1)	16		• G Board	76
3-2.	Preparations (2) Initialization	19		• J Board	76
3-3.	Writing Model Data	19		• X Board	76
3-4.	Picture Output	20		• H Board	78
3-5.	Landing Adjustment	20		• S Board	78
3-6.	Convergence Adjustment (1)	21		• C Board	83
3-7.	Deflection Yoke Neck Rotation Adjustment	22	6-5.	Semiconductors	87
3-8.	Convergence Adjustment (2)	22	7. EXPLODED VIEWS		
3-9.	G2 Adjustment	23	7-1.	Chassis	89
3-10.	White Balance Adjustment	23	7-2.	Picture Tube	90
3-11.	Blue-Only White Balance Adjustment	24	8. ELECTRICAL PARTS LIST		91
3-12.	Sub Brt Adjustment	24			
3-13.	Focus Adjustment	24			
4. SAFETY RELATED ADJUSTMENT		25			

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

(ATTENTION)

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RESQUE D'ELECTROCUTION PROVENANT D'UN CHASSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISE LORS DE TOUT DEPANNAGE. LE CHASSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDE A L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MARQUE Δ SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTE.

SECTION 1 GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

Features

Picture

HR (High Resolution) Trinitron¹⁾ picture tube for PVM-14M4U/14M4E/20M4U/20M4E
HR Trinitron tube provides a high resolution picture. Horizontal resolution is more than 800 TV lines at the center of the picture.

Trinitron¹⁾ picture tube for PVM-14M2U/14M2E/20M2U/20M2E
Trinitron tube provides a high resolution picture. Horizontal resolution is more than 600 TV lines at the center of the picture.

Comb filter

When NTSC video signals are received, a comb filter activates to make more accurate Y/C separation. This contributes to less of a decrease in resolution, cross color and cross luminance phenomena.

Beam current feedback circuit

The built-in beam current feedback circuit assures stable white balance.

Four color system available

The monitor can display NTSC, PAL, SECAM and NTSC_{4.43}²⁾ signals. The appropriate color system is selected automatically.

Blue only mode

In the blue only mode, an apparent monochrome display is obtained with all three cathodes driven with a blue signal. This facilitates color saturation and phase adjustments and observation of VCR noise.

Input

Analog RGB/component input connectors
Analog RGB or component (Y, R-Y and B-Y) signals from video equipment can be input through these connectors.

Y/C input connectors

The video signal, split into the chrominance signal (C) and the luminance signal (Y), can be input through this connector, eliminating the interference between the two signals, which tends to occur in a composite video signal, ensuring video quality.

External sync input

When the EXT SYNC selector is in the on position, the monitor can be operated on the sync signal supplied from an external sync generator.

Automatic termination

(connector with \sphericalangle mark only)
The input connector is terminated at 75 ohms inside when no cable is connected to the loop-through output connector. When a cable is connected to an output connector, the 75-ohm termination is automatically released.

Functions

Underscan mode

The signal normally scanned outside of the screen can be monitored in the underscan mode.

Note

When the monitor is in the underscan mode, the dark RGB scanning lines may appear on the top edge of the screen. These are caused by an internal test signal, rather than the input signal.

Horizontal/vertical delay mode

The horizontal and vertical sync signals can be checked simultaneously in the H/V delay mode.

Auto/manual degaussing

Degaussing of the screen can be performed automatically when the power is turned on, or manually by pressing the DEGAUSS button.

On-screen menus

You can set color temperature, CHROMA SET UP, and other settings by using the on-screen menus.

Five menu languages

You can select the menu language from among five languages on the menu.

EIA standard 19-inch rack mounting

By using an MB-502B mounting bracket (for a 14-inch monitor, not supplied) or SLR-103A slide rail (for a 20-inch monitor, not supplied), the monitor can be mounted in an EIA standard 19-inch rack.

For details on mounting, refer to the instruction manuals supplied with the mounting bracket kit or slide rail kit.

SDI (Serial Digital Interface) Kit

By using the following optional SDI Kits, the monitor can display SMPTE 259M 4:2:2 serial digital signal from a digital VCR. (ex. Sony 4:2:2 VCR)

- BKM-101C: Component SDI Kit (for video)
- BKM-102: Component SDI Kit (for audio)

Note

When the serial number of the BKM-101C you want to connect is less than 2,010,000, an optional connecting harness (part no. 1-900-230-35) will be required.

Serial Remote Interface Kit


By using the optional BKM-103 Serial Remote Interface Kit, the monitor can be controlled from personal computers via the RS-422A serial interface.

1) "Trinitron" is a registered trademark of Sony Corporation.

2) The NTSC_{4.43} system refers to an NTSC color system in which the subcarrier frequency is modified to 4.43MHz. When an NTSC recorded video program is played back with a Trident (PAL/SECAM/NTSC_{4.43}) VTR, the NTSC_{4.43} signal is output.

Location and Function of Parts and Controls

Front

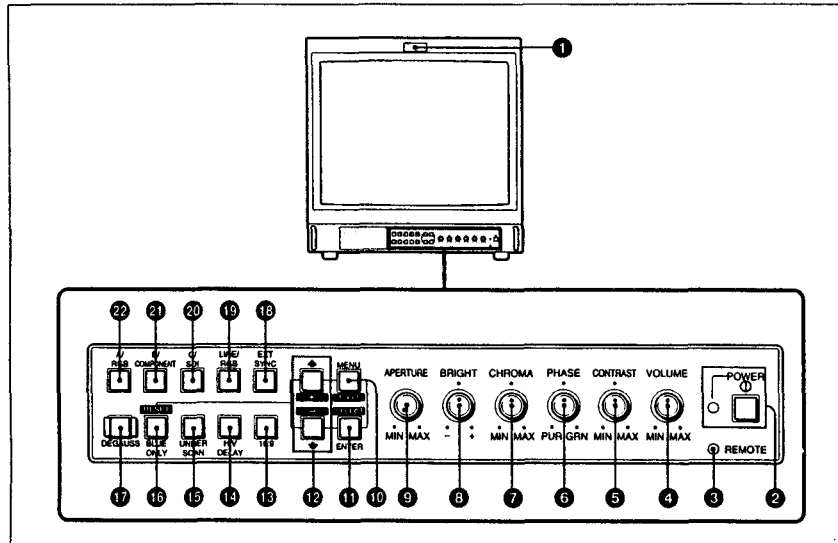

1 Tally lamp

Lights up when the video camera connected to this monitor is selected, indicating that the picture is being recorded.

For details on how to light the tally lamp, see page 19.

2 POWER switch and indicator

Depress to turn on the monitor. The indicator will light green.

3 REMOTE indicator

Lights up when you select ON on the USER PRESET menu (see page 13), or when you connect a supplied cable to the REMOTE connector. The controls on the front panel do not work when this indicator lights up.

For details on how to connect the cable, see page 19.

4 VOLUME control

Turn this control clockwise or counterclockwise to obtain the desired volume.

5 CONTRAST control

Turn this control clockwise to make the contrast higher or counterclockwise to make it lower.

6 PHASE control

This control is effective only for the NTSC and NTSC4.43 color systems. Turn it clockwise to make the skin tones greenish or counterclockwise to make them purplish.

7 CHROMA control

Turn this control clockwise to increase the color intensity or counterclockwise to decrease it.

8 BRIGHT (brightness) control

Turn this control clockwise to increase the brightness or counterclockwise to decrease it.

9 APERTURE control

Turn this control clockwise to increase sharpness or counterclockwise to decrease sharpness.

Note

The PHASE (6), CHROMA (7) and APERTURE (9) controls have no effect on the pictures of RGB signals.

10 MENU (EXIT) button

Press this button to display the main menu. When a menu is on the display, you can return to the previous menu by pressing this button.

11 ENTER (SELECT) button

Press the button to confirm a selected item on the menu.

12 ↑ (+) / ↓ (-) buttons

Press the buttons to move the cursor (▶) or adjust selected item on the menu.

13 16:9 selector

Press this selector (light on) to monitor the signals of 16:9 picture.

14 H/V DELAY selector

Press this selector (light on) to observe the horizontal and vertical sync signals at the same time. The horizontal sync signal is displayed in the left quarter of the screen; the vertical sync signal is displayed near the center of the screen.

15 UNDER SCAN selector

Press this selector (light on) for underscanning. The display size is reduced by approximately 5% so that four corners of the raster are visible.

16 BLUE ONLY selector RESET button

- As the BLUE ONLY selector, press this selector (light on) to eliminate the red and green signals. Only blue signal is displayed as an apparent monochrome picture on the screen. This facilitates "chroma" and "phase" adjustments and observation of VCR noise.
- ("Phase" adjustment is effective only for the NTSC signals.)
- As the RESET button, you can reset the menu settings by pressing this button when a menu is on the display.

17 DEGAUSS button

Press this button momentarily. The screen will be demagnetized. Wait for 10 minutes or more before using this button again.

18 EXT SYNC (external sync) selector

- Set this selector to the off position (light off) to operate the monitor on the sync signal from the displayed video signal.
- Set this selector to the on position (light on) to operate the monitor on an external sync signal through the EXT SYNC connector.

19 LINE/RGB input selector

- Press this selector to select the input to be monitored.
- Set this selector to the off position (light off) to monitor the signal through the LINE A, LINE B or LINE C connectors.
- Set this selector to the on position (light on) to monitor the signal through the RGB/COMPONENT connectors.

20 C/SDI selector

- When the LINE/RGB input selector is set to the LINE position (light off), press this selector (light on) to monitor the signal through the LINE C connectors.
- When the LINE/RGB input selector is set to the RGB position (light on), press this selector (light on) to monitor the SDI signal (optional kits are required).

21 B/COMPONENT selector


- When the LINE/RGB input selector is set to the LINE position (light off), press this selector (light on) to monitor the signal through the LINE B connectors.
- When the LINE/RGB input selector is set to the RGB position (light on), press this selector (light on) to monitor the component signal through the RGB/COMPONENT connectors.

22 A/RGB selector

- When the LINE/RGB input selector is set to the LINE position (light off), press this selector (light on) to monitor the signal through the LINE A connectors.
- When the LINE/RGB input selector is set to the RGB position (light on), press this selector (light on) to monitor the RGB signal through the RGB/COMPONENT connectors.

Location and Function of Parts and Controls

Rear Panel

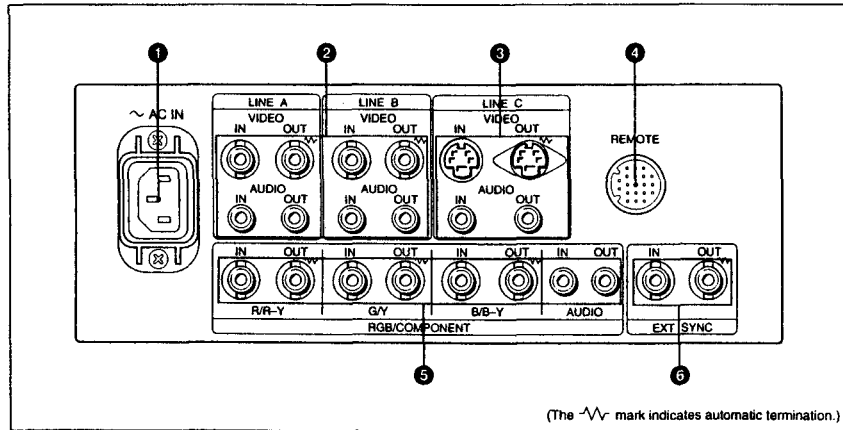

1 AC IN socket

Connect the supplied AC power cord to this socket and to a wall outlet.

2 LINE A, LINE B connectors

Two groups (A and B) of line input connectors for the composite video and audio signals and their loop-through output connectors.

To monitor the input signal through these connectors, set the LINE/RGB selector to the LINE position (light off) and press the A/RGB or B/COMPONENT selector (light on).

VIDEO IN (BNC)

Connect to the video output of video equipment, such as a VCR or a color video camera.

For a loop-through connection, connect to the video output of another monitor.

VIDEO OUT (BNC)

Loop-through output of the VIDEO IN connector. Connect to the video input of a VCR or another monitor.

When the cable is connected to this connector, the 75-ohm termination of the input is automatically released, and the signal input to the VIDEO IN connector is output from this connector.

AUDIO IN (phono jack)

Connect to the audio output of a VCR or to a microphone via a suitable microphone amplifier. For a loop-through connection, connect to the audio output of another monitor.

AUDIO OUT (phono jack)

Loop-through output of the AUDIO IN connector. Connect to the audio input of a VCR or another monitor.

3 LINE C connectors

Y/C IN (4-pin mini-DIN)

Connect to the Y/C separate output of a video camera, VCR or other video equipment.

For a loop-through connection, connect to the Y/C separate output of a VCR or another monitor.

Y/C OUT (4-pin mini-DIN)

Loop-through output of the Y/C IN connector.

Connect to the Y/C separate input of a VCR or another monitor.

When the cable is connected to this connector, the 75-ohm termination of the input is automatically released, and the signal input to the Y/C IN connector is output from this connector.

AUDIO IN (phono jack)

Connect to the audio output of a VCR or a microphone (via a suitable microphone amplifier).

AUDIO OUT (phono jack)

Loop-through output of the AUDIO IN connector. Connect to the audio input of a VCR or another monitor.

4 REMOTE connector (20-pin)

Connect to the tally output of a control console, special-effect generator, etc. The tally lamp on the front panel will be turned on and off by the connected equipment. This connector can also be used for connecting a remote control unit.

For details on the pin assignment of this connector, see page 19.

5 RGB/COMPONENT connectors

RGB signal or component signal input connectors and their loop-through output connectors.

To monitor the input signal through these connectors, set the LINE/RGB selector to the RGB position (light on), and press the A/RGB or B/COMPONENT selector (light on).

R/R-Y IN, G/Y IN, B/B-Y IN (BNC)

When the EXT SYNC selector is set to the off position (light off), the monitor operates on the sync signal from the G/Y channel.

To monitor the RGB signal

Connect to the analog RGB signal outputs of a video camera, etc.

To monitor the component signal

Connect to the R-Y/Y/B-Y component signal outputs of a Sony Betacam video camera, etc.

R/R-Y OUT, G/Y OUT, B/B-Y OUT (BNC)

Loop-through outputs of the R/R-Y IN, G/Y IN, B/B-Y IN connectors.

When the cables are connected to these connectors, the 75-ohm termination of the inputs is automatically released, and the signal inputs to the R/R-Y IN, G/Y IN, B/B-Y IN connectors are output from these connectors.

To output the RGB signal

Connect to the analog RGB signal inputs of a video printer or another monitor.

To output the component signal

Connect to the R-Y/Y/B-Y component signal inputs of a Betacam video recorder, etc.

AUDIO IN (phono jack)

Connect to the audio output of video equipment when the analog RGB or component signal is input.

AUDIO OUT (phono jack)

Loop-through outputs of the AUDIO IN connector.

6 EXT SYNC (external sync) connectors

Press the EXT SYNC selector (light on) to use the sync signal through this connector.

IN (BNC)

When this monitor operates on an external sync signal, connect the reference signal from a sync generator to this connector.

OUT (BNC)

Loop-through output of the IN connector. Connect to the external sync input of video equipment to be synchronized with this monitor.


When the cable is connected to this connector, the 75-ohm termination of the input is automatically released, and the signal input to the IN connector is output from this connector.

Using On-Screen Menus

You can make various settings and adjustments of the monitor using the on-screen menus.

On-Screen Menu Configuration


On-screen menu tree-chart

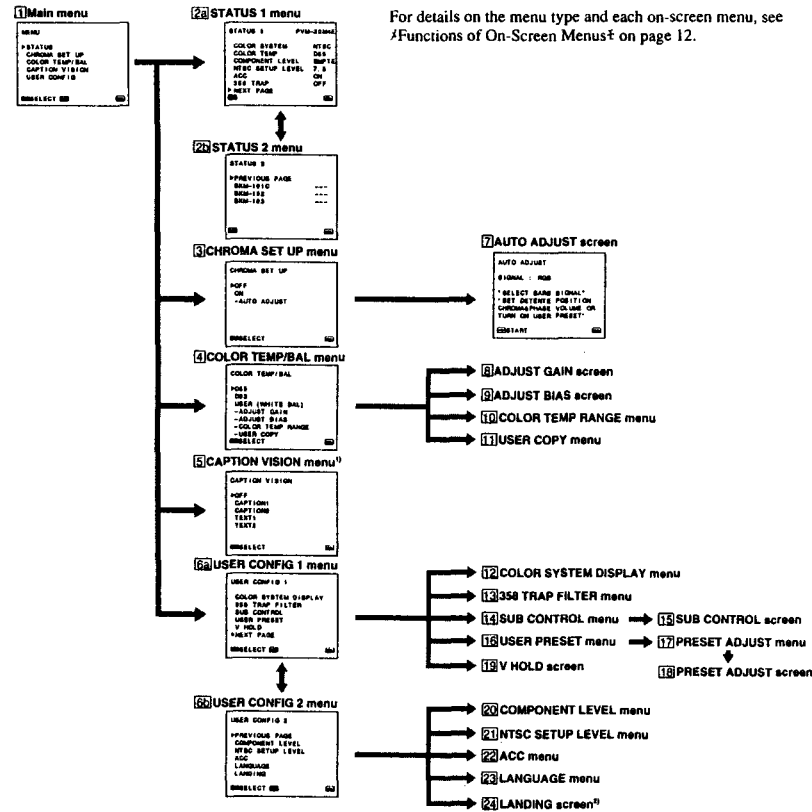

Operation through On-Screen Menus

Menu operation buttons


There are five menu operation buttons on the front panel of the monitor.

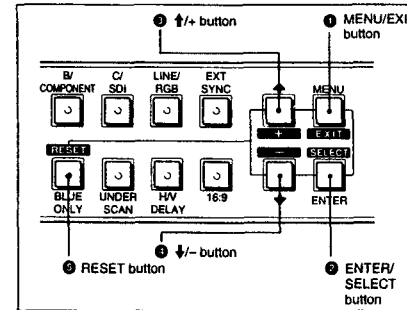

The following table shows how these five buttons function when using the menus.

Button	To select menu item	To adjust the item selected
1 MENU EXIT	return to the previous menu	return to the previous menu
2 ENTER SELECT	decide a selected item	select an adjustment item
3 ↑	move the cursor (▸) upwards	increase selected value
4 ↓	move the cursor (▸) downwards	decrease selected value
5 RESET	reset current settings to the factory setting	

The buttons that can be used on the menus and adjustment screens are displayed at the bottom of the screen. You can perform menu operation using the displayed buttons.

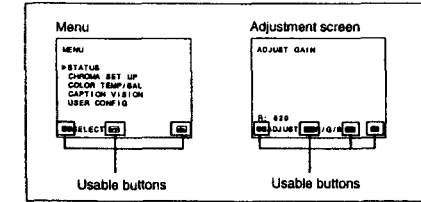

Display of the usable menu operation buttons

Operating procedures

To display the menu, follow this procedure.

- 1 Press the MENU/EXIT (1) button.
MENU (1) : main menu appears.
- 2 Move the cursor (▸) to the desired setting menu by pressing the ↓/– or ↑/+ (4, 3) button.
- 3 Press the ENTER/SELECT (2) button.
The setting menu selected in step 2 appears.
- 4 Move the cursor (▸) to the desired item by pressing the ↓/– or ↑/+ (4, 3) button.
- 5 Press the ENTER/SELECT (2) button.

The adjustment screen or setting menu selected in step 4 appears.


For detailed information of menus, see 'Functions of On-Screen Menus' on page 12.

1) 5) CAPTION VISION menu is provided with PVM-14M4U/14M2U/20M4U/20M2U only.
2) 24) LANDING screen is provided with PVM-20M4U/20M4E only.

Using On-Screen Menus

To display the next (or previous) page of the menus

Select NEXT PAGE on the menu to display the next page and PREVIOUS PAGE on the menu to display the previous page.

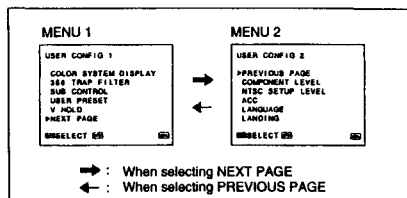

How to display the next or the previous page

To close the menu (to return to the regular screen)

Each time you press the MENU/EXIT (M) button, the on-screen menu returns to the one previously displayed. Press the MENU/EXIT (M) button repeatedly until the regular screen appears.

For PVM-14M4E/14M2E/20M4E/20M2E:
For the first time when the monitor is turned on, the LANGUAGE menu (23) will appear on the screen. So, select the language you want to use.



1 Move the cursor (▶) to the desired language by pressing the ↓/- or ↑/+ (4, 5) button.

2 Press the MENU/EXIT (M) button.

Note

Unless you press the MENU/EXIT (M) button in the procedure above, the LANGUAGE menu will always appear whenever you turn on the monitor.

Functions of On-Screen Menus

There are four types of on-screen menus.

Main menu

You can enter another menu such as status menu or setting menu.

Status menu

You can confirm the current settings.

Setting menu

You can select an item or enter an adjustment screen on this menu by using the ↑/+, ↓/- and ENTER/SELECT buttons.

Adjustment screen

You can make adjustments on this screen. The adjustments you made remain unchanged until next change even if you turn off the power.

([] indicates the factory setting.)

1 Main menu

Select another menu and press ENTER/SELECT to go to the menu.

2a STATUS 1 menu

Shows the current settings.

2b STATUS 2 menu

Shows what optional kit is installed in the monitor.

3 CHROMA SET UP menu

Select ON on this menu to activate "chroma" and "phase" (NTSC signal only) adjustments done on the AUTO ADJUST screen (17). [OFF]

4 COLOR TEMP/BAL menu

Select the color temperature from among D65, D93 and USER. USER is set to D65 as the factory setting. You can adjust or change the color temperature in USER mode (a measuring instrument is required). [D65]

5 CAPTION VISION menu

This menu is provided only for PVM-14M4U/14M2U/20M4U/20M2U.

The monitor can display the signal with Caption Vision. To display it, select the caption type in this menu. [OFF]

6a USER CONFIG 1 menu

Select an item to adjust on the menus and screens (12 through 19). To go to the USER CONFIG 2 menu, select NEXT PAGE.

6b USER CONFIG 2 menu

Select an item to adjust on the menus and screens (20 through 24). To go to the USER CONFIG 1 menu, select PREVIOUS PAGE.

7 AUTO ADJUST screen

Select the color bar signal (full, SMPTE, EIA) and press ENTER/SELECT to start automatic "chroma" and "phase" (NTSC signal only) adjustments. To activate these adjustments, select ON on the CHROMA SET UP menu (3).

8 ADJUST GAIN screen

Adjust GAIN in USER mode.

9 ADJUST BIAS screen

Adjust BIAS in USER mode.

10 COLOR TEMP RANGE menu

Select the color temperature range in USER mode. [5000K-10000K]

11 USER COPY menu

Store the factory setting of D65 or D93 as the value for USER mode.

12 COLOR SYSTEM DISPLAY menu

Select the color system type. When AUTO is selected, the color system type being used appears on the screen each time you change the signal input. [AUTO]

13 358 TRAP FILTER menu

Color spill or color noise may be eliminated if you select ON (NTSC signal only). Normally select OFF. [OFF]

14 SUB CONTROL menu

Select an item (CONTRAST, BRIGHT, CHROMA and PHASE controls on the front panel) to finely adjust on the SUB CONTROL screen (15).

15 SUB CONTROL screen

Finely adjust the selected item on the SUB CONTROL menu (14). Each control (CONTRAST, BRIGHT, CHROMA and PHASE control) has a click position at the center of its adjustment range. You can adjust the setting of the click position with this feature.

16 USER PRESET menu

If you select ON on this menu, the REMOTE indicator lights up and the controls on the front panel do not work. The monitor operates with the user preset settings.

To adjust the user preset settings, select the PRESET ADJUST menu (17). [OFF]

17 PRESET ADJUST menu

You can preset the BRIGHT, CHROMA, PHASE, CONTRAST, VOLUME, and APERTURE controls to a desired level and can use these settings by selecting ON on the USER PRESET menu (16).

18 PRESET ADJUST screen

Adjust the selected item (BRIGHT, CHROMA, PHASE, CONTRAST, VOLUME, and APERTURE control) on the PRESET ADJUST menu (17).

19 V HOLD screen

Adjust the vertical hold if the picture rolls vertically. When you cannot read the display, select the input that is not connected.

20 COMPONENT LEVEL menu

Select the component level from among three modes.
N10/SMPTE for 100/0/100/0 signal
BETA 7.5 for 100/7.5/75/7.5 signal
BETA 0 for 100/0/75/0 signal
For PVM-14M4U/14M2U/20M4U/20M2U [BETA 7.5]

For PVM-14M4E/14M2E/20M4E/20M2E [N10/SMPTE]

Using On-Screen Menus

21] NTSC SETUP LEVEL menu

Select the NTSC setup level from two modes.

The 7.5 setup level is mainly used in north America.

The 0 setup level is mainly used in Europe.

For PVM-14M4U/14M2U/20M4U/20M2U [7.5]

For PVM-14M4E/14M2E/20M4E/20M2E [0]

22] ACC menu

Set ACC (Auto Color Control) circuit on or off. When the fine adjustment is necessary, select OFF on the ACC menu.

Normally select ON. [ON]

23] LANGUAGE menu

You can select the menu language from among five languages (English, German, French, Italian, Spanish). [ENGLISH]

24] LANDING screen

This menu is provided only for PVM-20M4U/20M4E.

If the color is not uniform even after you press the DEGAUSS button, you can adjust the landing so as to obtain color uniformity on this screen.

The following two methods are available to adjust the landing.

When the signals of the horizontal lines are input and displayed:

Press the ↓/- or ↑/+ button until the lines are displayed on the screen as horizontally as possible.

When the signals of the white color are input and displayed:


Press the ↓/- or ↑/+ button until the white color on the screen become as uniform as possible.

To reset the setting to standard (00), press the RESET button.


Connections

How to Connect the AC Power Cord


Connect the AC power cord (supplied) to the AC IN socket and to a wall outlet.

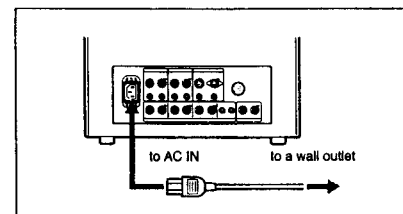

To connect an AC power cord securely with an AC plug holder

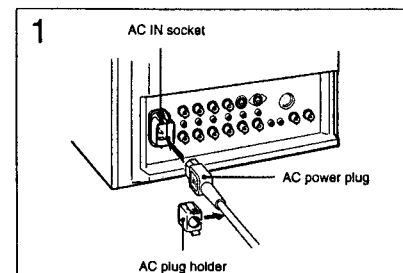

Plug the power cord into the AC IN socket. Then, attach the AC plug holder (supplied) on top of the AC power cord.

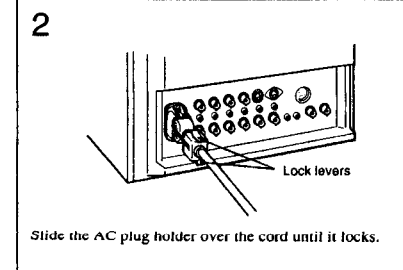


Slide the AC plug holder over the cord until it locks.

To remove the AC power cord
Pull out the AC plug holder while pressing the lock levers.


How to Connect a Cable to a BNC Connector

Connect a coaxial cable with the BNC plugs to the BNC connectors on the rear panel as illustrated below.

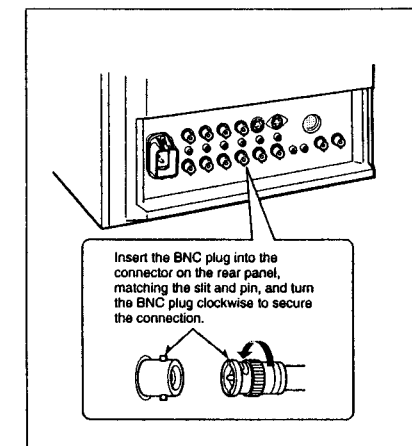


SECTION 2 DISASSEMBLY


2-1. TOP COVER AND REAR COVER REMOVAL

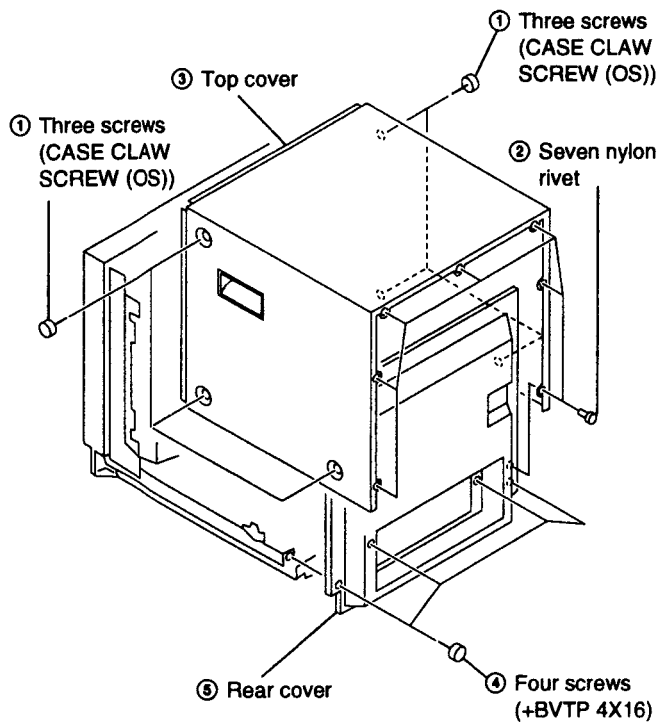

2-2. TERMINAL BOARD REMOVAL

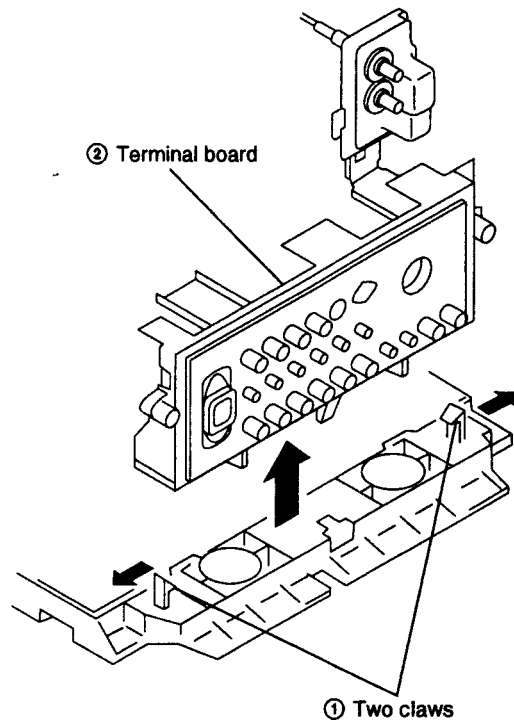


2-3. J AND H BOARDS REMOVAL

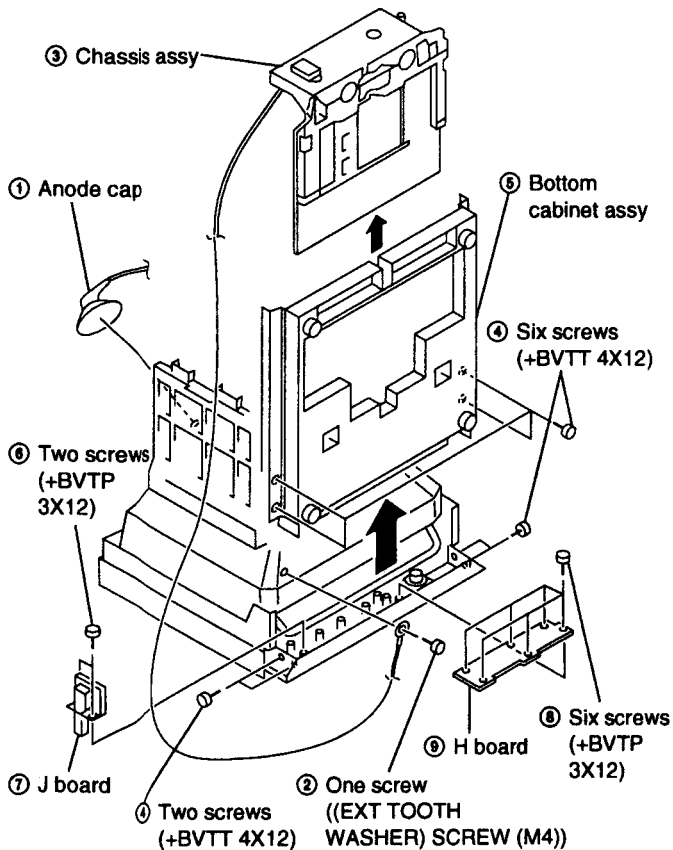


2-4. PICTURE TUBE REMOVAL

When exchange the Picture tube of PVM-20M4 series and if the magnet had stuck on the neck of the Picture tube, peel it.

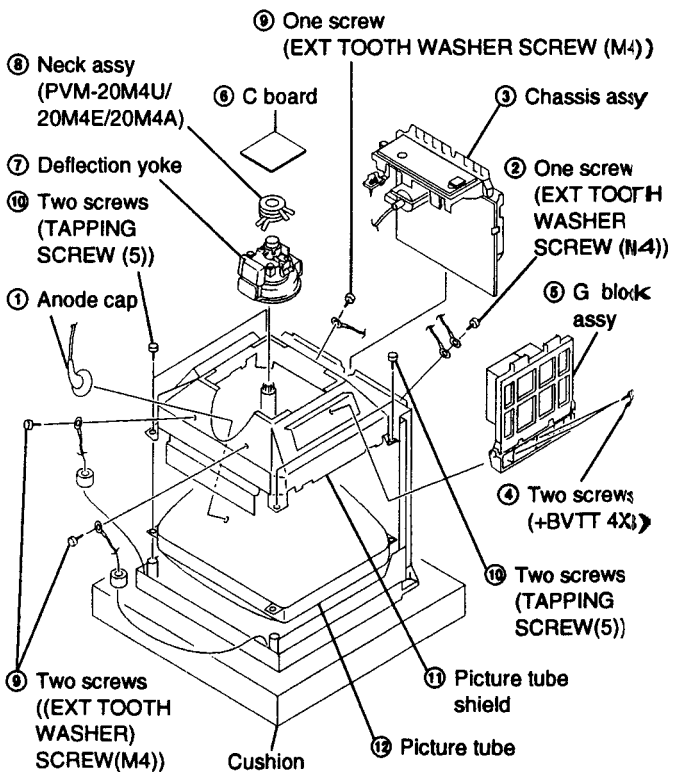


2-5. SERVICE POSITION

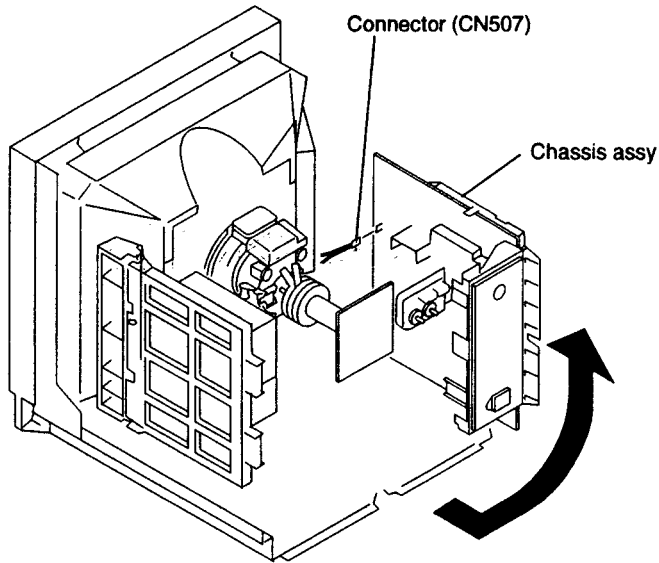

• REMOVAL OF ANODE-CAP


NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②.
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ③.

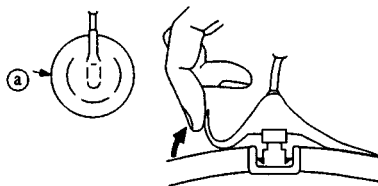




• HOW TO HANDLE AN ANODE-CAP

• REMOVING PROCEDURES

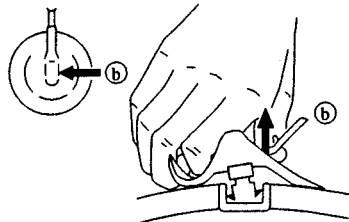

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps! A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly! The shatter-hook terminal will stick out or hurt the rubber.

- ① Turn up one side of the rubber cap in the direction indicated by the arrow ①.

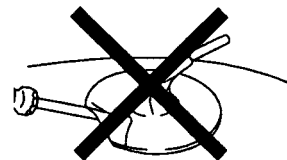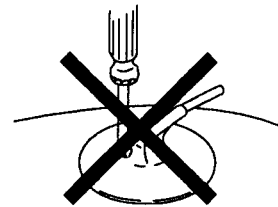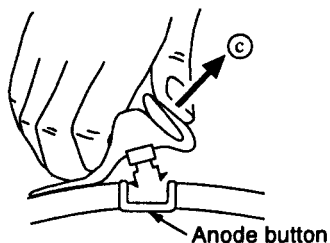

SECTION 3 SET-UP ADJUSTMENTS

3-1. PREPARATIONS (1)

Service Mode

This set is provided with a switch for service on the front panel that can be used to make various adjustments. The operation method of this switch is explained in detail below.

1. Entering the service mode

Simultaneously press the [ENTER] key and the [DEGAUSS] key shown on the display of the menu.

2. Service mode display

(1)	(5)	(4)	(3)	(6)
(2)				

Range of Service Mode Display

- (1) The service items are largely classified into 16 types displayed by titles.
- (2) The names of the service items or READ/WRITE guidance, etc., are displayed. The names are displayed to the left and the guidance to the right.
- (3) This is the serial number for each of the service items. 1-120.
- (4) This is the adjustment data for the service items that are now stored in the RAM. Adjustments can be made by changing these values, but as long as nothing is written to the ROM the adjustment values will be erased by turning off the power or by reading, so please be careful.
- (5) When the adjustment data that is now displayed is identical with the data in the ROM, the cursor (▶) is displayed.
- (6) The present status is displayed.
[*]: Writing to the ROM. Make sure not to turn off the power while this display is on.
[?]: ROM reading error. In this case, an image is output with the standard adjustment data that the microcomputer itself possesses.
[i]: Problem in the I2C bus.

3. Finishing the service mode

Simultaneously press the [ENTER] key and the [DEGAUSS] key shown on the display of the menu.

4. Easy ON/OFF of the service mode

If once entering the service mode after having turned on the power, easy ON/OFF is possible by once more pressing the A, B or C switch on the front panel (the LED lights) as long as the power is not turned off or as long as the service mode is not finished.

5. Change of position of the service mode display

If the switch is continuously pressed when turning on in the above easy mode, the display position moves in the V direction. This method is used when the display is outside of the effective screen area.

6. Change of service items

The items are returned with the [MENU] key and forwarded with the [ENTER] key. When a key is continuously pressed, the operation will be repeated.

7. Change of service data

The service data is made larger with the [↑] key and smaller with the [↓] key. When continuously pressing the keys, the operation will be repeated.

8. Reading of service data

When reading data from the ROM to the RAM, press the [B / O] key once and check that the READ display is shown in the guidance, and then press the [B/O] key once again. The adjustment data that is written will return to its previous state, so please be careful.

9. Writing of service data

When writing data from the RAM to the ROM, press the [DEGAUSS] key once and check that the WRITE display shown in the guidance, and then press the [DEGAUSS] key once again. Not only the displayed data will be written, but all data, so please be careful.

10. Carrying out FACTORY RESETTING

In case the adjustment data has been destroyed for some reason, and you keep pressing the [B/O] key at the beginning of the above reading, the READ guidance will change to FACTORY RESET guidance in approximately 3 seconds so that the factory resetting can be carried out. By once again pressing the [B/O] key after this, resetting will be carried out ([*] will be displayed as status) and factory resetting will be executed. However, in case the data available at the time of shipment from the factory has been destroyed, or if the ROM has been replaced, etc., or if factory setting mentioned later on has been carried out, factory resetting is executed.

11. Carrying out FACTORY SETTING

Make sure to make possible the above factory resetting by making a copy of the adjustment data when replacing the ROM. If you keep pressing the [DEGAUSS] key at the beginning of the above writing, the WRITE guidance will change into FACTORY RESET guidance after approximately 3 seconds. By once again pressing the [DEGAUSS] key after this, setting will be carried out ([*] will be displayed as status) and the data will be copied. By carrying out this operation, the selection items of the menu and the adjustment values will be reset to the standard conditions, so please be careful. If this operation is carried out once, it cannot be carried out again, but the FACTORY SET FLAG (No. 120) in the service mode can be set to 1.

SERVICE MAP

Table 3-1 Table map (1)

* Signify (The setting is vary with the destination.)
Refer to the "Table 3-1 Table map (2)."

No.	SERVICE ITEM		MAX	STD	No.	SERVICE ITEM		MAX	STD
1	NOR 50 DEF	H FREQUENCY	255	85	61	C/T1 D??	BIAS <RED>	1023	376
2		VIDEO PHASE	255	139	62		BIAS <GREEN>	1023	512
3		V SIZE	255	139	63		BIAS <BLUE>	1023	396
4	NOR 60 DEF	H FREQUENCY	255	96	64		GAIN <RED>	1023	660
5		VIDEO PHASE	255	115	65		GAIN <GREEN>	1023	620
6		V SIZE	255	137	66		GAIN <BLUE>	1023	602
7	NOR DEF	V CENTER	255	103	67		B/O <RED>	255	115
8		H SIZE	255	108	68		B/O <GREEN>	255	115
9		PIN PHASE	255	128	69	C/T2 D??	3200K SW	1	0
10		PIN AMP	255	128	70		BIAS <RED>	1023	256
11		LOWER PIN AMP	255	128	71		BIAS <GREEN>	1023	512
12		UPPER PIN AMP	255	128	72		BIAS <BLUE>	1023	512
13		SEXY	255	128	73		GAIN <RED>	1023	602
14		V LINEARITY	255	120	74		GAIN <GREEN>	1023	700
15		V BOW	63	32	75		GAIN <BLUE>	1023	672
16		LOWER BOW	63	32	76		B/O <RED>	255	95
17		V ANGLE	63	32	77		B/O <GREEN>	255	108
18	U/S DEF	V SIZE <50>	255	100	78	W/B	SUB CON <4 :3,NORMAL>	255	178
19		V SIZE <60>	255	100	79		SUB CON <4 :3,H/V DELAY>	255	97
20		H SIZE	255	118	80		SUB CON <16 :9,NORMAL>	255	150
21		PIN PHASE	255	128	81		SUB CON <16 :9,H/V DELAY>	255	78
22		PIN AMP	255	100	82		SUB BRIGHT	255	69
23	16 :9 NOR DEF	V SIZE <50>	255	72	83		USER B/O <RED>	255	115
24		V SIZE <60>	255	60	84		USER B/O <GREEN>	255	115
25		PIN PHASE	255	135	85	OTHER	LANDING	255	64
26		PIN AMP	255	90	86		V HOLD	255	128
27	16 :9 U/S DEF	V SIZE <50>	255	61	87		H BLANKING	255	73
28		V SIZE <60>	255	39	88		V BLANKING <50>	255	82
29		PIN PHASE	255	135	89		16 :9 BLANKING START <50>	255	32
30		PIN AMP	255	65	90		16 :9 BLANKING END <50>	255	176
31	COMPONENT	SUB PHASE	255	130	91		V BLANKING <60>	255	161
32		SUB CHROMA <NORMAL>	255	182	92		16 :9 BLANKING START <50>	255	42
33		SUB CHROMA <SMPTE>	255	170	93		16 :9 BLANKING END <50>	255	226
34		R-Y LEVEL	255	163	94		H DELAY	255	142
35	NTSC	BU RST GAT E PULSE WIDTH	255	52	95		V DELAY	255	104
36		CRYSTAL	255	59	96		HP POSITION	255	145
37		PHASE <NORMAL>	255	80	97		HP WIDTH <NORMAL>	255	148
38		PHASE <ACC OFF>	255	96	98		HP WIDTH <H/V DELAY>	255	62
39		B-Y PHASE	255	162	99	SYSTEM	SDI AUDIO	7	5
40		CHROMA <NORMAL>	255	98	100		358 TRAP FILTER	1	0
41		CHROMA <ACC OFF>	255	27	101		ACC	1	0
42		R-Y LEVEL	255	98	102		CAPTION VISION	7	0
43	NTSC 443	CRYSTAL	255	82	103		COMPONENT LEVEL	3	*
44		PHASE <NORMAL>	255	62	104		NTSC SETUP LEVEL	1	*
45		PHASE <ACC OFF>	255	64	105		CHROMA SET UP	1	0
46		B-Y PHASE	255	181	106		COLOR SYSTEM DISPLAY	3	0
47		CHROMA <NORMAL>	255	104	107		COLOR TEMPERATURE	3	0
48		CHROMA <ACC OFF>	255	36	108		USER PRESET	1	0
49		R-Y LEVEL	255	100	109		LANGUAGE	7	0
50	PAL	PHASE <NORMAL>	255	110	110		RGB SYNC	1	0
51		PHASE <ACC OFF>	255	105	111		OPTION BOARD	7	0
52		B-Y PHASE	255	122	112		AGING MODE	1	0
53		CHROMA <NORMAL>	255	109	113		PAL-M	1	0
54		CHROMA <ACC OFF>	255	41	114		MODEL	31	*
55		R-Y LEVEL	255	121	115		COLOR TEMP DISP 1	127	*
56	SECAM	CHROMA	255	93	116		COLOR TEMP DISP 2	127	*
57		R-Y LEVEL	255	181	117		REMOTE ADDRESS	63	0
58		COLOR BALANCE <R-Y>	255	118	118		RESERVED 1	1	0
59		COLOR BALANCE <B-Y>	225	135	119		RESERVED 2	2	0
60	CT1 D??	3200K SW	1	0	120		FACTORY SET FLAG	1	0

Table 3-1 Table map (2)

Model Name	Component level	NTSC Set-up level	Model	Color temp disp 1	Color temp disp 2
PVM-20M4U	1	1	0	65	93
PVM-20M2U	1	1	1	65	93
PVM-20M4J	2	0	2	93	65
PVM-20M4E	2	0	3	65	93
PVM-20M2E	2	0	4	65	93
PVM-14M4U	1	1	5	65	93
PVM-14M2U	1	1	6	65	93
PVM-14M4J	2	0	7	93	65
PVM-14M1J	2	0	8	93	65
PVM-14M4E	2	0	9	65	93
PVM-14M2E	2	0	10	65	93
PVM-20M4A	2	0	11	65	93
PVM-14M4A	2	0	12	65	93
PVM-14M2A	2	0	13	65	93
PVM-14M4B	1	1	14	65	93
BVM-14M4DJ	2	0	15	93	65
BVM-14M4DE	2	0	16	65	93
PVM-20M4T	2	0	17	93	65
PVM-14M4T	1	0	18	93	65

3-2. Preparation (2). Initialization

* Supply composite video or component signals as shown in Table 3-2.

Table 3-2

Signal		Details of signal	Standard level P-W
Composite video	358NT 443NT	100% white	0.714V
		75% white	0.536V
	PALM PAL SECAM	100% white	0.7V
		75% white	0.525V
Component	BETA0	100% white Y	0.7V
		75% white Y	0.525V
		75%color B-Y, R-Y (P-P for this item only)	0.7V
	SMPTE	100% white Y	0.7V
		75% white Y	0.525V
		75%color B-Y, R-Y (P-P for this item only)	0.525V
Voice/sound		-5dBs	0.436Vrms

* Refer to Table 3-3 for groups of models.

Table 3-3

Group of models	Models		
1	PVM-14M4U PVM-14M4A	PVM-14M4J	PVM-14M4E
2	PVM-14M2U	PVM-14M2E	PVM-14M2A
3	PVM-14M1J		
4	PVM-20M4U PVM-20M4A	PVM-20M4J	PVM-20M4E
5	PVM-20M2U	PVM-20M2E	

* In this chapter, indicates the control items in the service mode.

Example: 60H-FREQ

* Before turning off the power after adjustment in the service mode, write the adjustment data. When the power is turned off before writing, adjusted data will all be lost.

3-3. Writing model data

1. Write model data on respective models in the service mode at the location of No.114 MODEL in accordance with Table 3-4.

Table 3-4

Model	Model data
PVM-20M4U	0
PVM-20M2U	1
PVM-20M4J	2
PVM-20M4E	3
PVM-20M2E	4
PVM-14M4U	5
PVM-14M2U	6
PVM-14M4J	7
PVM-14M1J	8
PVM-14M4E	9
PVM-14M2E	10
PVM-20M4A	11
PVM-14M4A	12
PVM-14M2A	13

2. Write the following data in the service mode at the location of No.115 COLOR TEMP DISP 1.

COLOR TEMP DISP 1
U/C, AEP 65
J 93

3. Write the following data in the service mode at the location of No.116 COLOR TEMP DISP 2.

COLOR TEMP DISP 2
U/C, AEP 93
J 65

* Standard inspection state

Unless otherwise specified in this manual, make adjustment under the following conditions:

APERTURE MIN (Turn FLAT fully counterclockwise.)
BRIGHT 50% (Center click)
CHROMA 50% (Center click)
PHASE 50% (Center click)
CONTRAST 80% (Center click)
VOLUME 50%

3-4. Picture output

1. AC input voltage setting

1. Input VIDEO signals and AUDIO signals to respective terminals on the connector panel.
2. Set the sliduck AC voltage as shown in Table 3-5.

Table 3-5

Group of models		Voltage
PVM-14M4J(J) PVM-14M1J(J)	PVM-20M4J(J)	AC 100±3V (Distortion factor:3% max.)
PVM-14M4U(U/C) PVM-20M2U(U/C)	PVM-14M2U(U/C) PVM-20M4U(U/C)	AC 120±3V (Same as above)
PVM-14M4E(AEP) PVM-14M2A(AUS) PVM-20M4E(AEP) PVM-20M4A(AUS)	PVM-14M2E(AEP) PVM-14M4A(AUS) PVM-20M2E(AEP)	AC 220±3V (Same as above)

3-5. Landing adjustment

1. CONT ... MAX
BRT ... Conspicuous position
2. Roughly adjust the white balance, G2, and convergence.
3. Switch the rotary SW of the single color switch to change the color into green only.
4. Adjust the purity knob so that the green will come to the center of the screen. Make R and B almost identical. (Fig. 3-1)
5. Switch to B only, R only, and G only and verify each. (Figs.3-1, 3-2, and 3-3)
6. Bring the deflection yoke gradually forward and adjust the deflection yoke so that R and B on both sides of the screen will be green. (Fig.3-2 → Fig. 3-3)
7. If the deflection yoke comes forward too much, the pattern shown in Fig.3-4 will appear. If so, move the deflection yoke backward. (Fig.3-4 → Fig.3-3)
8. Switch the single color switch to B and verify the single color. (Fig.3-6)
9. Switch the single color switch to R and verify the single color. (Fig.3-9)
10. When two colors are mixed, set the mixed color as the standard, and repeat operations 6 and 7.
11. Switch to an all-white signal and check the uniformity.
12. When the deflection yoke position is determined, fasten it with the fixture.


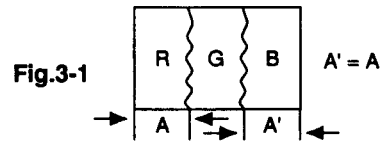


Fig.3-2




Fig.3-3




Fig.3-4




Fig.3-5




Fig.3-6



Fig.3-7



Fig.3-8



Fig.3-9



Fig.3-10

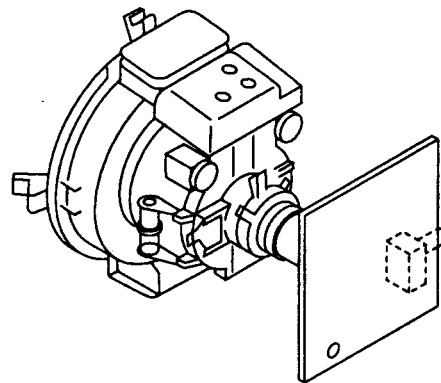


Fig.3-11

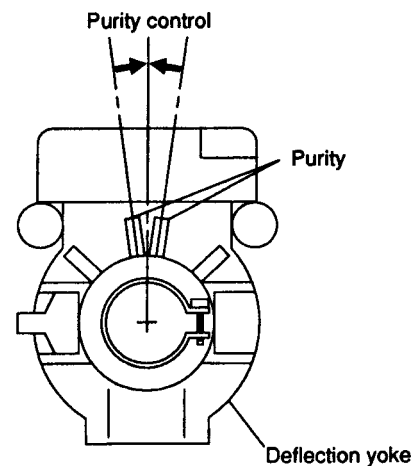


Fig.3-12

Note : Attach NTC magnets for 20M4 to the locations shown in Fig.3-13.

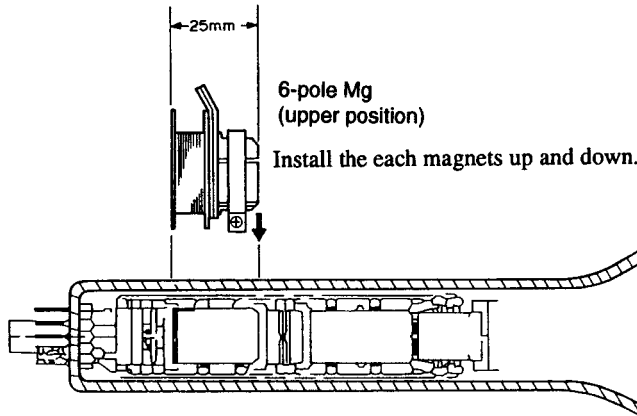


Fig. 3-13

3-6. Convergence adjustment (1)

1. Input a dot pattern signal.
CONT ... Conspicuous position
BRT ... MIN
2. Align the horizontal R, G, and B dots at the center of the screen with the H-START VR.
- * When H-CENT is changed after H-STAT adjustment, readjust H-STAT. (H-STAT will change by means of H-CENT VR.)
3. Align the vertical location of R, G, and B in the center of the screen with the V-STAT Mg. (Fig.3-14, 3-15)
- * After V-STAT adjustment, paint-lock the knob.

V-STAT Mg knob

While keeping the angles A and B equal ($I = I'$), align the vertical convergence.

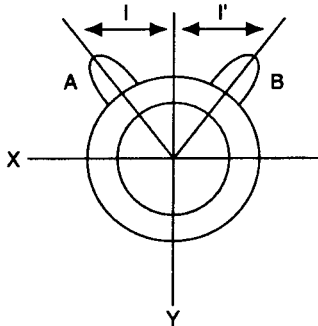


Fig. 3-14 Good example

If the A and B knobs are not symmetrical ($I \neq I'$), the focus may deteriorate, beam striking or other adverse effects may occur.

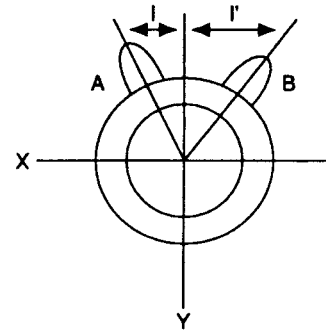


Fig. 3-15 Bad example

4. For HMC, use the BMC Mg to adjust the R and B dots so that they will be symmetrical horizontally with respect to the G dot.

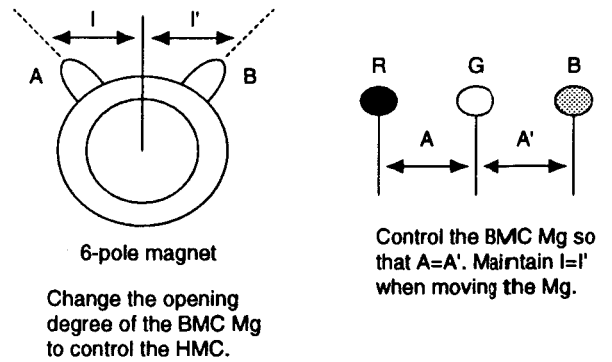


Fig. 3-16

5. For VMC, use the MBC Mg to adjust the R and B dots so that they will be symmetrical vertically with respect to the G dot.

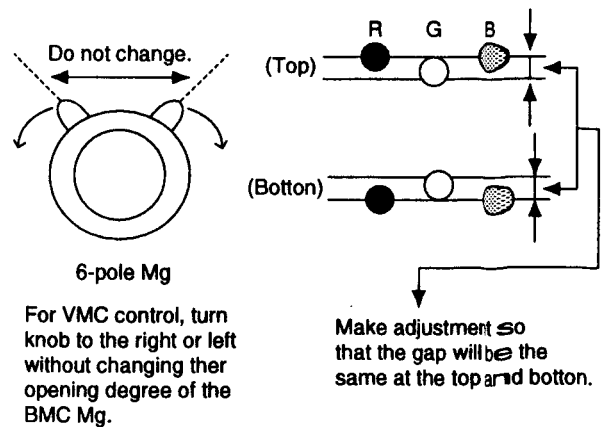


Fig. 3-17

6. Repeat adjustments 2. to 5.

* The above adjustment may affect the landing, so after adjustment, check the landing again.

7. Paint-lock the knobs after adjustment.

3-7. Deflection yoke neck rotation adjustment

1. If there is nonconvergence on both sides of the X or Y axis of the screen, turn the neck of the deflection yoke in the direction of the arrow to hold the nonconvergence for the entire CRT screen within the tolerance.

* Applicable only to groups of models 1, 2, 3, and 5.

- (1) Reverse cross misconvergence pattern (2) Regular cross misconvergence pattern

Move the deflection yoke downward.

Move the deflection yoke upward.

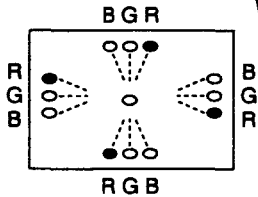


Fig. 3-18

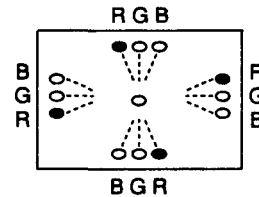


Fig. 3-19

- (3) Pattern of left-sided deflection yoke

- (4) Pattern of right-sided deflection yoke

Move the deflection yoke to the right when viewed from the CRT screen.

Move the deflection yoke to the left when viewed from the CRT screen.

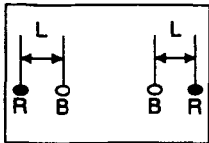


Fig. 3-20

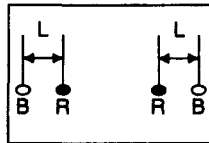


Fig. 3-21


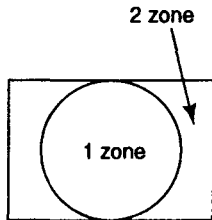


Fig. 3-23


2. Turn the neck of the deflection yoke to align the V pin vertically.

* Applicable only to group of models 4.

3. Insert the wedge between the deflection yoke and CRT funnel to lock the deflection yoke. (Fig.3-24)




Groups of models 1,2,3, and 5 have been treated.



Group of models 4 have been treated.

Fig. 3-24


4. The following patterns cannot be corrected by turning the neck. (Figs.3-25, 3-26, and 3-27)

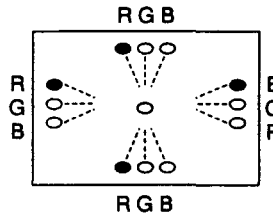

* Gun rotation

The X-axis and Y-axis beams are distorted on both sides.


Fig. 3-25

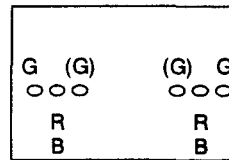

* HCR Large(Small)

The horizontal portion of the G raster is wider(narrower) than that of the RB raster on both sides of the screen.

Fig. 3-26

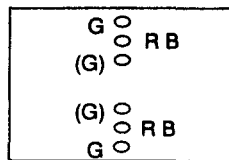

* VCR Large(Small)

The vertical portion of the G raster is wider(narrower) than that of the RB raster on both sides of the screen.

Fig. 3-27

3-8. Convergence adjustment (2)

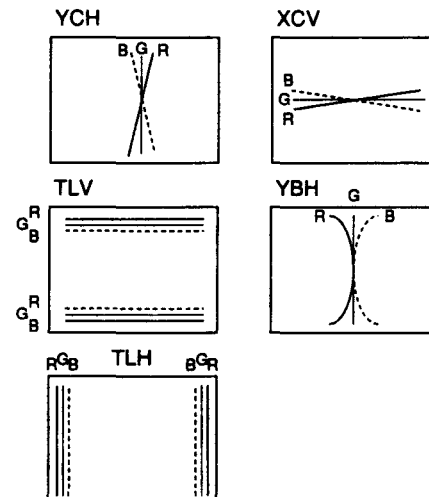


Fig. 3-28 Convergence compensation VR,coil,and compensator

Note : When adjustment is insufficient, use permalloy for perfect adjustment.

1. Group of models 4 (See Table 3-3.)

1. Input a cross-hatch signal.
2. Make adjustment with the TLV, YCH, YBH VR, and XCV coils of the deflection yoke to minimize nonconvergence.
3. When the nonconvergence of the TILT component is included in the horizontal convergence, make adjustment with the TLH compensator. (Fig.3-28)

2. Groups of models 1, 2, and 3 (See Table 3-3.)

1. Input a cross-hatch signal.
2. Make adjustment with the TLV, YCH VR, and XCV coils of the deflection yoke to minimize nonconvergence.
3. When the nonconvergence of the TILT component is included in the horizontal convergence, insert the TLH compensator into the deflection yoke for adjustment. (Fig.3-28)

3. Group of models 5 (See Table 3-3.)

1. Input a cross-hatch signal.
2. Make adjustment with the XCV coil of the deflection yoke to minimize nonconvergence.
3. When the nonconvergence of the TILT component is included in the vertical convergence, insert the TLV compensator into the deflection yoke for adjustment. (Fig.3-28)

3-9. G2 adjustment

1. Input a 525 monoscope signal.
2. Connect the probe of the oscilloscope to TP403 on the A board.
3. Measure the lowest reference pulse of the three.
4. Make adjustment with SCREEN VR so that the left end of the waveform will be 1.35 V \pm 0.05 V.

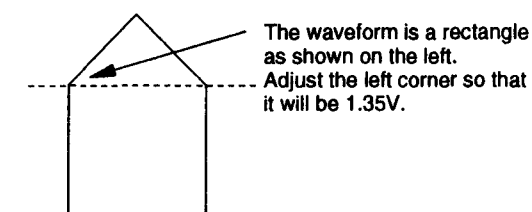
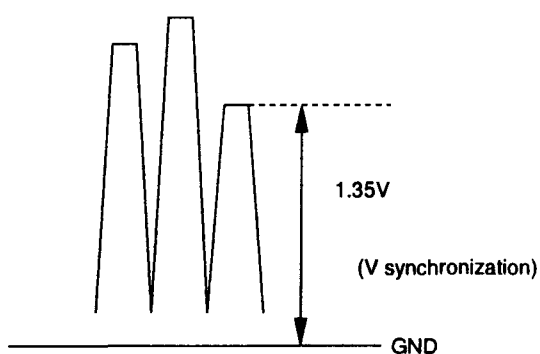


Fig. 3-29

3-10. White balance adjustment

1. Input a 525 monoscope signal. (Input from LINE A or B with no burst.)
2. Set as follows:
CONT: 0%
BRT: 50%
3. Adjust SUB-BRIGHT in the service mode so that the 20-tone gray scale will be as follows:
0 and 5 IRE \rightarrow Cut off
10 IRE \rightarrow Slight glow
4. Input 525 all-white (COMPOSITE signal without burst).
5. Set CONT VR to 80%.
6. Adjust the all-white luminance so that the screen luminance will be 3 NIT.
7. Press MENU and select COL TEMP/BAL.
8. Select 6500K.
Set 3200K SW to "0" for both 9300K and 6500K.
9. Put the unit into the service mode.
10. Adjust to the standard values with <RED> and <BLUE> of C/T1 6500K BIAS or C/T2 6500K BIAS.
Set cut-off to 3 NIT.

<GREEN>

Group of models (Table 3-3)	Fix as follows:
2, 3, 5	"400"
1, 4	"512"

11. Switch the all-white signal luminance to 100 IRE.
12. Adjust to the standard values with <RED> and <BLUE> of C/T1 6500K GAIN or C/T2 6500K GAIN.
<Green>
Set it to "700"
13. Repeat adjustment (10, 11, and 12) until the adjustment is complete, and then write the adjustment data.
14. Press MENU and select COL TEMP/BAL.
15. Select 9300K.
16. Adjust C/T2 9300K BIAS C/T2 9300K GAIN or C/T1 9300K BIAS C/T1 9300K GAIN in the same manner as adjustments 1013.

BIAS <GREEN>

Group of models (Table 3-3)	Fix as follows:
2, 3, 5	"400"
1, 4	"512"

GAIN <GREEN>

Fix it at "700."

3-11. Blue-only white balance adjustment

1. Turn ON the blue-only of the user controller SW. (To set blue-only.)
2. Input all-white (COMPOSITE signal without burst).
The all-white signal luminance shall be 100 IRE.
CONT: 80%
BRT: 50%
3. Select COL TEMP/BAL.
4. Select 6500K.
5. Adjust to the standard values with **[C/T1 6500K B/O<RED>]** and **[C/T1 6500K B/O<GREEN>]** or **[C/T2 6500K B/O<RED>]** and **[C/T1 6500K B/O<GREEN>]**.
6. Select COL TEMP/BAL.
7. Select 9300K.
8. Adjust to the standard values with **[C/T2 9300K B/O<RED>]** and **[C/T2 9300K B/O<GREEN>]** or **[C/T1 9300K B/O<RED>]** and **[C/T1 9300K B/O<GREEN>]**.
9. Adjust the all-white signal luminance, and check that the white balance is satisfactory when the luminance of the screen is 8NIT.

3-12. SUB BRT adjustment

1. Input a 525 monoscope signal.
2. CONT ... MIN
BRT CENTER (50%)
3. Select **[SUB BRIGHT]** in the service mode.
4. Adjust **[SUB BRIGHT]** so that 10 IRE glows slightly and 0 IRE is cut off.

3-13. Focus adjustment

1. PVM-20M4 Series

1. Adjust the H focus (upper side of focus pack) by means of a dot signal.
2. Adjust the V focus (lower side of focus pack) by means of a dot signal.
3. Turn the H focus fully clockwise when viewed from the front by means of a dot signal.
4. Turn the H focus counterclockwise and focus well the dot in the center of the screen. When the dot is well focused, it will be divided into two sections.
5. Turn the H focus VR clockwise (returning direction) so that the dot will be as shown in Fig.3-30. At that time, both ends of the central section of the screen are in the same state.



Fig. 3-30

6. Check that the resolution is more than 800 lines by means of a digital monoscope signal.
7. Check that the magenta ring is un conspicuous by means of an all-white signal.




Fig.3-31 Movement of VR when viewed from the front

2. PVM-14M4 Series

1. Adjust the H focus (upper side of focus pack) by means of a dot signal.
2. Adjust the V focus (lower side of focus pack) by means of a dot signal.
3. Turn the H focus fully clockwise when viewed from the front by means of a dot signal.
4. Turn the H focus counterclockwise and focus the dot in the center of the screen well. The dot signal is divided into two sections at that time.
5. Turn the H focus VR counterclockwise so that the dot will be as shown in Fig.3-32. At that time, both ends of the central section of the screen are in the same state.



Fig. 3-32

6. Check that the resolution is more than 800 lines by means of a digital monoscope signal.
7. Check that the magenta ring is un conspicuous by means of an all-white signal.

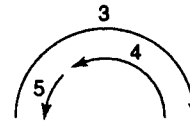


Fig.3-33 Movement of VR when viewed from the front

3. PVM-14M2 Series (CRT14MG)

Make adjustment so that the dots in the central section (right and left edges) will be undivided, respectively. (When well-focused, the dot is divided into two sections.)

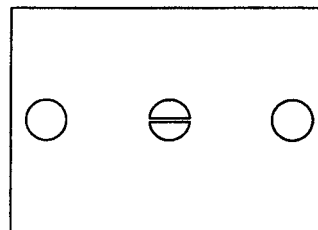
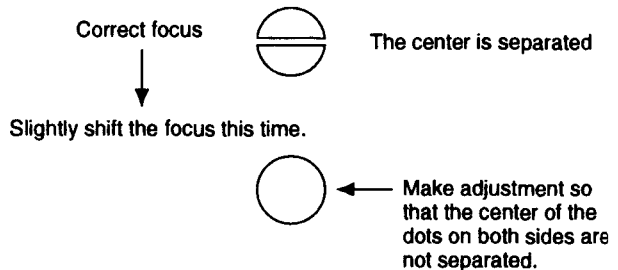


Fig. 3-34

4. PVM-20M2 Series

Focus the character "30" in the center of monoscope well as usualy.

SECTION 4 SAFETY RELATED ADJUSTMENT

When the parts (with a , mark on the circuit diagram) shown below are replaced, confirm the matters described in items 4-1 and 4-2 shown below.

R1536

R551, R506, R519, R518, R516, R515, R508, R517, R1560, R1537, C549, C512, C513, C523, C592, D501, D533, Q500, Q511, IC500, and IC507

When the following parts are replaced, check the +B voltage: IC600, IC602, D610, C615, C631, C621, C632, and T603

Confirmation procedure

1. Input 120 VAC.
2. Input a monoscope signal, and minimize CONTRAST and BRIGHT.
3. Check that the voltage of the CN605 ④ pin is 115.7 VDC.

4-1. CONFIRMATION OF +B MAXIMUM

Standard : Less than 115.7 VDC (CN605 pin ④)

Check Condition Input voltage : 130 VAC

Note : Use NF Power Supply or make sure that distortion factor is 3% or less.

Input signal : Monoscope

Controls : BRT & CONT → Normal

4-2. CONFIRMATION OF HOLD-DOWN CIRCUIT

Check Condition Input voltage : 130 VAC

Input signal : White & Dot

Controls : BRT & Cont → Max. & Min.


4-2-1. Hold-Down Circuit (+B)

- a) Adjust the beam current to $600 \pm 50 \mu\text{A}$ with the pin ④ of CN605 with the external DC power supply (less than 127.0 VDC) to the point just before the hold-down circuit works.
Input Signal : White
- b) Adjust the beam current to $80 \pm 20 \mu\text{A}$ with the pin ④ of CN605 with the external DC power supply (less than 127.0 VDC) to the point just before the hold-down circuit works.
Input Signal : Dot

4-2-2. Hold-Down Circuit (3rd Wire voltage of FBT)


Check item : Check of pin ⑩ of IC500 voltage : more than 110.0VDC

- a) Adjust the beam current to $600 \pm 50 \mu\text{A}$ with the pin ⑩ of IC500 with the external DC power supply (less than 141.0 VDC) to the point just before the hold-down circuit works.
Input Signal : White
- b) Adjust the beam current to $80 \pm 20 \mu\text{A}$ with the pin ⑩ of IC500 with the external DC power supply (less than 141.0 VDC) to the point just before the hold-down circuit works.
Input Signal : Dot

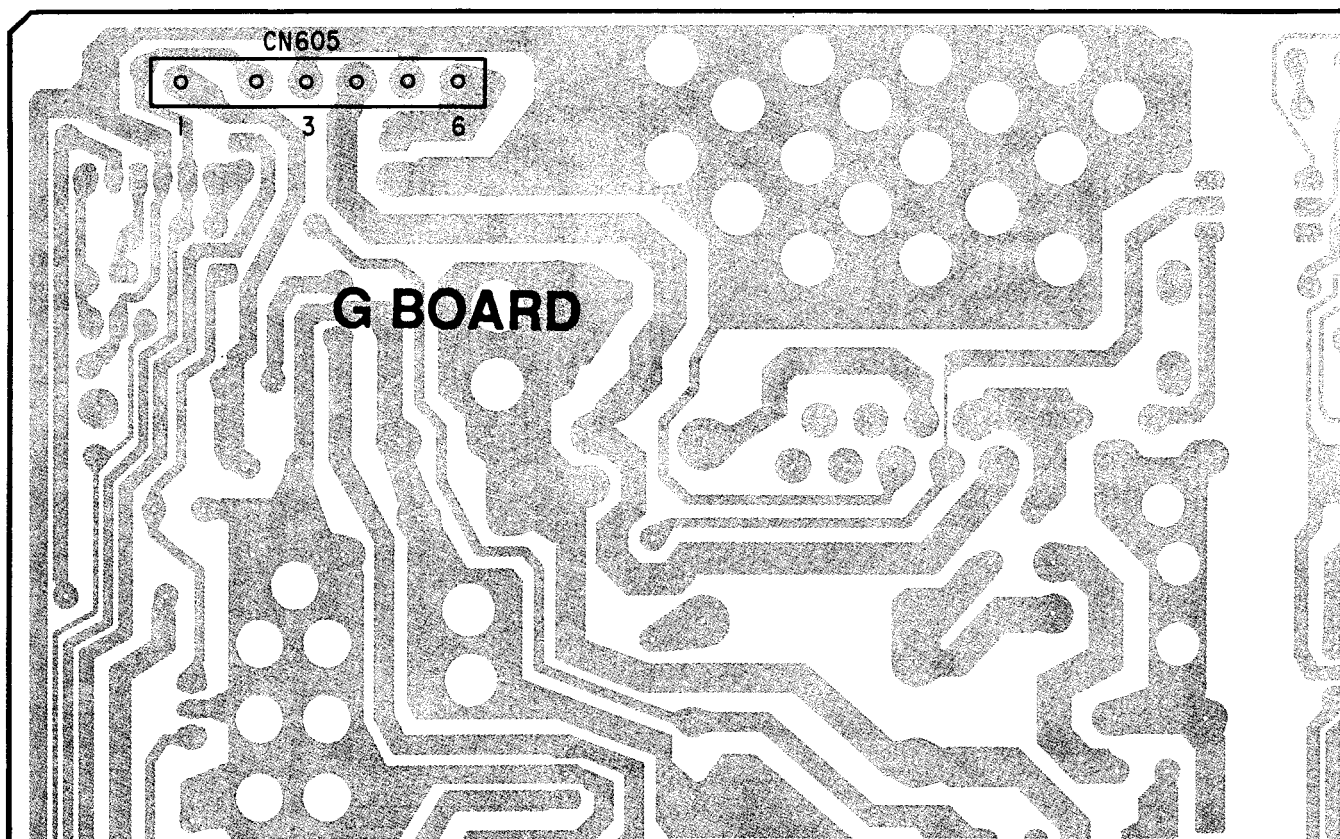


A BOARD

<Component Side>

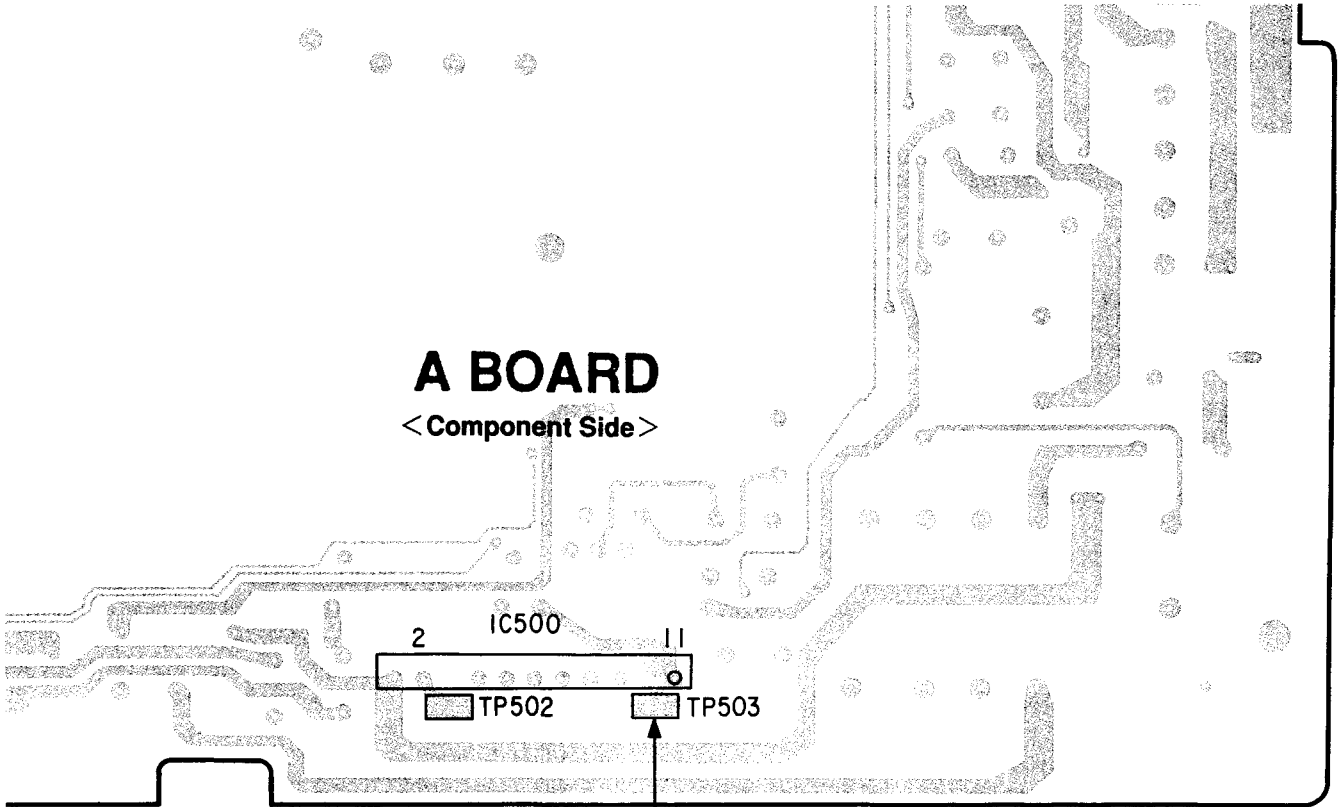


digital multimeter

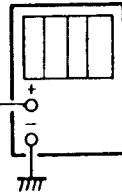


A BOARD

<Conductor Side>

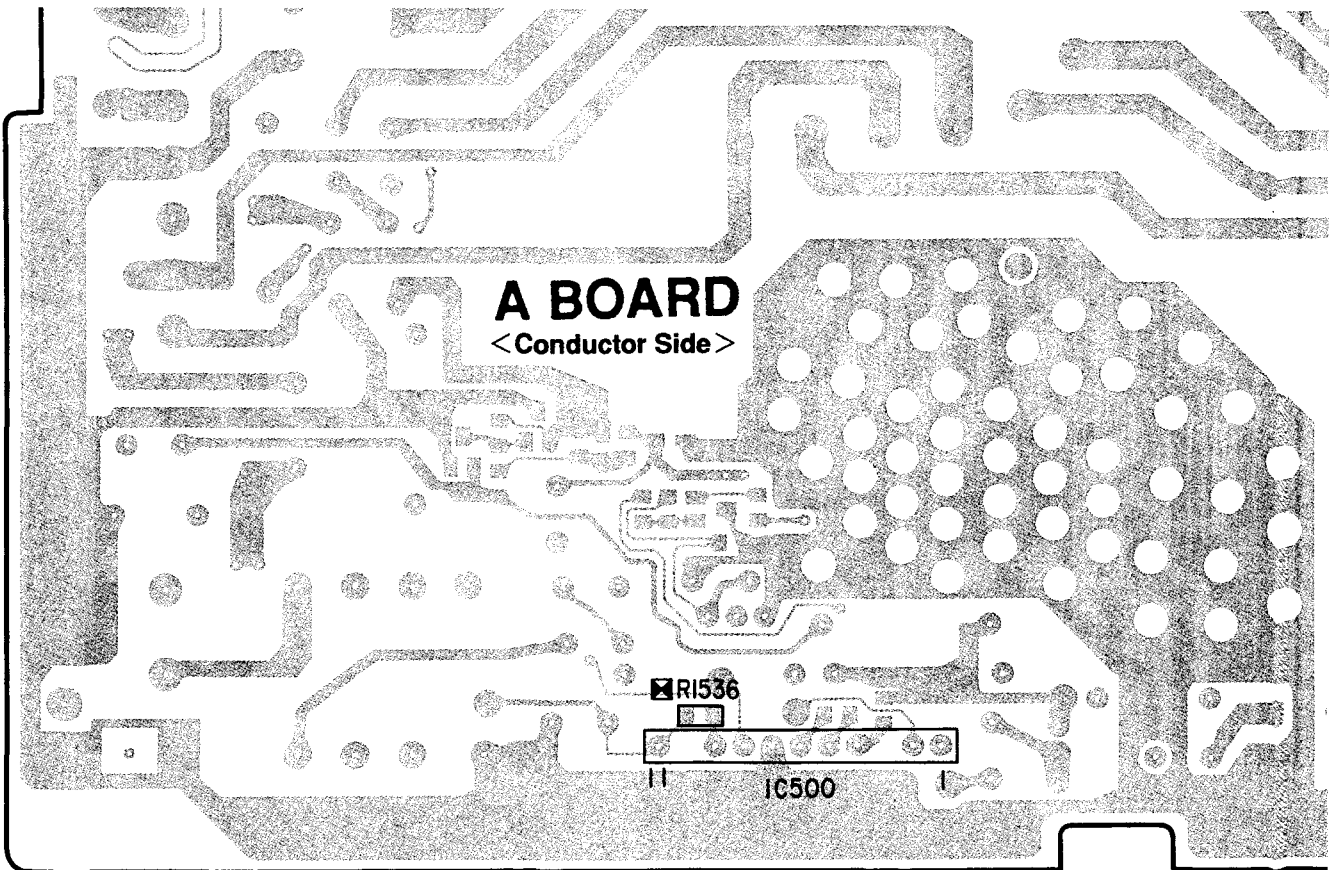

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. A BOARD ADJUSTMENT

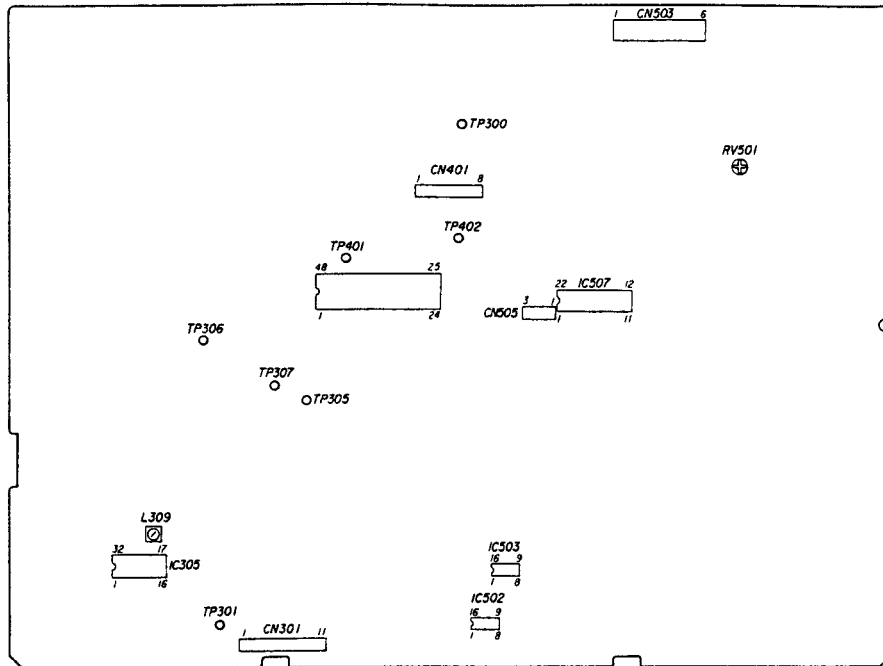

1. PREPARATION/SIGNAL SPECIFICATIONS

1. Signal specifications

* Supply a composite video or component signals from the CN301 connector. Refer to Table 5-1 to take into consideration the effect on the Q board.

The level of the signal to supply should equal to values shown in Table 5-1 plus/minus 2% max.

Table 5-1

Signal		Details of signal	Standard level (Pedestal white)	Reduction rate %	Connector supply level (P-W)
Composite video (75% color bar)	358NT 443NT	100% white	0.714V	93%	0.664V
		75% white	0.536V	♦	0.498V
		Burst (Green section) (P-P for this item only)	286mV (632mV)	94% (94%)	269mV (594mV)
	PAL SECAM PAL M	100% white	0.7V	♦	0.651V
		75% white	0.525V	♦	0.488V
		PAL burst (Green section) (P-P for this item only)	300mV (664mV)	94% (94%)	282mV (624mV)
Component (75% color bar)	BETA 0	100% white	0.7V	94.8%	0.664V
		75% white	0.525	♦	0.498V
		75% color B-Y, R-Y (P-P for this item only)	0.7V	♦	0.664V
	SMPTE	100% white	0.7V	♦	0.664V
		75% white	0.525V	♦	0.498V
		75% color B-Y, R-Y (P-P for this item only)	0.525	♦	0.498V

2. Preparation

* In this chapter, indicates the control items in the service mode.

Example: 60 H-FRQ

Write the applicable model data at the location of NO.114 MODEL in the service mode.

Group of models 4 ... 0

Group of models 5 ... 1

Group of models 1 ... 5

Group of models 2 ... 6

Group of models 3 ... 8

* Refer to Table 5-2 for the following groups of models.

Table 5-2

Group of models	Models		
1	PVM-14M4U PVM-14M4A	PVM-14M4J	PVM-14M4E
2	PVM-14M2U	PVM-14M2E	PVM-14M2A
3	PVM-14M1J		
4	PVM-20M4U PVM-20M4A	PVM-20M4J	PVM-20M4E
5	PVM-20M2U	PVM-20M2E	

* CONT 80% is the center click position of the user controller.

2. ADJUSTMENT OF DEFLECTION SYSTEM

1. Adjustment of horizontal oscillation frequency

1. Input a 525 monoscope signal.
2. CONT ... 80%
BRT 50%
3. Set the unit in the service mode.

- Connect the IC507 ① PIN on the A board to GND via the 100 μ /16V chemical capacitor. (Use CN505 ③ PIN for GND.) Or insert the H-FREQ jig into CN505.

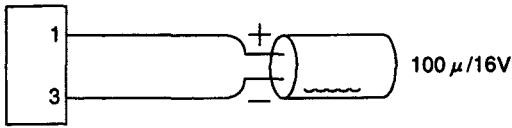


Fig.5-1 H-FREQ jig

- Adjust **[60 H-FREQ]** so that the slanting lines on the screen will be vertical. (Fig.5-2)
- Input a 625 monoscope signal.
- Adjust **[50 H-FREQ]** so that the slanting lines on the screen will be vertical. (Fig.5-2)

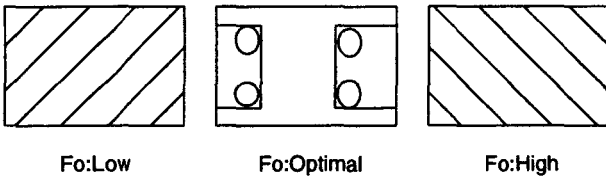


Fig.5-2

2. H BLANKING adjustment

- Input a 525 monoscope signal.
- CONT ... 80%
BRT ... 50%
- Set the unit in the service mode.
- Observe the anode of TP300 or D516 with an oscilloscope, and adjust **[H-BLANKING]** so that the waveform will be as shown in Fig.5-3.

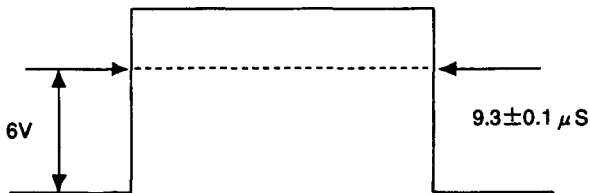


Fig.5-3

3. Picture phase adjustment

- Input a 525 monoscope signal.
- Set the unit in the UNDER SCAN mode.
- CONT ... Min.
BRT ... Max.
- Set the unit in the service mode.
- Adjust **[UN H-SIZE]** so that the white frame of the monoscope will be approx. 1 cm to the inside of the effective screen.
- Turn RV501 (H-CENT) so that $B = B'$.
- Adjust **[60 VIDEO PHASE]** so that the signal area will be in the center ($A = A'$) of the deflection area. (Fig.5-4)
- Input a 625 monoscope signal.
- Adjust **[50 VIDEO PHASE]** in the same manner.

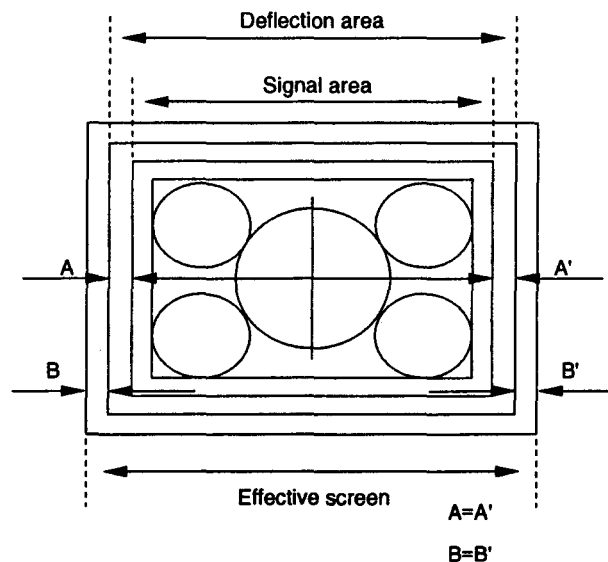


Fig.5-4

4. V BLANKING adjustment

- Input a 525 monoscope signal.
- Set the unit in the UNDER SCAN mode.
- CONT ... Min.
BRT ... Max.
- Set the unit in the service mode.
- Adjust **[V-BLANKING <60>]** so that the white frame in the upper section of the monoscope will be about to be blanked.

Note : Blanking up to the point 1H away from the white frame is permissible, but the adjusting center should be up to the point 0.5H away from the frame.

- Cancel the UNDER SCAN mode, and set the unit in the normal 16:9 mode.
- Adjust **[16:9 BLANKING START <60>]** and **[16:9 BLANKING END <60>]** so that the number of frames in the vertical direction in the luminous section of the screen will be 11.74 and the BLK quantity at the top and bottom will be the same.

Note : Make adjustment before 16:9 V-SIZE adjustment.

8. Input a 625 monoscope signal.
9. In the same way as 5. shown above, adjust **V-BLANKING <50>**.
10. Adjust **16:9 BLANKING START <50>** and **16:9 BLANKING END <50>**, in the same way as 6. and 7., so that the number of frames in the vertical direction in the luminous section of the screen will be 11.2 and the BLK quantity at the top and bottom will be the same.

5. Vertical deflection adjustment

1. Input a 525 monoscope signal.
2. CONT ... 80%
BRT ... 50%
3. Set the unit in the service mode.
4. Roughly adjust **NOR 60 V.SIZE** so that the size will be 12 frames. Adjust V.LIN with **V.LIN**. Adjust CENT with **V.CENT**. V.CENT must be reviewed after adjustment of V.LIN. Adjust **NOR 60 V.SIZE** so that it will equal the standard value.
5. Set the unit in the 16:9 mode by the user controller SW.
6. Make the same adjustment with **16:9 NOR V.SIZE <60>**.
7. Set the unit in the NORMAL SCAN mode.
8. Input a 625 signal.
9. Adjust **NOR 50 V.SIZE** so that the SIZE will equal the standard value.
10. Set the unit in the 16:9 mode.
11. Adjust **16:9 NOR V.SIZE <50>** so that it will equal the standard value.

Table 5-3 NORMAL V. SIZE standard

		525	625
4 : 3		11.75±0.2 frames	11.2±0.2 frames
16 : 9	14"	154mm	←
	20"	217mm	←

6. Horizontal deflection adjustment (Normal scan adjustment)

1. Input a 525 monoscope signal.
2. CONT ... 80%
BRT ... 50%
3. Set the unit in the service mode.
4. Rough adjustment of H.SIZE
Roughly adjust **NOR H.SIZE** so that H.SIZE will be 15.75 frames.
5. Adjust the horizontal deflection by means of **NOR PIN AMP**, **NOR PIN PHASE**, **NOR U.PIN AMP**, **SEXY**, **V BOW**, **V ANGL**, **NOR H SIZE**, **L PIN AMP**, and **L V BOW**. (While correcting a distorted parallelogram and curvature with V.ANGL and BOW, make adjustment so that the horizontal and vertical lines of the screen will be straight.)
6. Set the unit in the 16:9 mode.
7. Make the same adjustment as 5. with **16:0 NOR PIN AMP** and **16:9 NOR PIN PHASE**

Table 5-4 NORMAL H. SIZE standard

	525	625
4 : 3	11.75±0.2 frames	15.0±0.2 frames
16 : 9	11.75±0.2 frames	15.0±0.2 frames

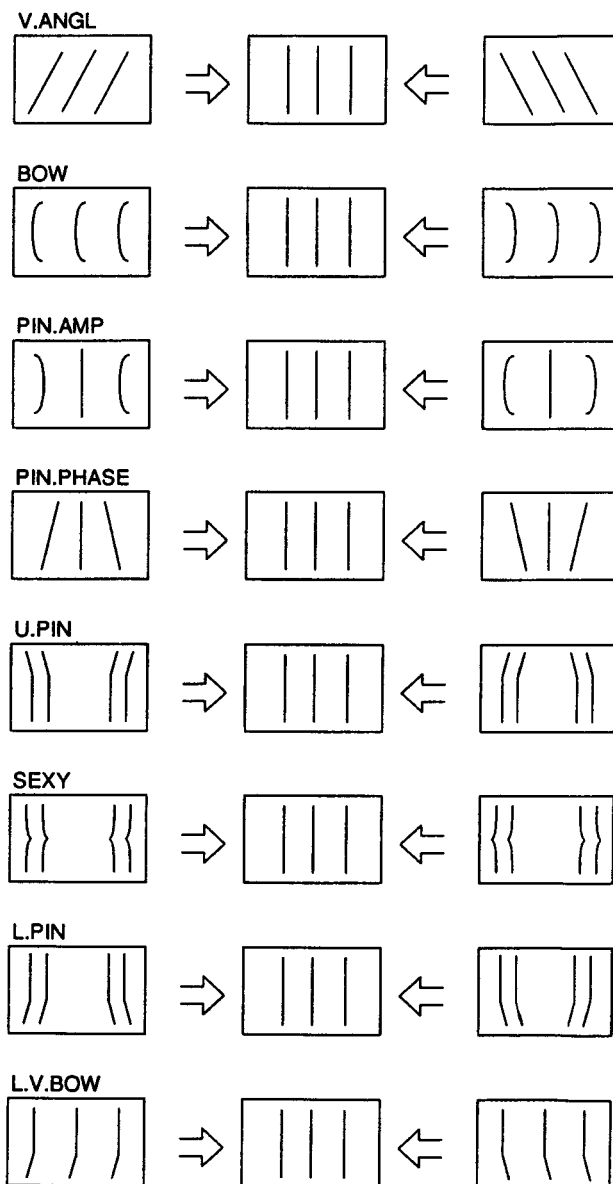


Fig.5-5

7. Horizontal deflection adjustment (UNDER SCAN adjustment)

1. Input a 525 monoscope signal.
2. CONT ... 80%
BRT 50%
3. Set the unit in the U/S mode.
4. Set the unit in the service mode.
5. Adjust **[U/S V SIZE <60>]** so that UNDER V.SIZE will be within the standard.
6. Adjust **[U/S H SIZE]** so that UNDER H.SIZE will be within the standard.
7. Adjust **[U/S PIN AMP]** and **[U/S PIN-PHASE]**. (Adjust tracking according to 5., 6., and 7.)
8. After adjustment, the white frame of the monoscope shall not be out of the effective screen.
9. Set the unit in the 16:9 mode.
10. Make the same adjustment with 5. and 7. by means of **[16:9 U/S V SIZE <60>]**, **[16:9 U/S PIN-AMP]** and **[16:9 U/S PIN-PHASE]**.

Table 5-5

Standard values for groups of models 1, 2, and 3 (14")

	525	625
U/S H-SIZE V-SIZE	252mm 188mm	←
16 : 9 U/S V-SIZE	142mm	←

Table 5-6

Standard values for groups of models 4 and 5 (20")

	525	625
U/S H-SIZE V-SIZE	364mm 272mm	←
16 : 9 U/S V-SIZE	205mm	←

11. Set the unit in the 16:9 mode.
12. Input a monoscope signal.
13. Make the same adjustment with 5. by means of **[U/S V SIZE <50>]**.
14. Set the unit in the 16:9 mode.
15. Make the same adjustment with 5. by means of **[16:9 U/S V SIZE <50>]**.

Note : If there is not time enough for adjustment (5. Vertical deflection adjustment and 6. and 7. Horizontal deflection adjustment), confirm that the respective sections will operate normally and that adjustment is possible, and then input standard adjustment values.

8. H/V-DELAY adjustment

Note : This item applies only to groups of models 1, 2, 4, and 5.

8-1. H-DELAY adjustment

- 1) Input a 525 monoscope signal.
- 2) CONT ... 80%
BRT 50%
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- 5) Connect the probe of an oscilloscope to IC503 ⑦ PIN. Adjust **[H DELAY]** so that the output waveform will be as shown in Fig.5-6.

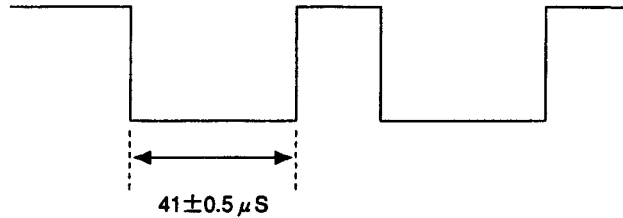


Fig.5-6

8-2. V-DELAY adjustment

- 1) Input a 525 monoscope signal.
- 2) CONT ... 80%
BRT 50%
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- 5) Connect the probe of an oscilloscope to IC502 ⑦ PIN. Adjust **[V DELAY]** so that the output waveform will be as shown in Fig.5-7.

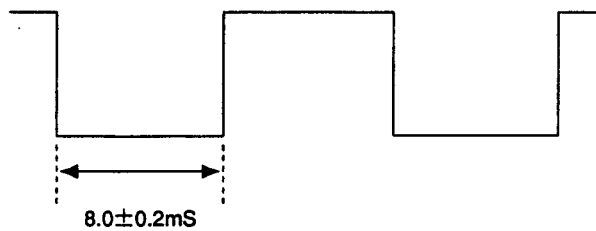


Fig.5-7

8-3. Confirmation of screen

Confirm that the screen is as shown in Fig.5-8.

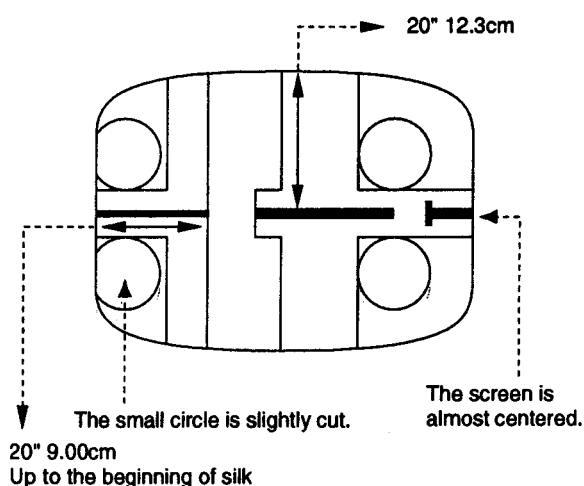


Fig.5-8

9. Writing adjustment results

Write the adjustment results.

Note : Do not turn off the power before writing the adjustment results; otherwise, they will all be lost.

3. Signal system adjustment

1. SUB CON adjustment during NORM and H/V DL

Note : H/V-DL is not applicable to the group of models 3.
Adjustment must be completed before the HUE adjustment of NTSC358/443.PAL.

1. Input a vertical white line signal.


Note : Use a vertical white line signal (without 525 burst; H width of 3μS; 100IRE).

2. CONT ... 80%
BRT 50%
3. Connect the probe of an oscilloscope to CN401 ③ PIN on the A board.
4. Set the unit in the service mode.
5. Temporarily input "69" as an adjustment value for SUB.BRIGHT. Set the values in Table 5-7 as BIAS and GAIN data of C.TEMP1 and C.TEMP2.

Table 5-7

Group of models	1, 4	2, 3, 5
BIAS GREEN	512	400
GAIN GREEN	700	700

6. Adjust the pedestal or the distance between SYNCTIP and WHITE by means of **[SUB CON <4:3, NOR>]**, **[SUB CON <4:3, H/V DELAY>]**, **[SUB CON <16:9, NOR>]**, and **[SUB CON <16:9, NOR>]**.
SUB CON <4:3, NOR>
SUB CON <16:9, NOR> (Fig.5-9)

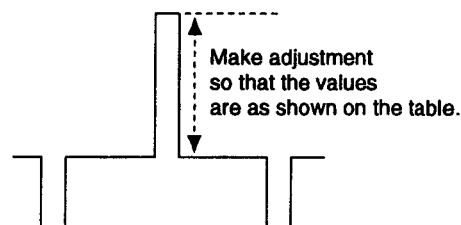


SUB-CON 4:3. H/V-DL
SUB-CON 16:9. H/V-DL

Group of models	4	1	5	2	3
4 : 3	1.39Vp-p	1.16Vp-p	1.37Vp-p	1.47Vp-p	1.47Vp-p
16 : 9	1.22Vp-p	1.04Vp-p	1.19Vp-p	1.32Vp-p	1.32Vp-p

Fig. 5-9

SUB CON <4:3. H/V DELAY>
SUB-CON <16:9. H/V DELAY> (Fig.5-10)

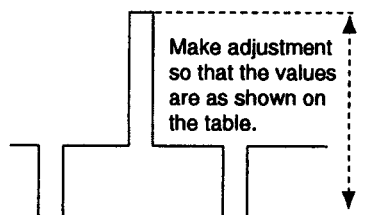

SUB-CON 4:3. H/V-DL
SUB-CON 16:9. H/V-DL

Group of models	4	1	5	2
4 : 3	1.39Vp-p	1.16Vp-p	1.37Vp-p	1.47Vp-p
16 : 9	1.22Vp-p	1.04Vp-p	1.19Vp-p	1.32Vp-p

Fig. 5-10

Note : Not applicable to PVM-14M1J

2. SUB PHASE adjustment

Note : Not applicable to the group of models 3.

1. Input a component color bar (R-Y) and EXT SYNC. (BETA 0 level signal)
2. Set the unit in the EXT SYNC mode for component input.
3. Connect the probe of an oscilloscope to IC404 ④ PIN or TP402.
4. Set the unit in the service mode.
5. Adjust **SUB PHASE** so that the output waveform will be minimum (15 mVp-p or less). (Fig.5-11)

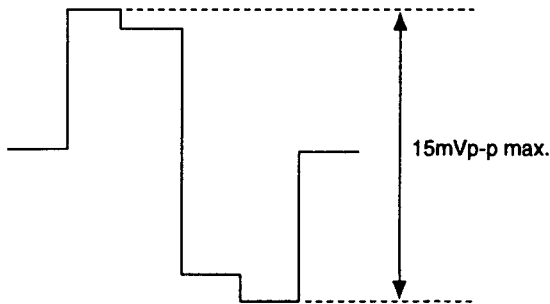


Fig. 5-11

3. SUB PHASE adjustment

Note : Not applicable to groups of models 1, 2, 4, and 5.

1. Input an NTSC color bar.
2. Connect L309 to GND and TP307 to 5V line (L320 line), respectively.
3. Set the unit in the service mode.
4. Adjust **SUB PHASE** so that the output waveform will be minimum (15 mVp-p or less). (Fig.5-11)

4. SUB CHROMA adjustment

Note : Not applicable to the group of models 3.

1. Input component color bars (R-Y, Y, and B-Y). (BETA 0 level signal)
2. Set COMPONENT LEVEL to BETA 0 via MENU.
3. Connect the probe of an oscilloscope to IC404 ④ PIN or TP402.
4. Set the unit in the service mode.
5. Adjust **SUB CHROMA NORMAL** so that the peaks of waveforms will be flush with each other as shown in Fig.5-12.

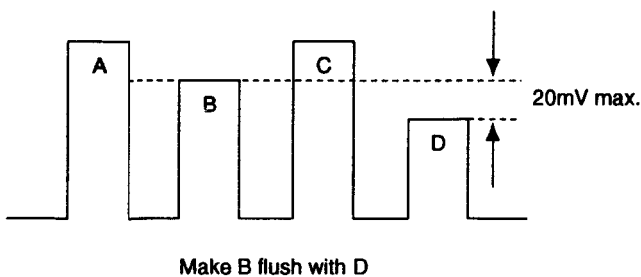


Fig. 5-12

5. SUB COL adjustment

Note : Not applicable to groups of models 1, 2, 4, and 5.

1. Set the unit in the service mode.
2. Input adjustment value 98 to **SUB CHROMA NORMAL**. (Fig.5-12)

6. R-Y LEVEL adjustment

Note : Not applicable to the group of models 3.

1. Input component color bars (R-Y, Y, and B-Y). (BETA 0 level signal)
2. Set COMPONENT LEVEL to BETA 0 via MENU.
3. Connect the probe of an oscilloscope to IC404 ④ PIN or TP401.
4. Set the unit in the service mode.
5. Adjust **R-Y LEVEL COMPONENT** so that the peaks of waveforms will be flush with each other as shown in Fig.5-13.

Make adjustment so that B = D as shown above. (20 mV max.)
Check that the difference between B and C is 30 mV or less.

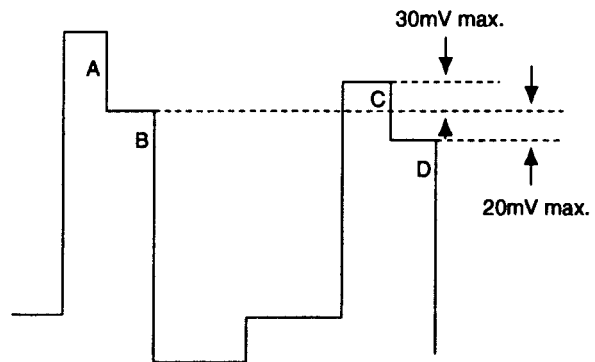


Fig. 5-13

7. SUB CHROMA N10/SMPTE

Note : Not applicable to the group of models 3.

1. Input component color bars (R-Y, Y, and B-Y). (SMPTE level signal)
2. Set COMPONENT LEVEL to N10/SMPTE via MENU.
3. Connect the probe of an oscilloscope to IC404 ④ PIN or TP402.
4. Set the unit in the service mode.
5. Adjust **SUB CHROMA SMPTE** so that the levels of B and D will be the same. (Fig.5-14)

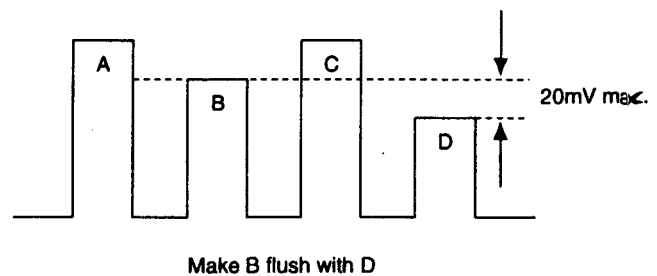


Fig. 5-14

8. Adjustment of burst gate pulse width

1. Input an NTSC color bar.
2. Connect the probe of an oscilloscope to TP301 (COMP-SYNC) and Q363 (E) or IC305 ① PIN. (Exercise care since IC305 (1) PIN is a high-impedance line.)
3. Set the unit in the service mode.
4. Adjust **BGP WIDTH** so that the output waveforms will be as shown in Fig.5-15.


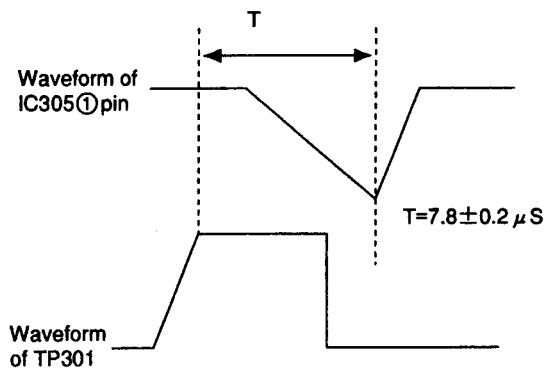


Fig. 5-15

9. VXO adjustment

- 9-1. X'tal 358
 - 1) Input an NTSC color bar.
 - 2) Connect a frequency counter to IC305 ② PIN.
 - 3) Set the unit in the service mode.
 - 4) Connect IC305 ① PIN as shown in Fig.5-16.
 - 5) Adjust **NTSC CRYSTAL** so that the counter reading will be within the standard values shown below. (Adjustment may be made at a point at which the color flickering stops.)

X'tal 358 standard value: 3579545±20 Hz

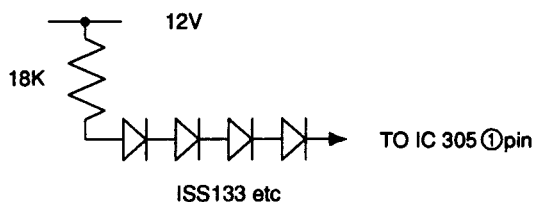

(Arrange 4 Di's as close as possible to ① PIN at the shortest possible distance.)

Fig. 5-16

9-2. X'tal 443

- 1) Input a 443 NTSC color bar.
- 2) Connect a frequency counter to IC305 ② PIN.
- 3) Set the unit in the service mode.
- 4) Connect IC305 ① PIN in the same way as 9.-4) in 9. VXO adjustment.
- 5) Adjust **NTSC 443 CRYSTAL** in the same way as 9.-5) in 9. VXO adjustment.
X'tal 443 standard value: 4433619±20 Hz

10. NTSC - NTSC443 - PAL color demodulation adjustment

Note : 10-1. is not applicable to the group of models 3.

10-1. NT358PHASE (NORMAL)

- 1) Input an NTSC color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- 5) Adjust **PHASE NTSC 358 NOR** so that the burst section of the output waveform will be straight. (Fig.5-17)

10-2. NT 358 PHASE (ACC OFF)

- 1) Conduct ACC OFF via MENU.
- 2) Make adjustment in the same way as 10-1. shown above by means of **PHASE NTSC 443 ACC OFF**. (Fig.5-17)

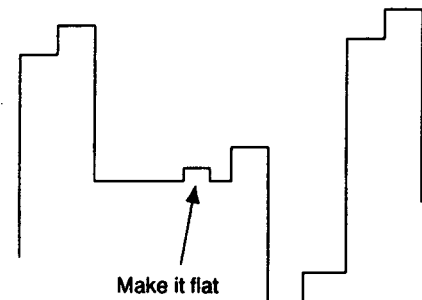


Fig. 5-17

10-3. NT 358 B-Y PHASE

Note : Make adjustment after PHASE adjustment and before CHROMA adjustment.

- 1) Input an NTSC color bar. (Input only the R-Y component. B-Y and Y should be OFF.)
- 2) Connect the probe of an oscilloscope to TP305.
- 3) Set the unit in the service mode.
- 4) Adjust **B-Y PHASE NTSC 358** so that the color components will be straight.

10-4. NT 358 CHROMA (NORMAL)

- 1) Input an NTSC color bar.
- 2) Connect the probe of an oscilloscope to IC404 ③ PIN or TP402.
- 3) Set the unit in the service mode.
- 4) Adjust **CHROMA NTSC 358 NOR** so that the peaks of waveforms will be flush with each other as shown in Fig.5-18.

10-5. NT 358 CHROMA (ACC OFF)

Note : 10-5. is not applicable to the group of models 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust **CHROMA NTSC 358 ACC OFF** in the same way as 10-4. shown above. (Fig.5-18)

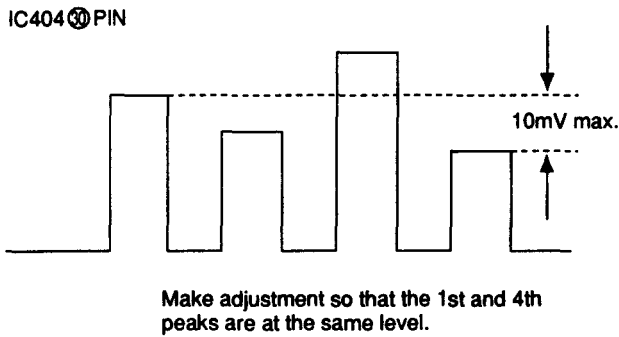


Fig. 5-18

10-6. NTSC 358 R-Y LEVEL

Note : Be sure to set ACC in the ON position before this adjustment.

- 1) Input an NTSC 358 color bar.
- 2) Connect the probe of an oscilloscope to IC 404 ④PIN or TP401.
- 3) Set the unit in the service mode.
- 4) Adjust **R-Y LEVEL NTSC 358** so that the peaks of waveforms will be flush with each other as shown in Fig.5-19.

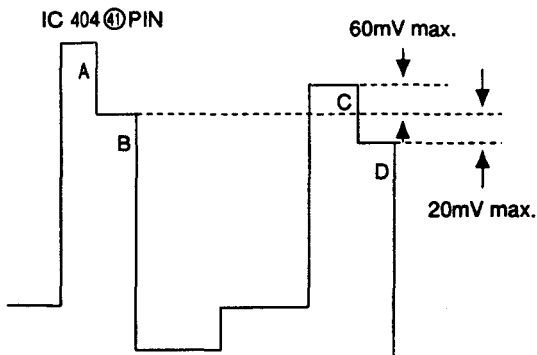


Fig. 5-19

10-7. NTSC 443 PHASE (NORMAL)

Note : 10-7-3). is not applicalbe to the group of models 3.

- 1) Input an NTSC 443 color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the H/V DELAY mode.
- 4) Set the unit in the service mode.
- 5) Adjust **PHASE NTSC 443 NOR** so that the burst section of the output waveform will be straight. (Fig.5-20)

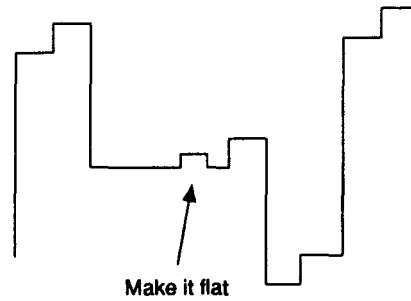


Fig. 5-20

10-8. NTSC 443 PHASE (ACC OFF)

Note : 10-8. is not applicable to group of models 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust **PHASE NTSC 443 ACC OFF** in the same way as 10-7-5). (Fig.5-21)

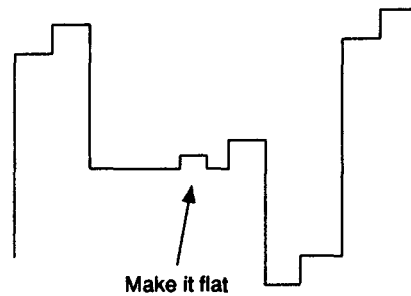


Fig. 5-21

10-9. NTSC 443 B-Y PHASE
NTSC 443 CHROMA NOR

Note : Be sure to set ACC in the ON position before this adjustment.

Note : Remove HV.DELAY before this adjustment.

- 1) Input an NTSC 443 color bar.
- 2) Connect the probe of an oscilloscope to TP402.
- 3) Set the unit in the service mode.
- 4) While tracking by means of **[B-Y PHASE NTSC 443]** and **[CHROMA NTSC 443 NOR]**, make adjustment so that the peaks of waveforms will be the same. (Fig.5-22)

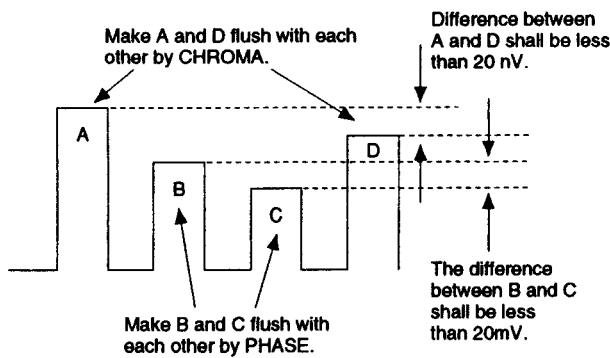


Fig. 5-22

10-10. NTSC 443 CHROMA (ACC OFF)

Note : 10-10. is not applicable to the group of models 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust **[CHROMA NTSC 443 ACC OFF]** in the same way as 10-9-4). (Fig.5-23)

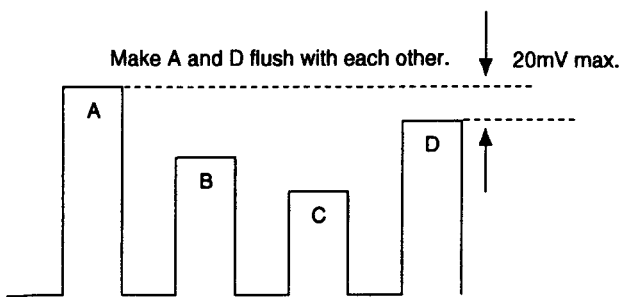


Fig. 5-23

10-11. NT 443 R-Y LEVEL

Note : Be sure to set ACC in the ON position before this adjustment.

- 1) Input an NTSC 443 color bar.
- 2) Connect the probe of an oscilloscope to TP401.
- 3) Set the unit in the service mode.
- 4) Adjust **[R-Y LEVEL NTSC 443]** in the same way as 10-6-4). (Fig.5-24)

Make adjustment so that B = D. (20 mV max.) Check that the difference between B and C is 60 mV or less.


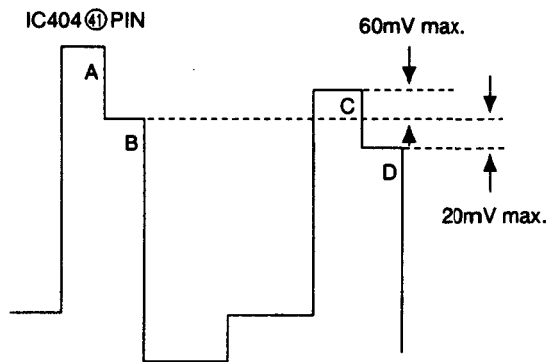


Fig. 5-24

10-12. PAL PHASE (NORMAL)

- 1) Input a PAL SP color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the service mode.
- 4) Adjust **[PHASE PAL NOR]** so that the waveform of the B-Y anti-PAL signal will be "0."

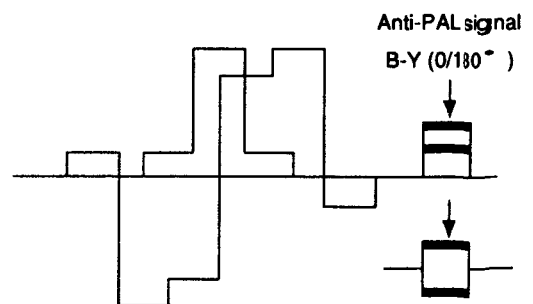

*The signal waveform differs slightly every hour. Adjust it to "0."

Fig. 5-25 R-Y OUT

10-13. PAL PHASE (ACC OFF)


Note : 10-13. is not applicable to the group of models 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust **[PHASE PAL ACC OFF]** in the same way as 10-12-4).

10-14. PAL B-Y PHASE

Note : Be sure to set ACC in the ON position before this adjustment.

- 1) Input a PAL SP color bar.
- 2) Connect the probe of an oscilloscope to TP305.
- 3) Set the unit in the service mode.
- 4) Adjust **[B-Y PHASE PAL]** so that the waveform of the R-Y anti-PAL signal will be "0." (Fig.5-26)

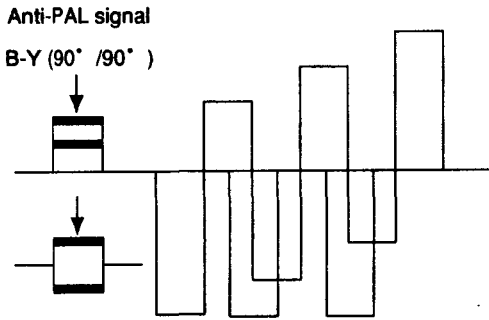

*The signal waveform differs slightly every hour. Adjust it to "0."

Fig. 5-26 B-Y OUT

10-15. PAL CHROMA (NORMAL)

- 1) Input a PAL color bar.
- 2) Connect the probe of an oscilloscope to IC404 ⑩ PIN or TP402.
- 3) Set the unit in the service mode.
- 4) Adjust **[CHROMA PAL NOR]** so that the peaks of waveforms will be flush with each other. (Fig.5-27)

10-16. PAL CHROMA (ACC OFF)

Note : 10-16. is not applicable to the group of model 3.

- 1) Conduct ACC OFF via MENU.
- 2) Adjust **[CHROMA PAL ACC OFF]** in the same way as 10-15-4).(Fig.5-27)

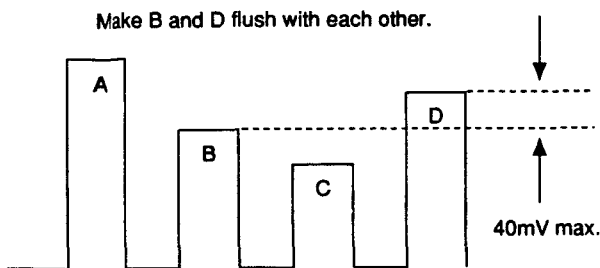


Fig. 5-27

10-17. PAL R-Y LEVEL

Note : Be sure to set ACC in the ON position before this adjustment.

- 1) Input a PAL color bar.
- 2) Connect the probe of an oscilloscope to IC404 ④ PIN or TP401.
- 3) Set the unit in the service mode.
- 4) Adjust **[R-Y LEVEL PAL]** so that the peaks of waveforms will be flush with each other as shown on the right. (Fig.5-28)

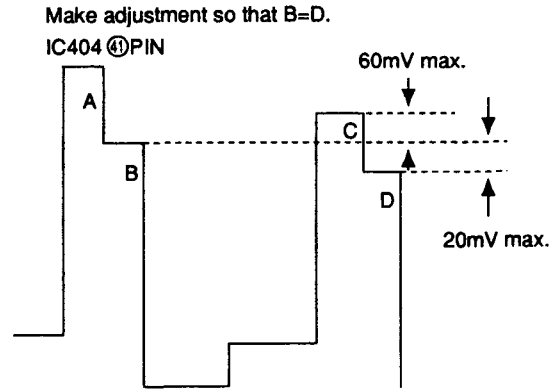


Fig. 5-28

11. SECAM adjustment

Note : Make adjustment after deflection adjustment.

Note : Subject to H-FREQ, H-BLK, VIDEO-PHASE, ANGLE, BOW, H-DELAY, etc.


Note: 11. SECAM adjustment is not applicable to the group of models 3.

11-1. HP WIDTH (NORMAL) adjustment

- 1) Input a SECAM color bar.

Note : The board is roughly adjusted in 11-1., and IC317 ⑩ PIN pulse width may be used for control.

- 2) Set the unit in the UNDER SCAN mode.
- 3) Set the unit in the service mode.
- 4) Adjust **[HP WIDTH NOR]** so that the color section at the left edge of the upper portion of the screen is about to disappear. (Fig.5-29)

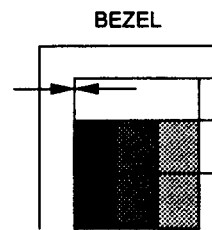

Make adjustment so that colors are about to disappear.

Fig. 5-29

11-2. Writing HP.WIDTH (NORMAL) data

Note : Not applicable to groups of models 1, 2, 4, and 5.

- 1) Set the unit in the service mode.
- 2) Input 102 to HP.WIDTH (NOR).

11-3. HP POSITION adjustment

Note : 11-3. is not applicable to the group of models 3.

- 1) Input a SECAM color bar.
- 2) Set the HV-DL mode.
- 3) Set the unit in the service mode.
- 4) Adjust **HP POSITION** as shown in Fig.5-30.

Note : The same as 11-3. The phase relationship between the beginning of IC317 ⑩ PIN pulse and the input VIDEO signal may be used for control.

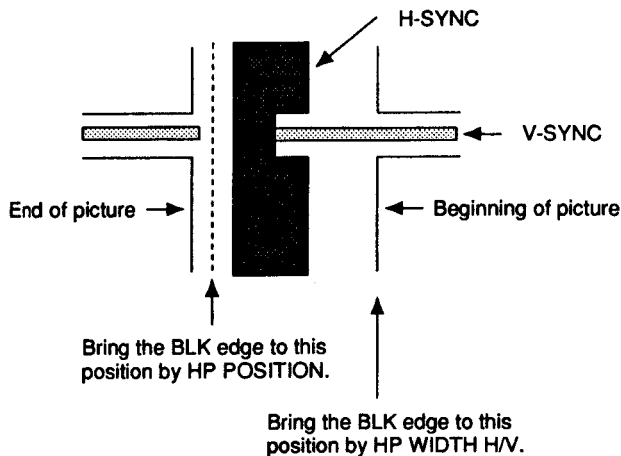


Fig. 5-30

11-4. HP WIDTH (H/V-DL) adjustment

Note : 11-4. is not applicable to the group of models 3.

- 1) Input a SECAM color bar.
- 2) Set the unit in the HV-DELAY mode.
- 3) Set the unit in the service mode.
- 4) Adjust **HP WIDTH H/V-DELAY** as shown in Fig.5-30. (Note: Check HP POSITION. If it is not in position, repeat 2) and 3).)

11-5. SECAM COL BALANCE

Note : 11-5. is not applicable to the group of models 3.

- 1) Input a SECAM color bar.
- 2) Connect the probe of an oscilloscope to TP306.
- 3) Set the unit in the service mode.
- 4) Adjust **SECAM COLOR BALANCE R-Y** so that the level in the achromatic color will be straight.

- 5) Connect the probe of an oscilloscope to TP305.

- 6) Adjust **SECAM COLOR BALANCE B-Y** so that the level in the achromatic color will be straight.

11-6. SECAM CHROMA

- 1) Input a SECAM color bar.
- 2) Connect the probe of an oscilloscope to IC404 ⑩ PIN or TP402.
- 3) Set the unit in the service mode.
- 4) Adjust **CHROMA SECAM** so that the peaks of waveforms will be flush with each other as shown in Fig.5-31.

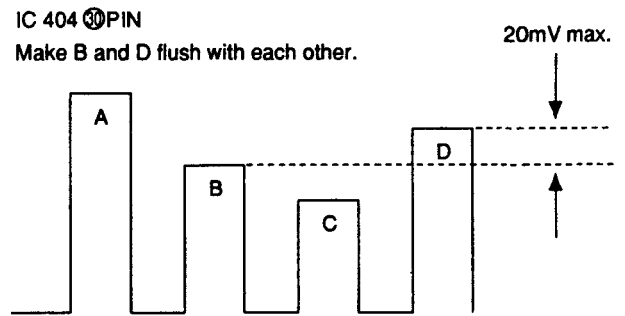


Fig. 5-31

11-7. SECAM R-Y LEVEL

- 1) Input a SECAM color bar.
- 2) Connect the probe of an oscilloscope to IC404 ⑩ PIN or TP401.
- 3) Set the unit in the service mode.
- 4) Adjust **R-Y LEVEL SECAM** so that the peaks of waveforms will be flush with each other as shown in Fig.5-32.

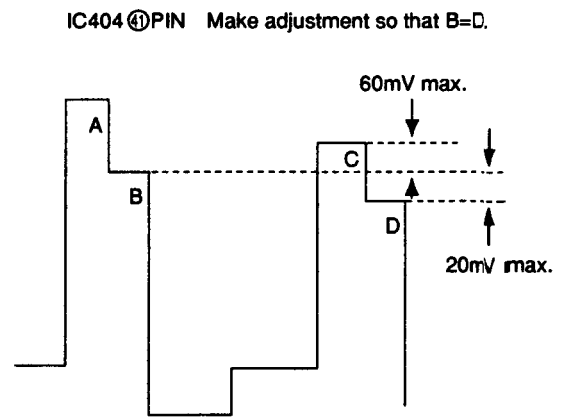



Fig. 5-32


12. Writing adjustment results


Write adjustment results in the memory.

SECTION 6 DIAGRAMS




6-1. BLOCK DIAGRAMS (1)

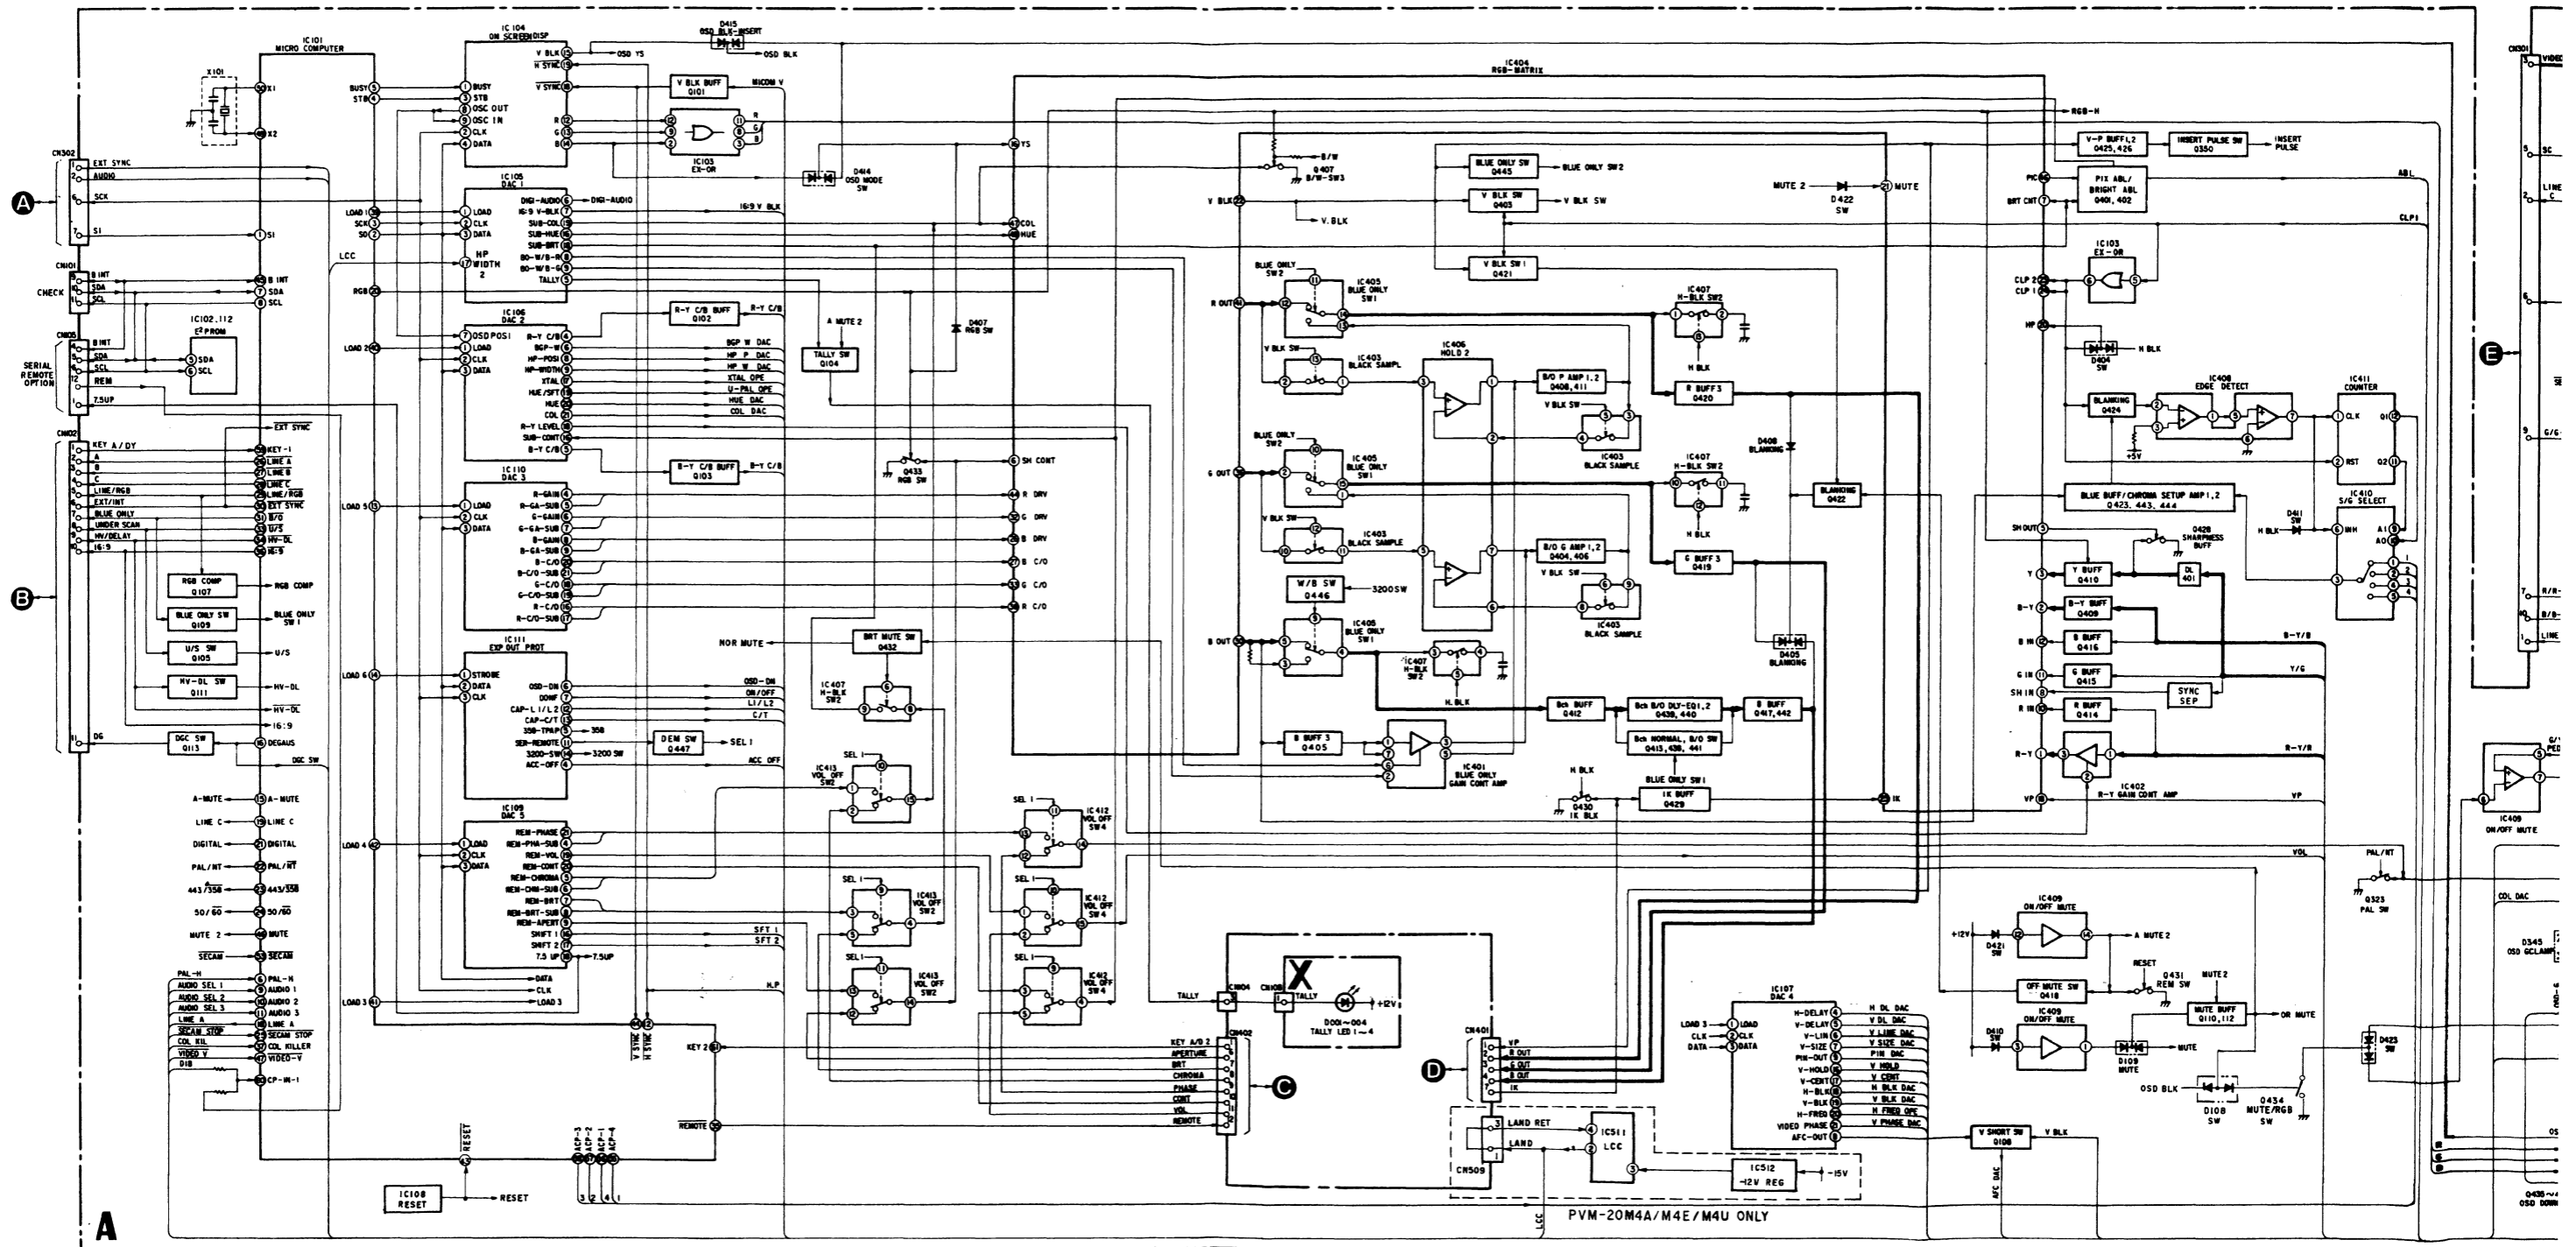


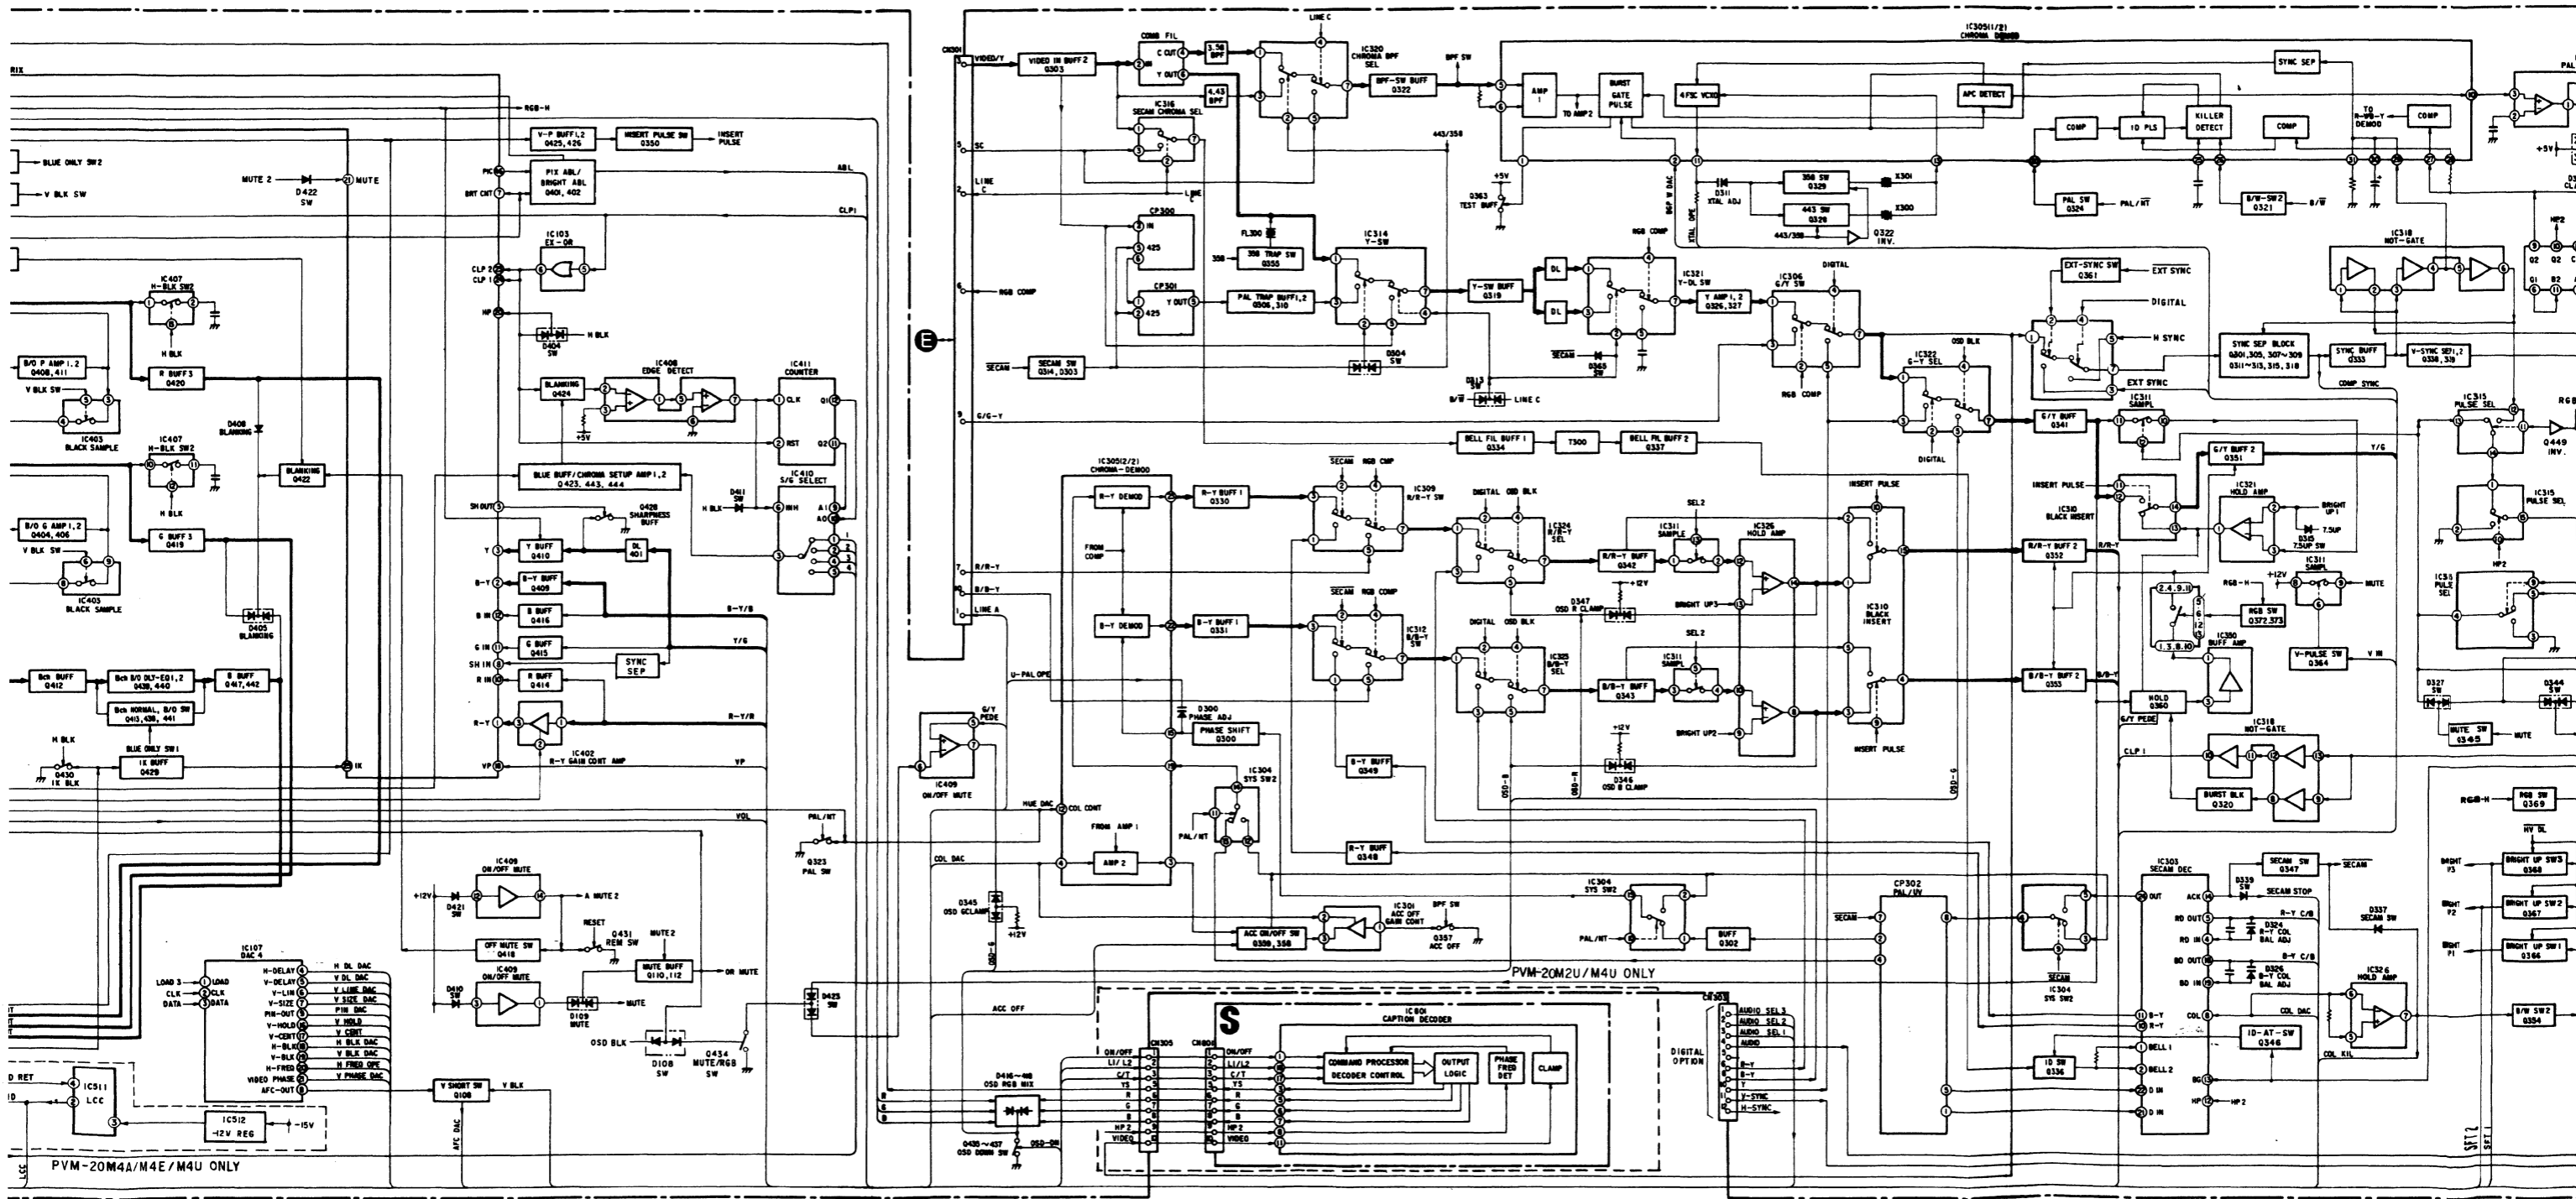

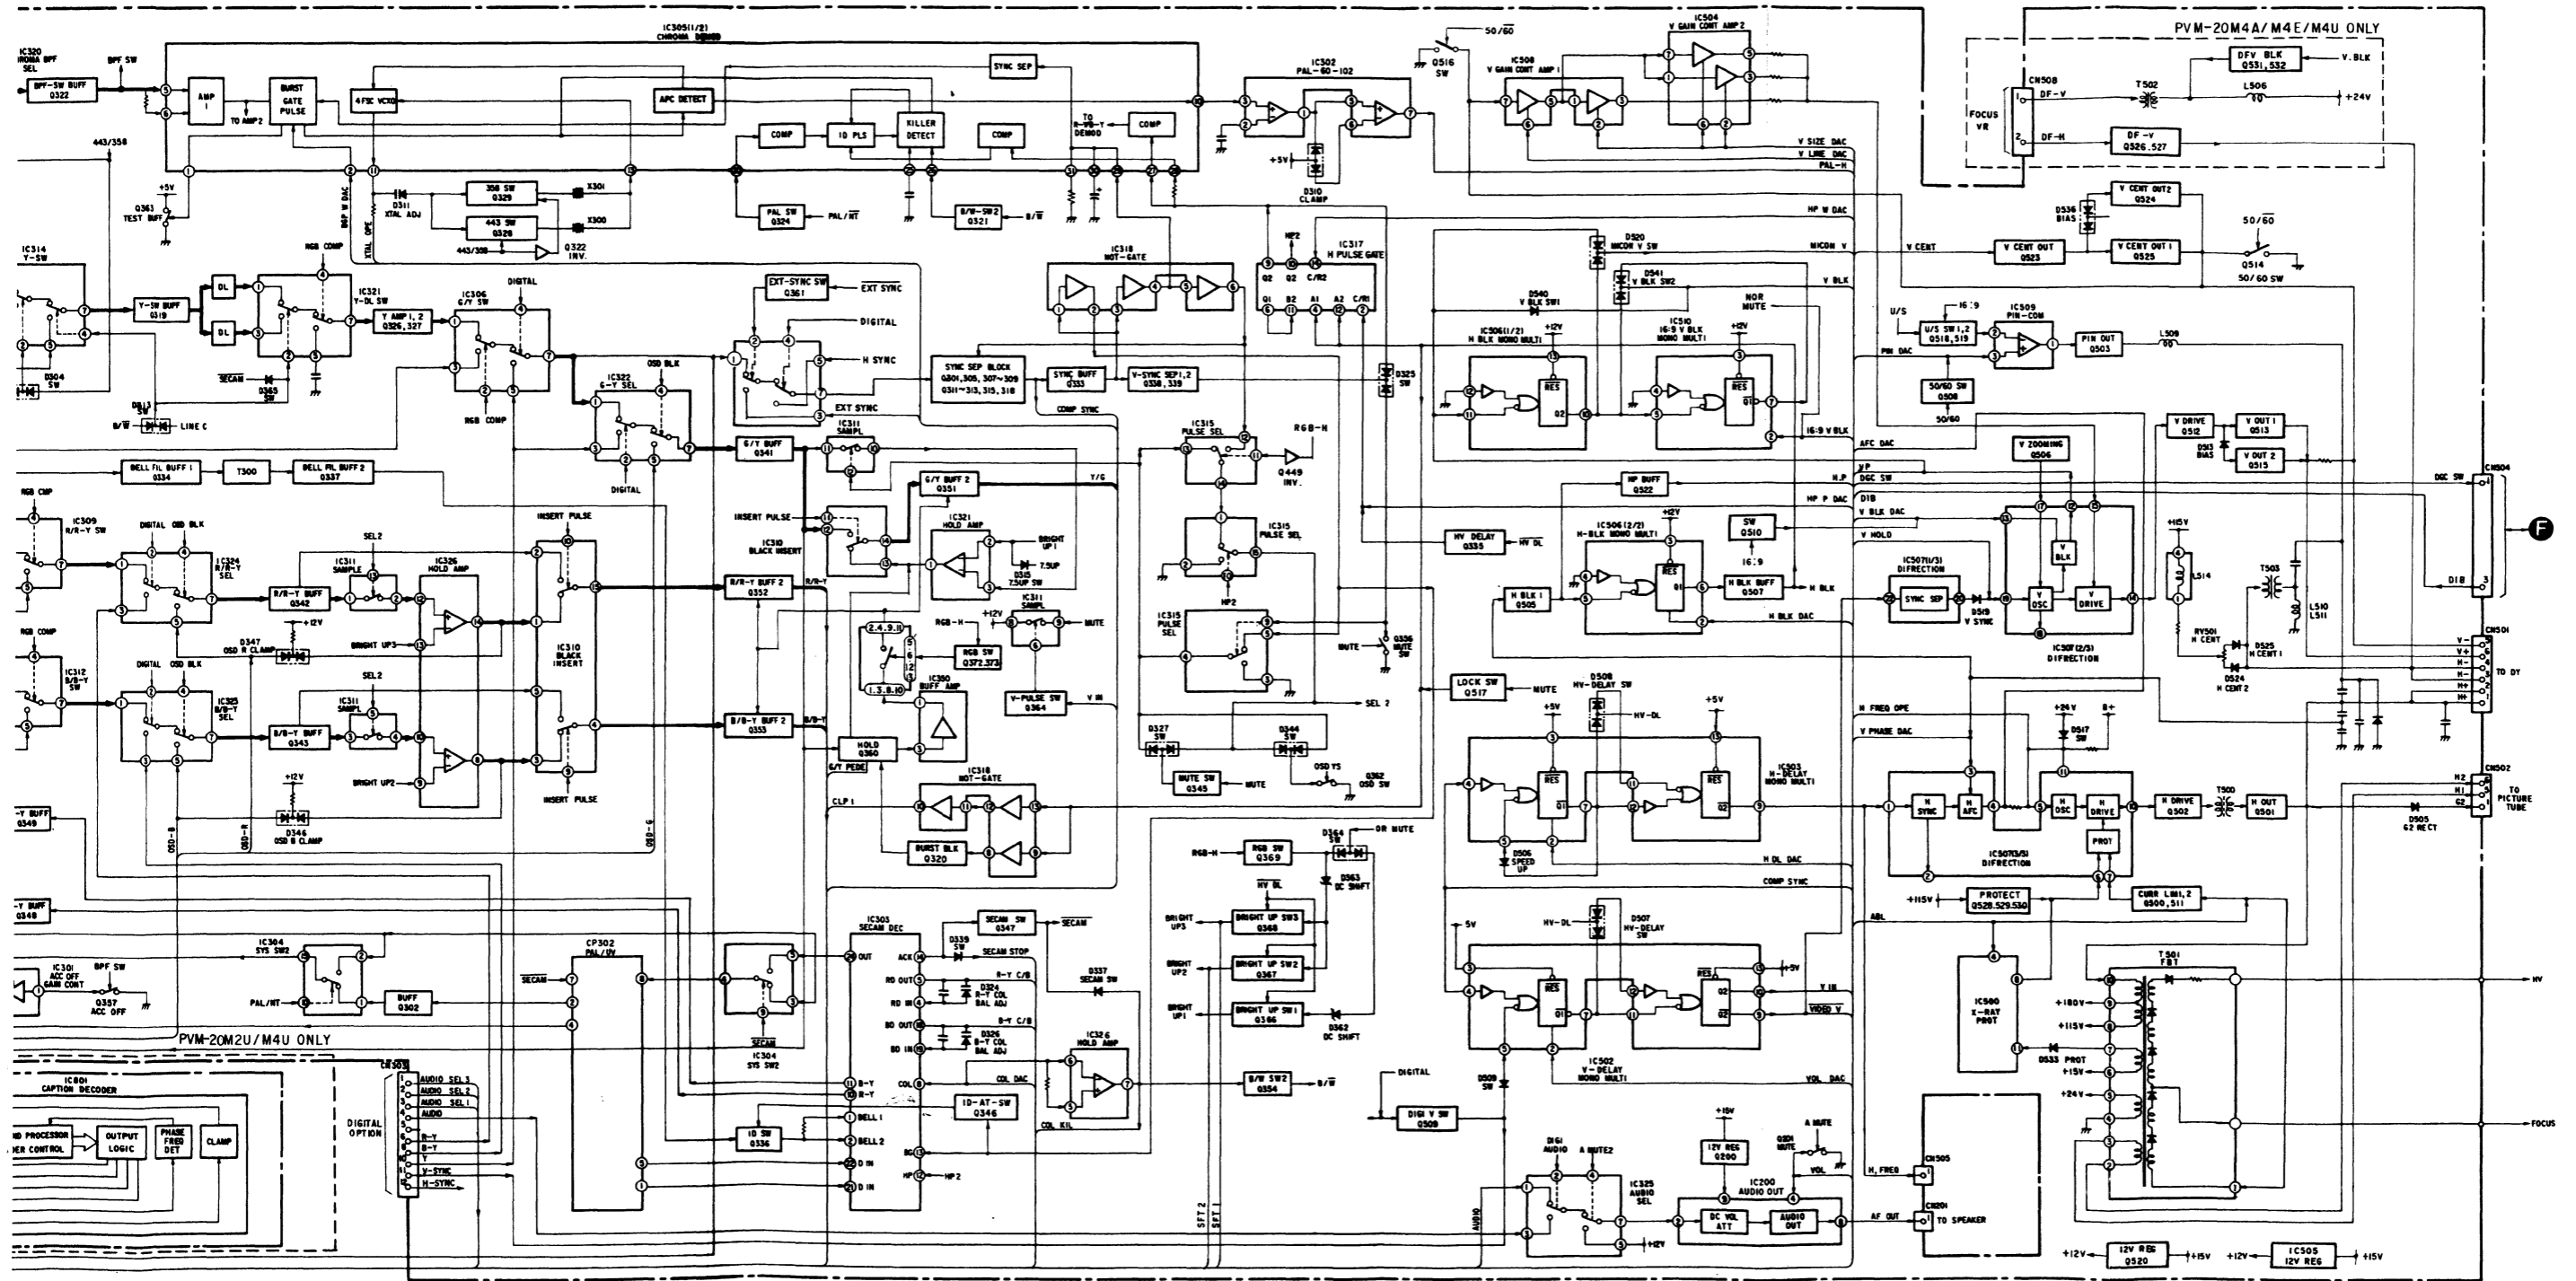


BLOCK DIAGRAMS (2)

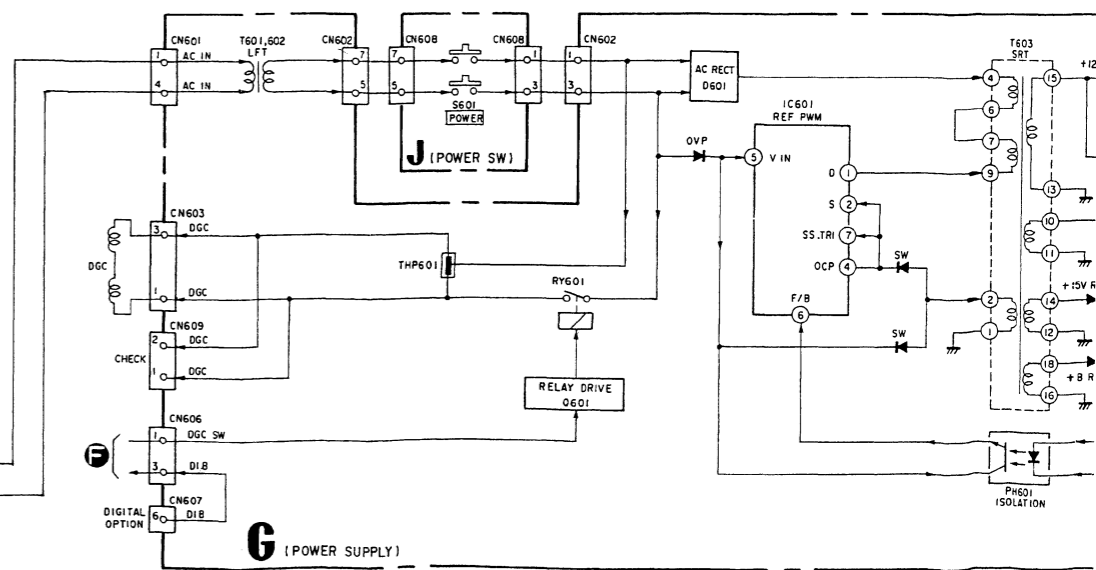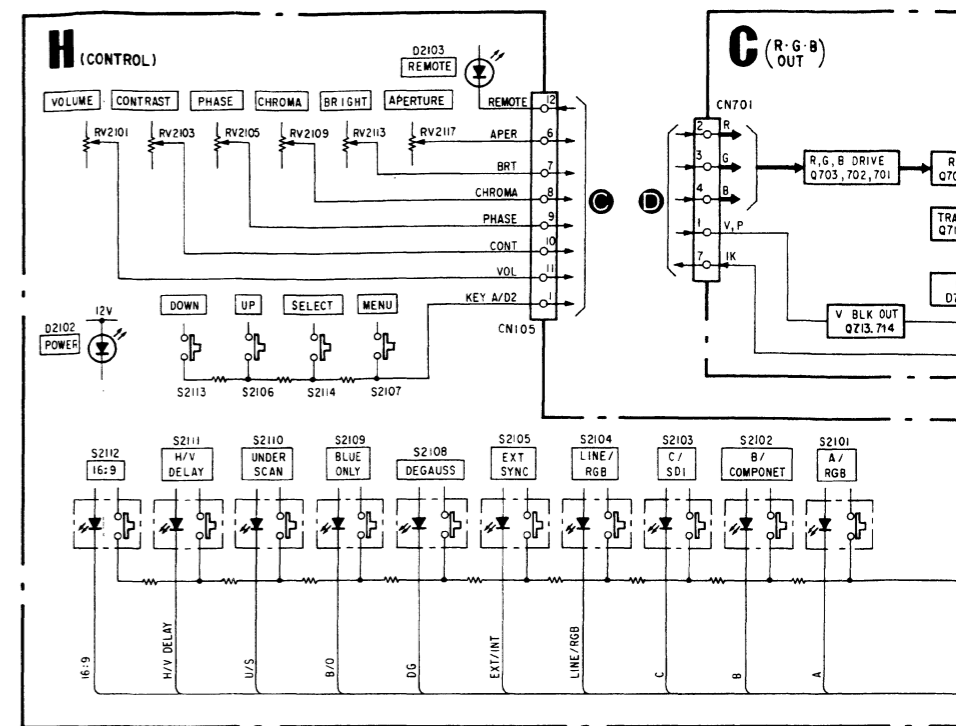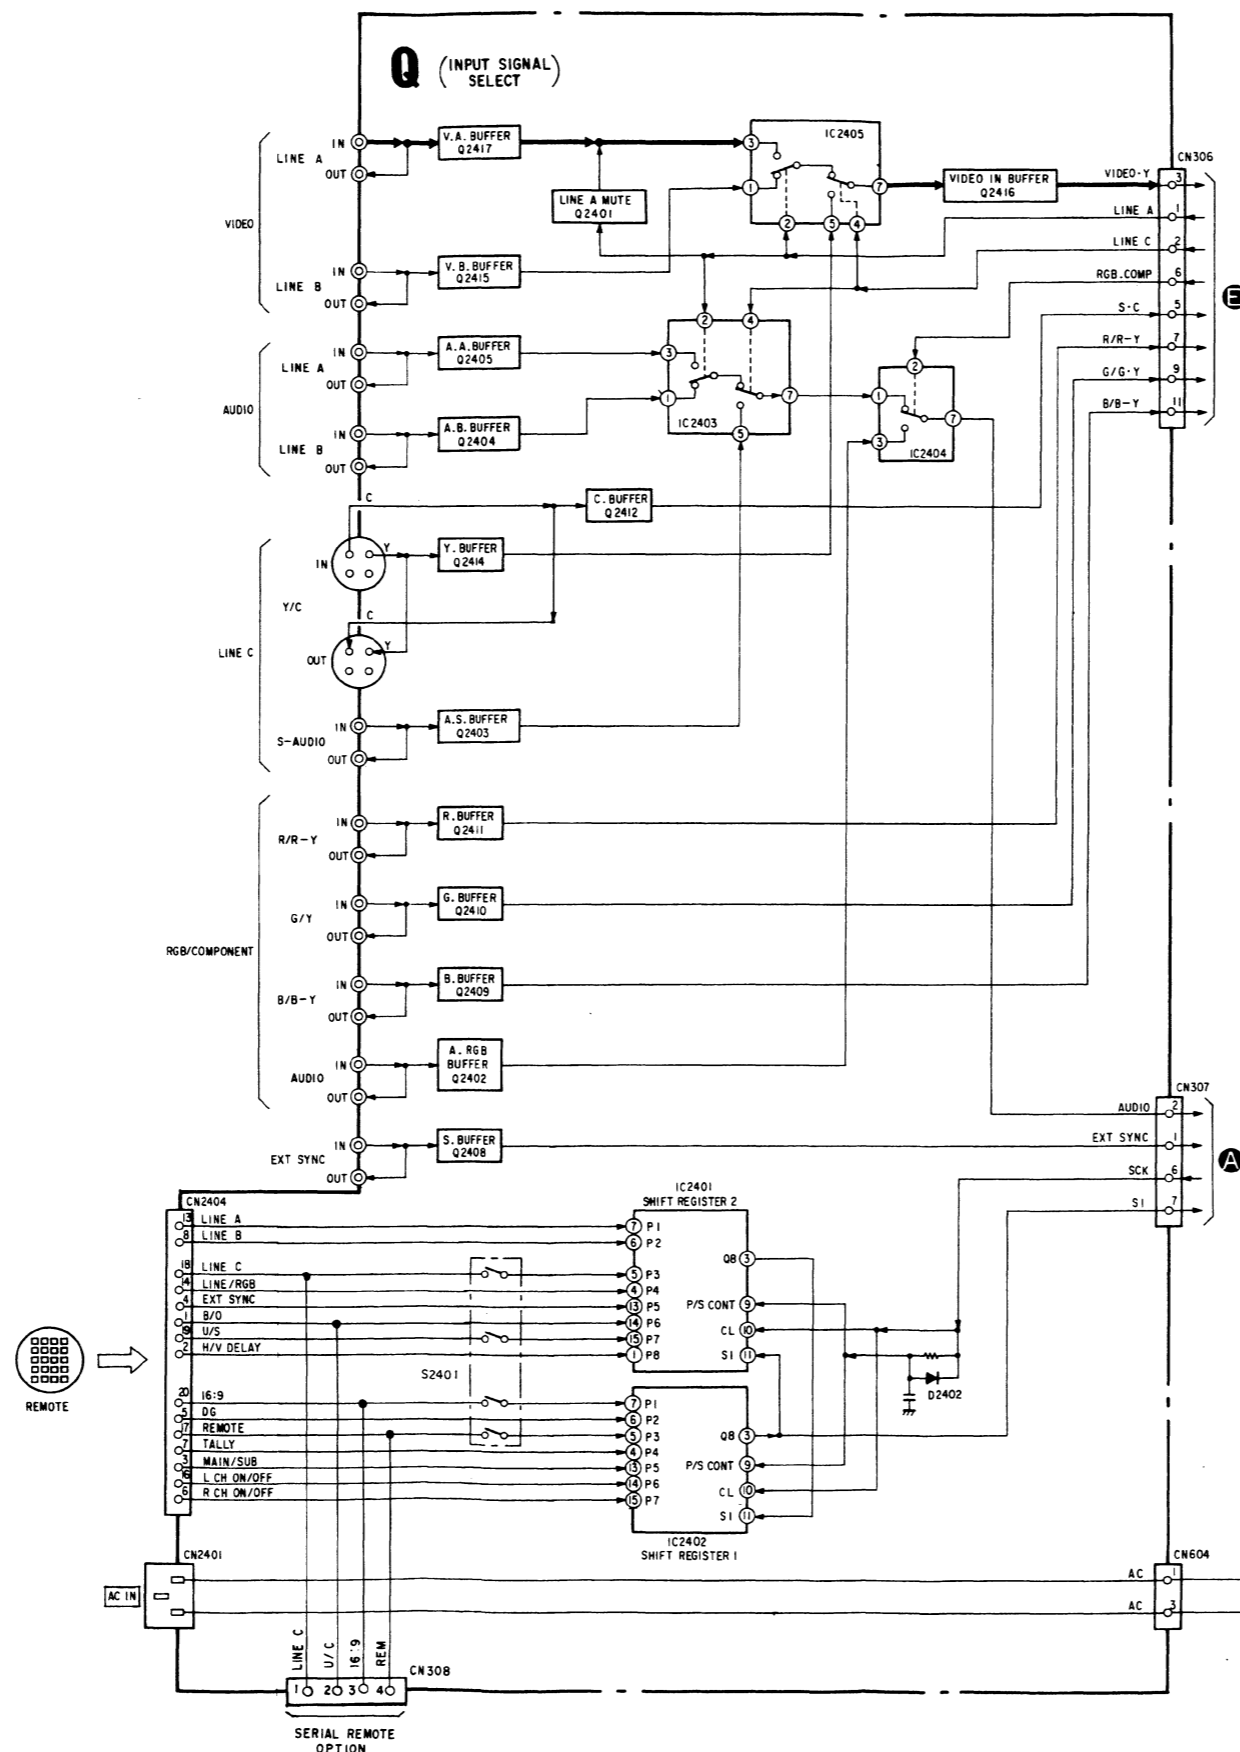

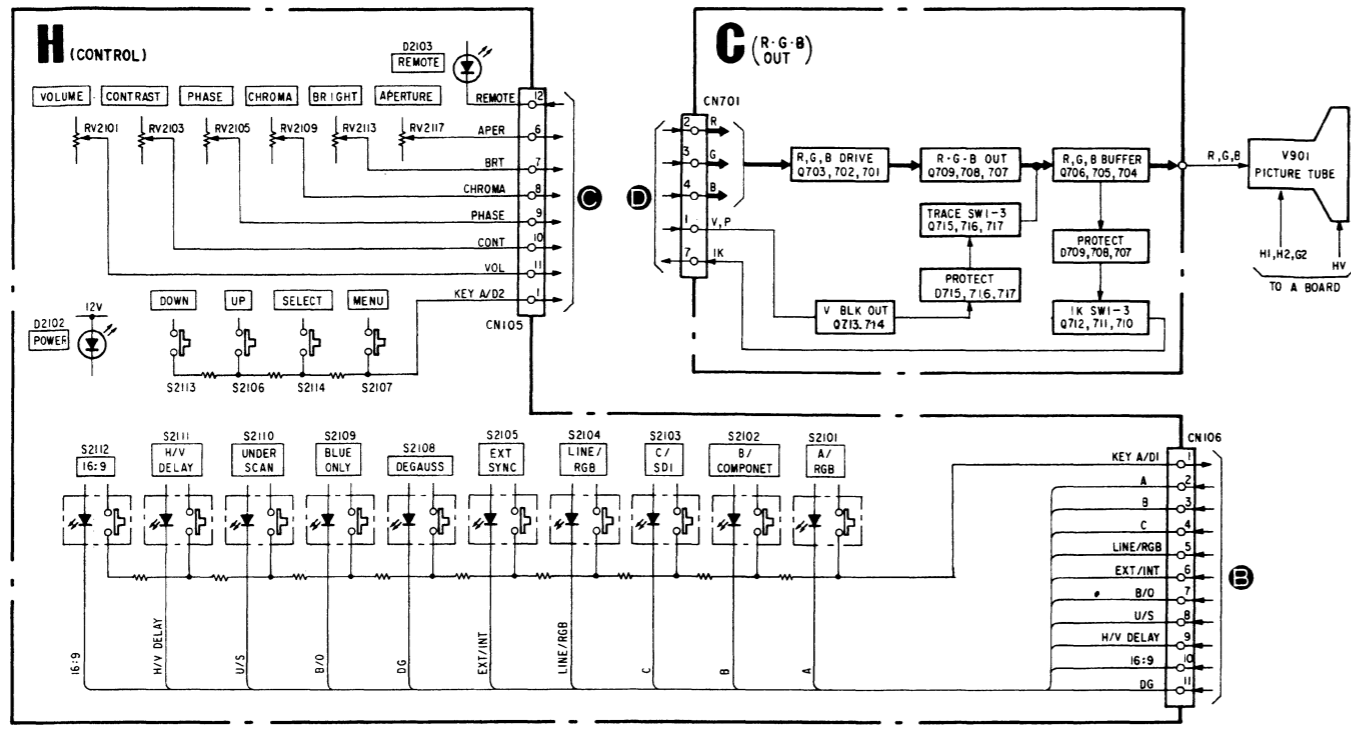

E


A

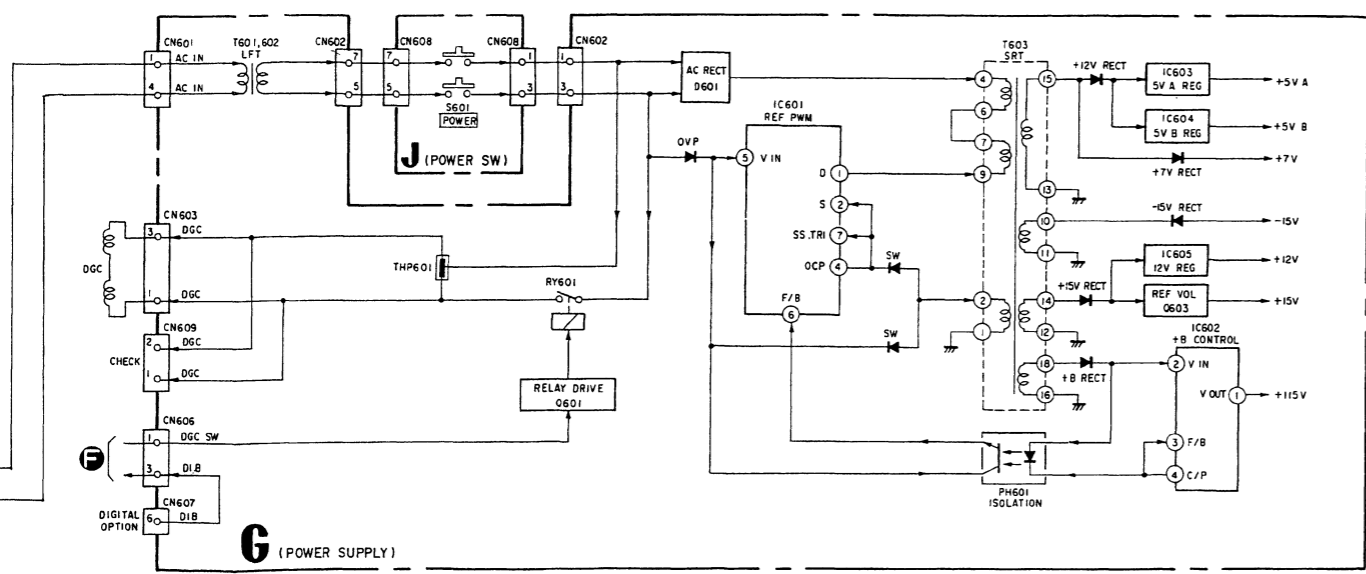


F

G (POWER SUPPLY)

6-2. FRAME SCHEMATIC DIAGRAM

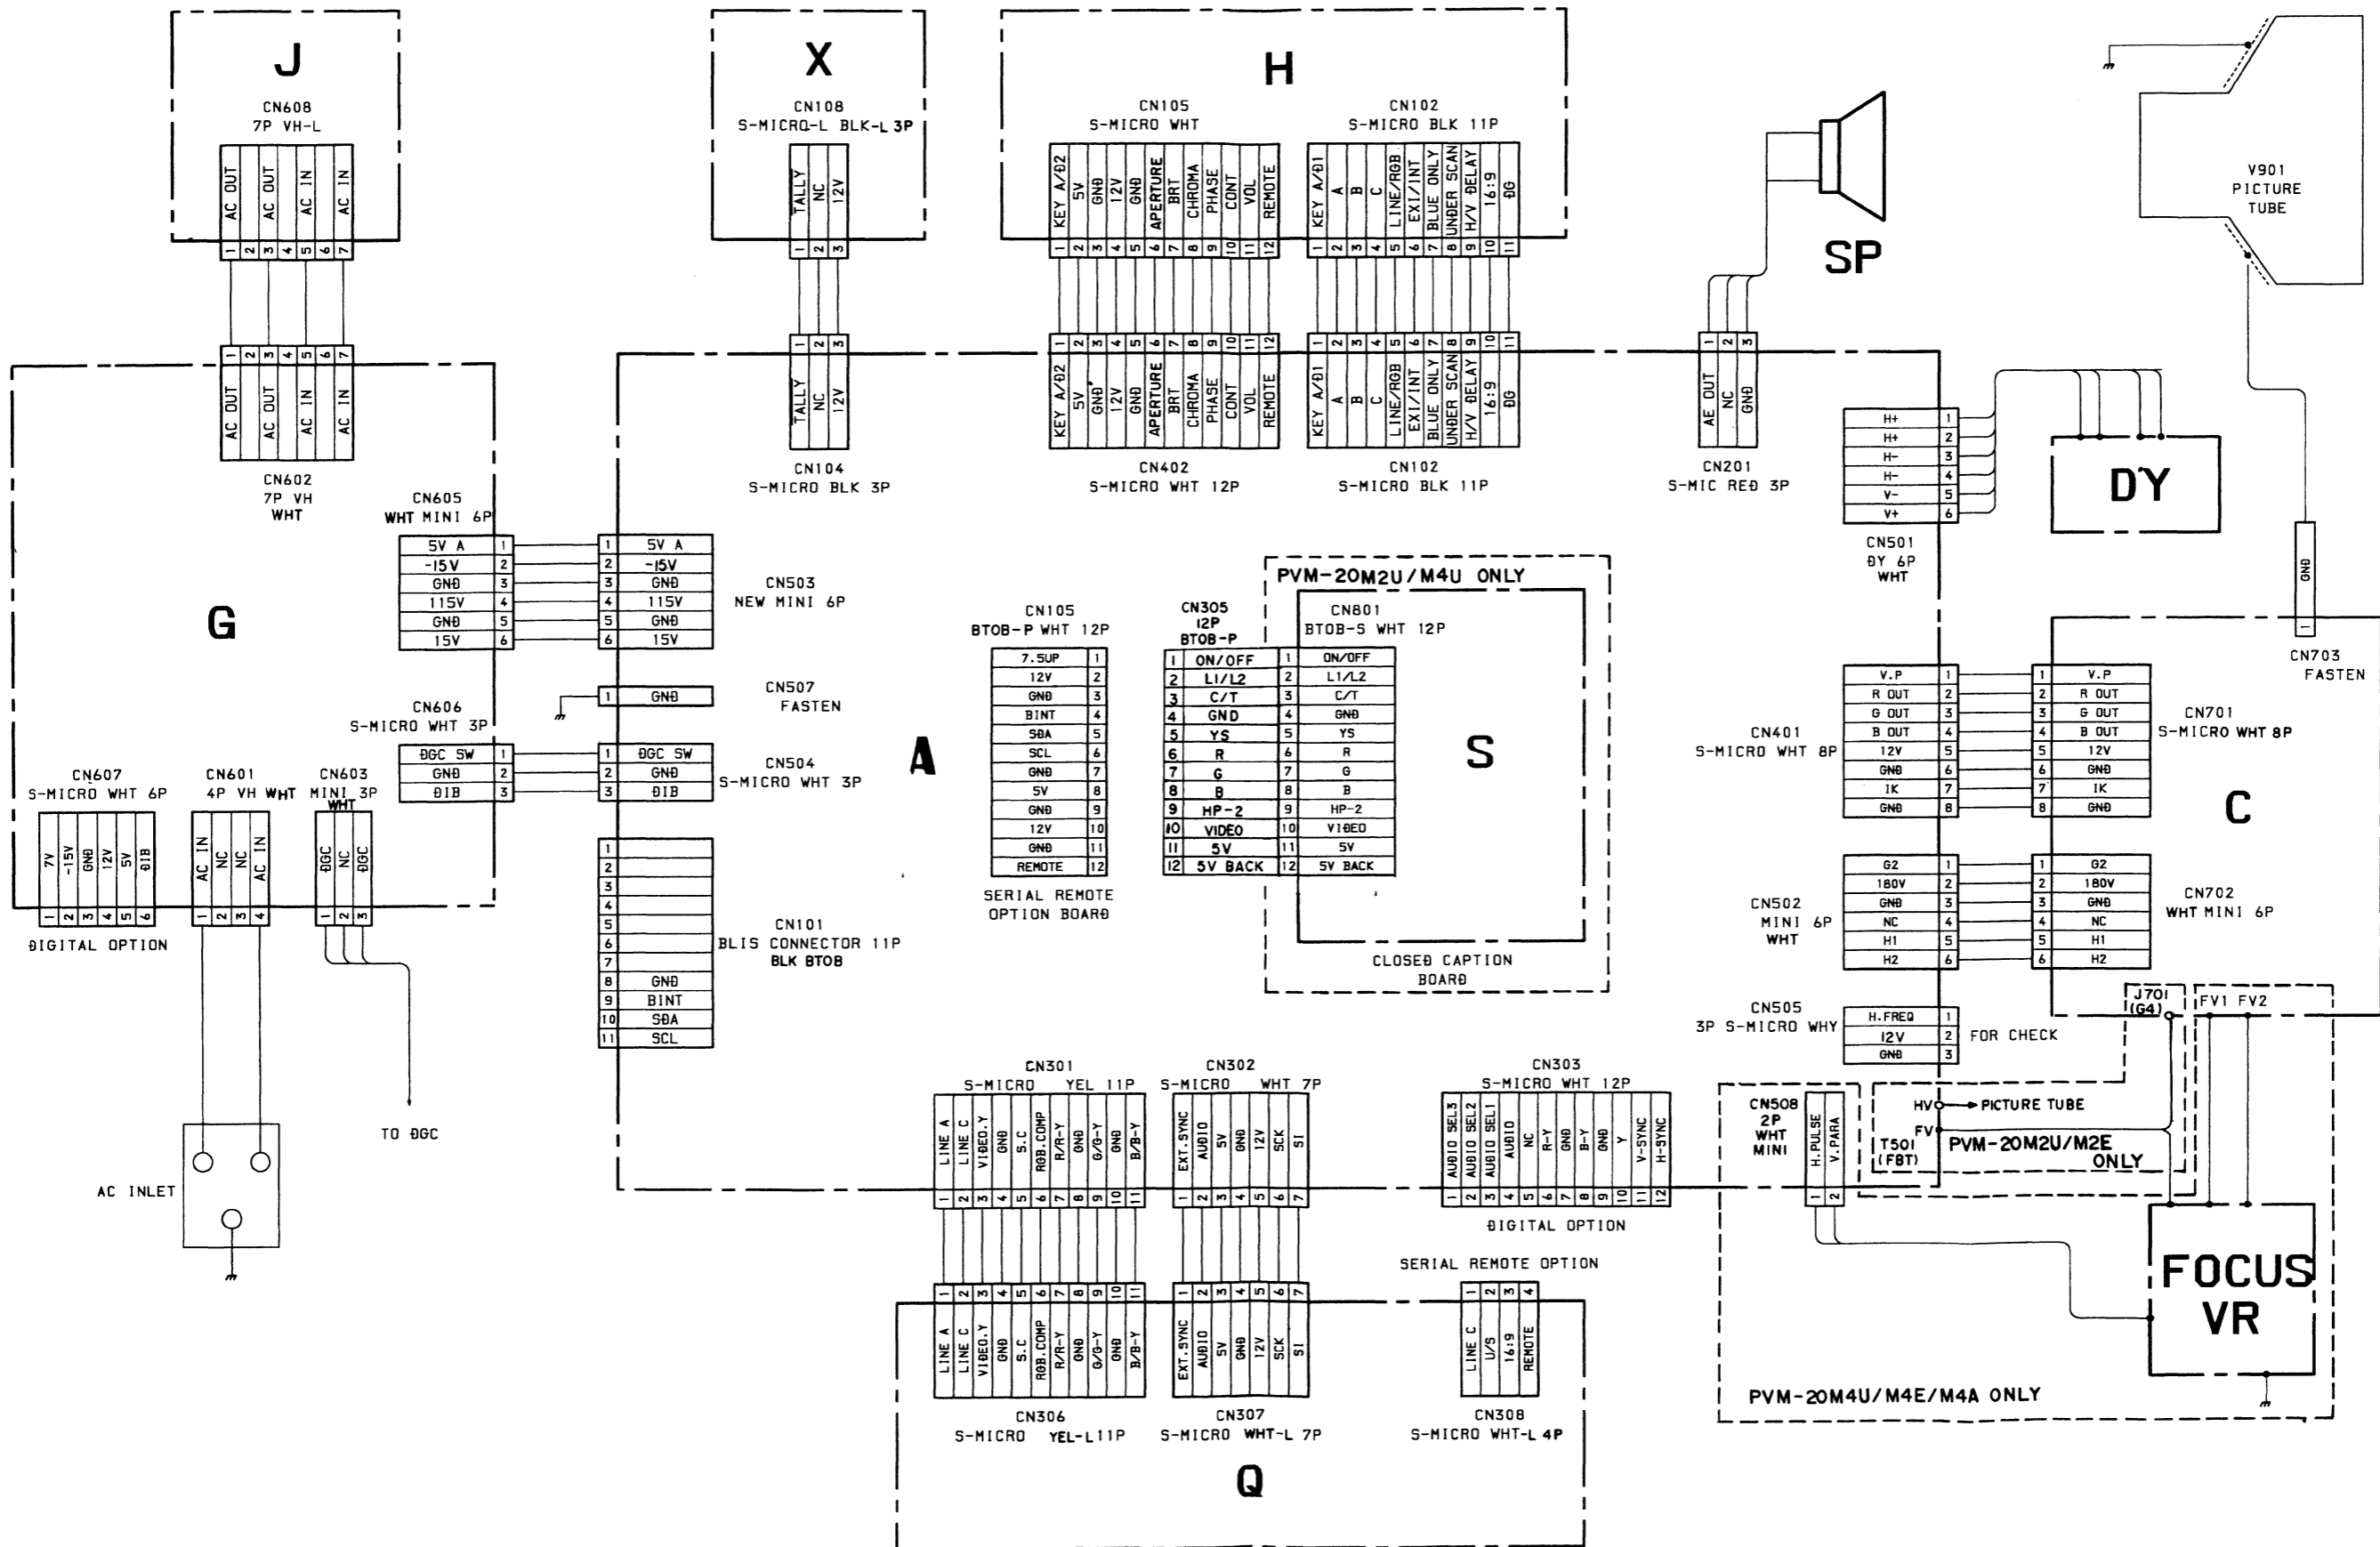


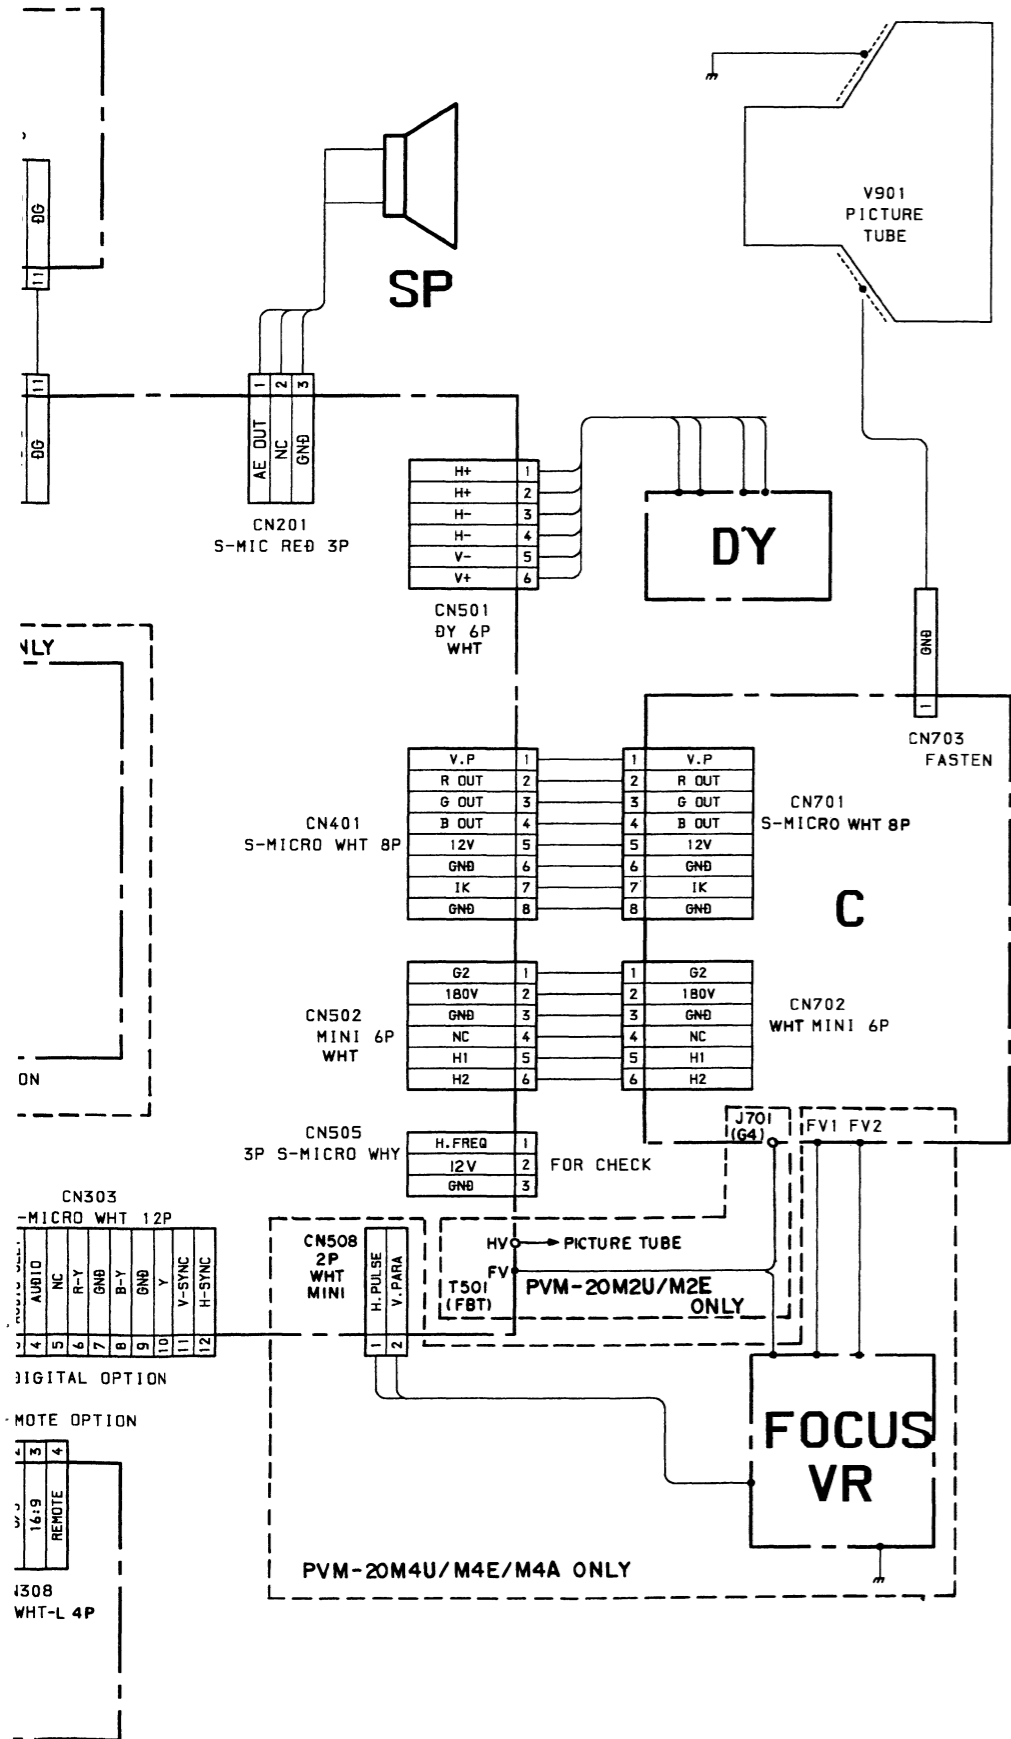

MEMO

A series of horizontal dashed lines provided for handwritten notes.

6-3. CIRCUIT BOARDS LOC.

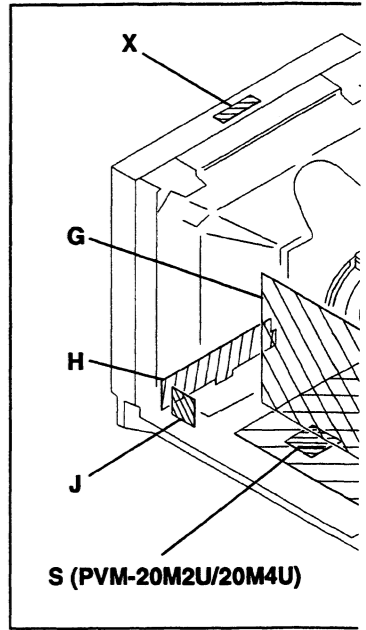

6-4. PRINTED WIRING BOARD

Note:


- All capacitors are in μF unless otherwise specified.
- Indication of resistance, which does not have a value, is as follows.

Pitch: 5 mm
Rating electrical power $\frac{1}{4}$ W

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- Δ : internal component.
- : panel designation, and adjustable.
- All variable and adjustable resistors have a value, unless otherwise noted.
- The components identified by in the diagram have been carefully factory-adjusted in order to satisfy regulations regarding X. Should replacement be required, replace with the original.
- When replacing components identify necessary adjustments indicated. If a value is not specified, change the component to the specified value.
- When replacing the part in below table repeat the adjustment until the specified value is obtained. (Refer to R1536 adjust on Page 25 and related adjustment.)

Part replaced ()
C512, C513, C523, C549, C592, D533, IC500, IC507, Q500, Q511, R508, R515, R516, R517, R518, R551, R1537, R1560..... (A E)

6-3. CIRCUIT BOARDS LOCATION

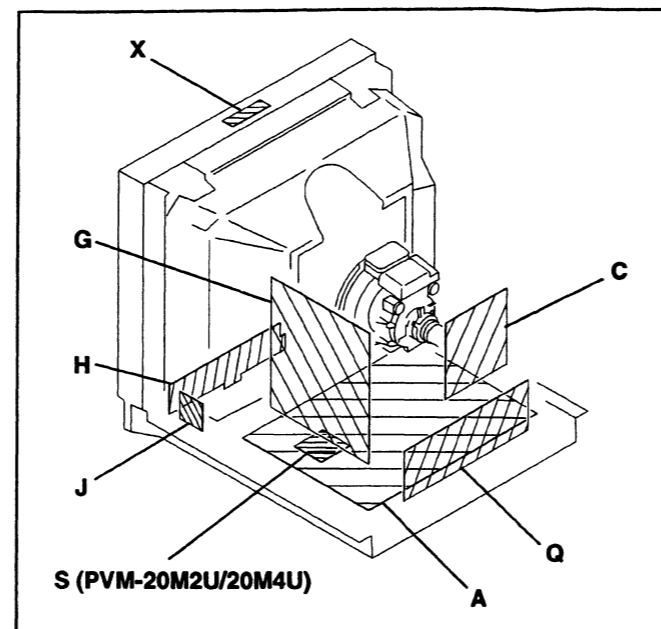

6-4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note:

- All capacitors are in μF unless otherwise noted. pF: $\mu\mu\text{F}$
- 50 WV or less are not indicated except for electrolytics.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm
Rating electrical power $\frac{1}{4}$ W

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved. (Refer to R1536 adjust on Page 25 and 26.)
- When replacing the part in below table, be sure to perform the related adjustment.

Part replaced ()	Adjustment ()
C512, C513, C523, C549, C592, D501, D533, IC500, IC507, Q500, Q511, R506, R508, R515, R516, R517, R518, R519, R551, R1537, R1560..... (A BOARD)	R1536 (HOLD-DOWN)

- All voltages are in V.
- Voltage are dc with respect to ground unless otherwise noted.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- : B + bus.
- : B - bus.
- : signal path.
- No mark : with PAL colour-bar signal received or common voltage.
- For the respective voltage ratings in SECAM, NTSC 3.58, NTSC 4.43 S-VIDEO, and ANALOG RGB modes, see the table

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RW	NONFLAMMABLE WIREWOUND
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une trame et par une marque sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié.

A

MICON, RGB-MATRIX, DAC,
ON SCREEN DISPLAY, ON/OFF MUTE,
VOL OFF SW, BLACK-SAMPLING, RGB SW


CHROMA DEMOD, SECAM CHROMA SELECT, SYSTEM SW,
SYNC SELECT, B/B Y SW, R/R Y SW, G/Y SW,
AUDIO SELECT, SECAM DECODER, HOLD AMP

H/V OUT, DEFLECTION SYSTEM,
AUDIO OUT

**A BOARD
(COMPONENT SIDE)**


IC	Q108 C-2	Q109 A-3	Q110 A-1	Q112 D-6	Q200 A-6	Q300 G-3	Q308 G-3	Q311 G-3	Q314 F-4	Q316 F-5	Q320 F-3	Q324 G-1	Q335 D-1	Q340 F-1	Q341 E-3	Q342 F-3	Q343 F-4	Q346 F-1	Q347 F-2	Q348 F-2	Q353 D-3	Q354 E-3	Q355 F-5	Q356 D-2	Q357 G-2	Q358 G-1	Q359 G-1	Q360 D-2	Q362 D-3	Q365 F-3	Q366 E-3	Q372 C-3	Q373 C-3	Q374 C-3	Q404 B-5	Q406 B-5	Q408 B-5	Q410 D-4	Q411 B-5	Q412 C-5	Q413 C-5	Q414 D-5	Q415 D-5	Q416 D-5	Q425 D-5	Q426 D-6	Q429 C-5	Q430 D-6	Q432 C-5	Q433 C-4	Q435 D-4	Q436 D-4	Q437 D-4	Q438 C-5	Q440 C-4	Q441 C-4	Q442 C-4	Q445 C-5	Q446 C-5	Q447 B-4	Q449 D-3	Q501 D-9	Q502 D-8	Q503 B-7	Q512 A-10	Q513 A-9	Q515 A-8	Q518 B-7	Q520 B-7	Q523 B-6	Q524 A-6	Q525 A-6	Q526 G-6
IC101 B-2	IC102 B-2	IC103 C-1	IC104 B-2	IC105 B-3	IC106 C-3	IC107 C-2	IC109 C-3	IC110 C-3	IC111 B-2	IC112 B-2	IC200 A-5	IC301 G-2	IC302 G-3	IC303 E-1	IC304 G-1	IC305 G-2	IC306 F-3	IC309 F-3	IC310 D-3	IC311 E-3	IC312 E-3	IC313 F-2	IC314 G-4	IC315 D-2	IC316 G-5	IC317 D-1	IC318 D-2	IC320 F-5	IC321 F-5	IC322 E-5	IC323 E-5	IC324 E-4	IC325 E-4	IC326 E-2	IC327 C-3	IC350 D-2	IC401 B-4	IC402 D-4	IC403 B-5	IC404 D-4	IC405 C-5	IC406 B-5	IC407 C-5	IC408 C-6	IC409 C-6	IC410 B-5	IC411 B-5	IC412 B-4	IC413 C-4	IC500 G-8	IC502 G-6	IC503 G-6	IC504 C-7	IC505 E-6	IC506 E-6	IC507 D-7	IC508 C-7	IC509 C-8	IC510 E-3	IC511 A-7	IC512 A-8												
DIODE		D100 D-5	D104 B-1	D105 B-1	D106 B-4	D108 E-5	D109 A-1	D110 F-5	D112 A-1	D114 F-2	D300 G-2	D301 D-2	D305 G-3	D308 F-2	D313 G-5	D314 C-1	D327 D-3	D332 F-3	D335 F-1	D336 F-1	D338 F-3	D339 F-2	D360 C-3	D361 C-3	D362 F-2	D365 G-4	D381 D-2	D406 C-1	D413 F-5	D414 D-4	D415 D-5	D416 D-4	D417 D-4	D418 D-4	D423 C-6	D424 B-5	D502 F-9	D504 D-9	D505 E-10	D506 D-9	D510 F-6	D512 D-9	D514 F-7	D515 F-10	D520 F-6	D521 C-6	D522 D-6	D524 C-8	D525 C-9	D527 B-8	D528 A-10	D529 A-8	D530 A-10	D533 G-8	D535 B-6	D537 A-7	D538 D-6	D540 E-6	D541 F-3	D543 G-6	D544 F-6	D545 G-6	D546 E-10	D548 G-8									
TRANSISTOR		Q102 C-2	Q103 C-2	Q104 B-2	Q105 A-3	Q107 A-3																																																																			
VARIABLE RESISTOR		RV501 B-9																																																																							

-A BOARD- <Component Side>

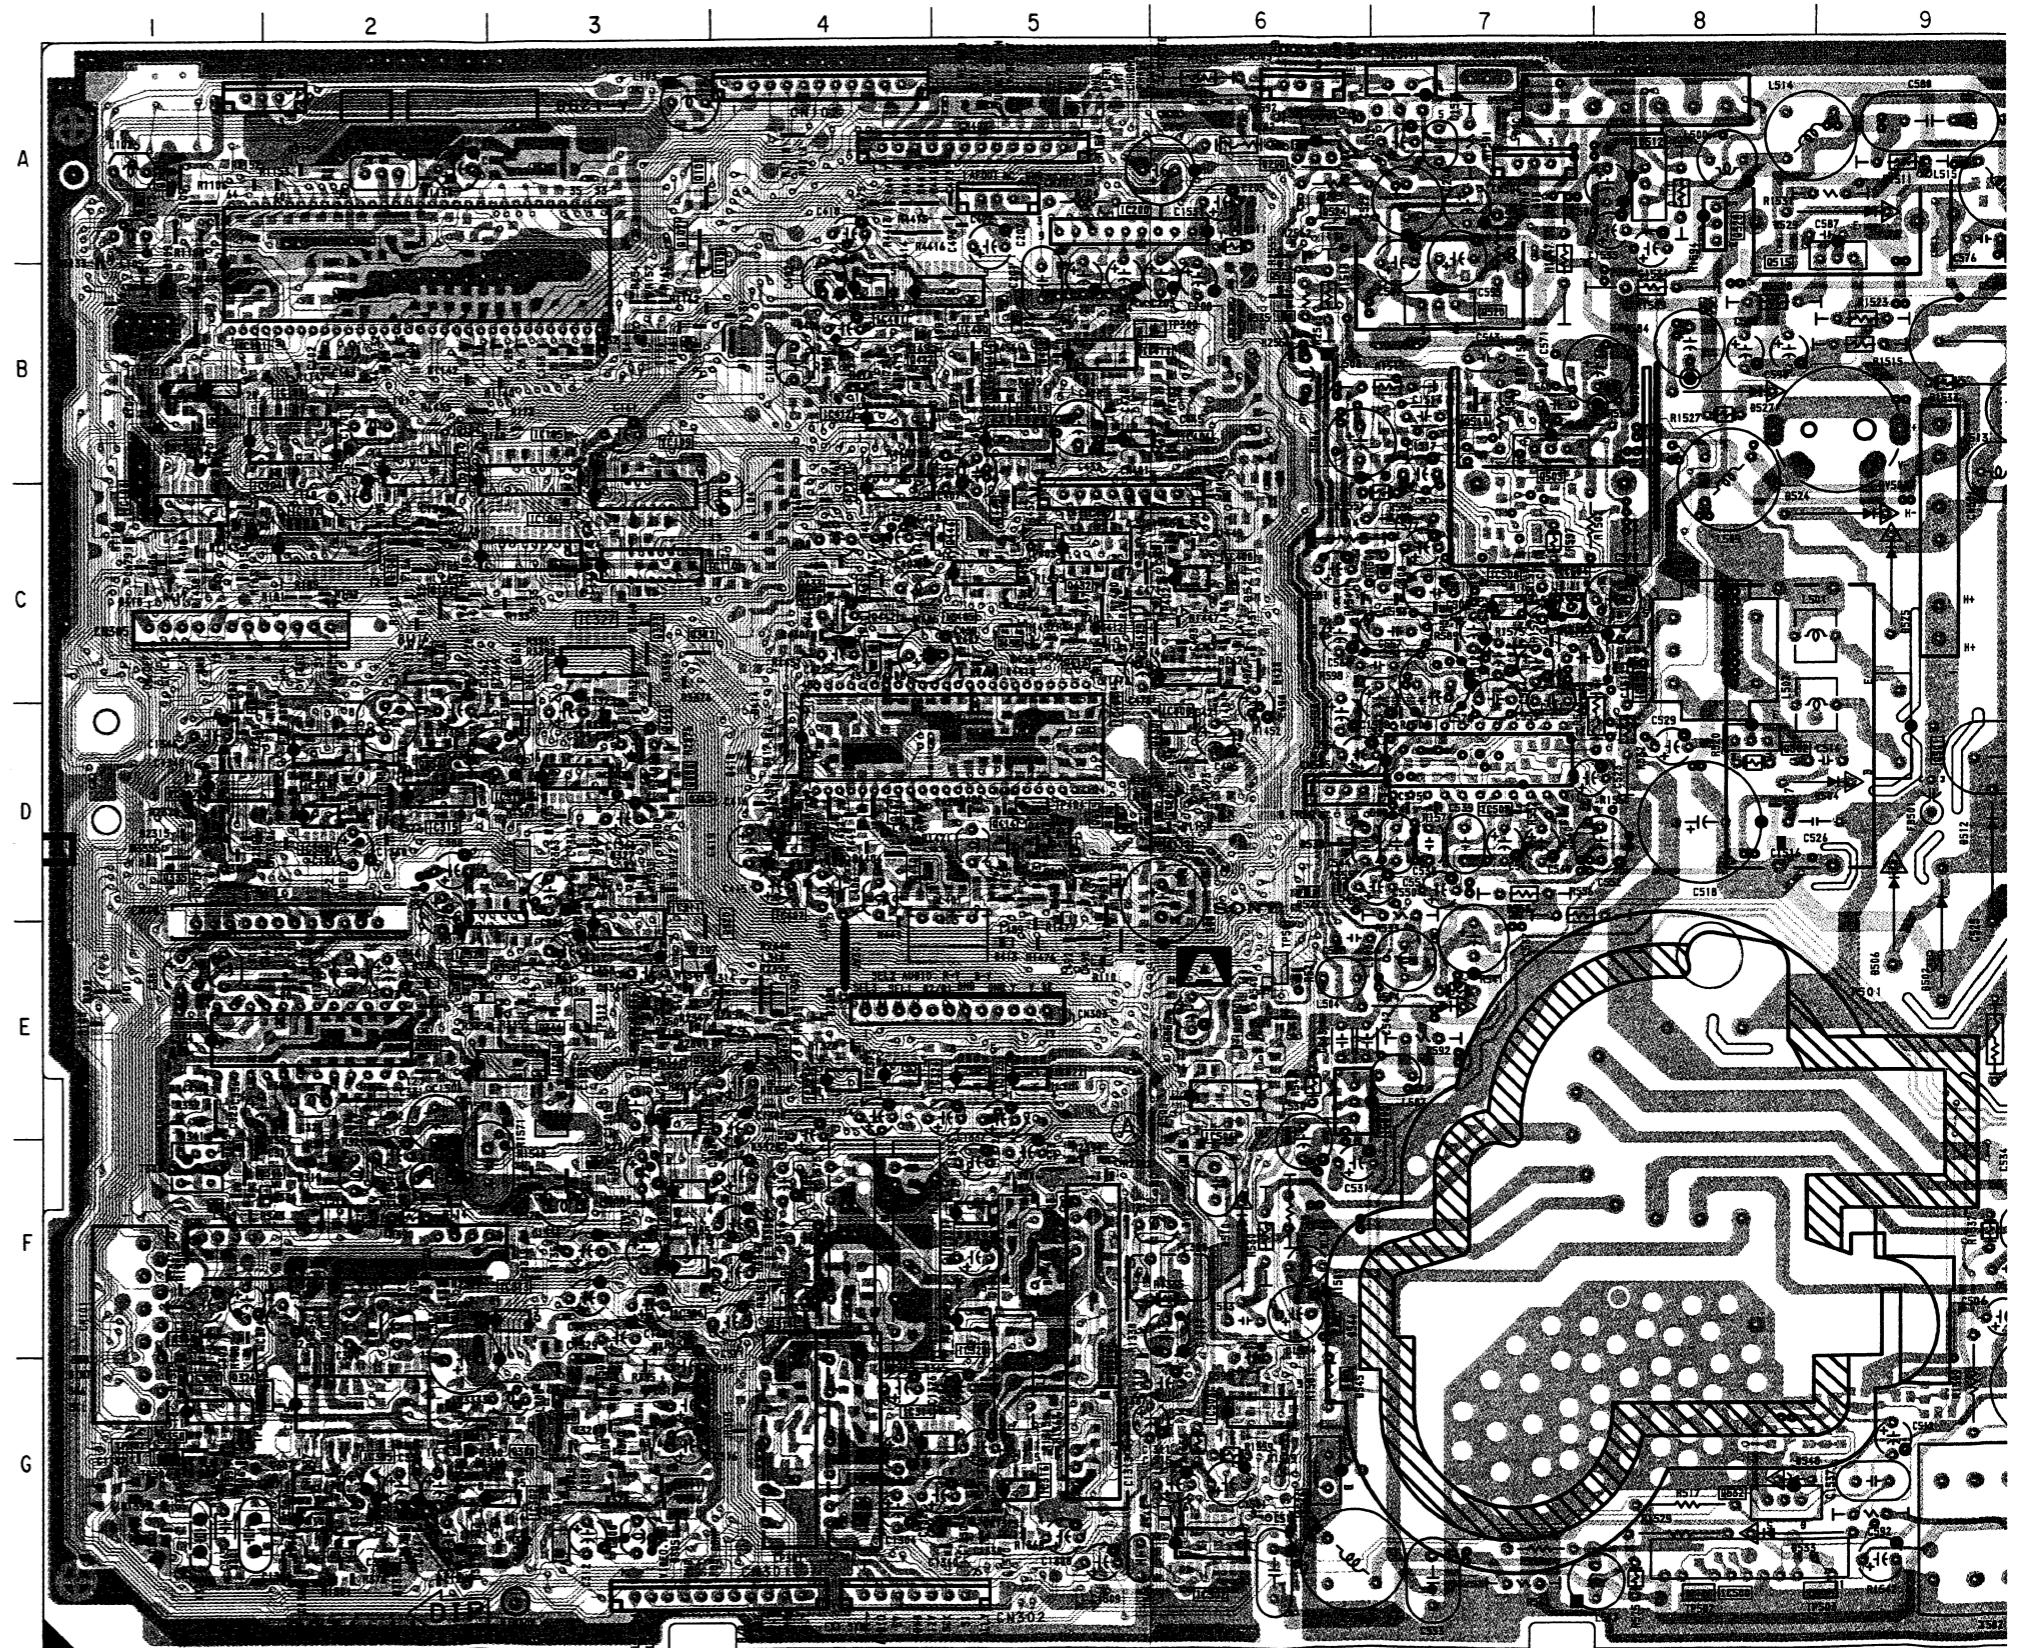

• : Pattern from the side
• : Pattern of the rear side


• : Pattern from the side which enables seeing.
 • : Pattern of the rear side.

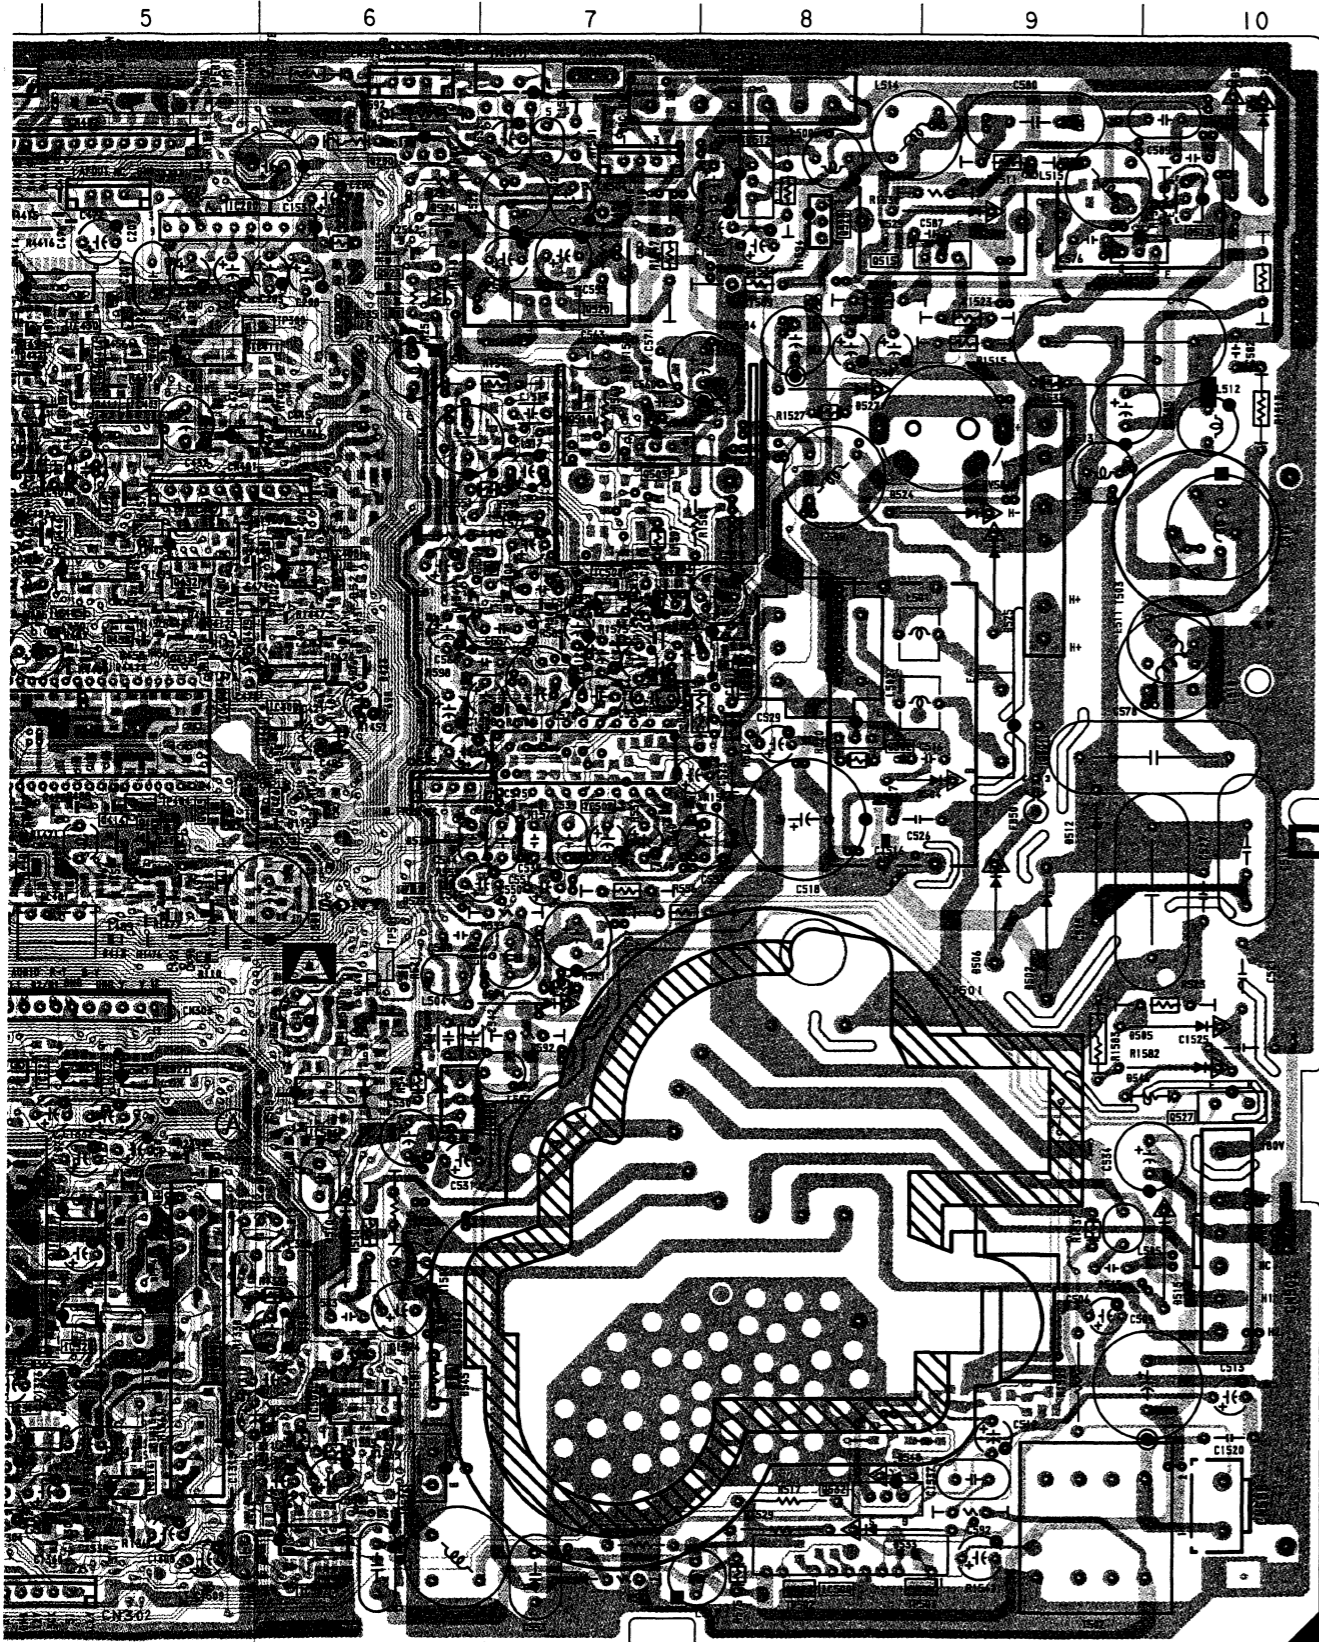

**A BOARD
(CONDUCTOR SIDE)**


IC	Q405 C-6	D322 D-9	
IC101 A-9	Q407 C-7	D323 C-9	
IC108 B-8	Q409 D-7	D324 E-9	
IC200 A-5	Q417 C-5	D325 D-8	
IC303 E-9	Q418 B-5	D326 E-9	
IC404 D-6	Q419 C-6	D333 C-9	
IC500 G-3	Q420 C-6	D337 E-8	
IC505 E-4	Q421 B-5	D344 D-8	
IC507 D-4	Q422 B-5	D345 E-7	
IC511 A-4	Q423 C-5	D346 E-7	
IC512 A-3	Q424 C-5	D347 E-7	
	Q428 D-6	D363 E-8	
	Q431 B-5	D364 E-8	
	Q434 C-5	D401 B-7	
TRANSISTOR	Q439 C-6	D402 B-7	
Q101 A-9	Q444 B-5	D404 D-6	
Q111 C-10	Q448 T-9	D405 B-5	
Q113 A-7	Q500 G-2	D407 D-7	
Q114 A-8	Q501 D-2	D410 C-5	
Q200 A-5	Q502 D-3	D411 B-6	
Q201 A-5	Q503 B-3	D421 C-5	
Q301 G-8	Q505 F-5	D422 C-5	
Q302 G-10	Q506 B-4	D425 C-5	
Q303 G-6	Q507 E-5	D427 B-6	
Q305 G-8	Q508 C-4	D500 G-5	
Q306 G-7	Q509 G-5	D501 G-2	
Q307 G-8	Q510 C-4	D502 E-2	
Q309 G-8	Q511 G-2	D503 D-2	
Q310 G-7	Q512 A-1	D504 D-2	
Q312 G-8	Q513 A-1	D505 F-1	
Q313 G-8	Q514 B-4	D506 E-2	
Q315 G-8	Q515 B-2	D507 G-5	
Q318 G-7	Q516 C-4	D508 T-5	
Q319 F-7	Q517 C-4	D509 G-5	
Q321 G-8	Q519 C-3	D510 F-5	
Q322 G-6	Q520 B-4	D511 E-5	
Q323 G-10	Q522 E-5	D512 D-2	
Q325 T-8	Q525 A-4	D513 E-5	
Q326 F-6	Q526 G-4	D514 F-4	
Q327 T-6	Q527 E-1	D515 F-1	
Q328 G-9	Q528 A-3	D516 F-5	
Q329 G-9	Q529 D-3	D517 E-4	
Q330 T-9	Q530 D-4	D518 E-5	
Q331 F-9	Q531 G-2	D519 C-4	
Q332 G-10	Q532 G-2	D523 A-2	
Q333 D-9	Q2501 C-4	D524 C-2	
Q334 F-9		D525 C-2	
Q336 E-10	DIODE	D526 B-4	
Q338 C-8	D101 B-10	D527 B-3	
Q339 D-8	D102 B-9	D528 A-1	
Q345 D-8	D103 B-9	D529 A-2	
Q349 E-9	D107 B-9	D530 A-1	
Q350 D-8	D111 B-9	D531 B-4	
Q351 D-8	D115 B-9	D532 B-4	
Q352 D-8	D116 G-2	D533 G-2	
Q355 F-5	D200 A-4	D534 B-4	
Q361 T-8	D301 G-8	D536 A-5	
Q363 G-9	D303 F-7	D542 B-4	
Q364 D-8	D304 G-7	D546 E-1	
Q367 E-8	D307 G-8	D547 D-4	
Q368 E-8	D309 G-8	D548 G-2	
Q369 E-8	D310 G-8	VARIABLE RESISTOR	
Q375 D-8	D311 G-9	RV501 B-2	
Q401 B-6	D315 E-8		
Q402 B-6	D317 D-9		
Q403 B-6	D320 D-9		

-A BOARD- <Conductor Side>

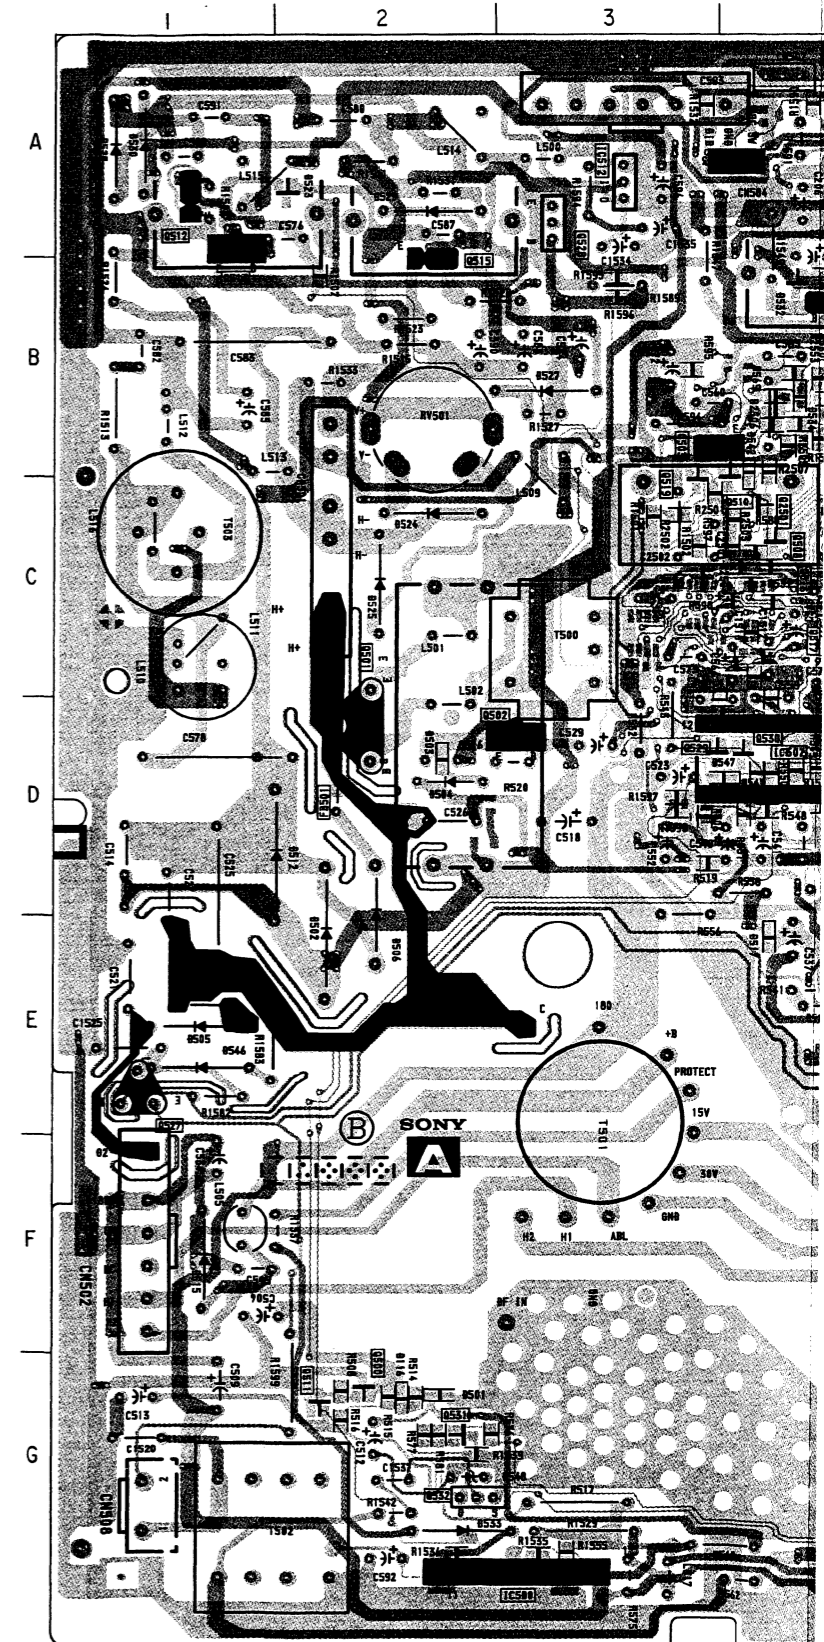



**A BOARD
(CONDUCTOR SIDE)**


IC		Q405 C-6	D322 D-9
IC101 A-9	Q407 C-7	D323 C-9	
IC108 B-8	Q409 D-7	D324 E-9	
IC200 A-5	Q417 C-5	D325 D-8	
IC303 E-9	Q418 B-5	D326 E-9	
IC404 D-6	Q419 C-6	D333 C-9	
IC500 G-3	Q420 C-6	D337 E-8	
IC505 E-4	Q421 B-5	D344 D-8	
IC507 D-4	Q422 B-5	D345 E-7	
IC511 A-4	Q423 C-5	D346 E-7	
IC512 A-3	Q424 C-5	D347 E-7	
	Q428 D-6	D363 E-8	
	Q431 B-5	D364 E-8	
	Q434 C-5	D401 B-7	
TRANSISTOR	Q439 C-6	D402 B-7	
Q101 A-9	Q444 B-5	D404 D-6	
Q111 C-10	Q448 F-9	D405 B-5	
Q113 A-7	Q500 G-2	D407 D-7	
Q114 A-8	Q501 D-2	D410 C-5	
Q200 A-5	Q502 D-3	D411 B-6	
Q201 A-5	Q503 B-3	D421 C-5	
Q301 G-8	Q505 E-5	D422 C-5	
Q302 G-10	Q506 B-4	D425 C-5	
Q303 G-6	Q507 E-5	D427 B-6	
Q305 G-8	Q508 C-4	D500 G-5	
Q306 G-7	Q509 G-5	D501 G-2	
Q307 G-8	Q510 C-4	D502 E-2	
Q309 G-8	Q511 G-2	D503 D-2	
Q310 G-7	Q512 A-1	D504 D-2	
Q312 G-8	Q513 A-1	D505 E-1	
Q313 G-8	Q514 B-4	D506 E-2	
Q315 G-8	Q515 B-2	D507 G-5	
Q318 G-7	Q516 C-4	D508 F-5	
Q319 F-7	Q517 C-4	D509 G-5	
Q321 G-8	Q519 C-3	D510 F-5	
Q322 G-6	Q520 B-4	D511 E-5	
Q323 G-10	Q522 E-5	D512 D-2	
Q325 F-8	Q525 A-4	D513 E-5	
Q326 F-6	Q526 G-4	D514 E-4	
Q327 F-6	Q527 E-1	D515 F-1	
Q328 G-9	Q528 A-3	D516 F-5	
Q329 G-9	Q529 D-3	D517 E-4	
Q330 F-9	Q530 D-4	D518 E-5	
Q331 F-9	Q531 G-2	D519 C-4	
Q332 G-10	Q532 G-2	D523 A-2	
Q333 D-9	Q2501 C-4	D524 C-2	
Q334 F-9		D525 C-2	
Q336 E-10	DIODE	D526 B-4	
Q338 C-8	D101 B-10	D527 B-3	
Q339 D-8	D102 B-9	D528 A-1	
Q345 D-8	D103 B-9	D529 A-2	
Q349 E-9	D107 B-9	D530 A-1	
Q350 D-8	D111 B-9	D531 B-4	
Q351 D-8	D115 B-9	D532 B-4	
Q352 D-8	D116 G-2	D533 G-2	
Q355 F-5	D200 A-4	D534 B-4	
Q361 F-8	D301 G-8	D536 A-5	
Q363 G-9	D303 F-7	D542 B-4	
Q364 D-8	D304 G-7	D546 E-1	
Q367 E-8	D307 G-8	D547 D-4	
Q368 E-8	D309 G-8	D548 G-2	
Q369 E-8	D310 G-8		
Q375 D-8	D311 G-9	VARIABLE RESISTOR	
Q401 B-6	D315 E-8	RV501 B-2	
Q402 B-6	D317 D-9		
Q403 B-6	D320 D-9		





NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

•  : Pattern from the side which enables seeing.
 •  : Pattern of the rear side.

-A BOARD- <Conductor Side>

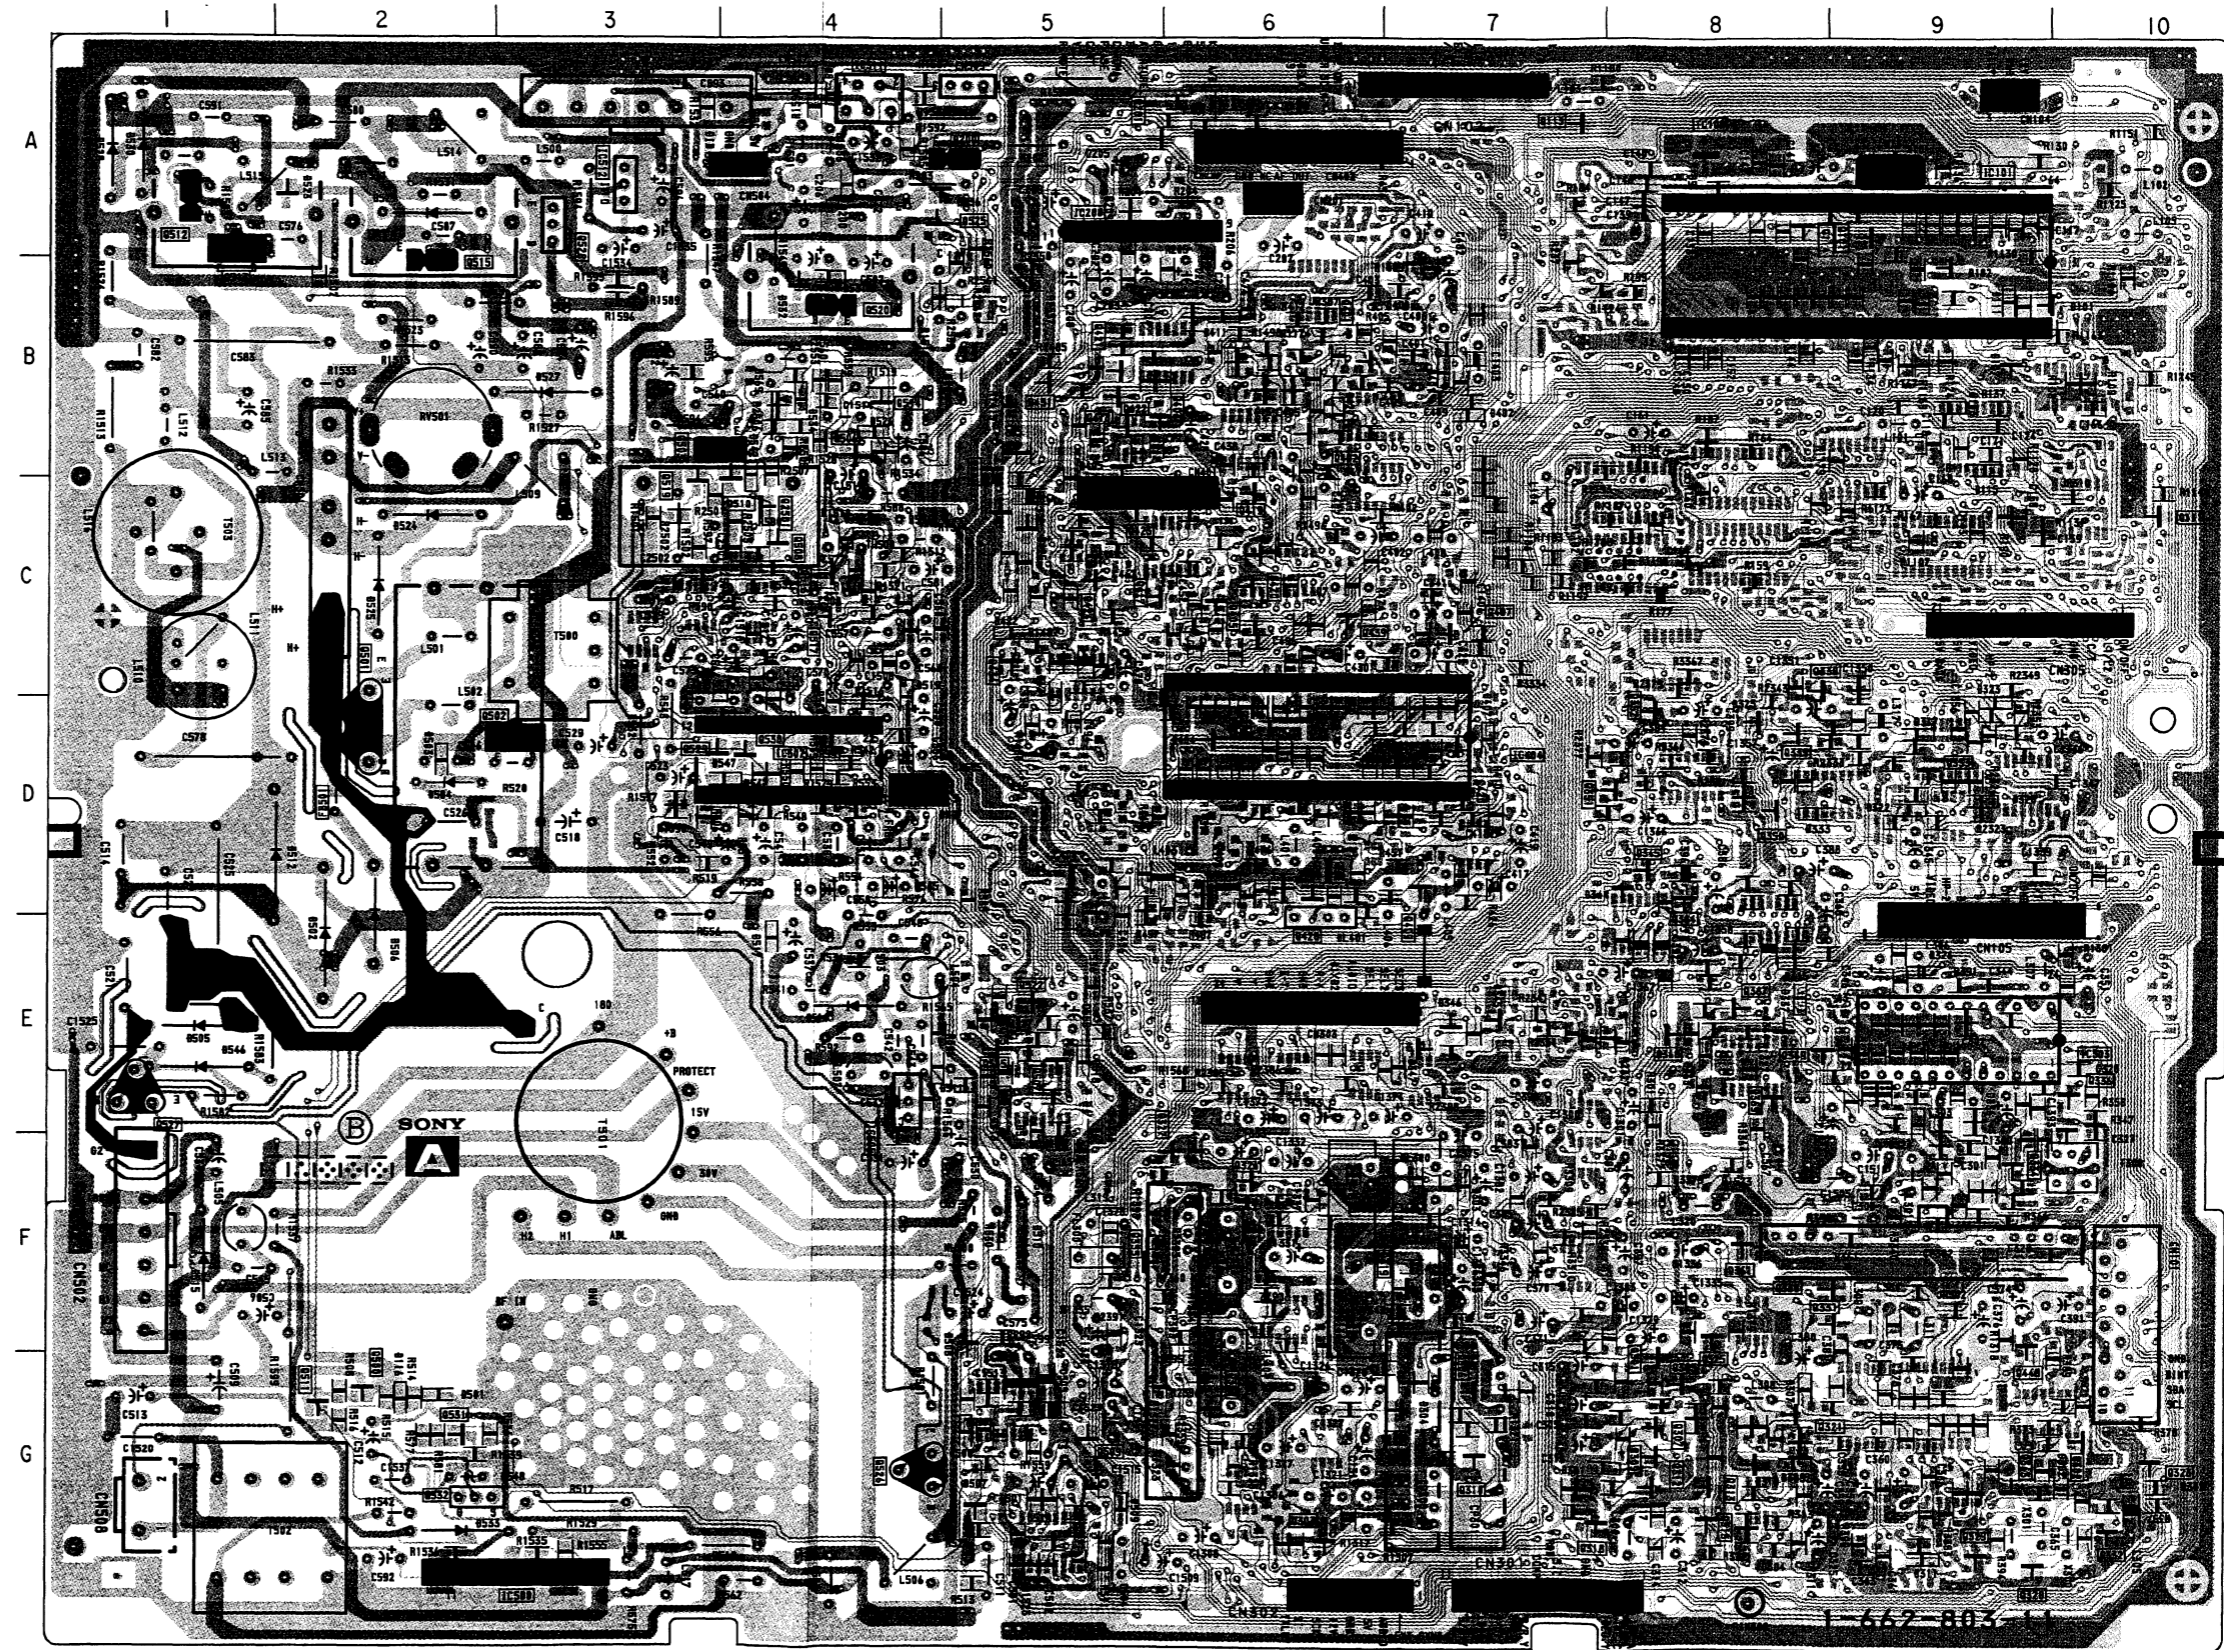


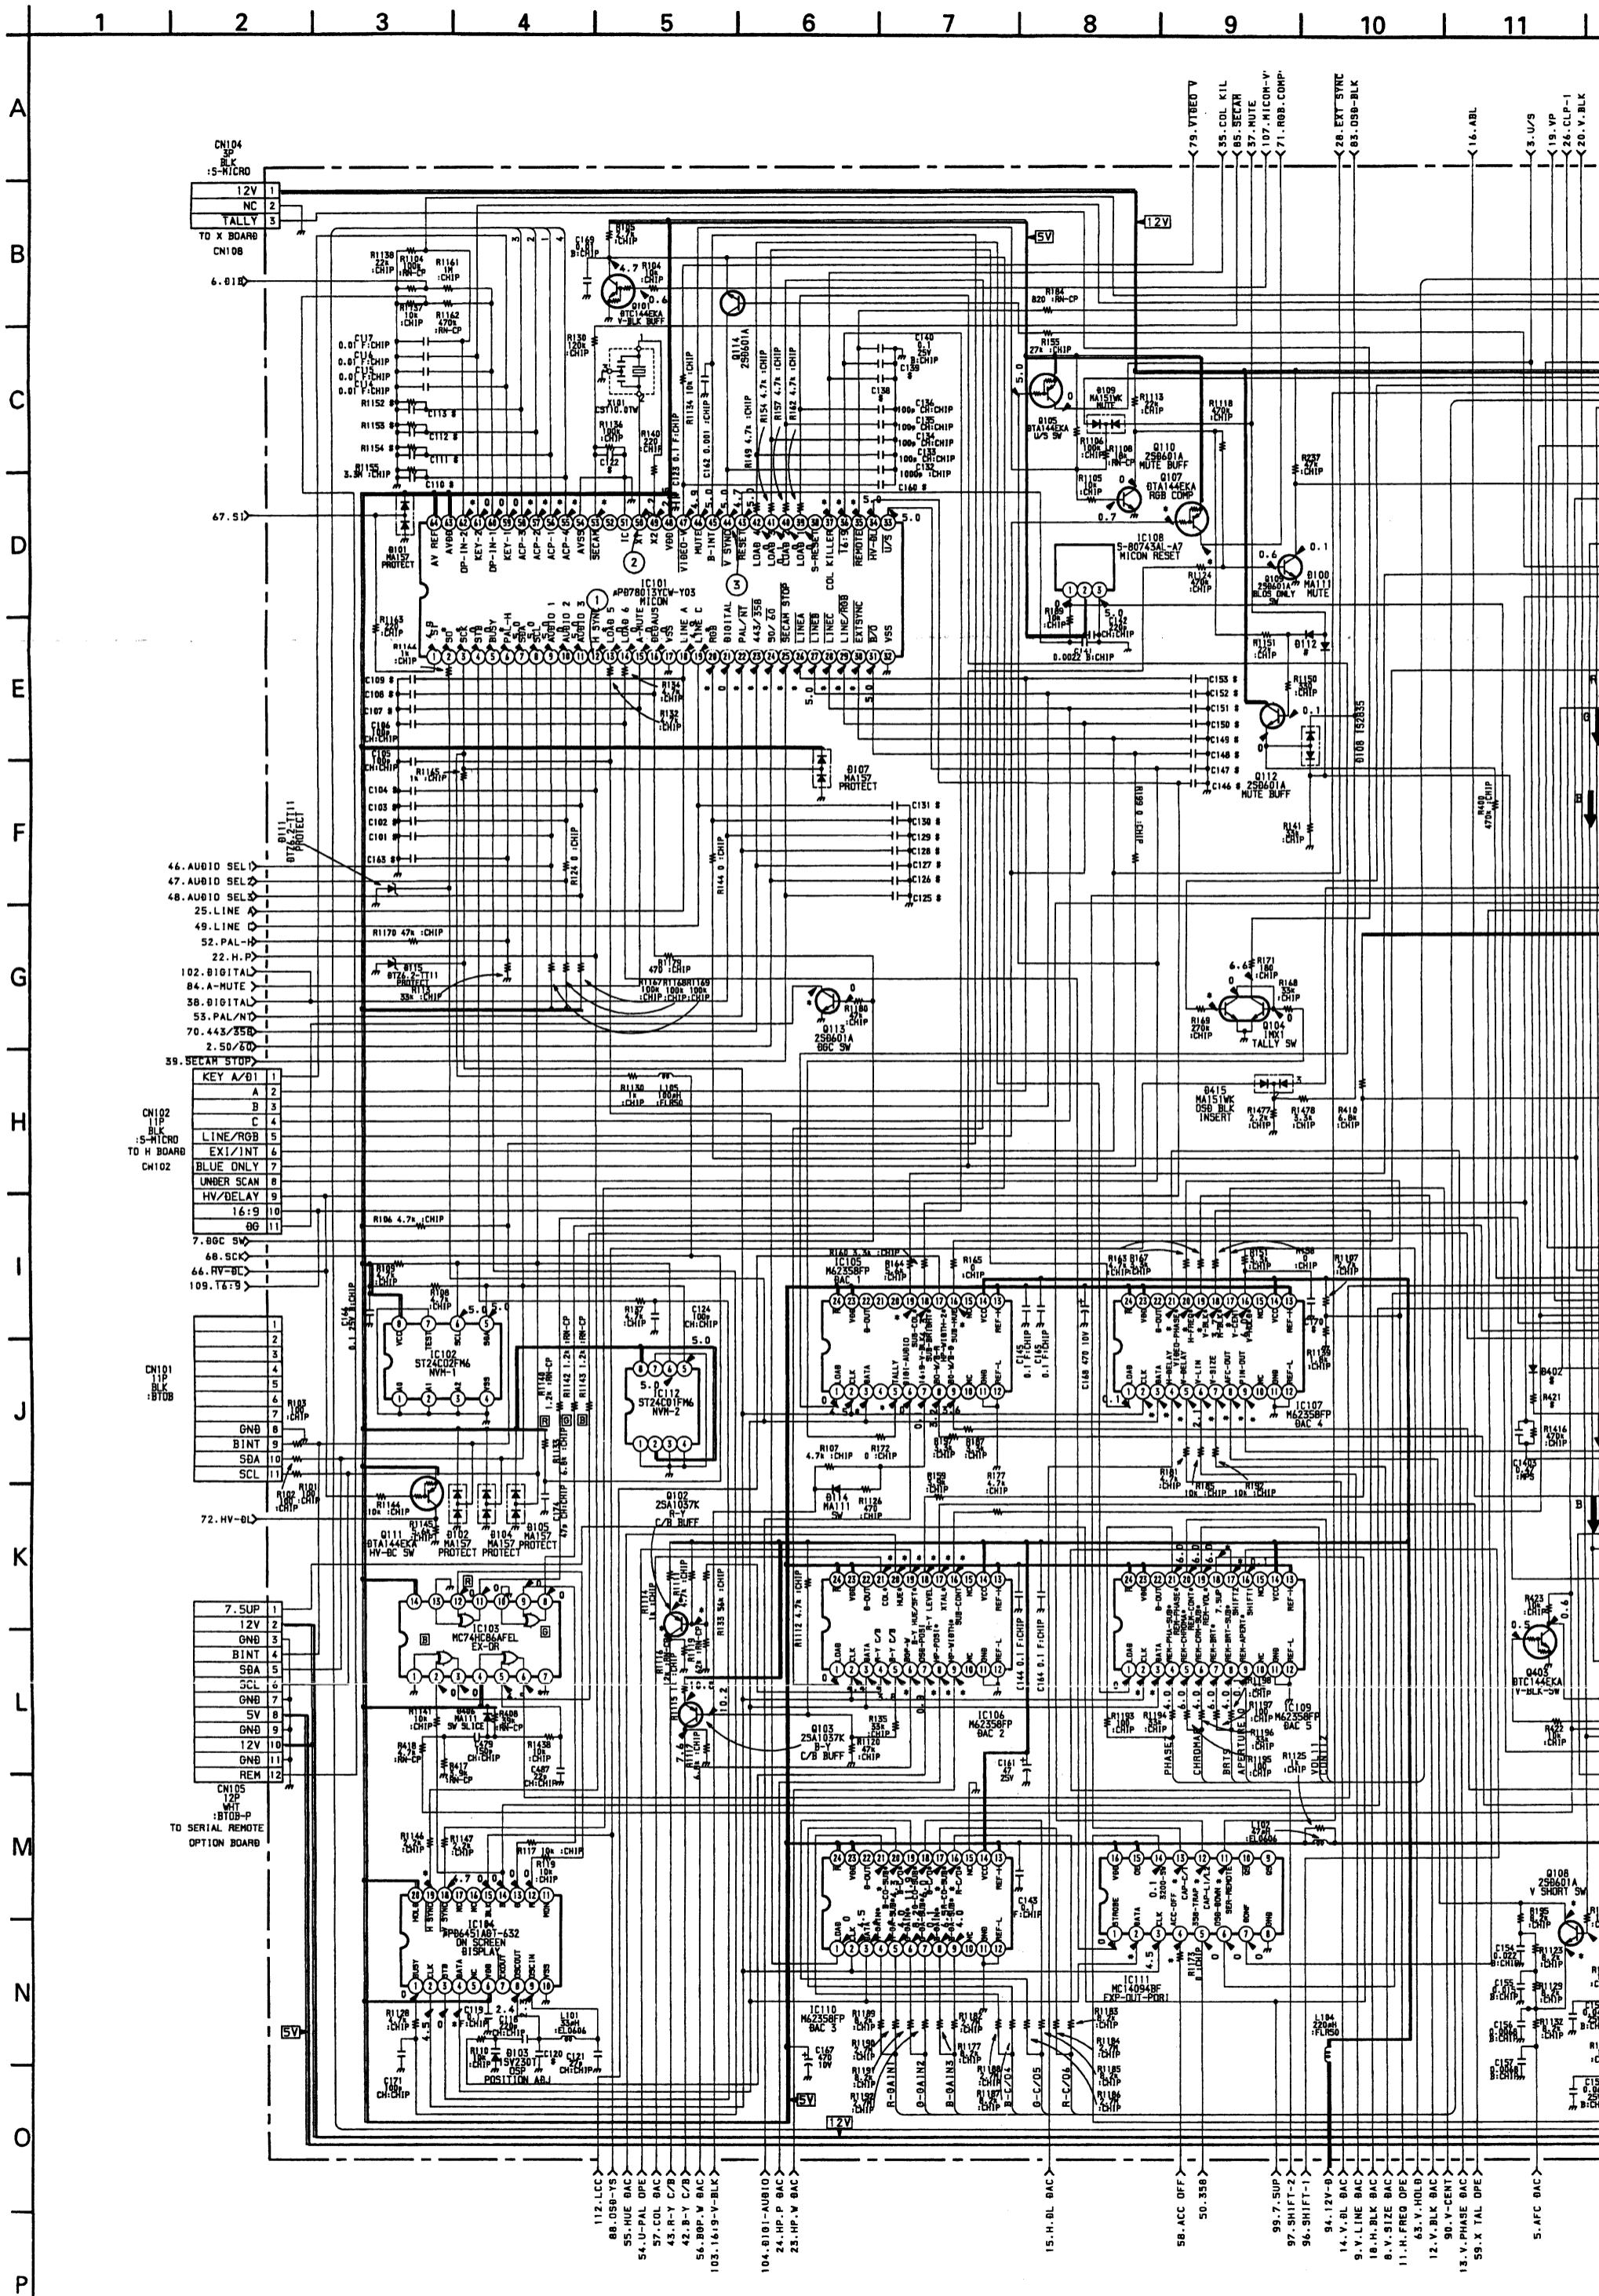

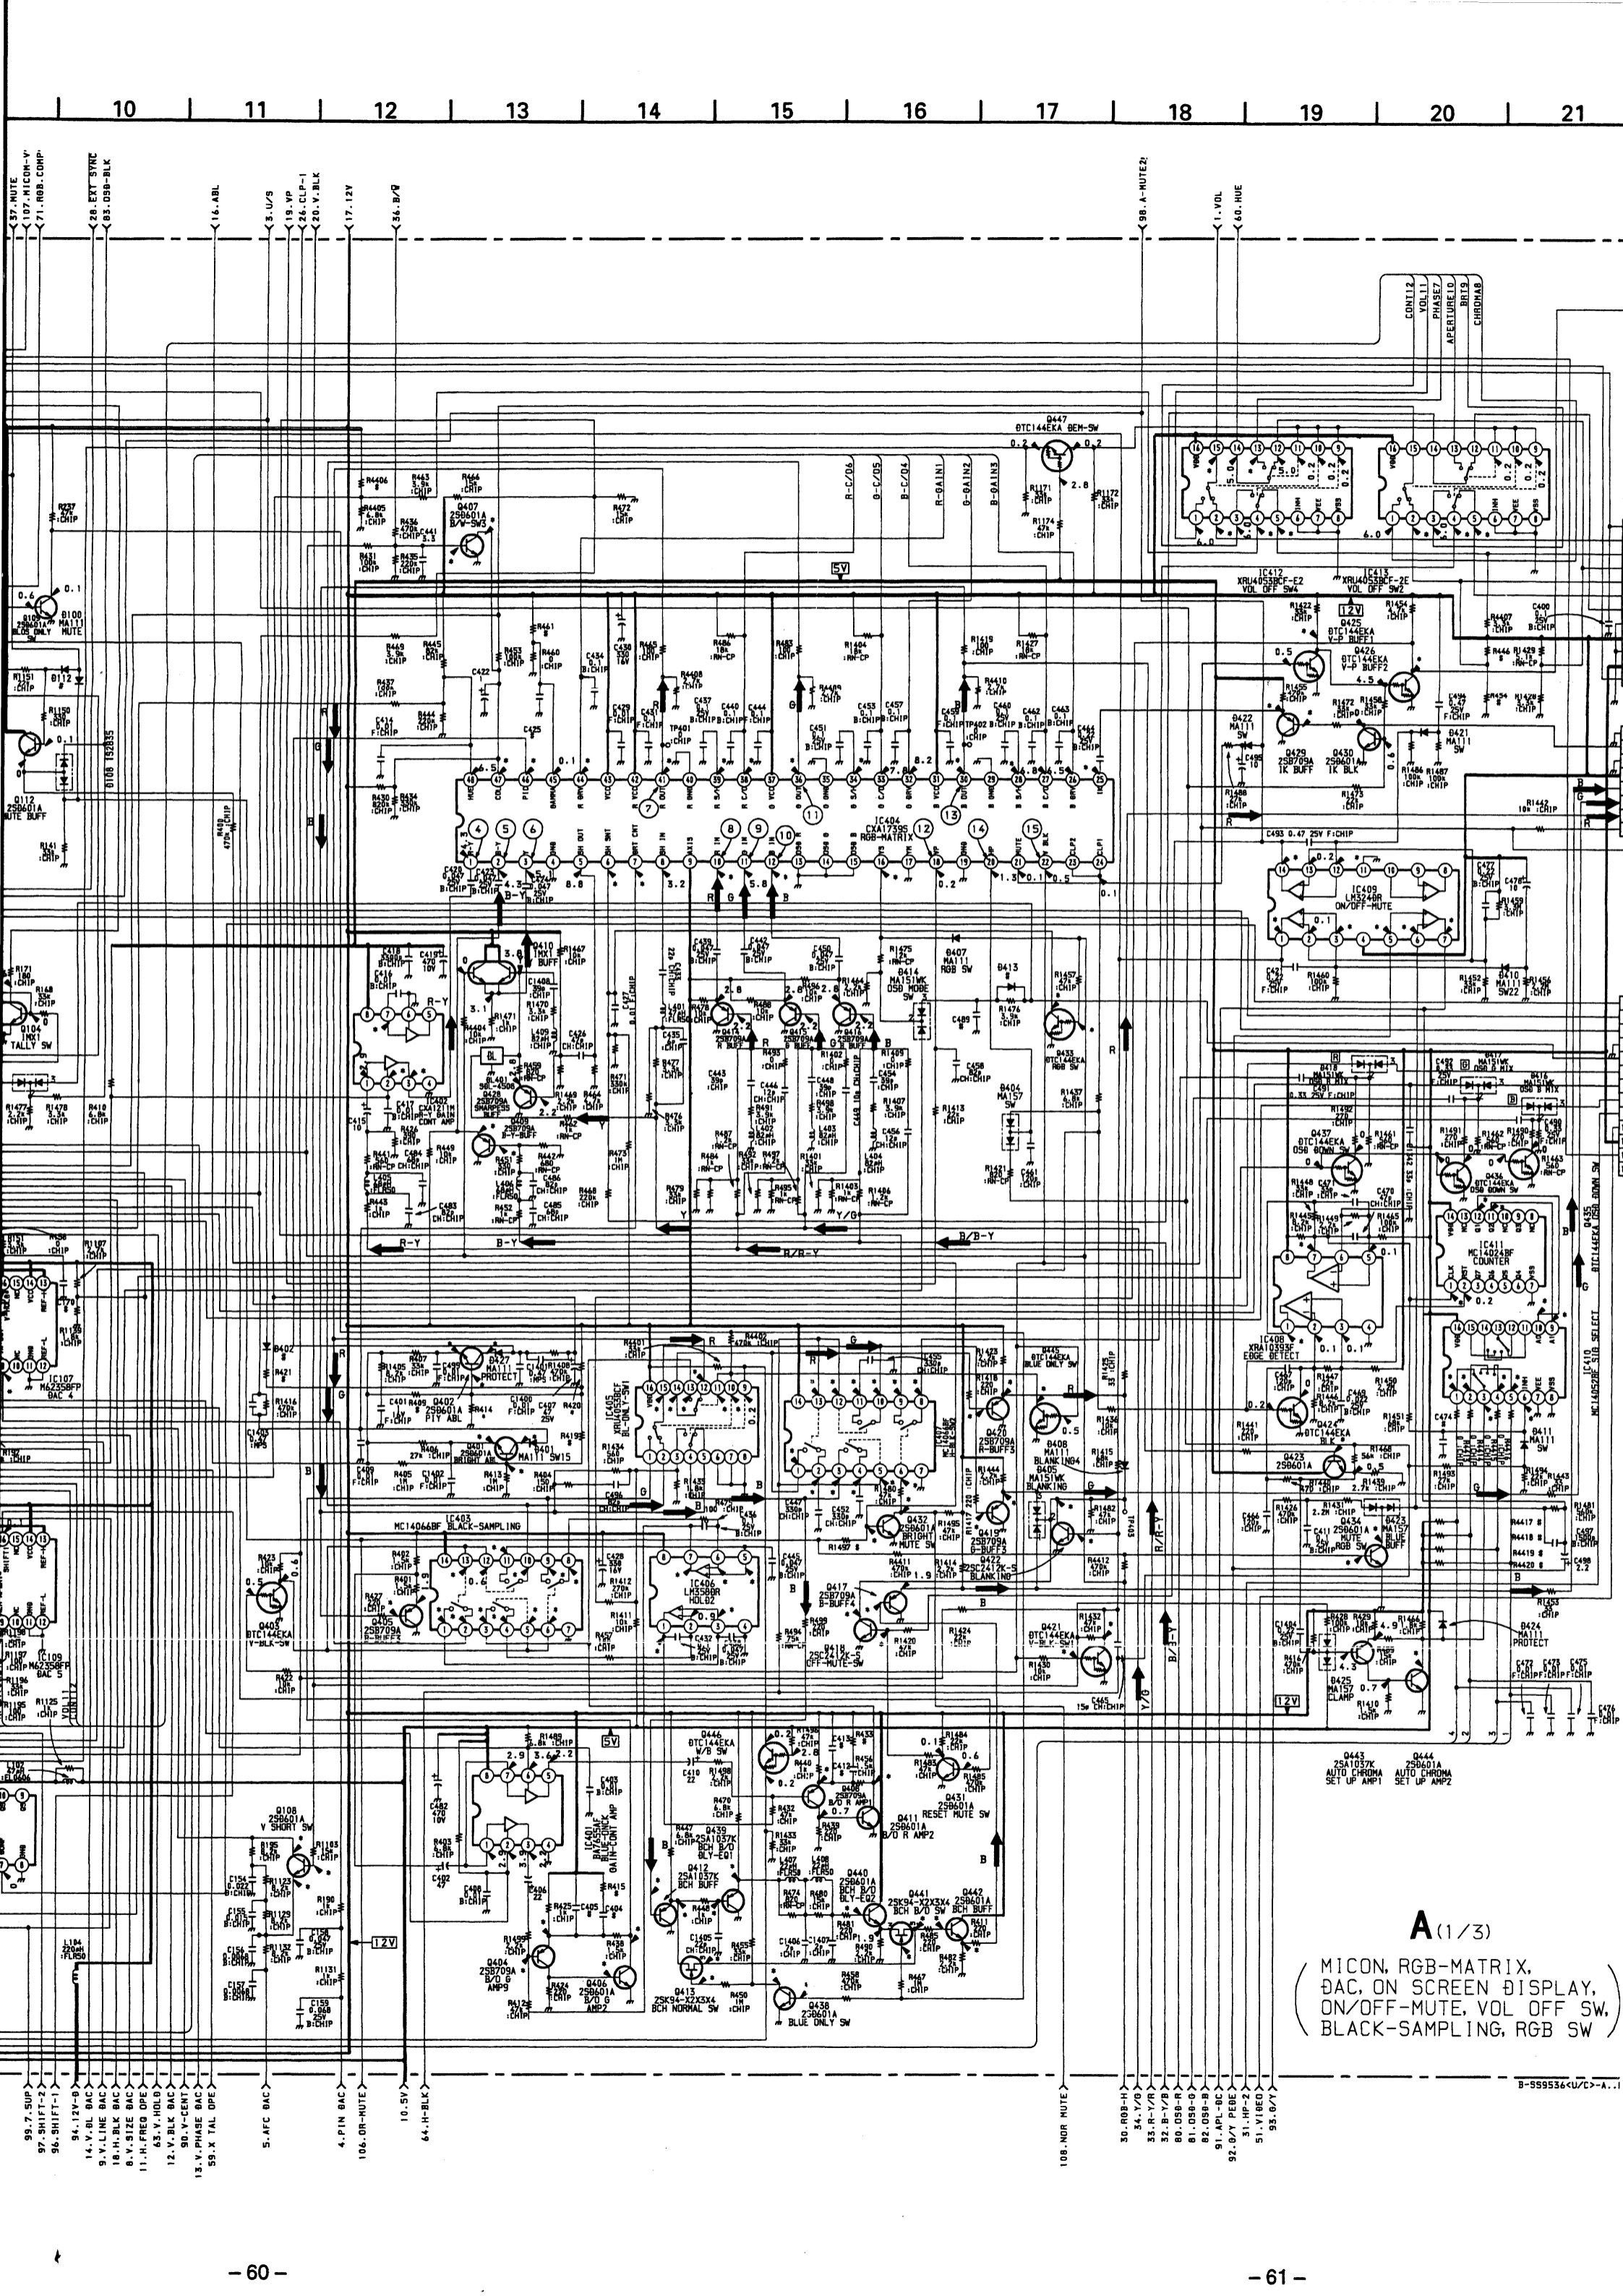

A (1/3)

(MICON, RGB-MATRIX, DAC, ON SCREEN DISPLAY, ON/OFF-MUTE, VOL OFF SW, BLACK-SAMPLING, RGB SW)

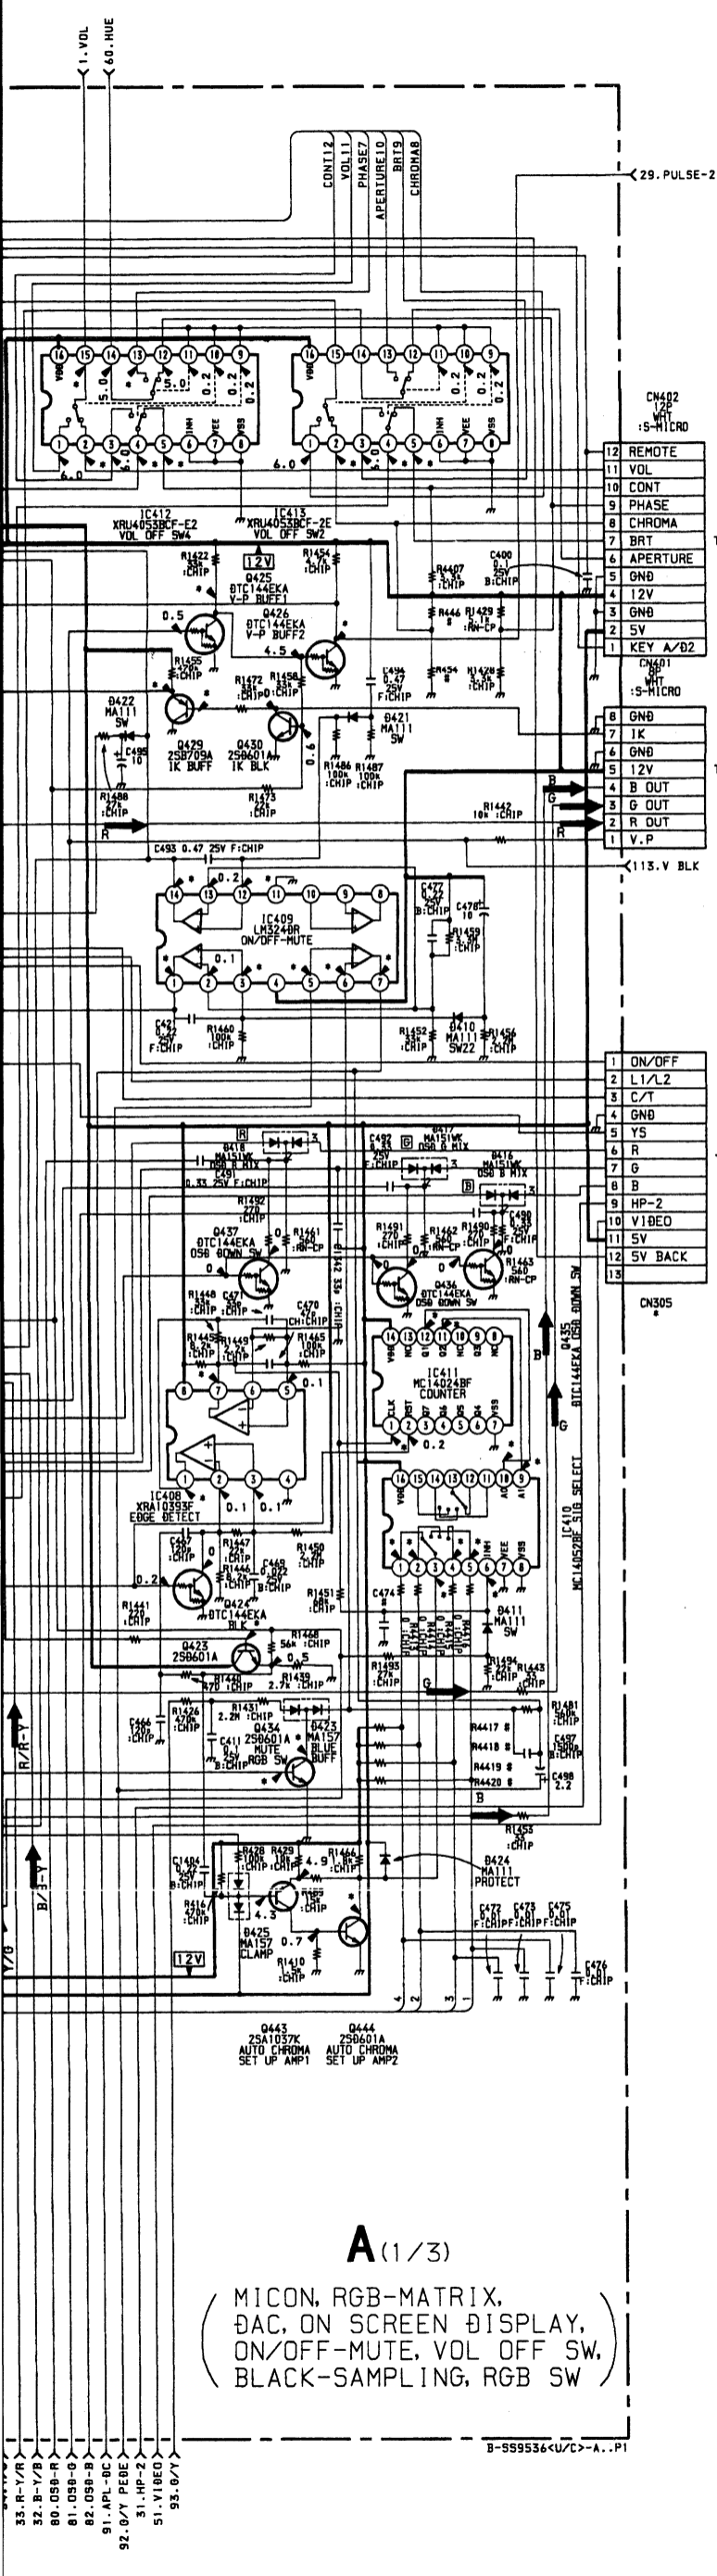


A(1/3)

MICON, RGB-MATRIX,
DAC, ON SCREEN DISPLAY,
ON/OFF-MUTE, VOL OFF SW,
BLACK-SAMPLING, RGB SW

B-959536<U/C>-A..P1

*** A BOARD WAVEFORMS**

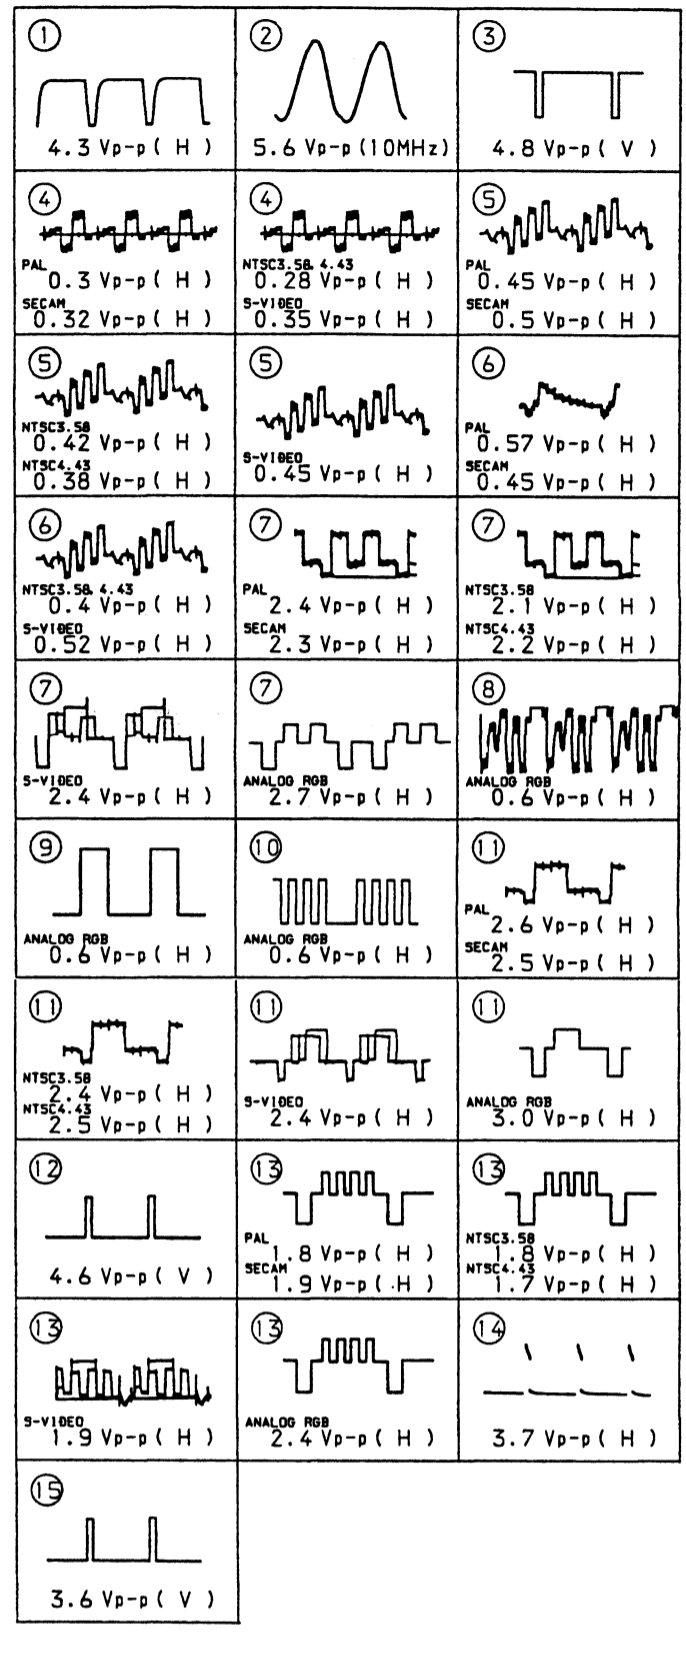

*** A BOARD (1/3) * MARK LIST**



R414	PVM-20M4U/E/A	PVM-20M2U/E
	10k : CHIP	0 : CHIP


: Not Used

A BOARD (1/3) * MARK

	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO
IC101 ②	2.3	2.4	2.2	2.2	2.0
③	4.5	4.6	4.5	4.4	4.4
④	4.1	3.4	0	0.1	0
⑤	3.4	3.5	3.5	3.5	3.1
⑥	0	0	0	0	4.8
⑦	0	0	0	0	0
⑧	4.9	5.0	0	0	0
⑨	5.0	5.0	0	5.0	0
⑩	5.0	5.0	0	0	0
⑪	0	5.0	0	0	0
⑫	0.1	0	0.1	0.1	4.9
⑬	5.0	5.0	5.0	5.0	0
⑭	5.0	5.0	5.0	5.0	4.9
⑮	5.0	5.0	5.0	5.0	5.0
⑯	4.2	4.1	4.6	5.0	3.9
⑰	4.0	4.0	4.6	5.0	3.6
⑱	0.3	4.4	0.1	0.7	0.1
⑲	4.2	0.1	4.3	4.2	4.2
⑳	4.0	3.4	3.6	3.7	3.9
㉑	0.5	0.9	1.0	0.8	3.1
㉒	3.0	2.5	2.6	2.3	3.8
㉓	3.6	3.0	2.9	3.2	3.9
㉔	4.0	4.0	4.0	4.0	2.9
IC103 ②	0.2	0	0.2	0.2	0
IC104 ③	2.3	2.3	2.2	2.2	2.0
④	3.5	3.5	3.5	3.5	3.1
IC105 ⑤	2.3	2.3	2.2	2.2	0
⑥	0	0.1	0.1	0	11.8
⑦	2.6	2.7	2.7	2.6	2.8
⑧	5.4	5.4	5.4	5.4	6.6
IC106 ⑨	2.3	2.3	2.2	2.2	2.1
⑩	5.4	5.4	5.4	5.4	4.1
⑪	2.4	2.4	2.4	2.4	0.6
⑫	7.8	7.8	7.8	7.7	5.5
⑬	5.1	5.1	5.1	5.1	4.0
⑭	0.1	10.5	10.5	10.5	10.9
⑮	3.1	3.1	2.6	3.1	2.7
⑯	2.4	4.6	2.1	2.2	2.1
⑰	6.3	6.3	11.9	9.0	10.7
⑱	3.6	3.6	4.8	3.6	4.3
⑲	0.8	1.8	0.4	0.3	2.4
IC107 ②	4.6	4.5	4.5	4.5	4.4
③	2.3	2.3	2.2	0	2.1
④	2.8	2.8	2.8	2.8	3.3
⑤	1.5	1.4	1.4	1.4	2.3
⑥	2.9	2.9	2.9	2.9	2.1
⑦	2.6	2.6	2.6	2.6	2.9
⑧	2.9	2.9	2.9	2.9	2.8
⑨	2.6	2.6	2.8	2.8	2.8
⑩	3.2	3.2	5.4	5.4	5.3
⑪	4.5	4.6	5.0	5.0	3.7
⑫	6.3	6.3	6.1	6.1	6.0
IC109 ②	4.6	4.5	4.5	4.5	4.4
③	2.3	2.3	2.2	2.2	2.1
④	11.9	11.9	11.9	11.9	11.9
⑤	11.9	11.9	0.1	0	0.1
IC110 ⑥	2.3	2.4	2.2	2.2	2.0
⑦	7.2	7.2	7.2	7.2	8.3
⑧	5.8	5.8	5.8	5.8	6.2
⑨	11.9	11.9	11.9	11.9	7.8
⑩	0	7.9	7.9	7.9	7.8
⑪	3.7	3.7	3.5	3.5	3.5
IC111 ②	0.3	0.3	0.3	0.3	0
③	0.2	0	0.1	0.1	0.1
④	0	5.0	5.0	5.0	0
⑤	5.0	5.0	5.0	5.0	0
IC402 ⑥	3.1	3.9	2.9	3.0	3.0
⑦	0	2.3	2.3	0	2.2
⑧	2.9	2.9	2.9	0	2.9
IC403 ⑨	0.8	0.8	0.8	0.8	0.8
⑩	1.2	1.2	0.8	0.8	1.2
⑪	1.4	1.3	0.9	0.9	1.3
⑫	0.8	0.8	0.9	0.9	0.8
⑬	0.6	0.5	0.6	0.6	0
⑭	0.5	0.6	0.6	0.6	0.6
⑮	1.0	1.0	1.0	1.0	0.8
⑯	1.6	1.5	1.1	1.1	1.4
⑰	1.4	1.4	1.0	1.0	1.2
⑱	0.9	1.0	1.0	1.0	0.8
㉑	0.6	0.6	0.6	0.6	0
IC404 ②	3.0	3.0	3.0	3.0	4.5
③	4.9	4.9	4.9	4.9	4.7
④	5.6	5.6	5.6	5.6	5.6
⑤	5.6	5.6	5.6	5.6	5.6
⑥	0	0.1	0	0	0
⑦	3.8	4.0	4.1	4.2	4.0
⑧	7.1	6.6	8.0	8.0	7.7
⑨	1.4	1.3	1.2	1.1	1.2
⑩	7.0	7.3	8.1	7.8	7.8
⑪	1.4	1.3	1.2	1.1	1.2
⑫	7.8	7.8	7.7	7.8	8.0
⑬	6.9	7.1	7.7	7.7	7.6
⑭	1.2	1.2	1.0	1.0	1.2
⑮	7.2	7.2	7.2	7.2	8.3
⑯	7.2	7.2	7.2	7.2	6.9
⑰	6.6	6.6	6.6	6.6	5.5
IC405 ⑱	1.6	1.5	1.1	1.3	1.4
⑲	1.4	1.4	0.9	0	1.7
㉑	1.2	1.2	0.9	0	1.1
㉒	1.4	1.3	1.0	0	1.2
㉓	1.3	1.3	1.0	0	1.2
㉔	0.5	0.5	0.6	1.0	0.3
㉕	0.5	0.5	0.6	1.3	0.3
㉖	1.2	1.2	0.8	1.1	1.2
㉗	1.4	1.3	0.9	1.3	1.3
㉘	1.2	1.2	0.8	1.2	1.2
㉙	1.4	1.3	1.0	1.3	1.2
IC406 ①	4.8	5.1	4.8	4.8	4.8
②	0.8	0	0.9	0.9	0.8
③	1.0	0.9	1.0	1.0	0.8
④	1.0	1.0	1.1	1.1	0.8
⑤	5.1	5.1	4.9	4.9	4.9
IC407 ⑥	1.2	1.2	0.9	1.2	1.2
⑦	0.4	-0.1	0.5	0.3	0.4
⑧	1.4	1.3	1.0	1.3	1.2
⑨	0.6	0	0.7	0.5	0.5
⑩	2.0	1.8	2.0	2.0	2.0
⑪	11.7	10.7	11.6	11.3	11.7
⑫	5.5	5.5	5.5	5.5	5.4
⑬	5.5	5.5	5.5	5.5	5.4
⑭	1.4	1.4	1.0	1.3	1.2
⑮	0.6	-0.1	0.7	0.6	0.5
⑯	2.0	1.7	2.0	2.0	2.0
⑰	2.0	1.7	2.0	2.0	2.0
IC408 ⑱	3.1	2.9	2.9	3.1	3.7
⑲	4.1	3.8	3.9	4.1	4.2
IC409 ①	0	8.8	9.0	9.4	0
②	0	0.6	0.4	0.3	0.3
③	5.9	5.9	6.3	0	5.9
④	5.9	5.9	6.3	6.0	5.9
⑤	5.9	5.9	6.3	6.0	5.9
⑥	0.1	1.8	0.5	1.2	0.1
⑦	0	10.7	6.6	6.9	0


MS

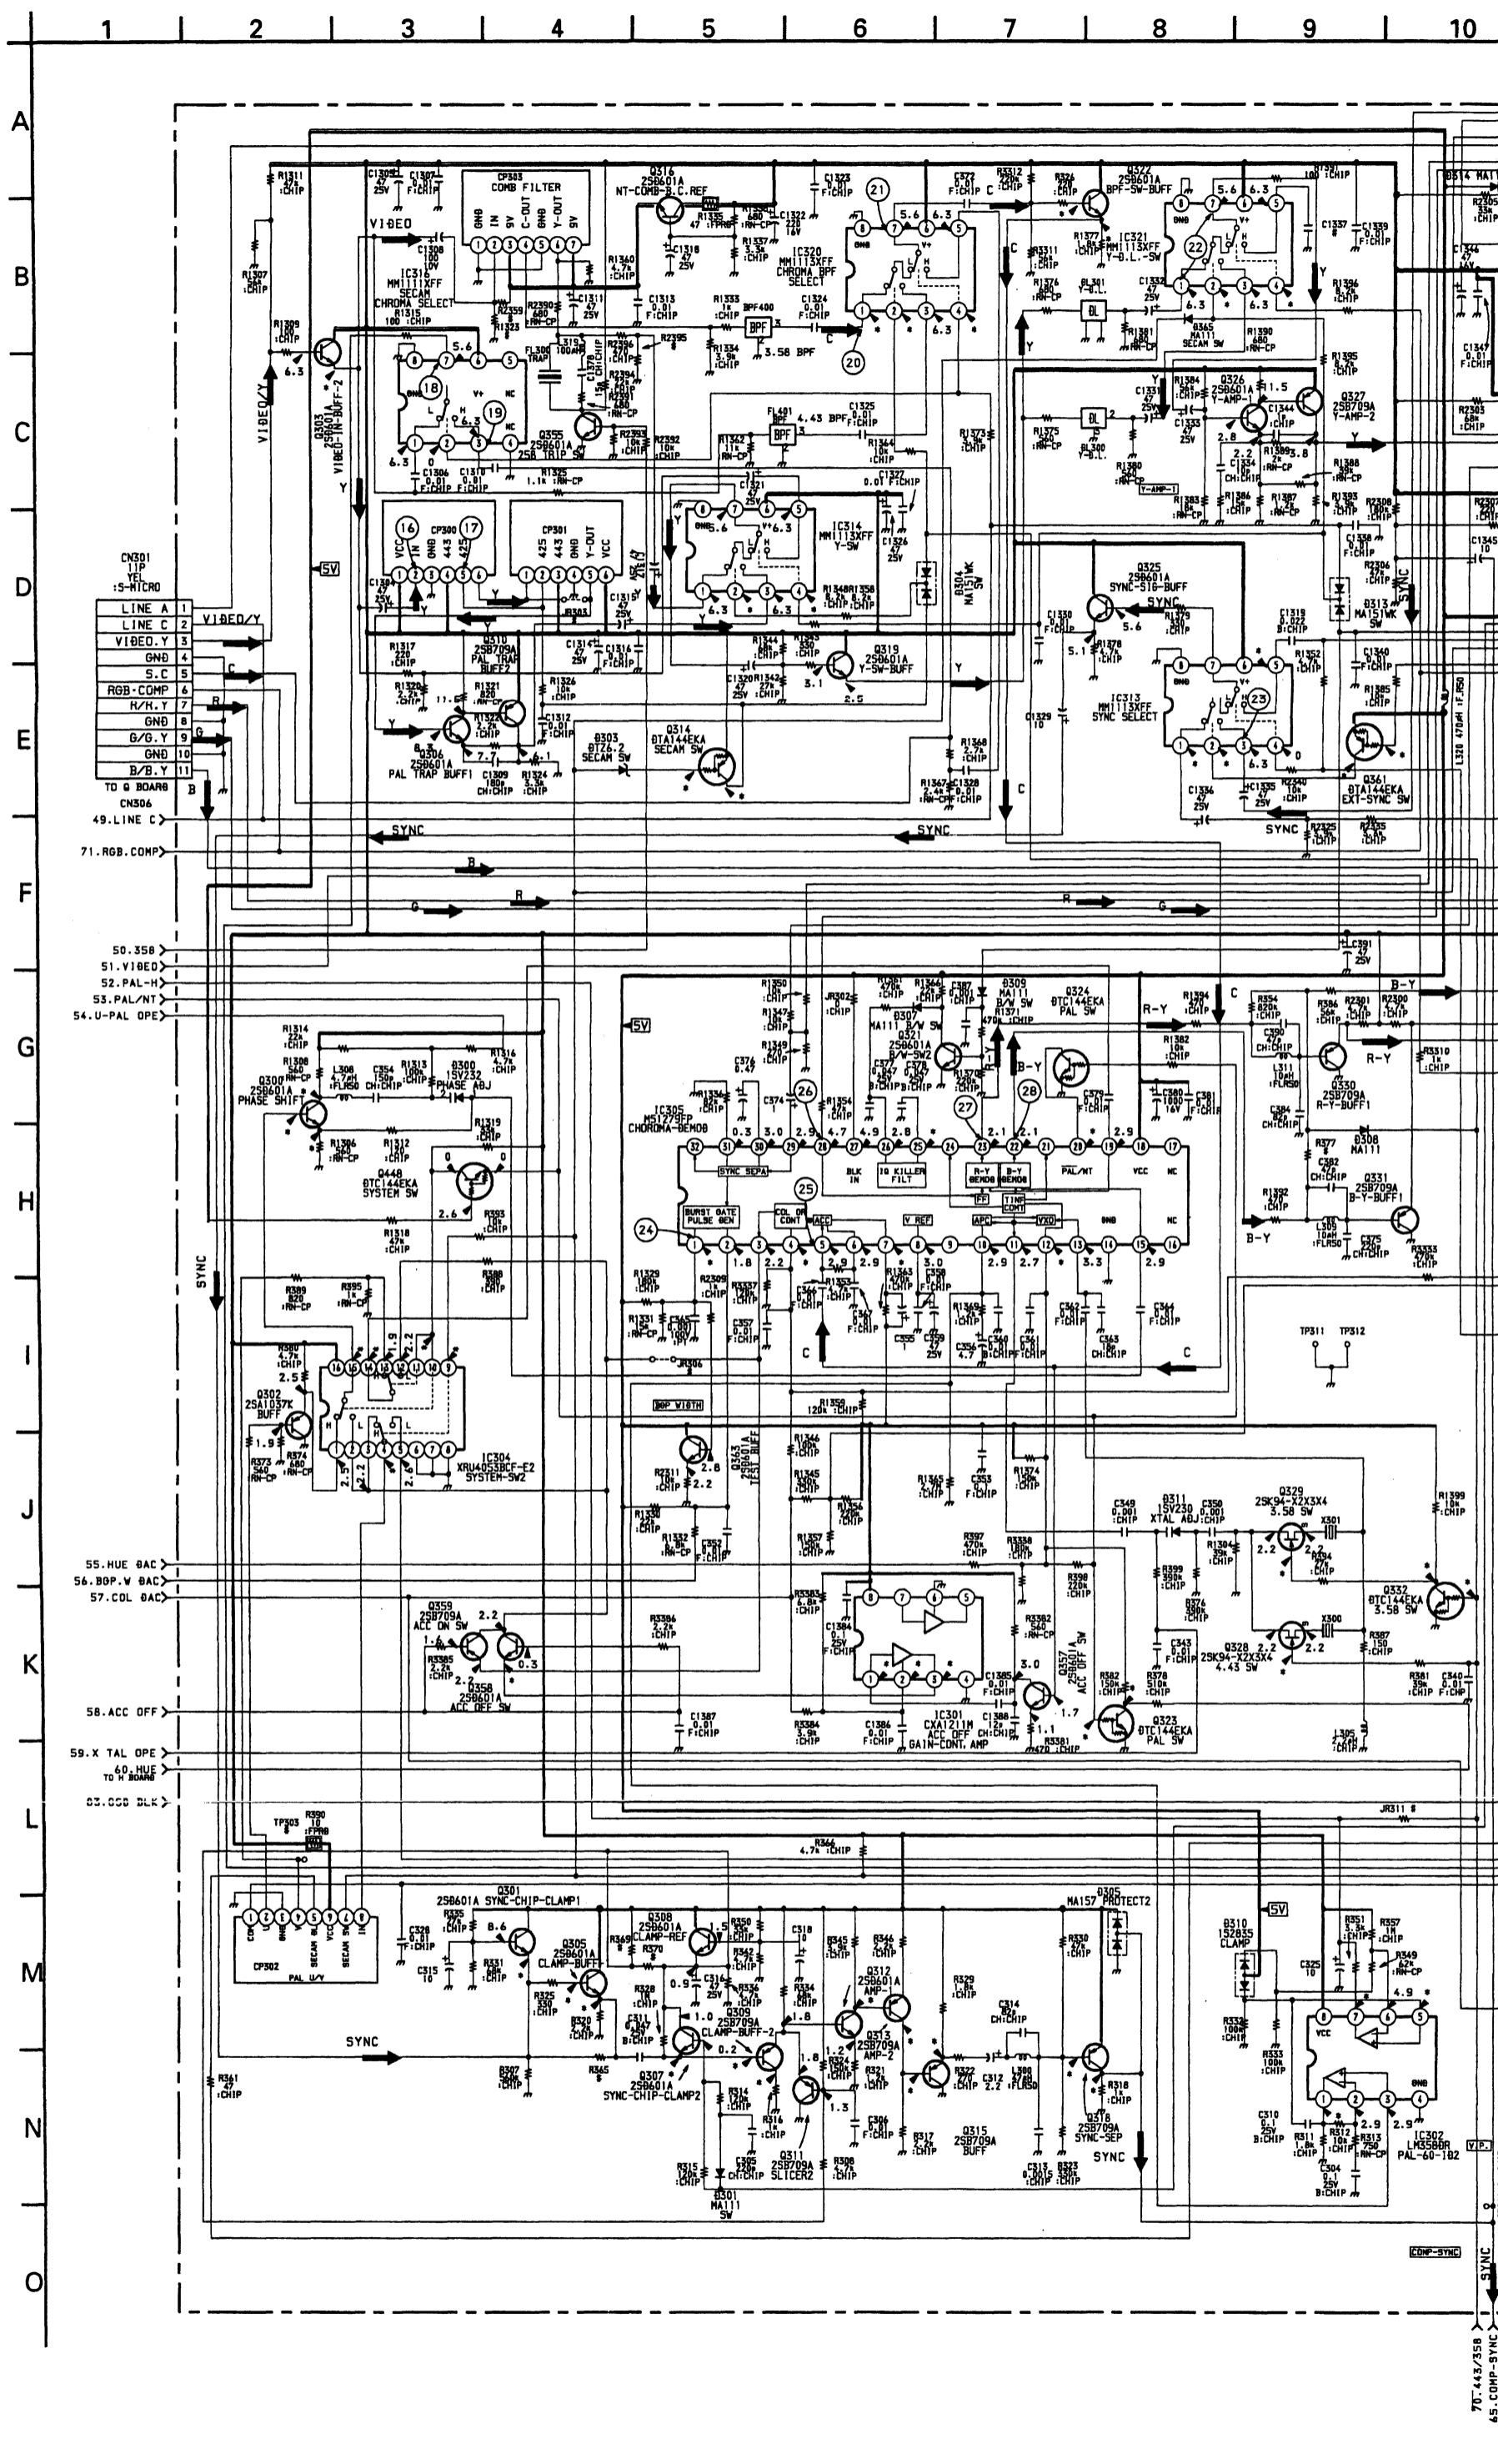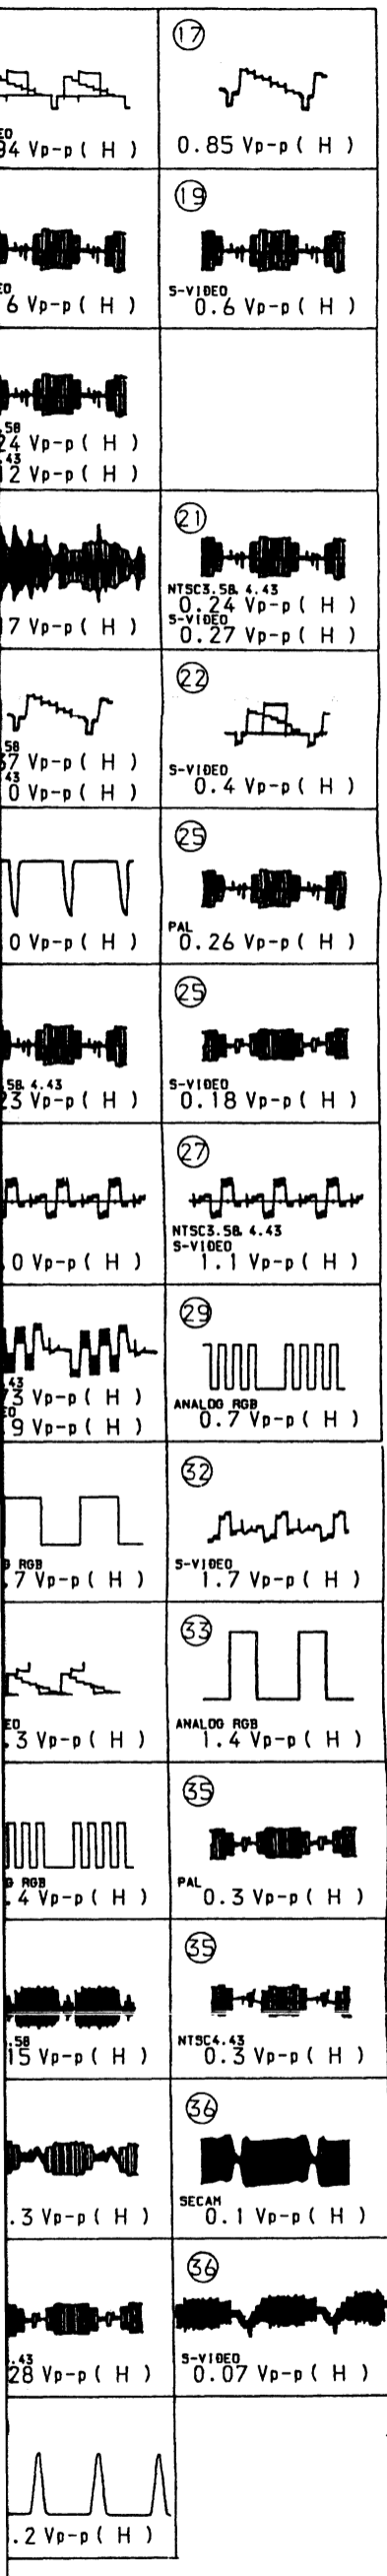

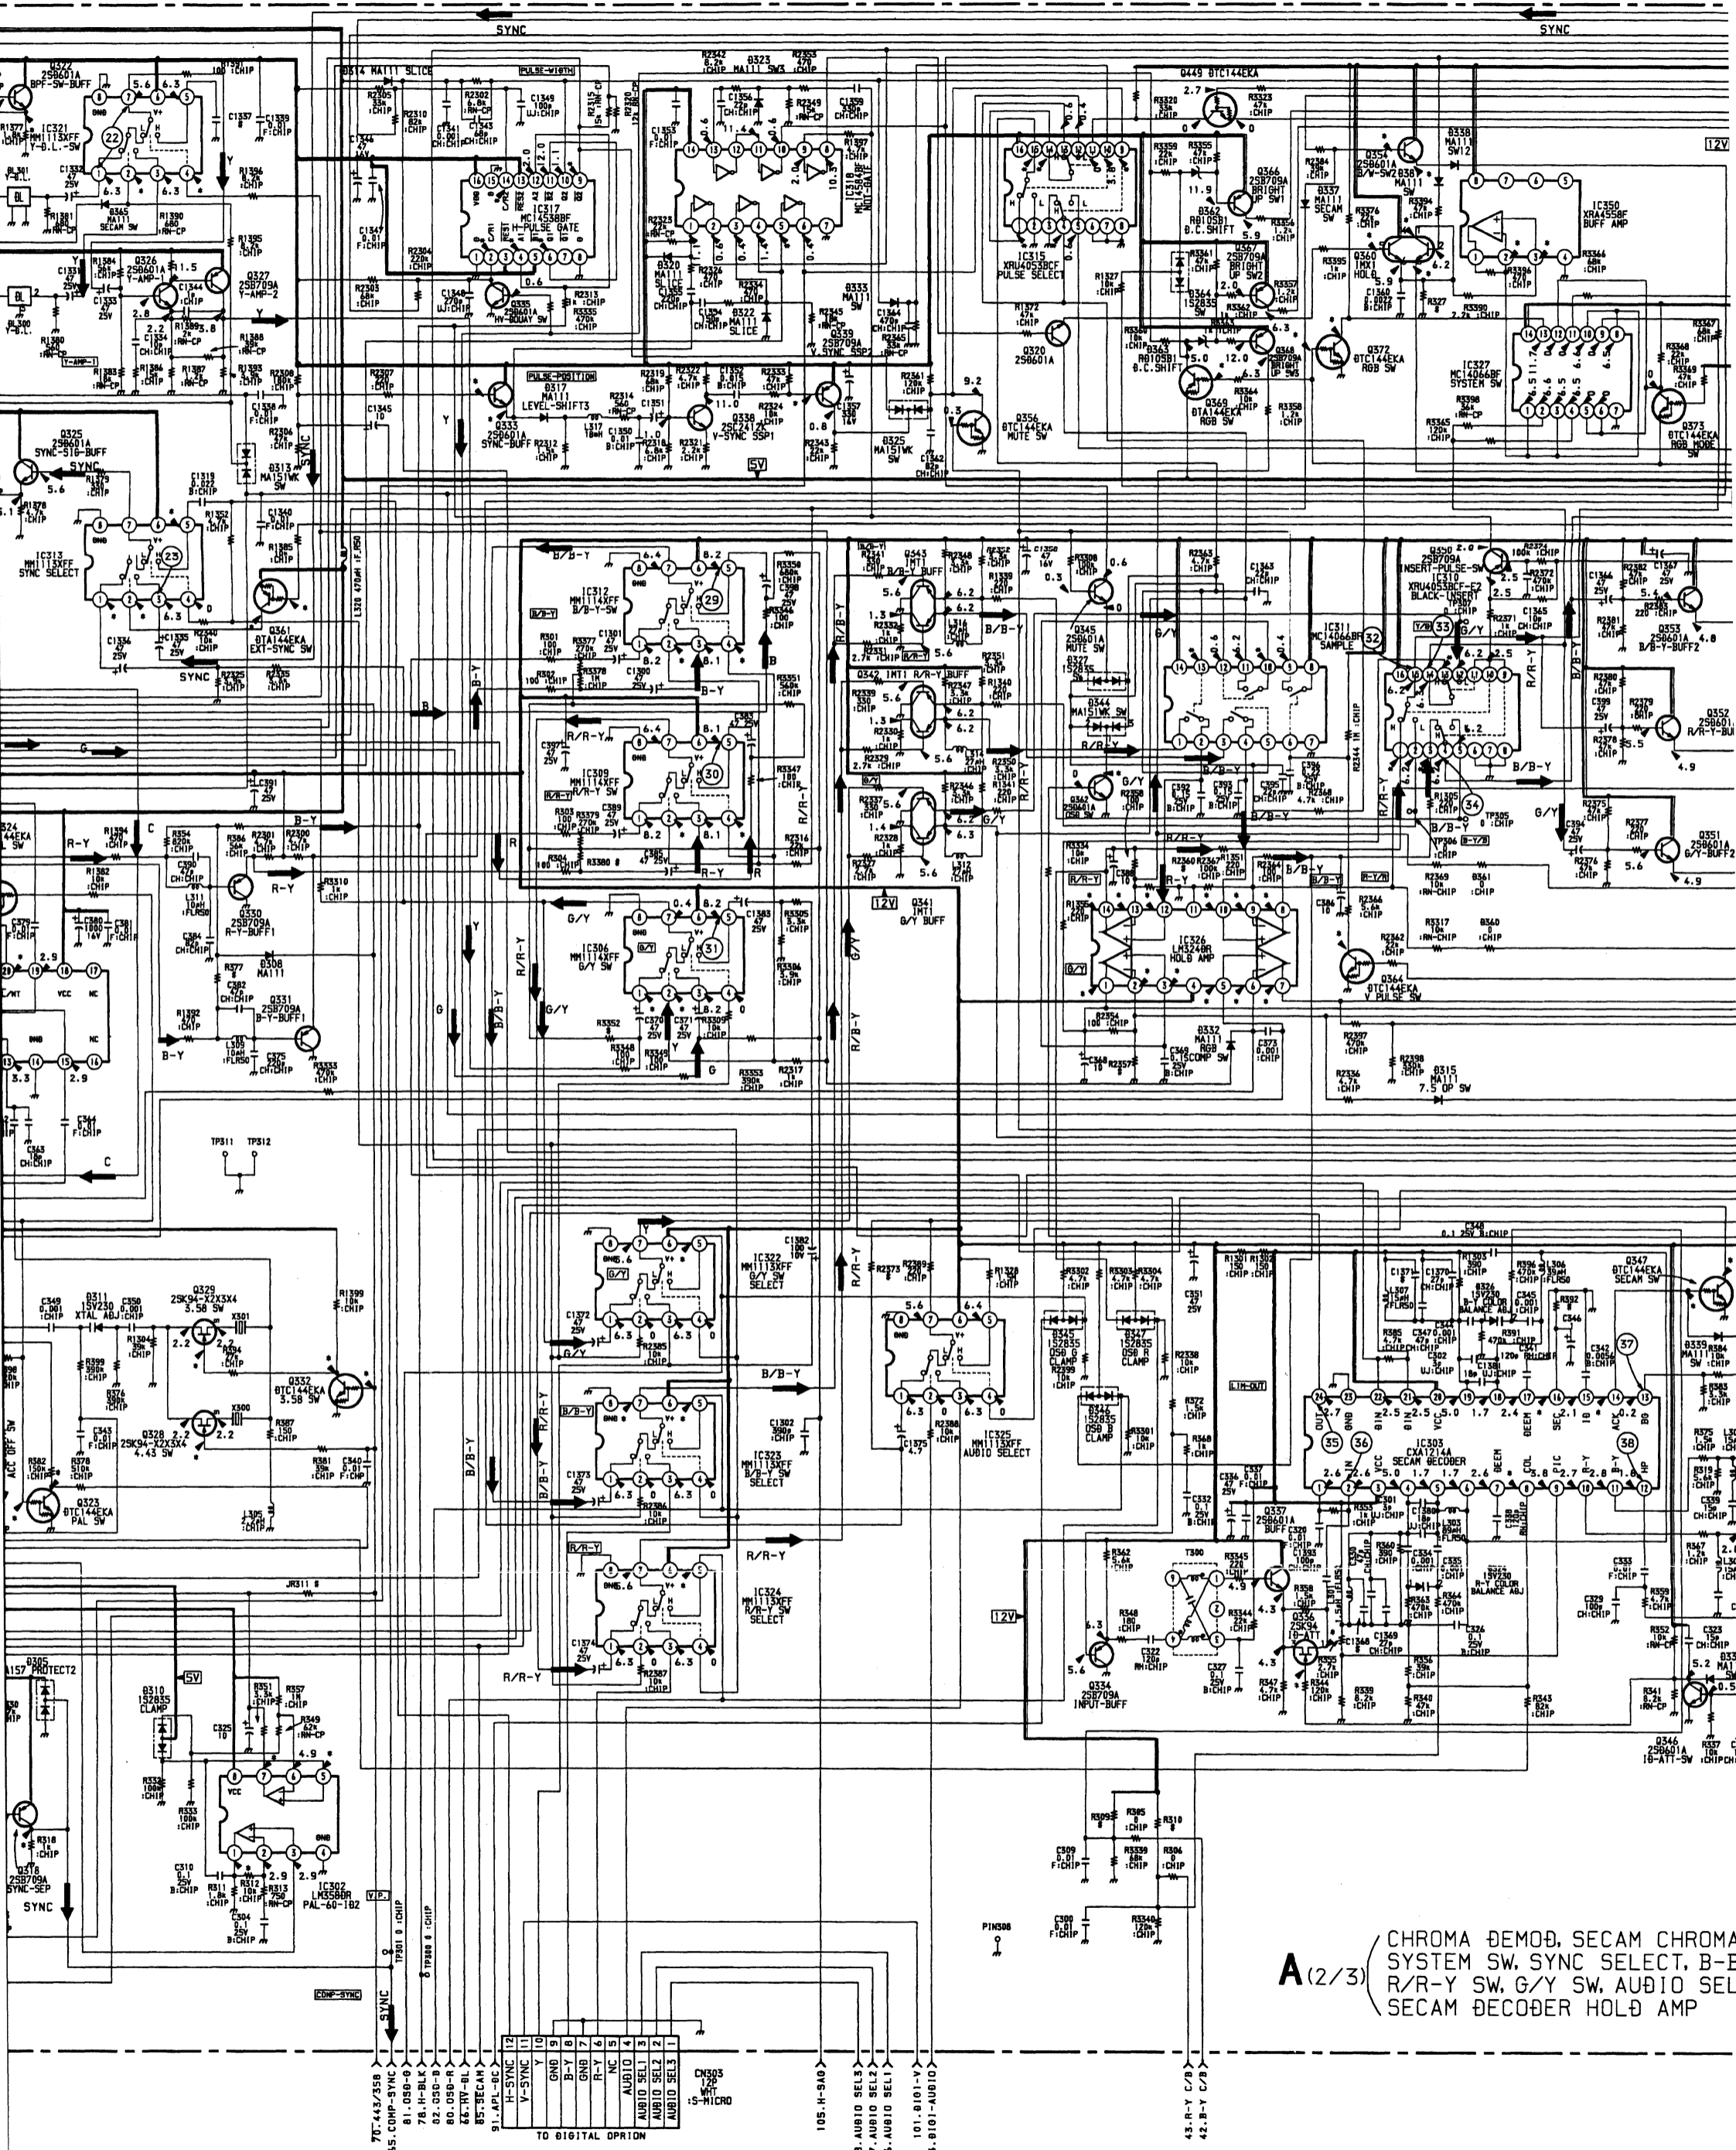







A(2/3) CHROMA DEMOD, SECAM CHROMA SYSTEM SW, SYNC SELECT, B-Y R/R-Y SW, G/Y SW, AUDIO SEL SECAM DECODER HOLD AMP

- 70. 443/358
- 45. COMP-SYNC
- 81. OSB-0
- 78. H-BLK
- 82. OSB-B
- 80. OSB-R
- 86. RV-B1
- 85. BECAM
- 91. AP1-0C
- H-SYNC 12
- Y-SYNC 11
- U 10
- GND 9
- B-Y 8
- GND 7
- R-Y 6
- AUDIO 4
- AUDIO SEL 2
- AUDIO SEL 2
- AUDIO SEL 1
- 5. HI-CRO
- 105. H-9A0
- 48. AUDIO SEL 3
- 47. AUDIO SEL 1
- 46. AUDIO SEL 1
- 101. 8101-Y
- 104. 8101-AUDIO
- 43. R-Y C/Y
- 42. B-Y C/Y

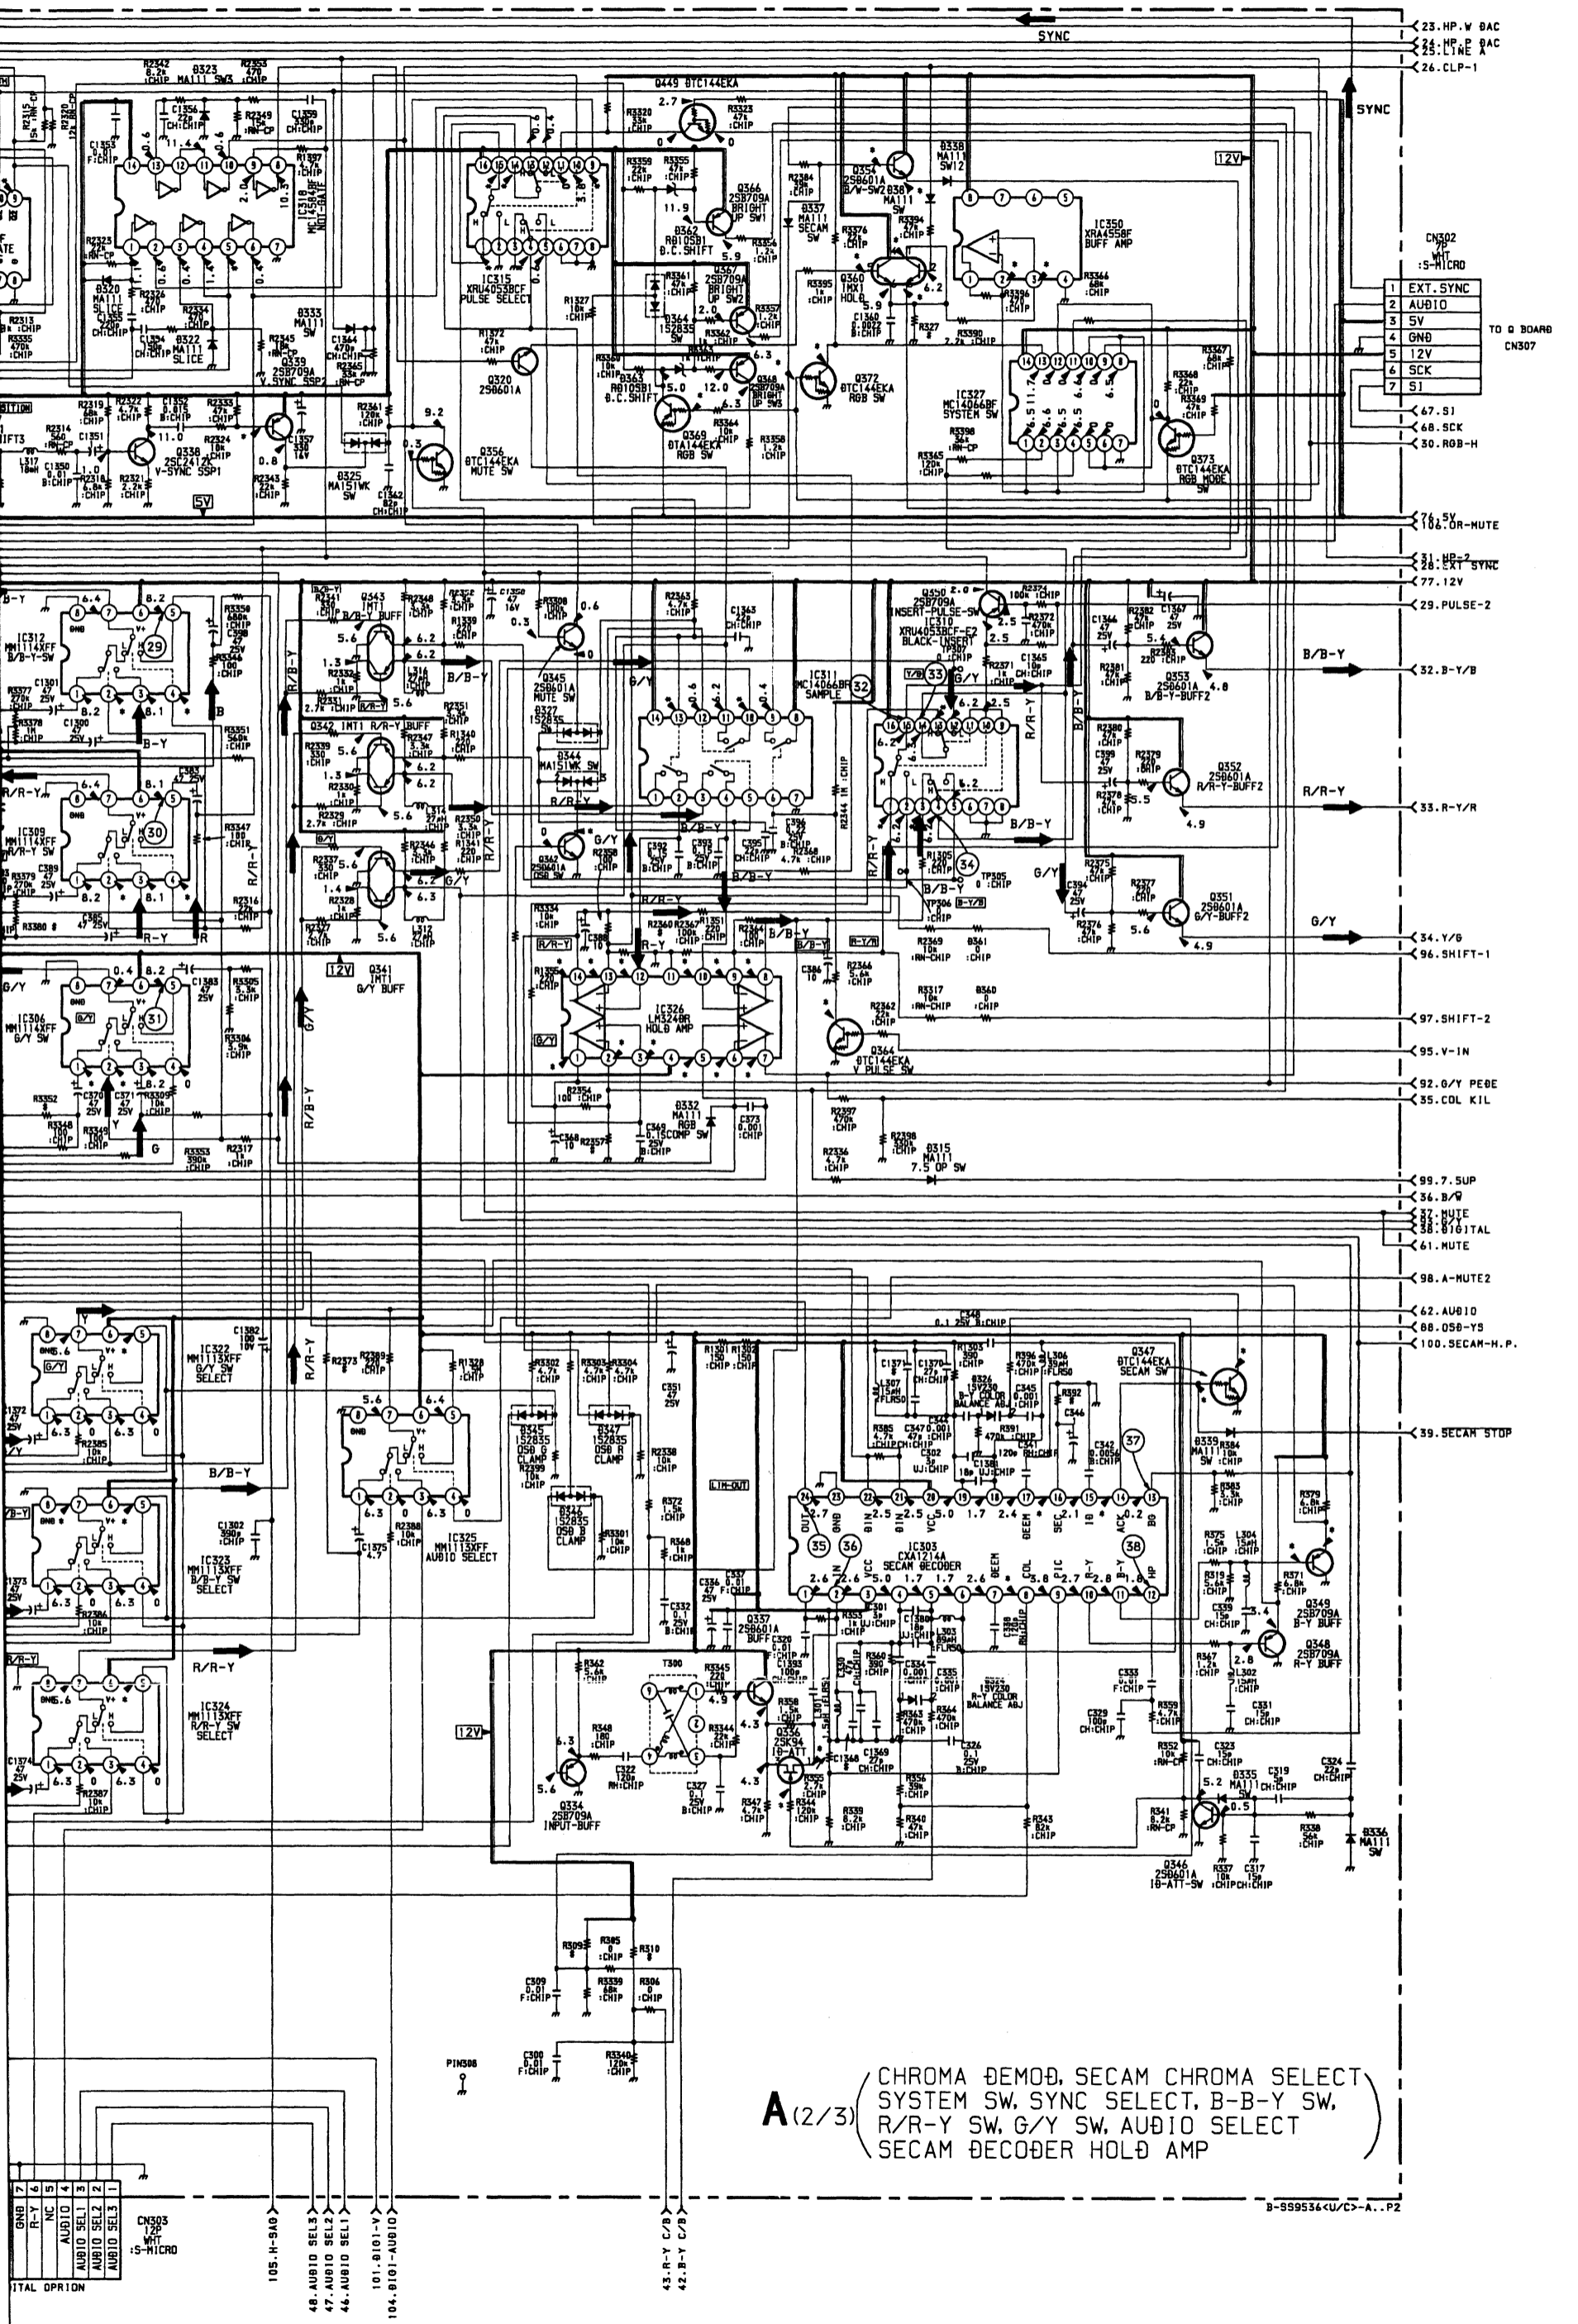

A (2/3) (CHROMA DEMOD, SECAM CHROMA SELECT SYSTEM SW, SYNC SELECT, B-B-Y SW, R/R-Y SW, G/Y SW, AUDIO SELECT SECAM DECODER HOLD AMP)

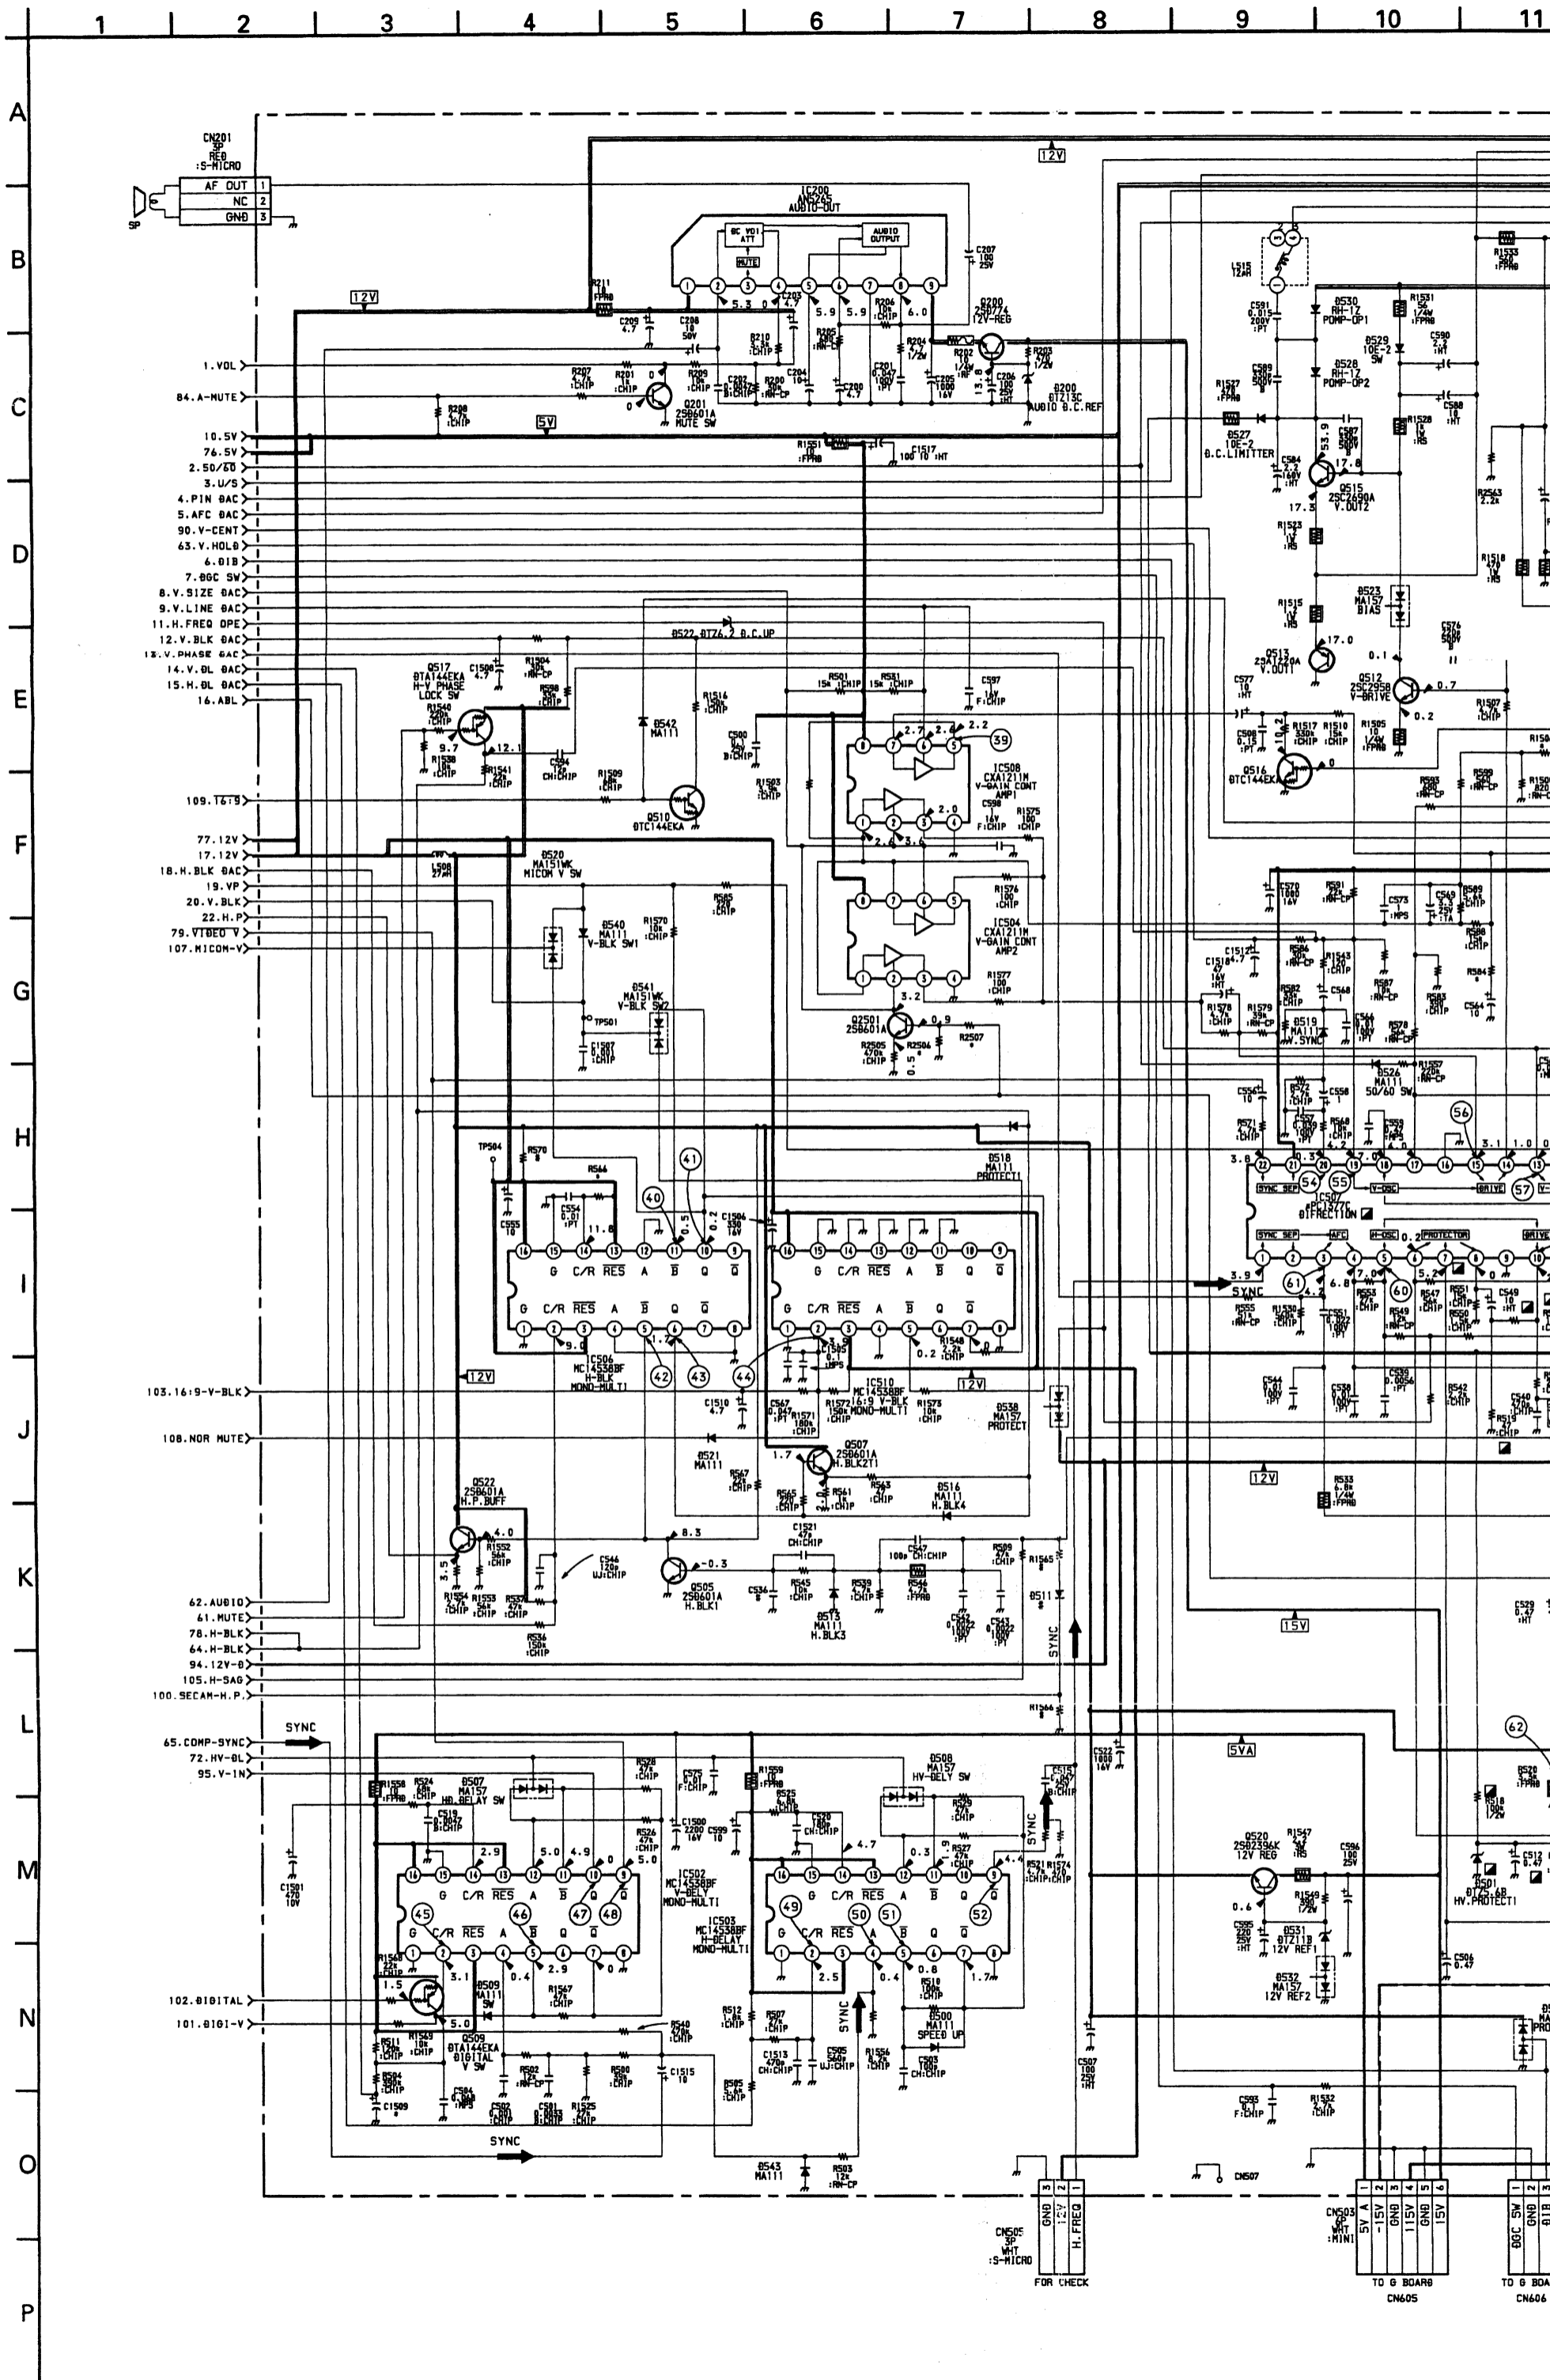


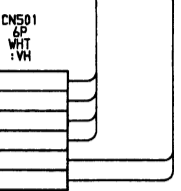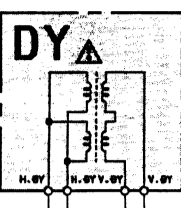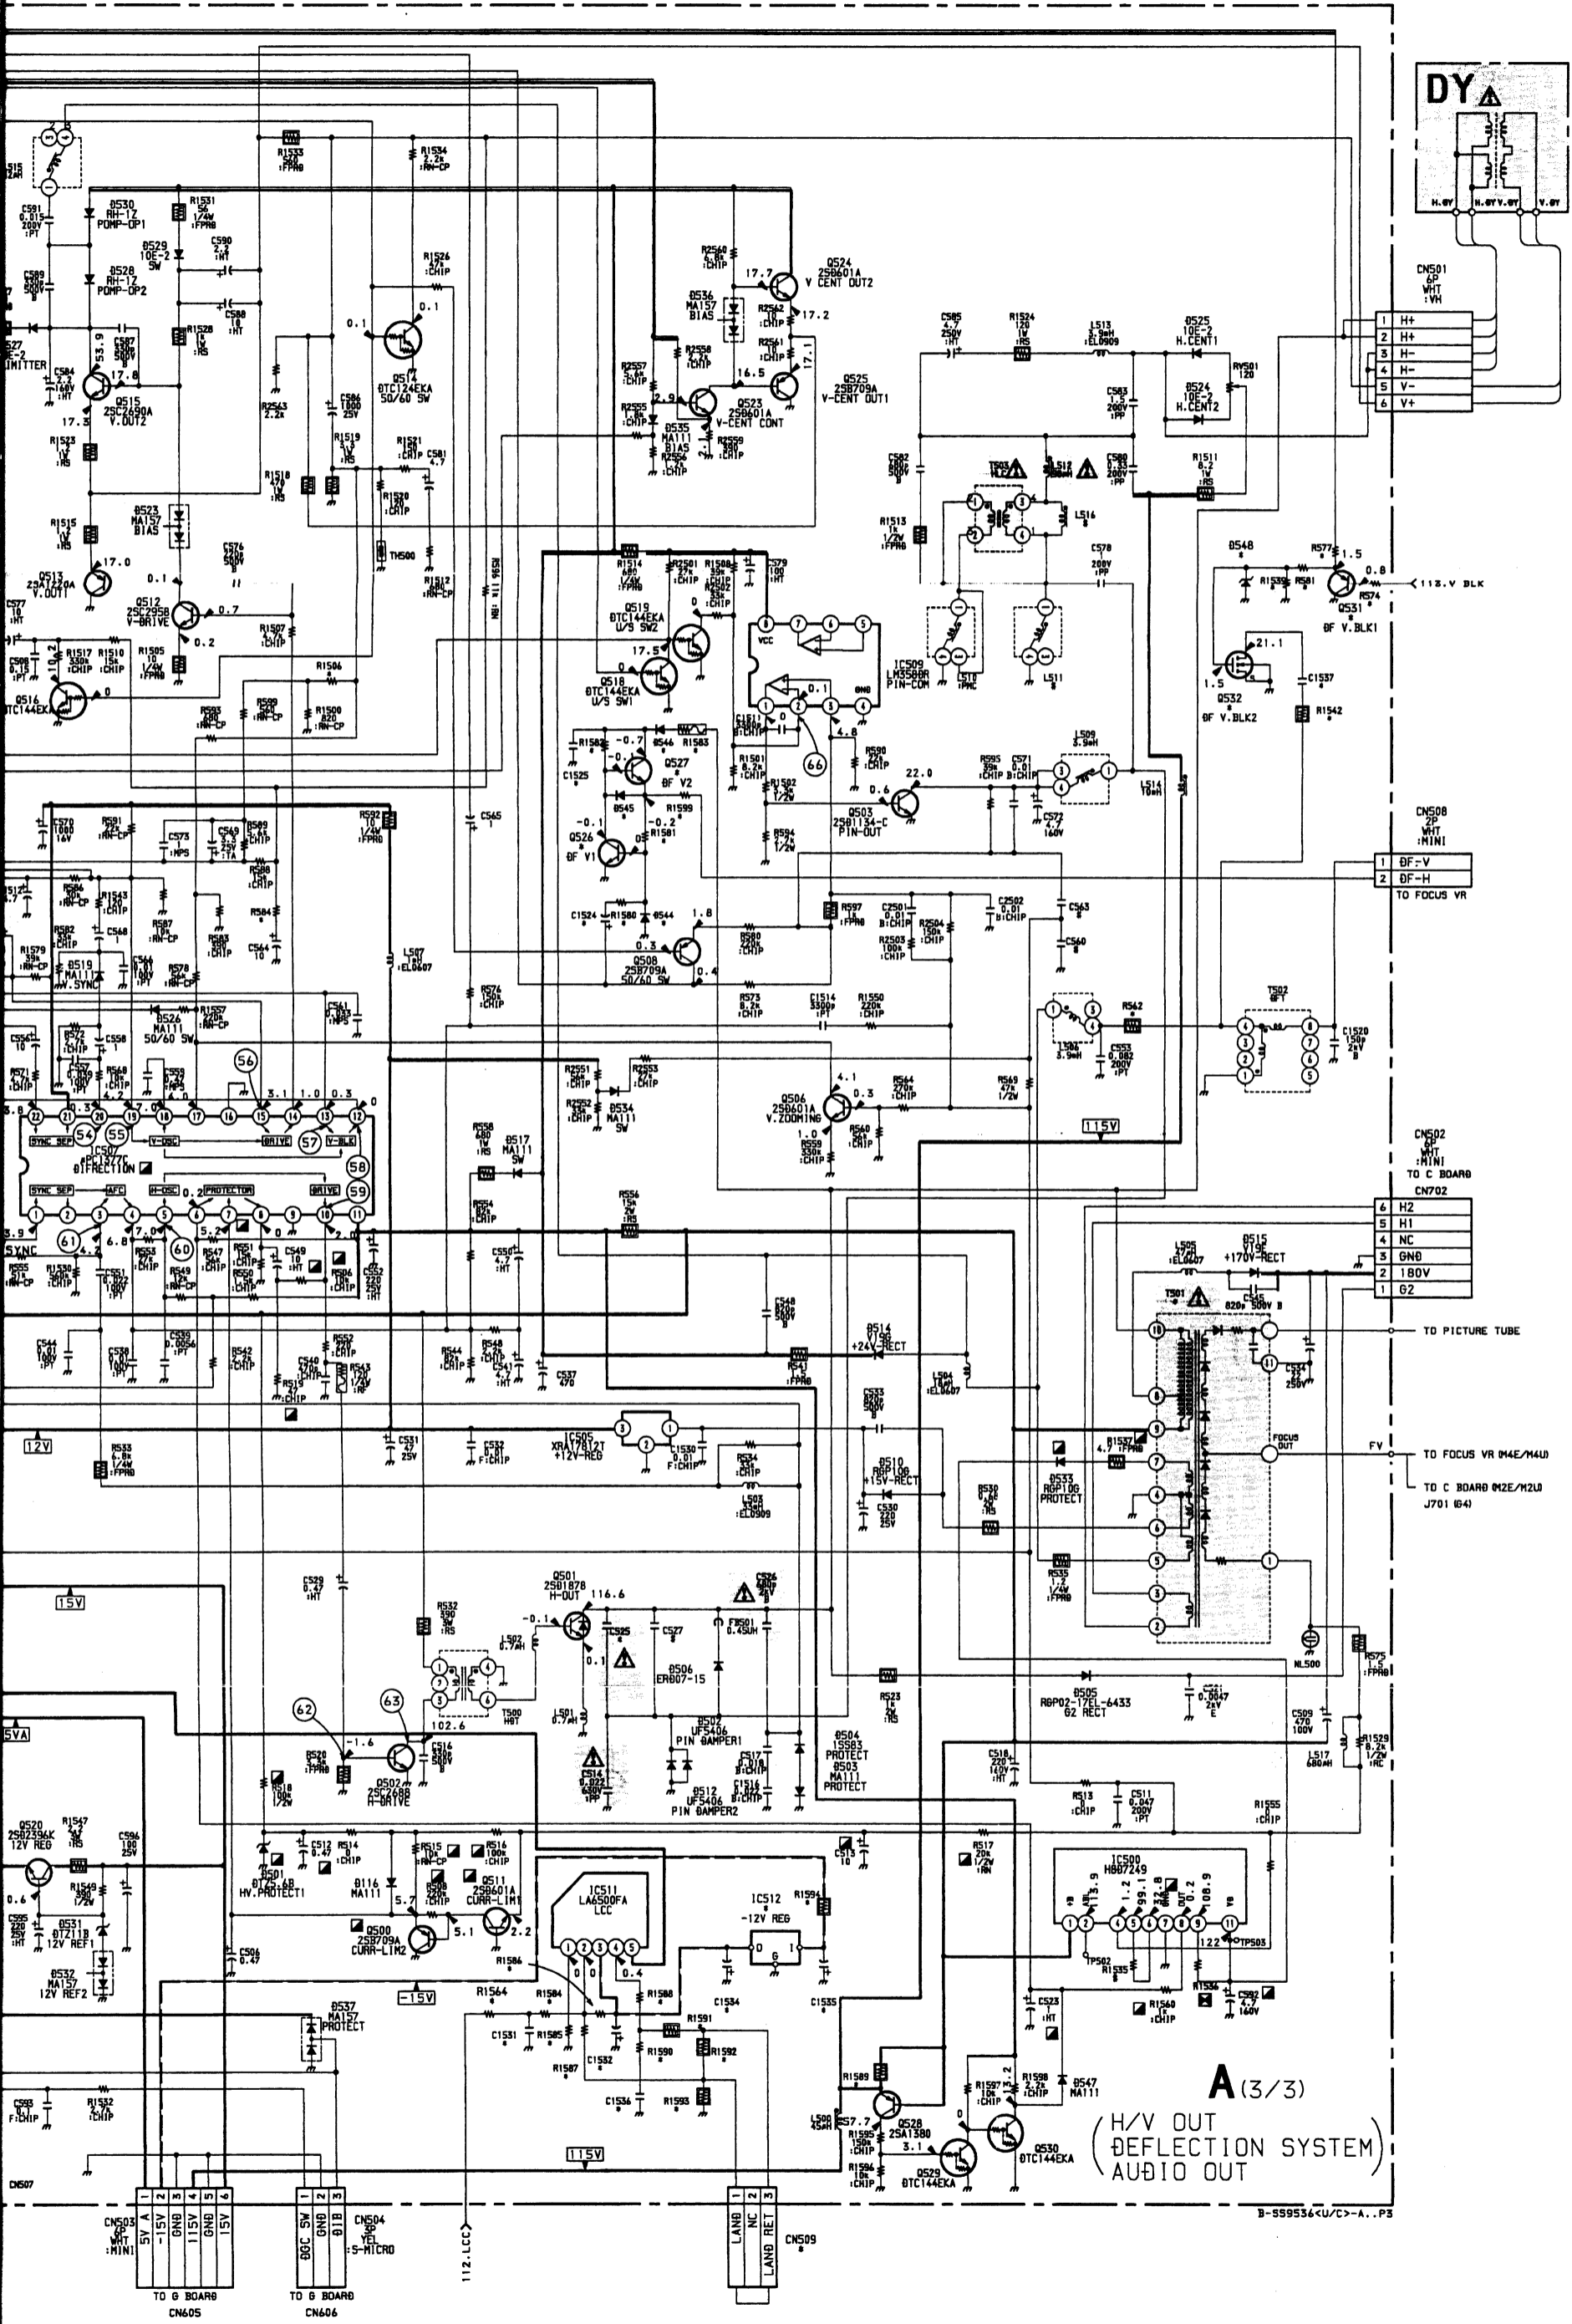


- 39 0.7 V
- 42 10.0 V
- 45 3.9 V
- 48 5.0 V
- 51 4.2 V
- 54 11.0 V
- 57 5.9 V
- 60 3.8 V
- 63 170 V
- 66 2.4 V

A (3/3)
 (H/V OUT DEFLECTION SYSTEM)
 AUDIO OUT


A BOARD WAVEFORMS

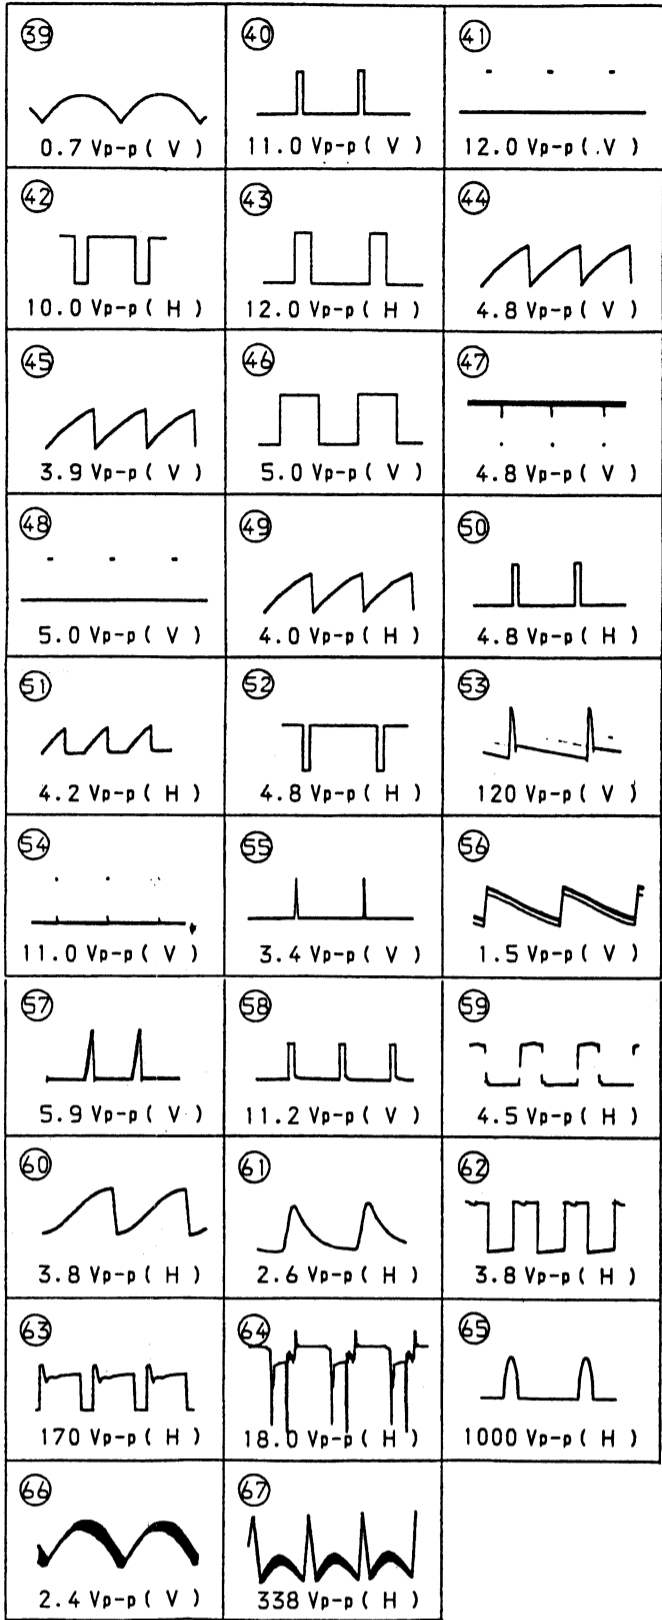



A BOARD IC404 CXA1739S

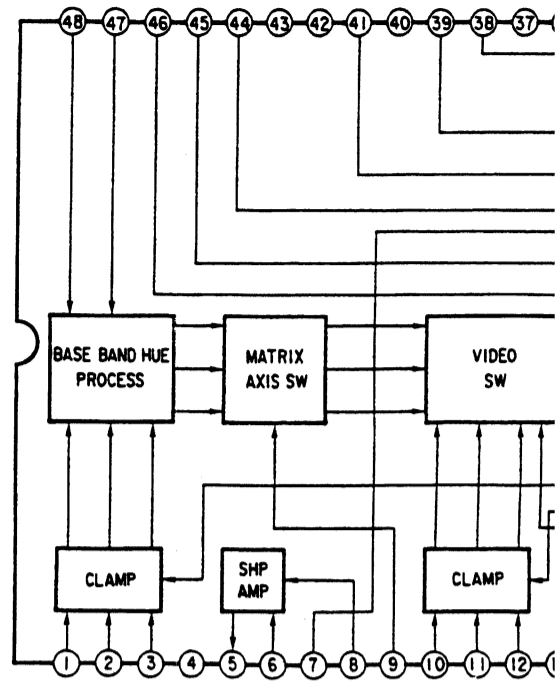


A BOARD IC200 AN5265

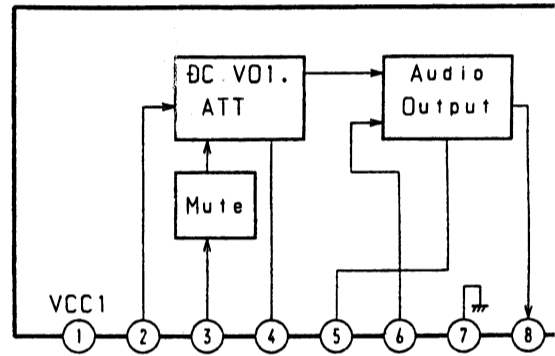


A BOARD IC101 μPD78013YCW

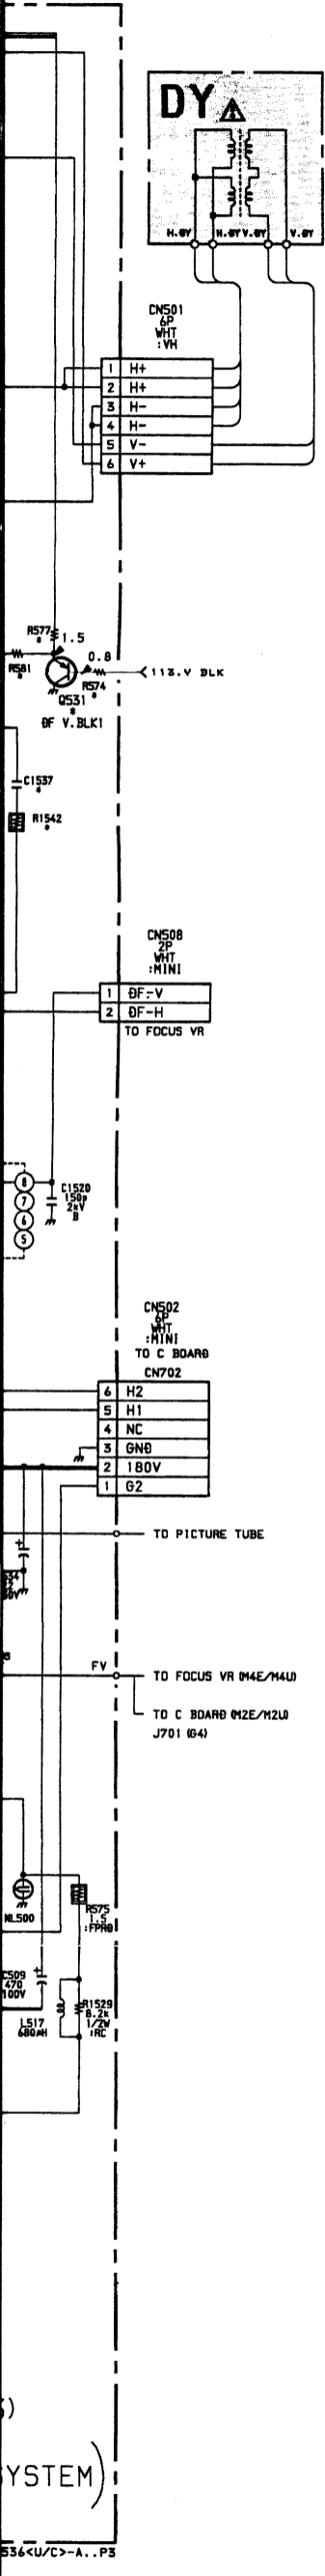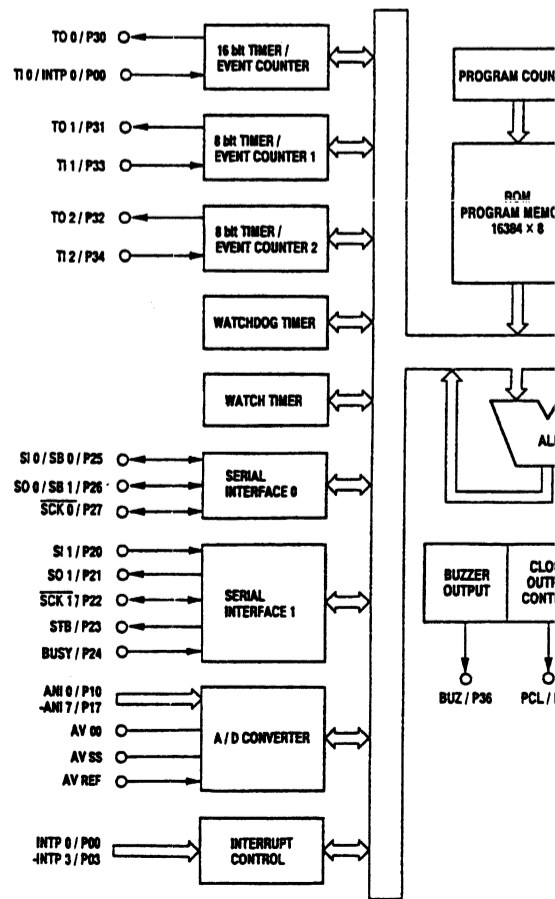


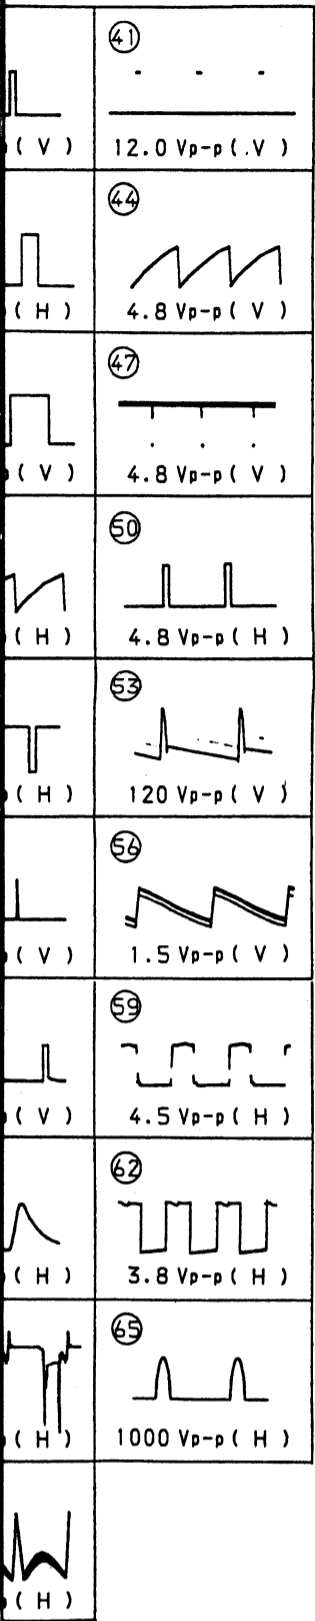


A BOARD IC404 CXA1739S

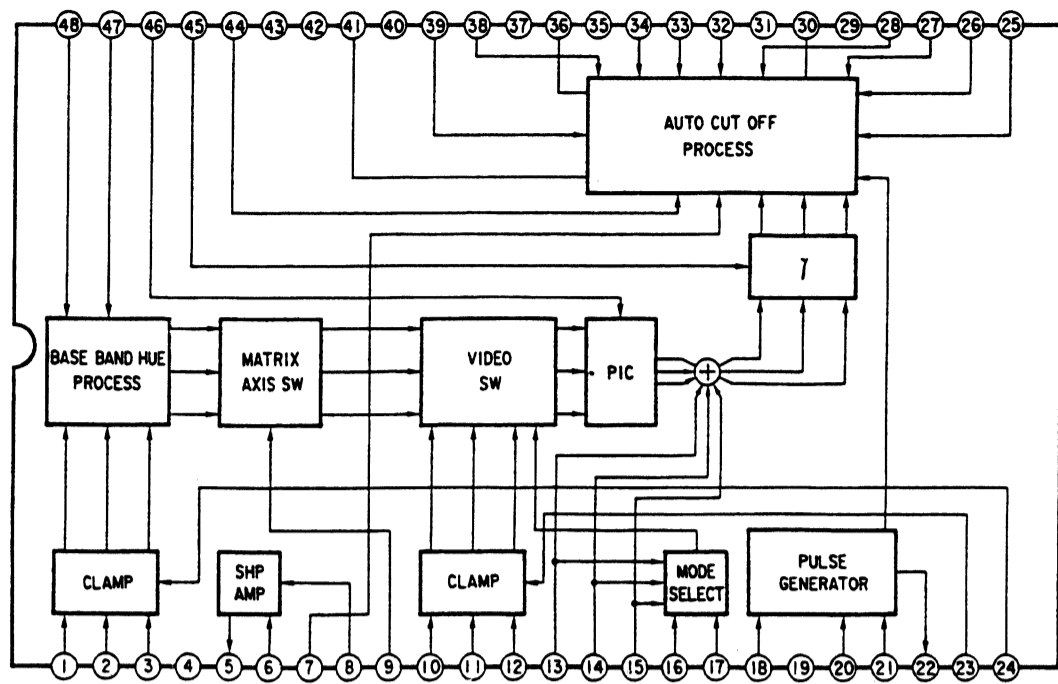

A BOARD IC200 AN5265

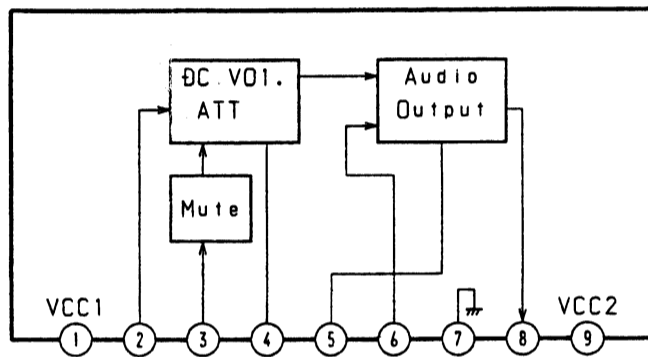

A BOARD IC101 μPD78013YCW

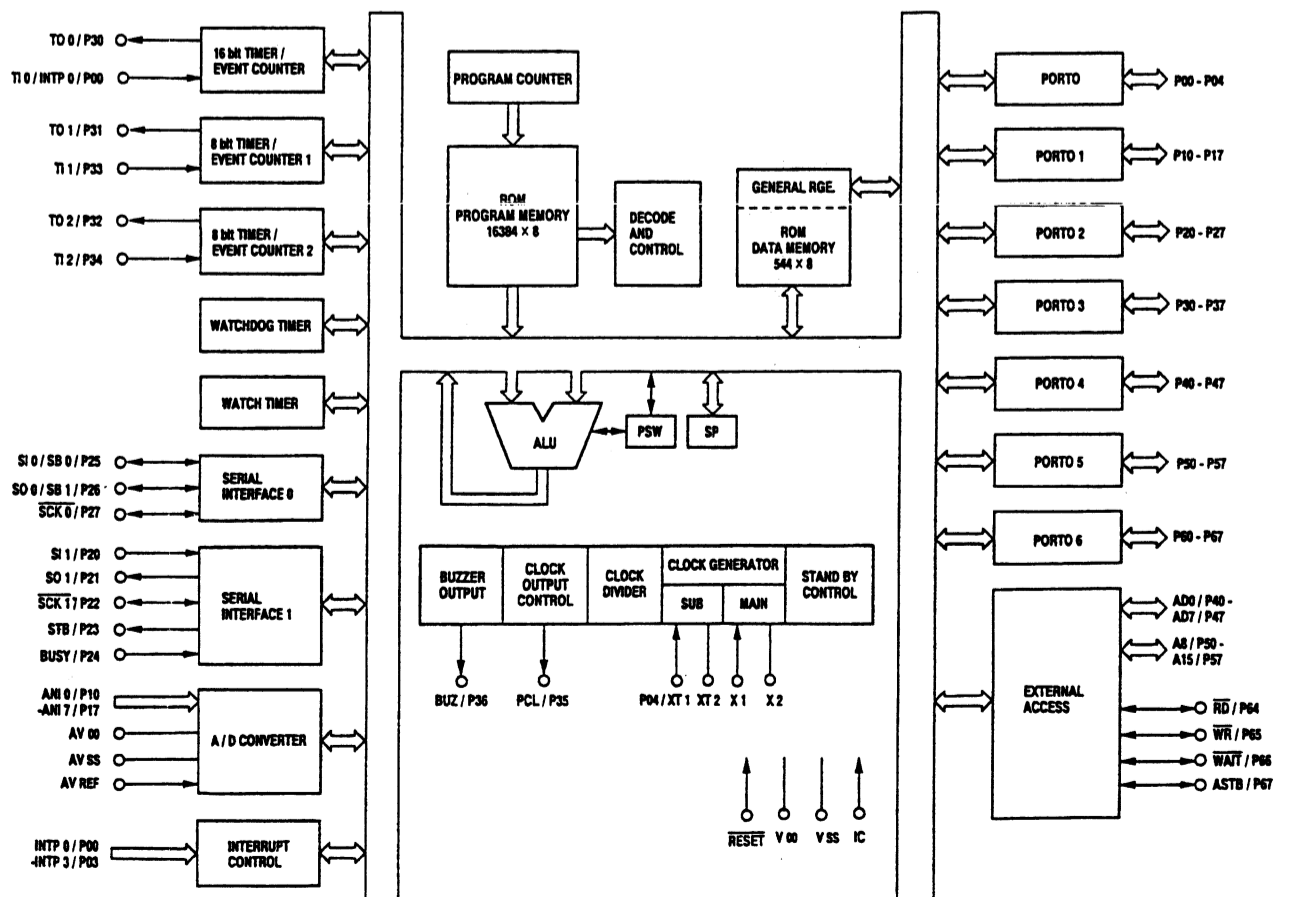

Schematic diagram

G H J

Q X S boards →



Schematic diagrams

← A(3/3) board

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CAUTION (US MODEL ONLY)
This set is equipped with a polarized ac power cord plug (one blade of the plug is wider than the other). When replacing the ac power cord, be sure to connect it with specified part number as shown in this diagram






Q BOARD WAVEFORMS

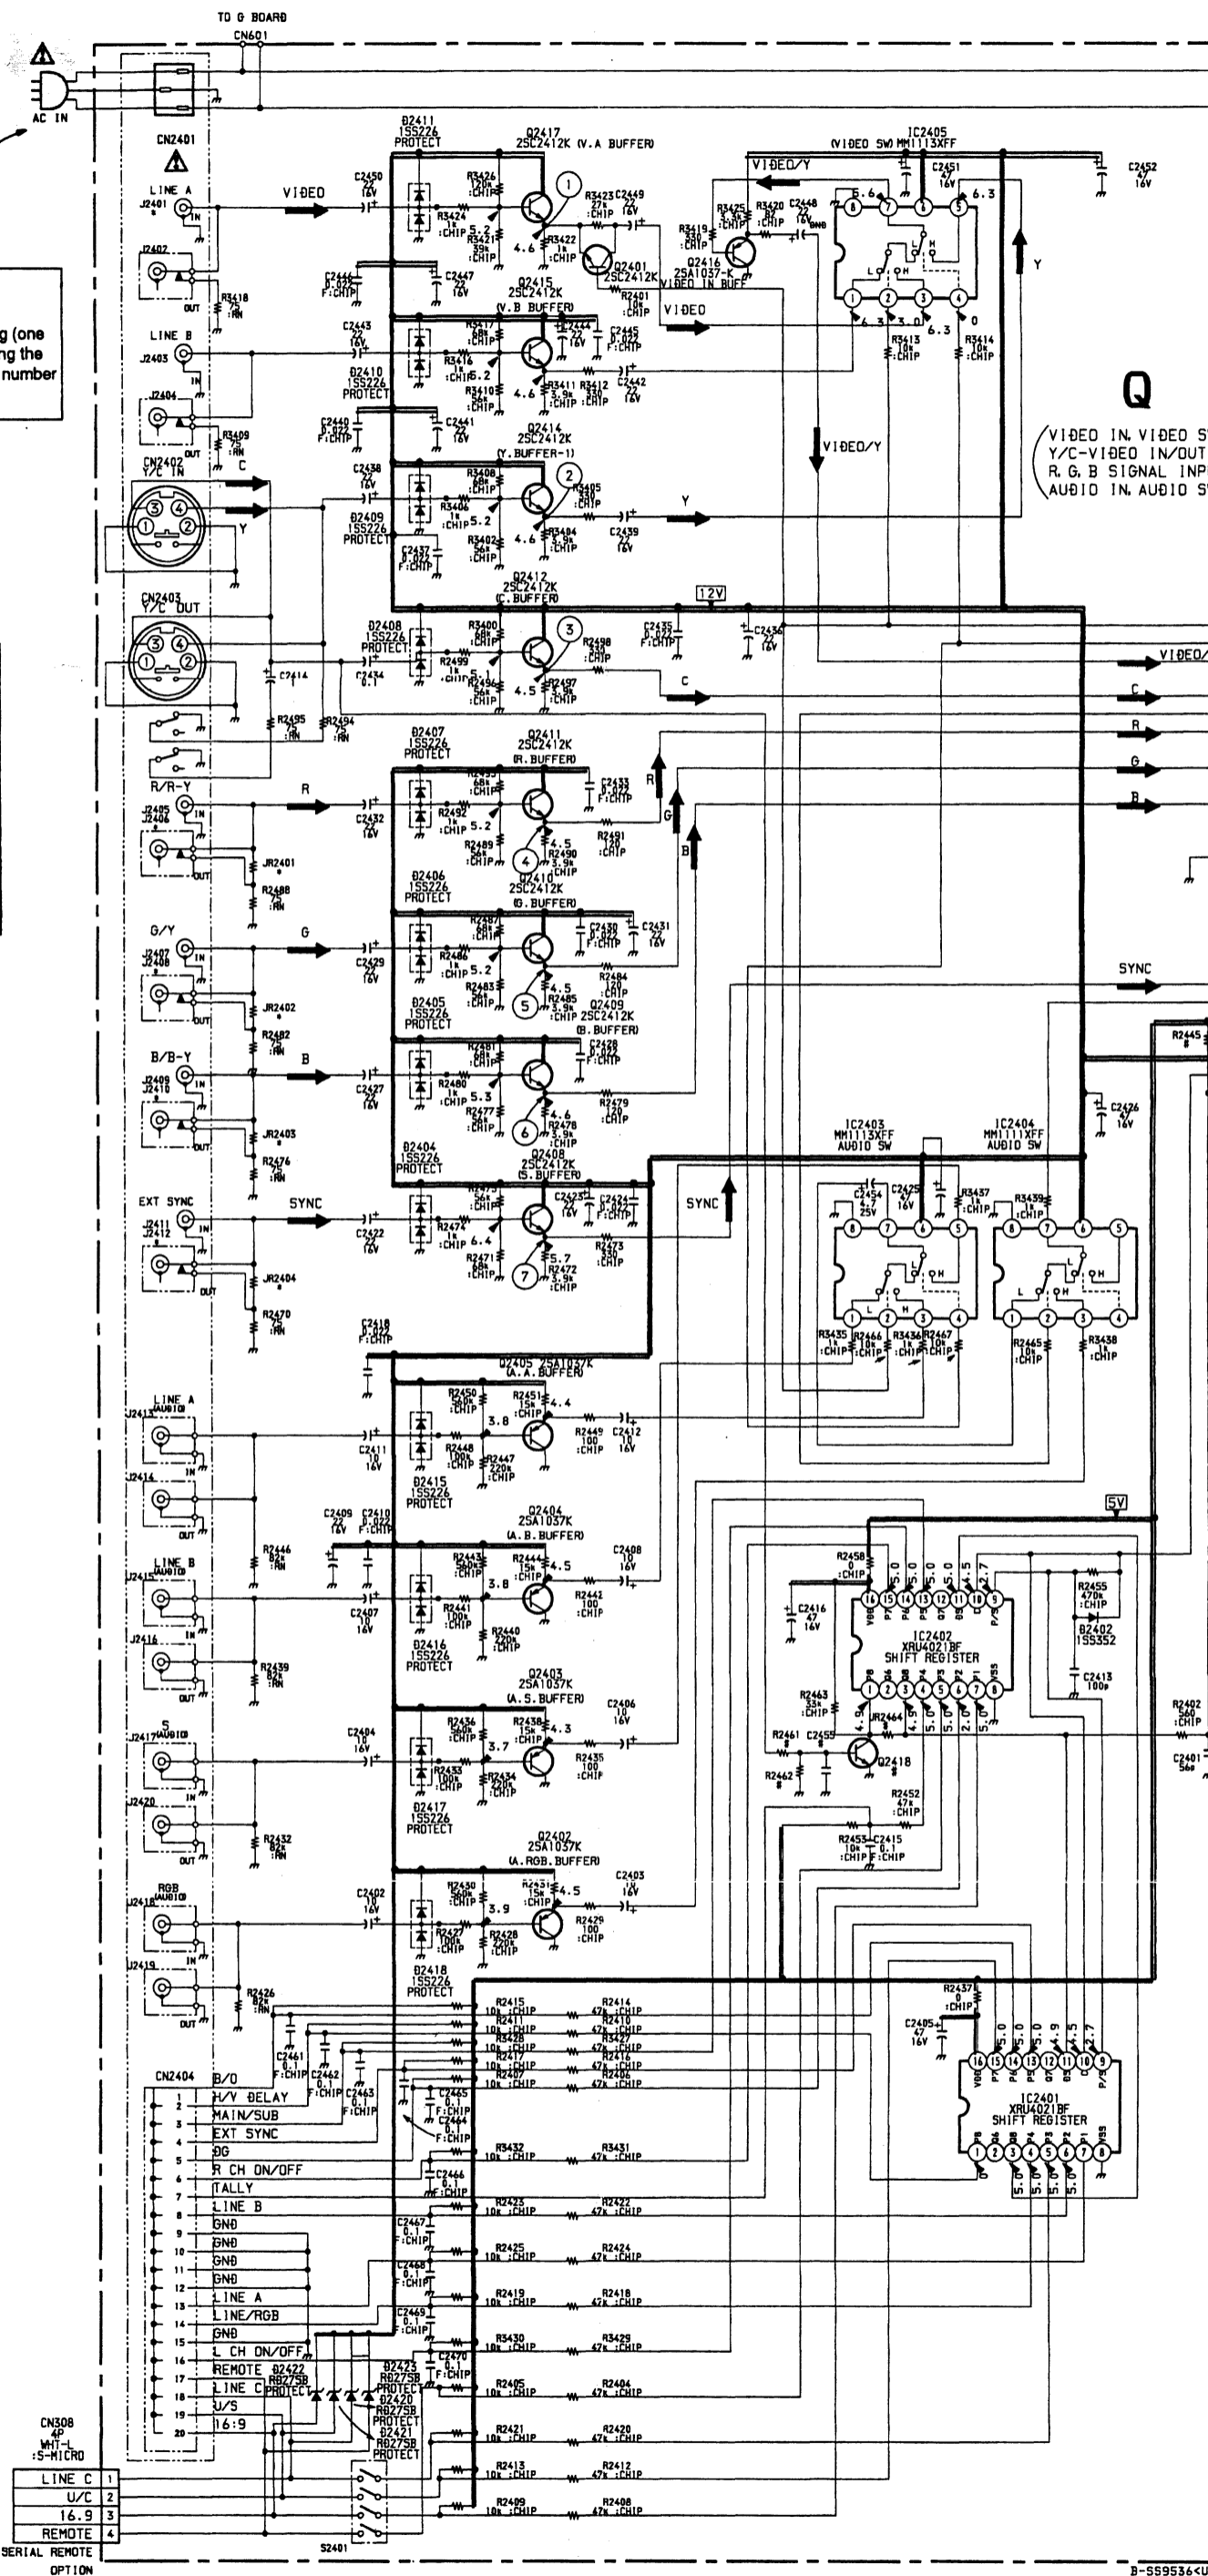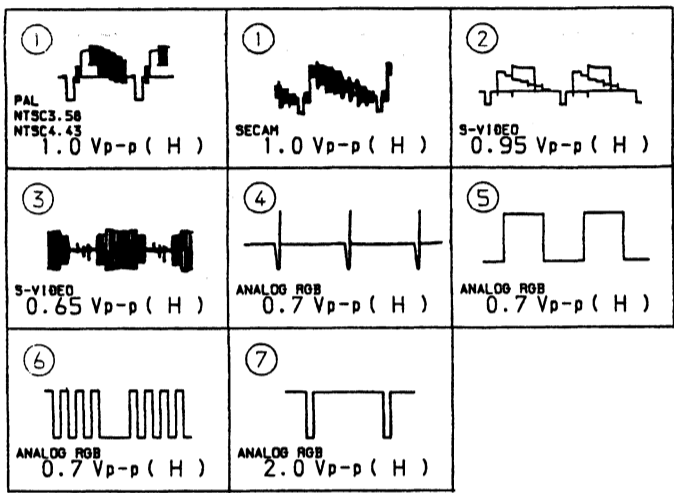




Q
VIDEO IN, VIDEO SW
Y/C-VIDEO IN/OUT
R, G, B SIGNAL INPUT
AUDIO IN, AUDIO SW

TO SERIAL REMOTE OPTION



LINE C	1
U/C	2
16.9	3
REMOTE	4

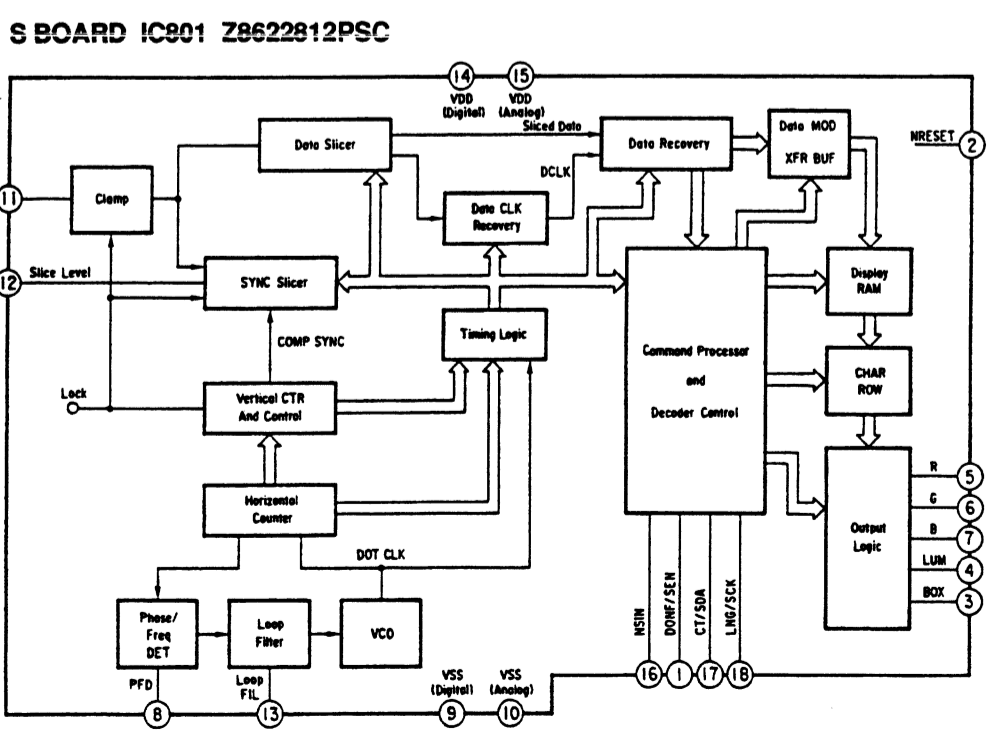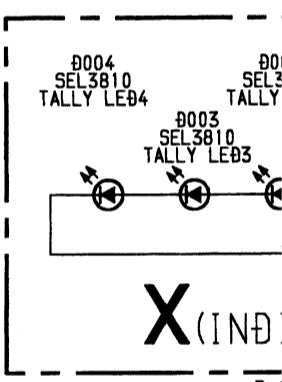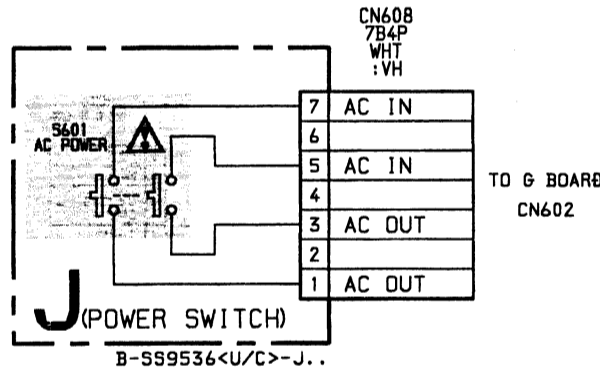
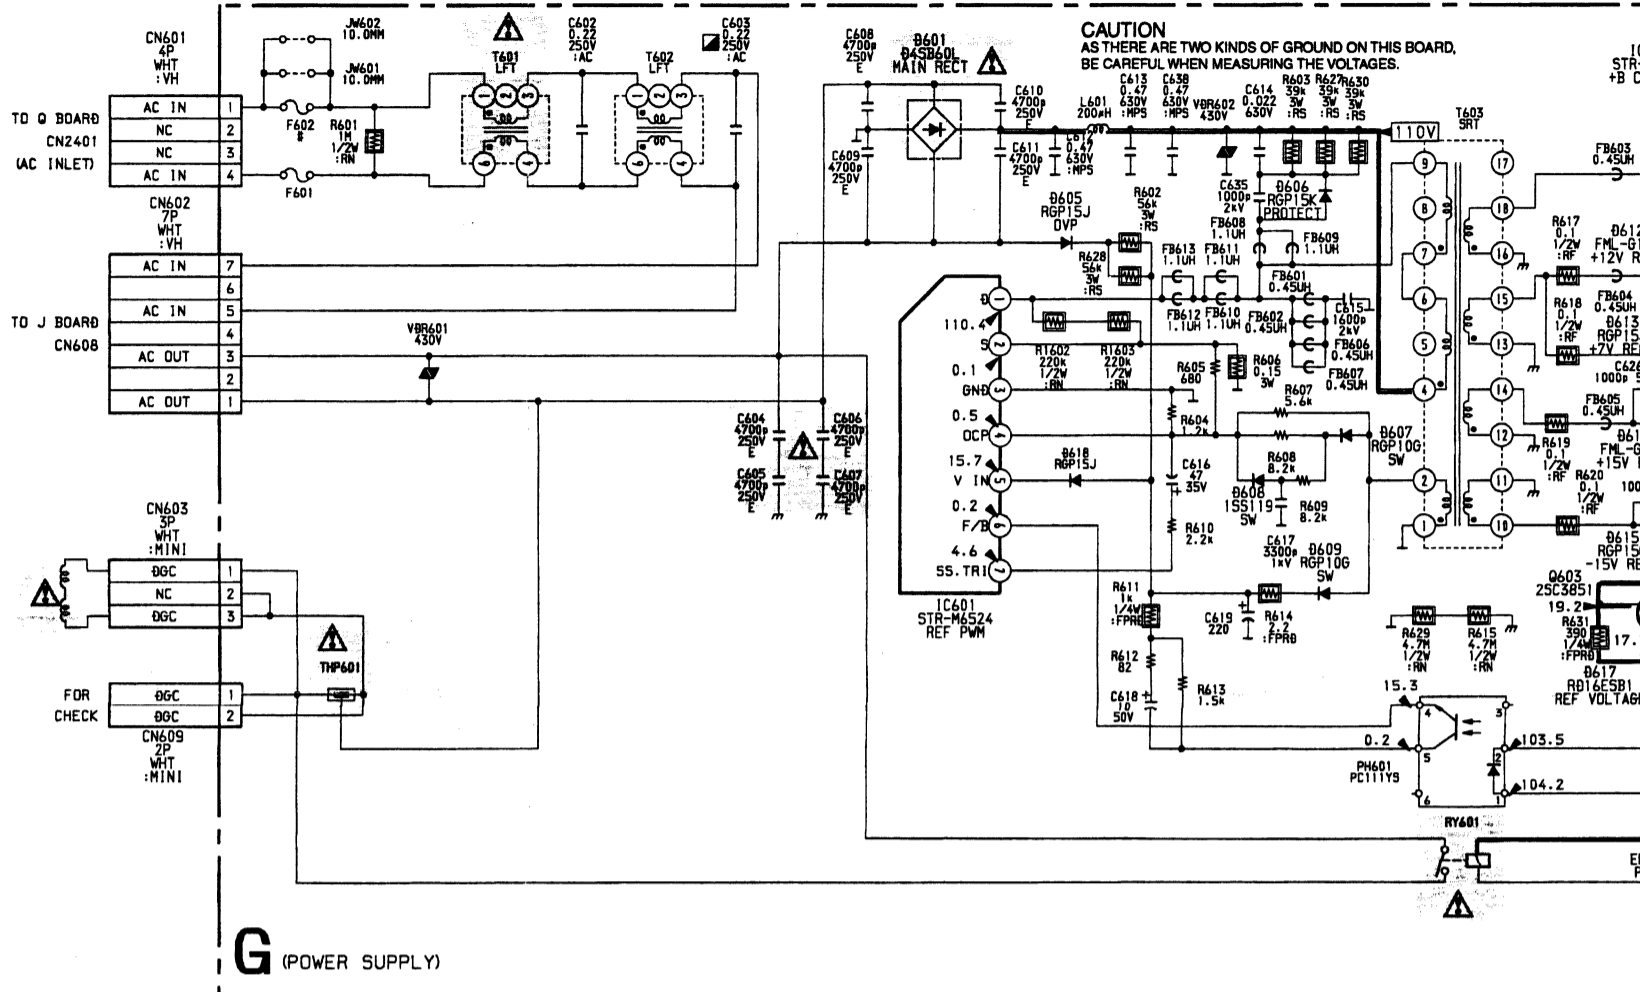
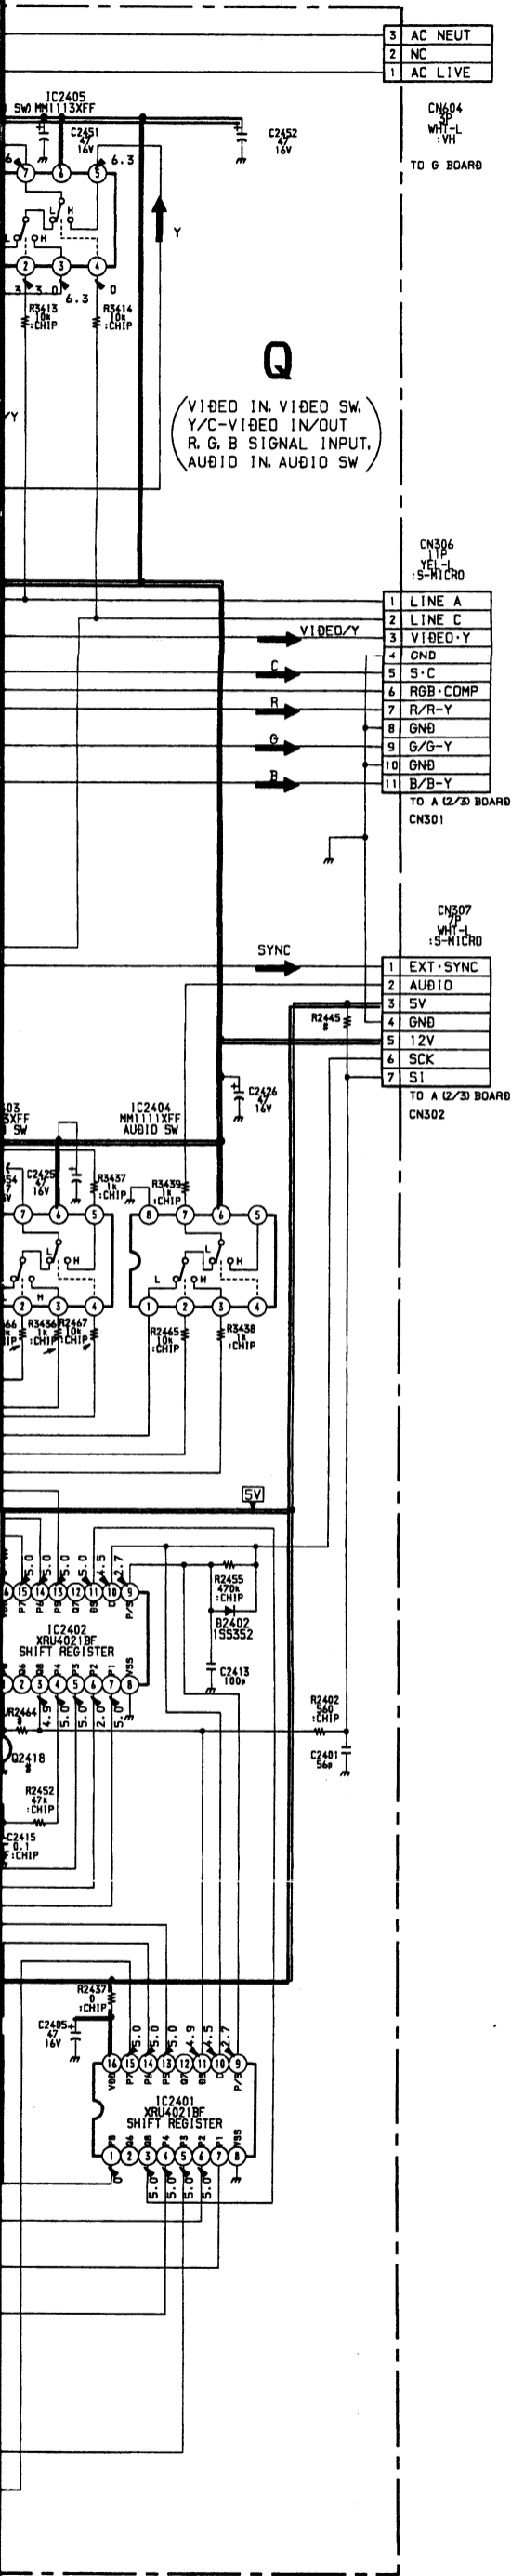


TWO KINDS OF GROUND ON THIS BOARD. WHEN MEASURING THE VOLTAGES.

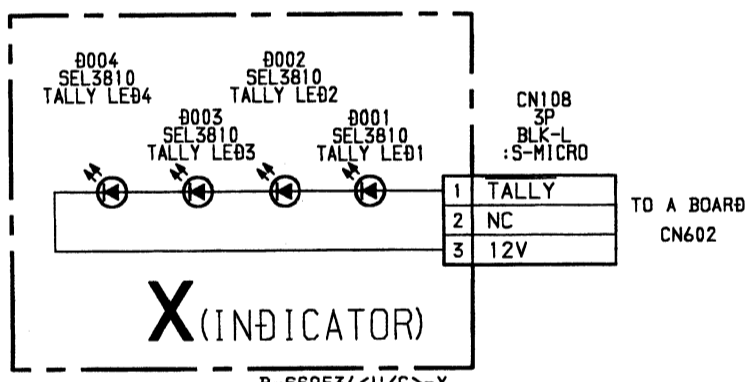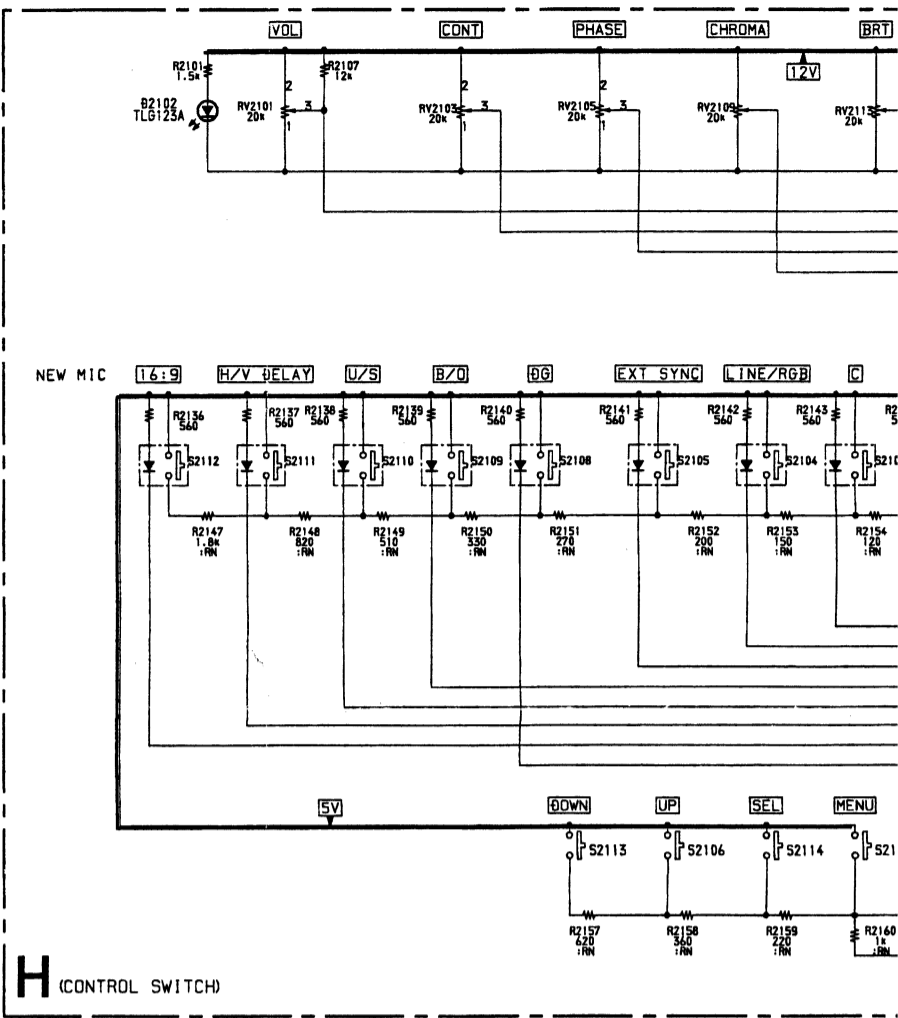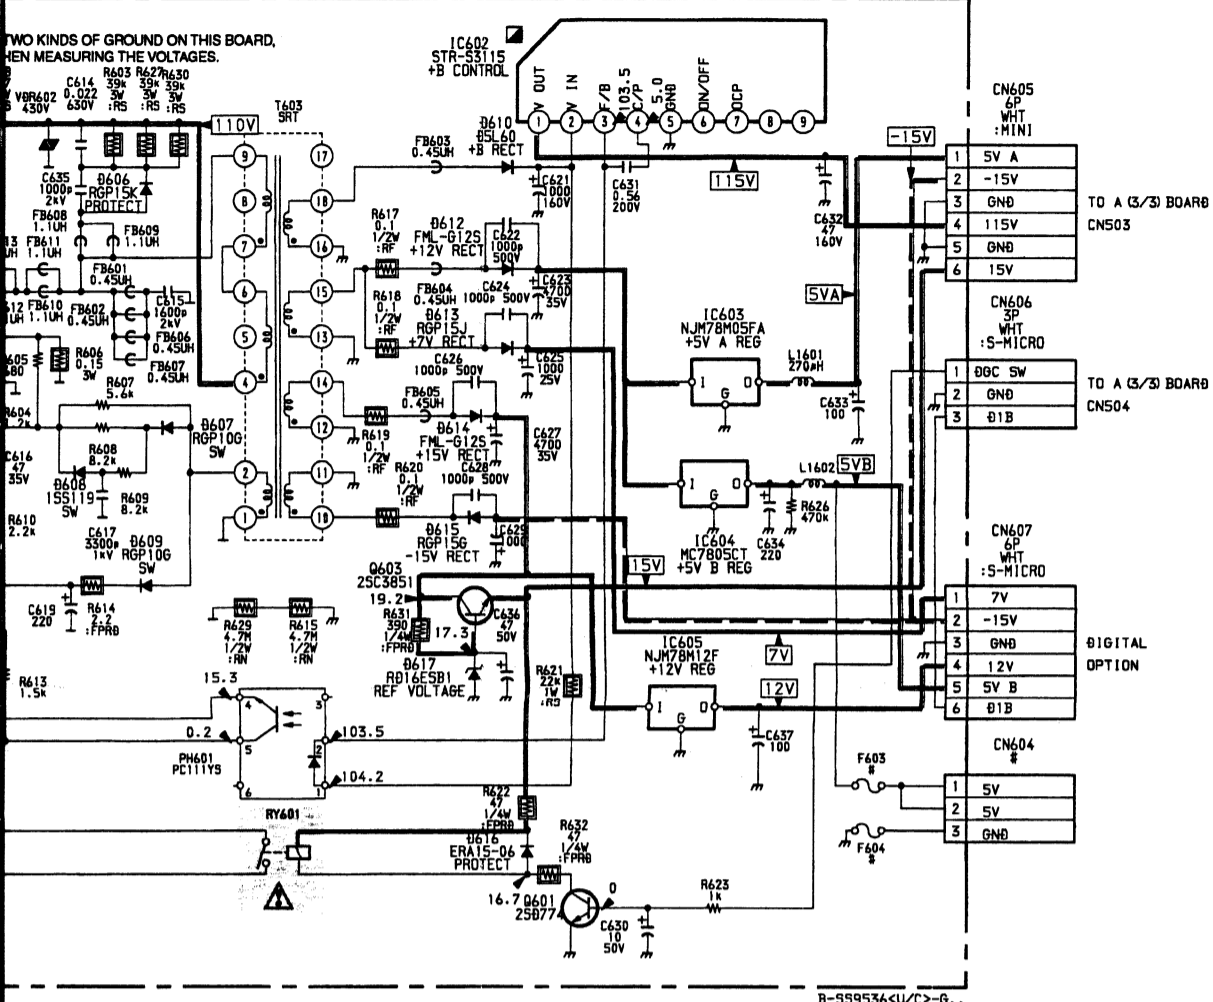


PVM-20M2U/20M4U ONLY

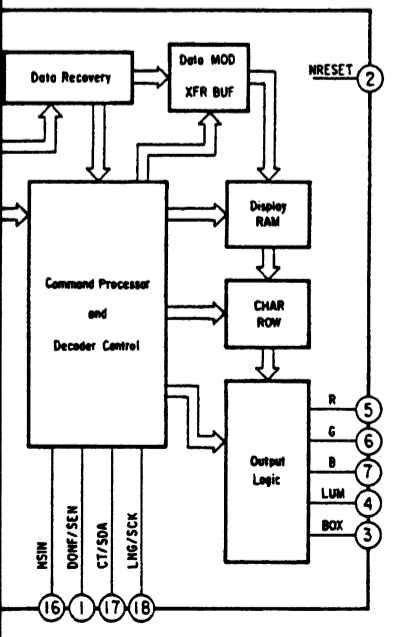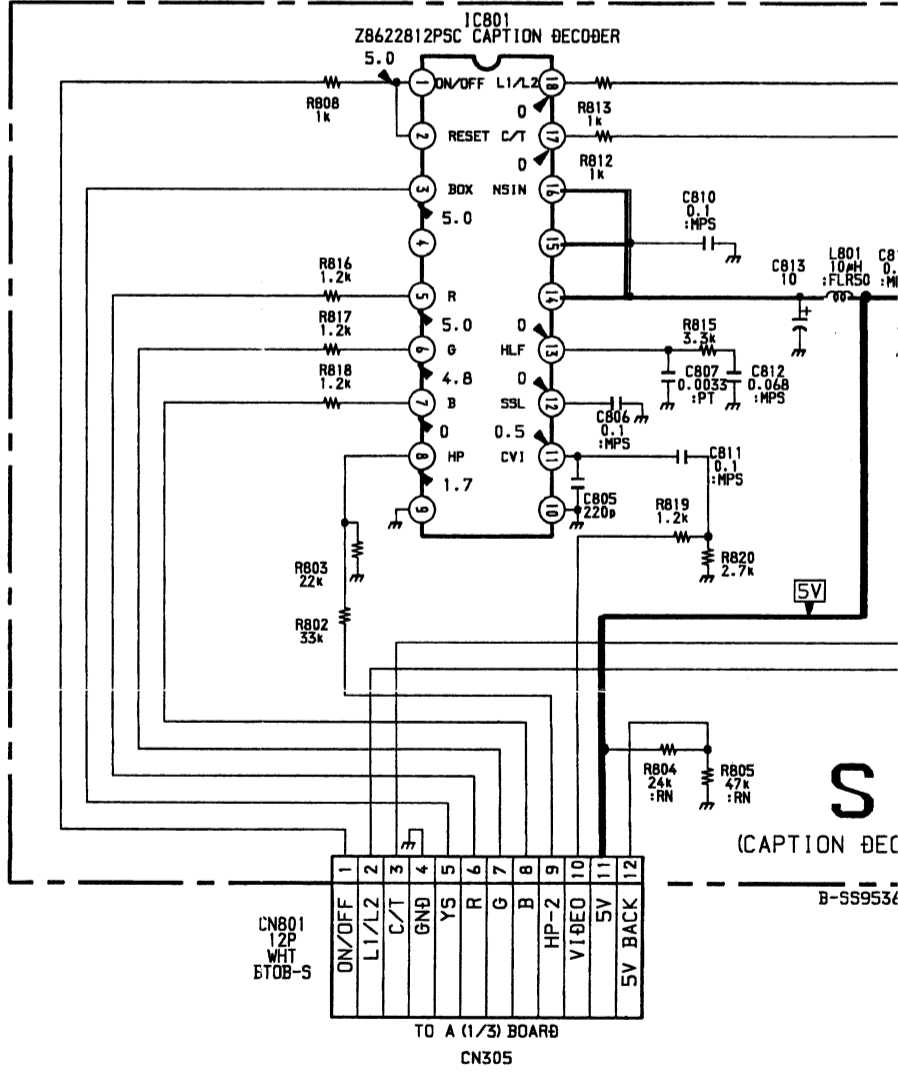


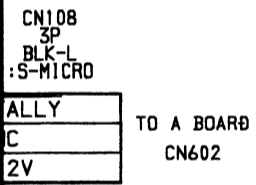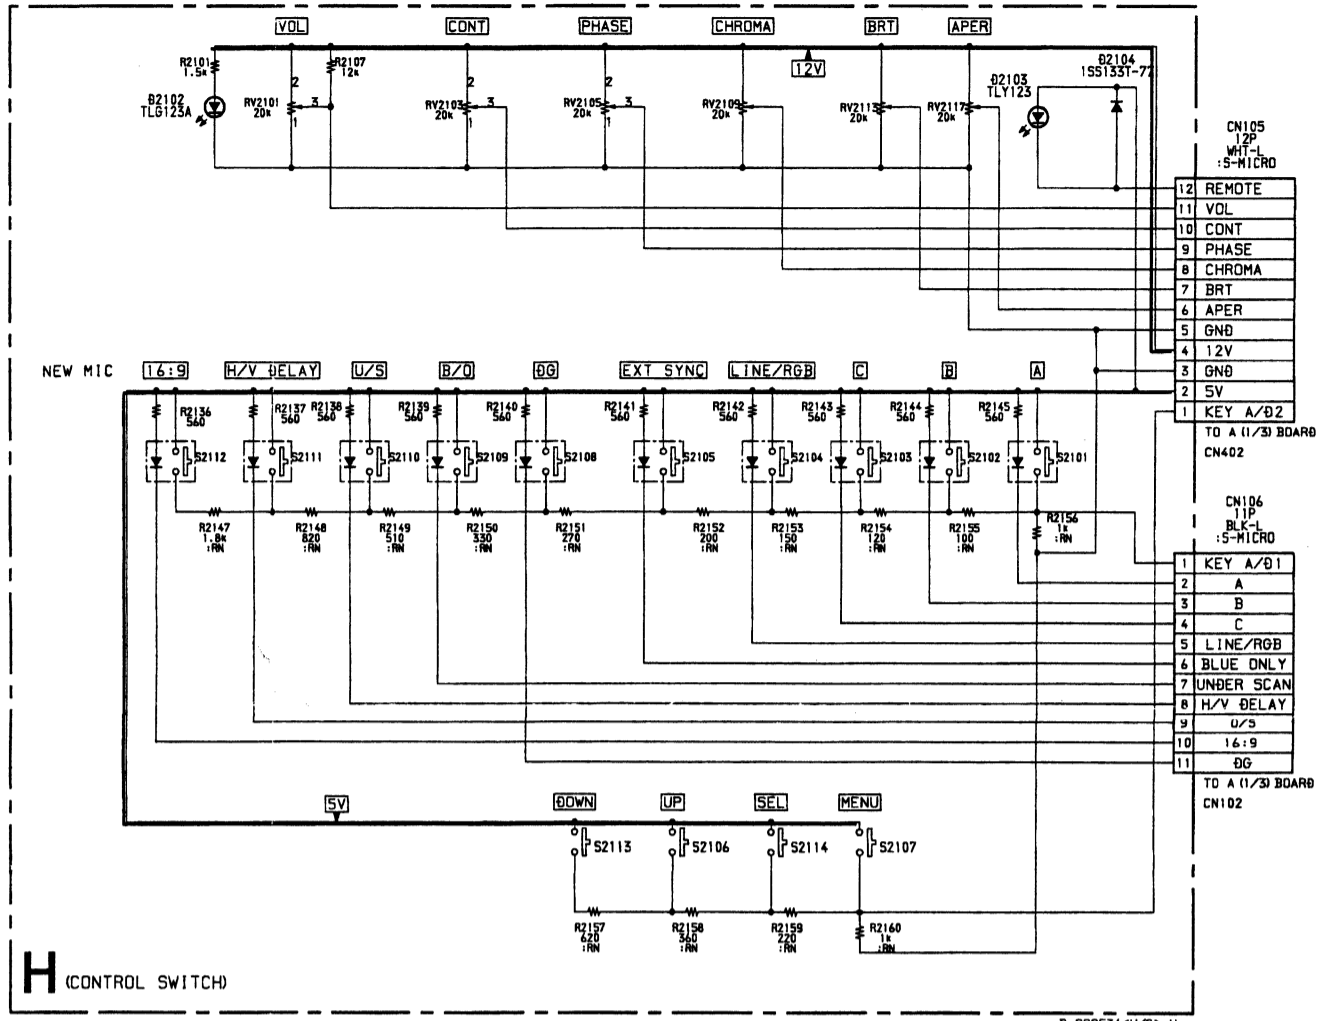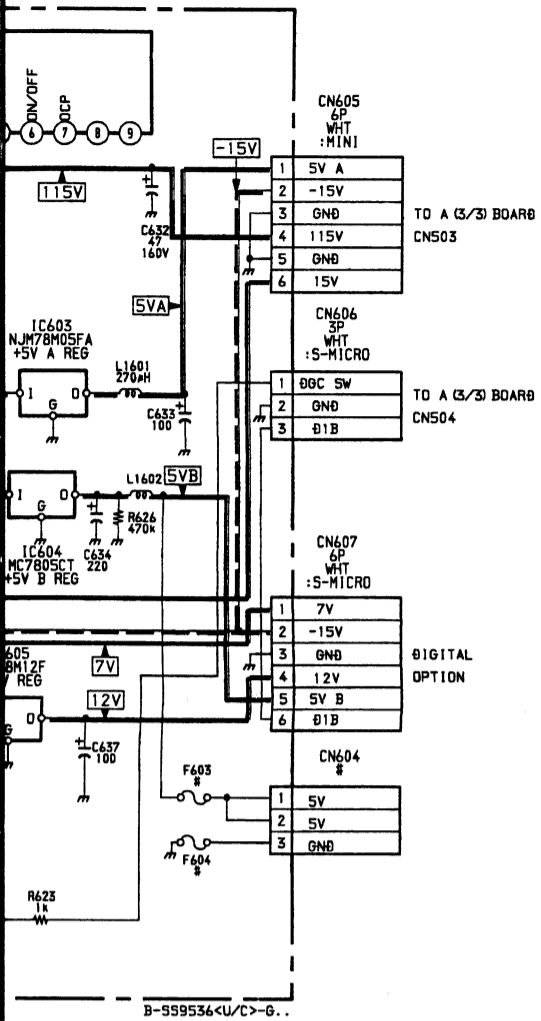


PVM-20M2U/20M4U ONLY

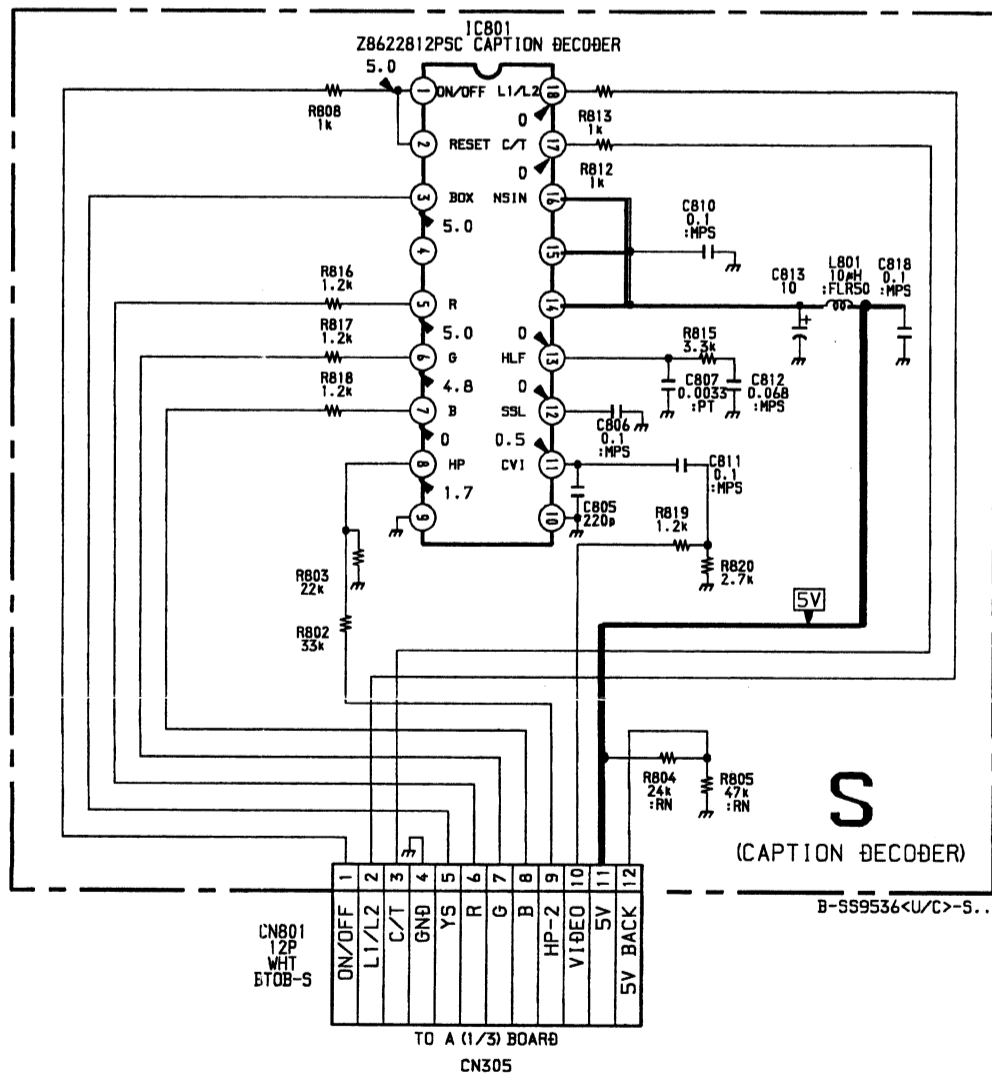

-G BOARD-

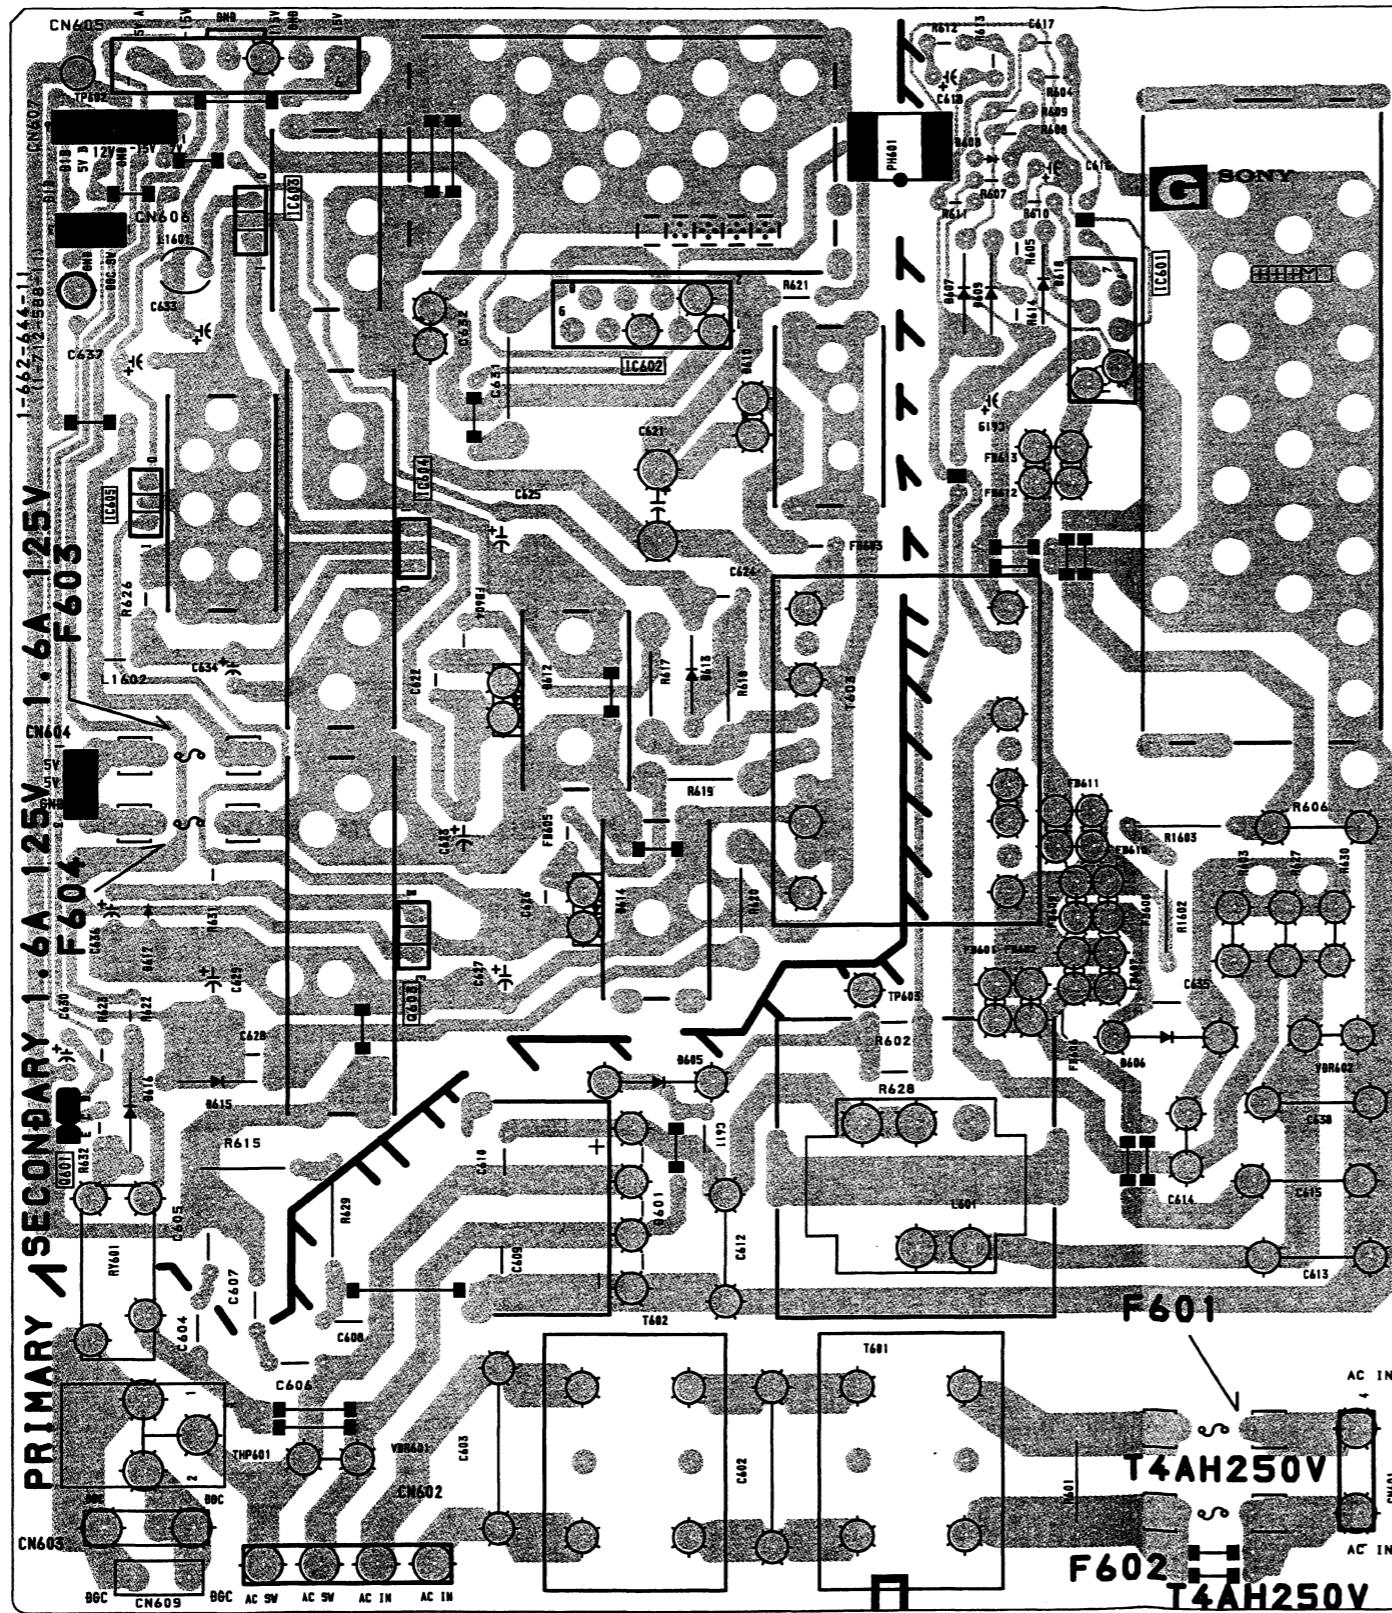

-G BOARD-

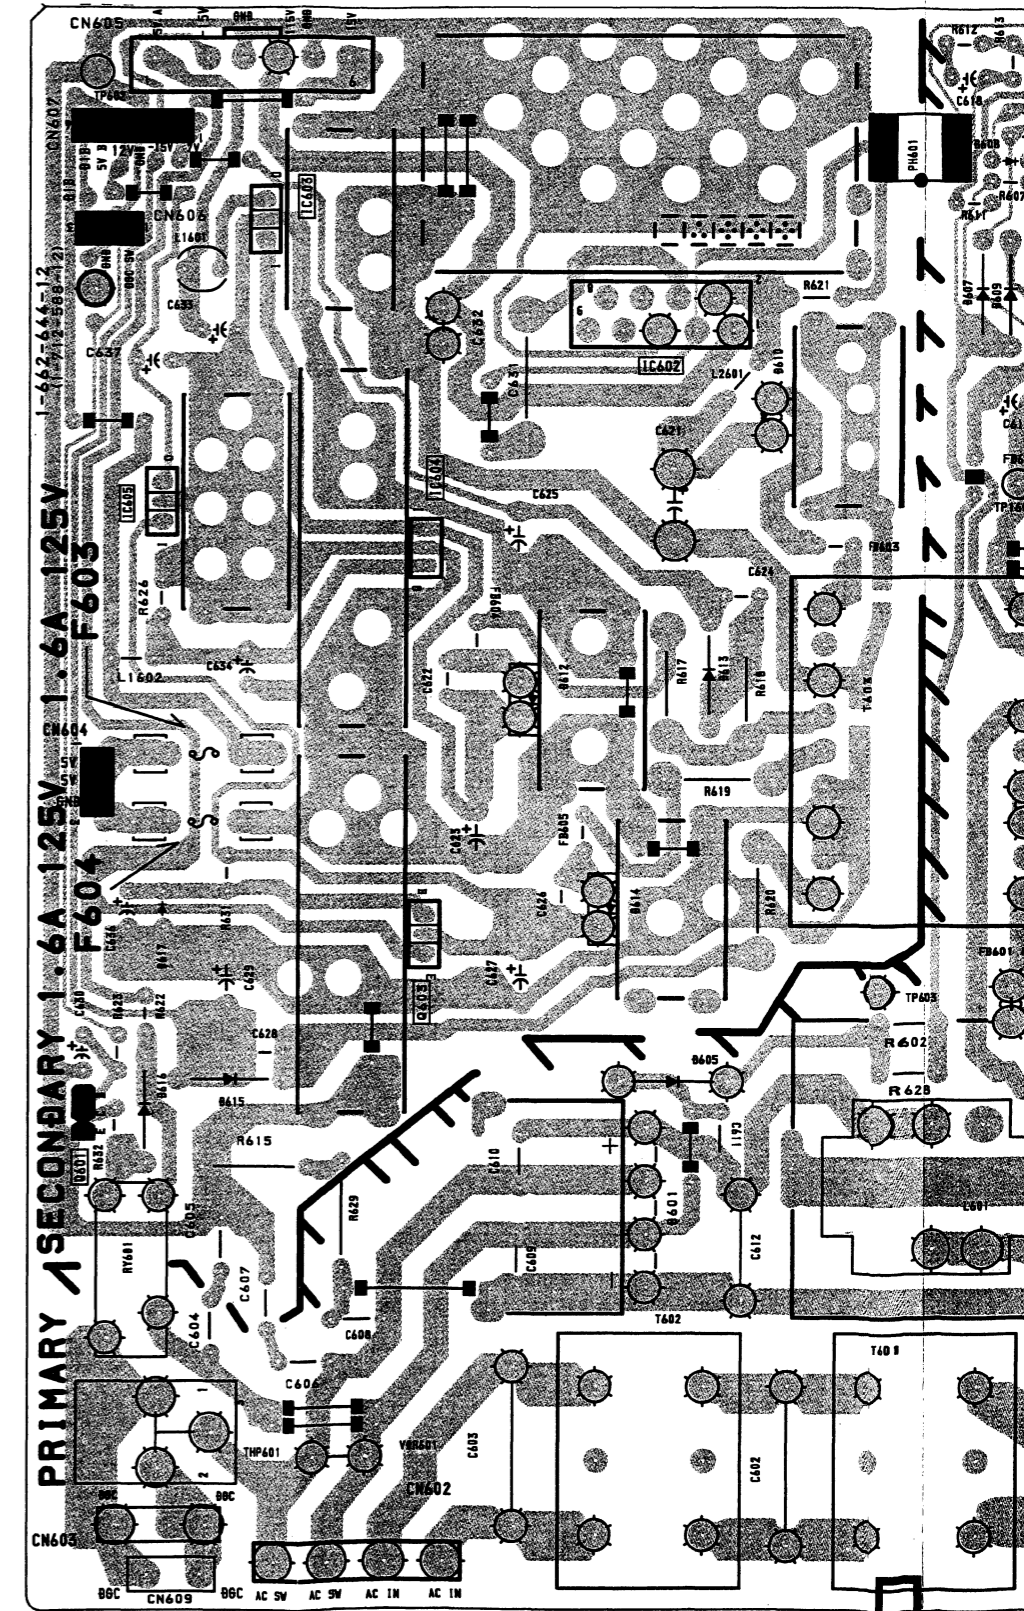


H [CONTROL SWITCH]

Q [VIDEO IN, VIDEO SW, Y/C-VIDEO IN/OUT, R.G.B SIGNAL INPUT, AUDIO IN, AUDIO SW]


J [POWER SWITCH]

S [CAPTION DECODER]


X [INDICATOR]

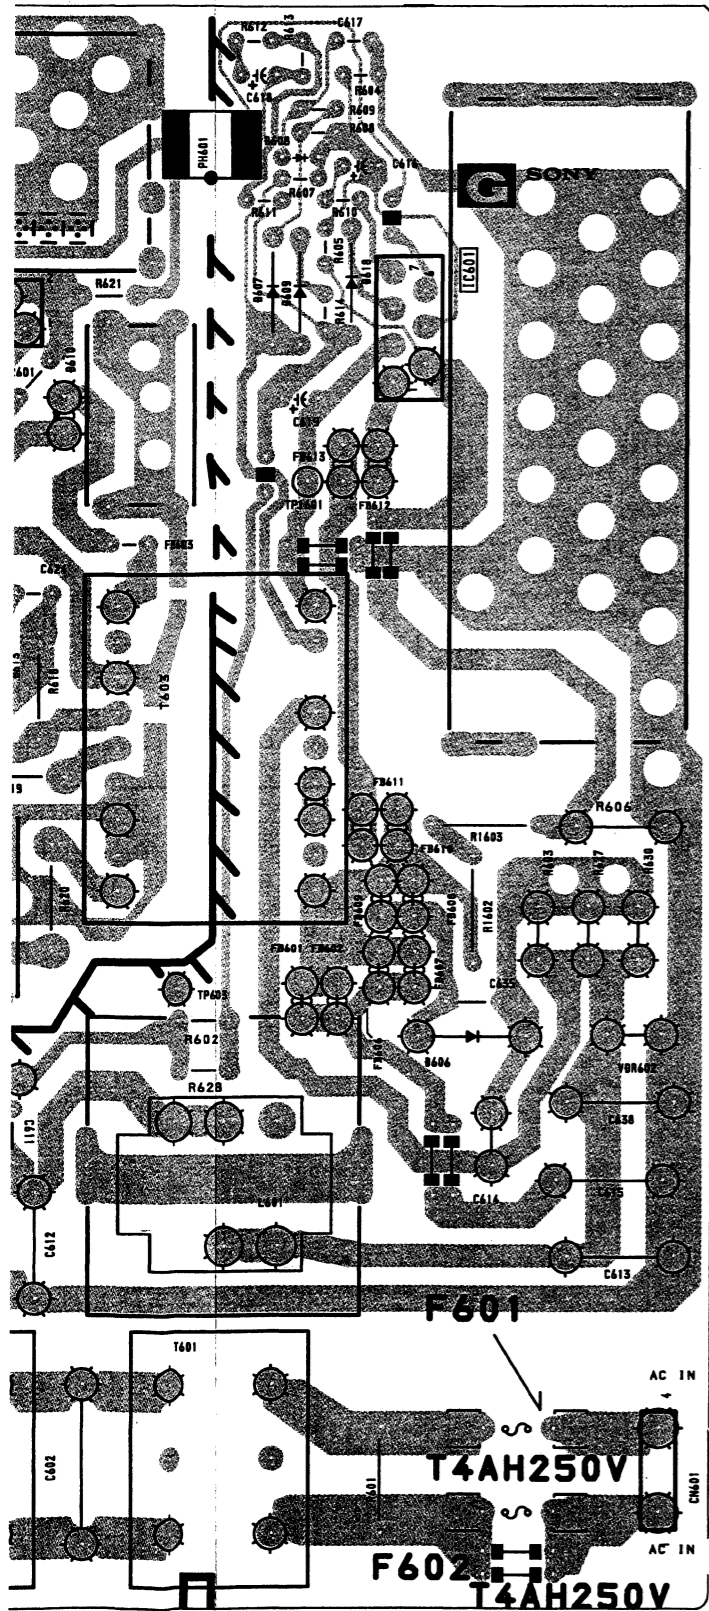


-H BOARD-

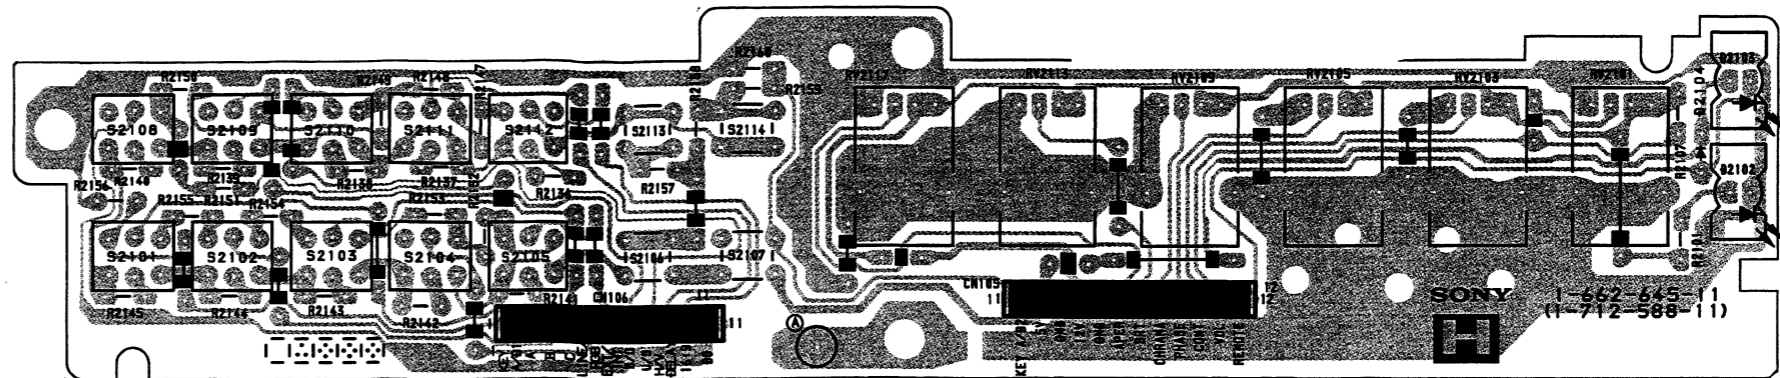


-Q BOARD-

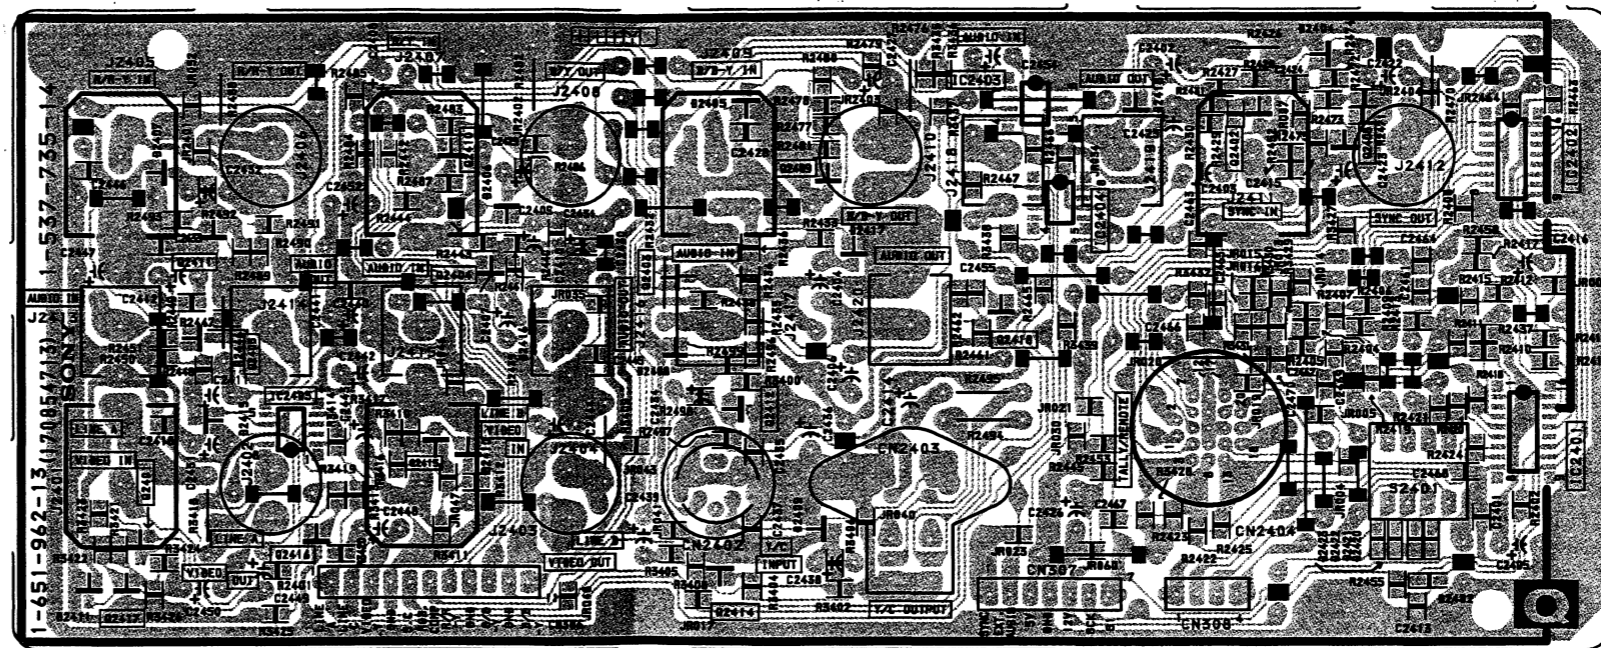

-J BOARD-

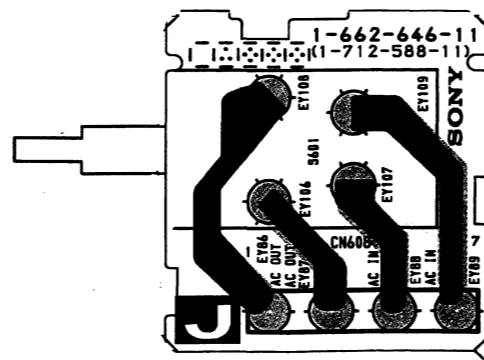


-S BOARD-
PVM-20M2U/20M4U ONLY

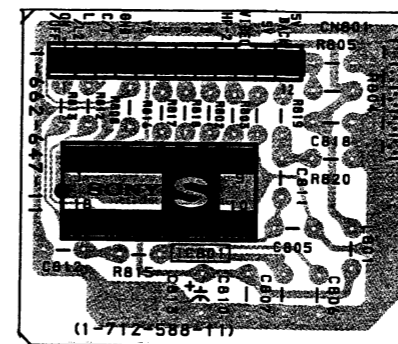

-X BOARD-




PVM-20M2U/20M2E ONLY

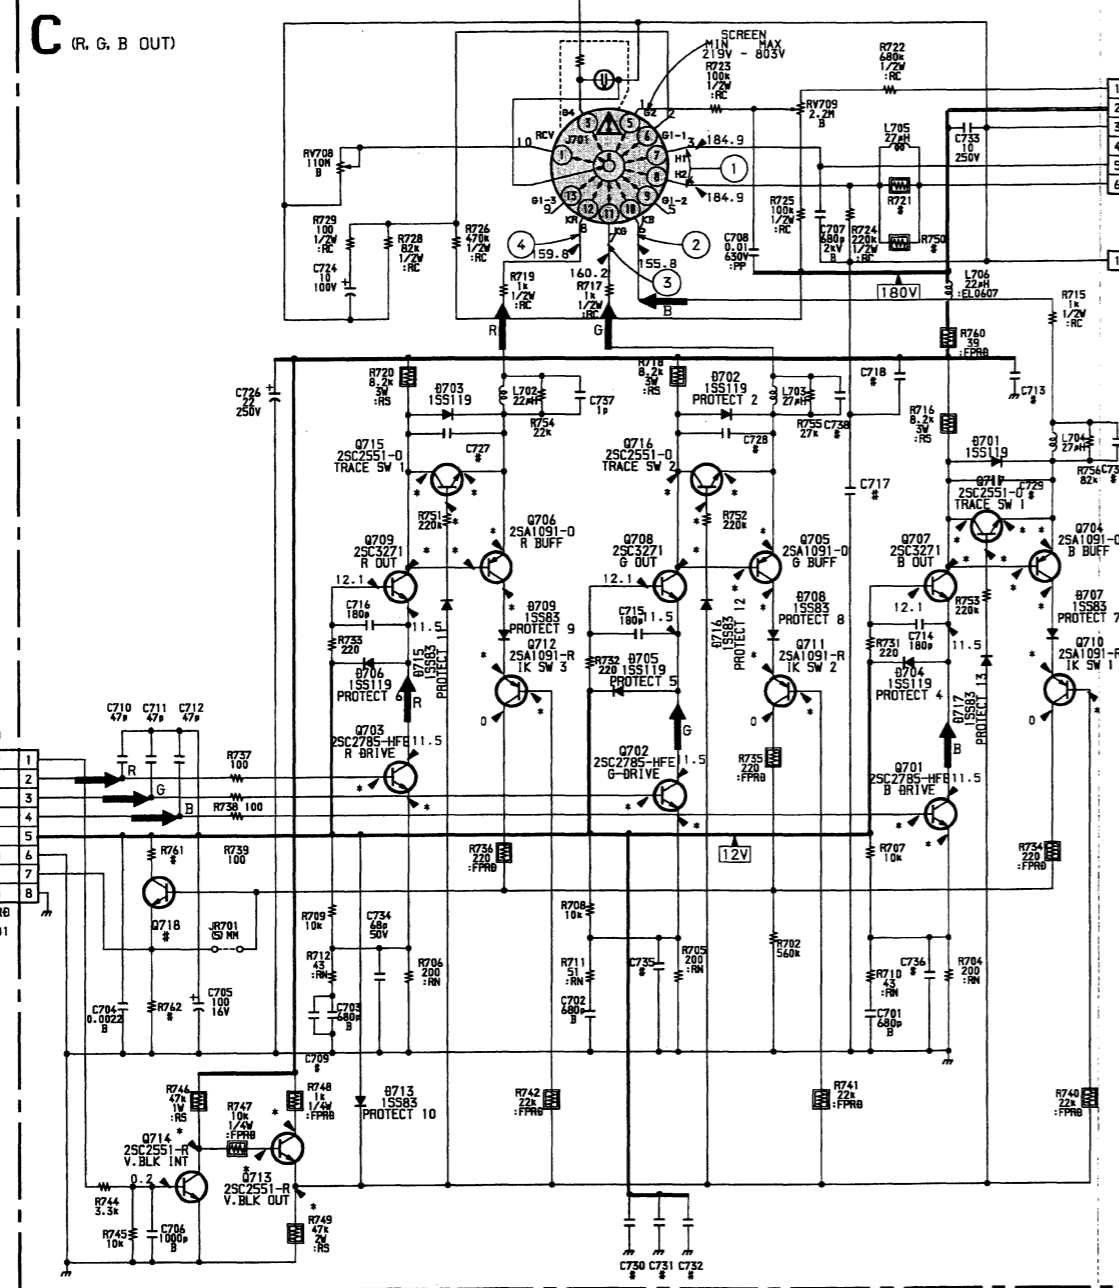

C BOARD * MARK LIST

	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	ANALOG RGB
Q701 B	2.0	1.9	1.73	1.8	1.8	2.0
E	1.4	1.3	1.1	1.1	1.2	1.4
Q702 B	2.0	1.9	1.7	1.7	1.8	2.0
E	1.5	1.3	1.1	1.1	1.2	1.4
Q703 B	1.9	1.8	1.6	1.6	1.8	1.9
E	1.3	1.2	1.0	1.0	1.2	1.3
Q704 B	143.6	148.0	153.9	153.4	144.9	143.8
C	129.0	134.3	135.4	134.5	31.2	111.5
E	139.7	144.4	150.3	149.6	140.4	140.1
Q705 B	141.7	145.8	154.9	154.2	145.0	141.8
C	124.9	130.2	132.3	130.4	60.4	106.6
E	138.3	142.3	151.3	150.6	140.7	138.5
Q706 B	149.7	151.5	160.4	159.8	144.9	148.6
C	134.5	138.3	141.2	141.1	103.2	114.7
E	146.2	148.0	157.1	156.4	140.8	145.0
Q707 C	143.8	148.0	154.0	153.4	144.9	143.7
Q708 C	141.9	145.9	155.2	154.3	145.0	141.8
Q709 C	149.8	151.5	160.6	159.9	144.9	148.5
Q710 B	172.8	173.1	174.3	173.9	167.0	173.5
E	160.9	164.0	162.9	162.2	154.0	161.2
Q711 B	172.8	173.2	174.3	173.9	167.0	173.5
C	160.6	161.0	162.3	161.8	154.1	161.3
Q712 B	172.9	173.2	174.0	174.2	167.0	173.5
E	161.6	163.6	164.1	164.8	154.5	161.4
Q713 B	172.8	173.2	173.9	173.9	166.8	173.5
C	184.2	184.5	184.7	184.6	176.6	183.8
E	173.3	173.6	174.3	174.3	167.2	173.9
Q714 C	173.6	173.7	174.5	174.4	167.4	174.1
Q715 B	146.7	148.6	157.6	157.0	140.3	145.7
C	149.5	151.5	160.6	159.9	144.9	148.5
E	146.1	148.0	157.2	156.5	140.7	145.0
Q716 B	139.2	143.3	152.5	151.5	140.7	139.4
C	141.7	145.8	155.2	154.2	145.1	141.8
E	138.2	142.3	151.4	150.5	140.6	138.4
Q717 B	140.9	145.4	151.7	150.8	140.6	141.2
C	143.6	148.0	154.1	153.4	144.9	143.8
E	139.8	144.4	150.5	149.6	140.4	140.0


C BOARD WAVEFORMS

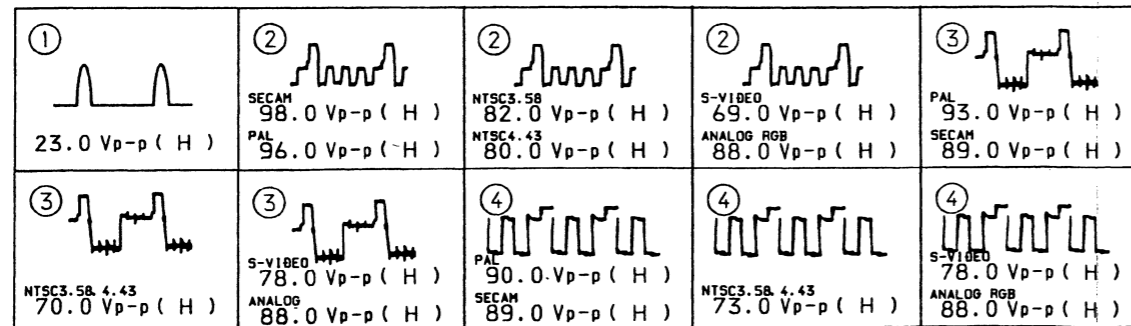


Schematic diagram

C board →



PVM-20M4U/20M4E/20M4A ONLY

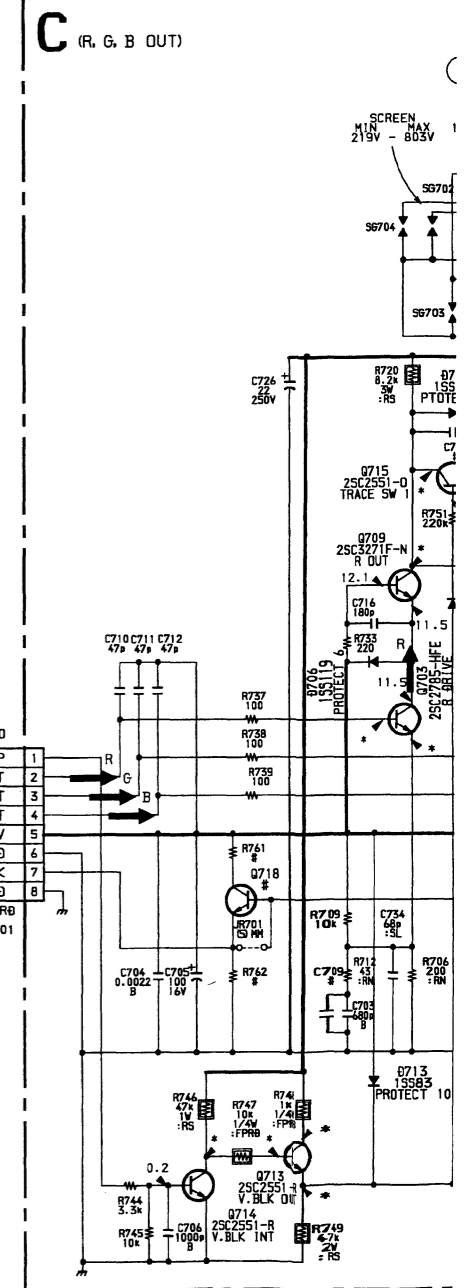

C BOARD WAVEFORMS

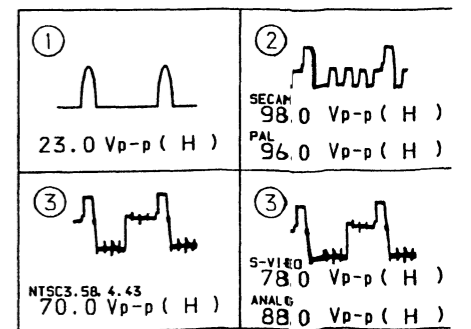

J/20M4E/20M4A ONLY

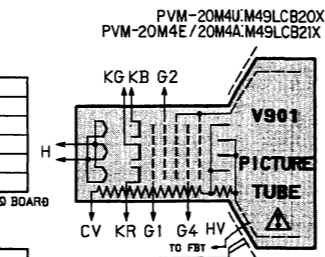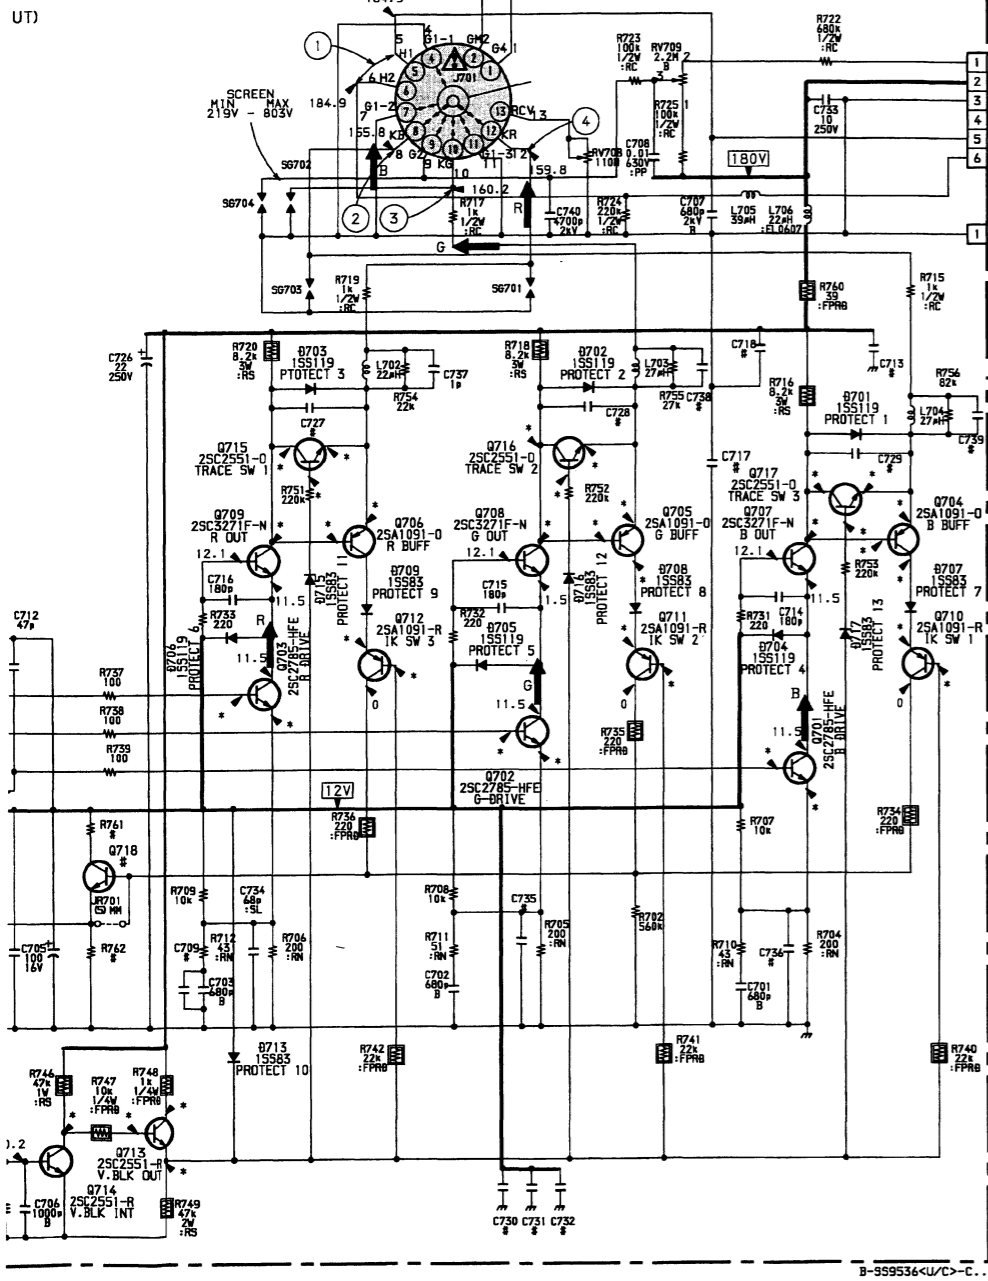


C BOARD * MARK LIST

	PAL	SECAM	NTSC 3.58	NTSC 4.43	S-VIDEO	ANALOG RGB
Q701 B	2.0	1.9	1.73	1.8	1.8	2.0
E	1.4	1.3	1.1	1.1	1.2	1.4
Q702 B	2.0	1.9	1.7	1.7	1.8	2.0
E	1.5	1.3	1.1	1.1	1.2	1.4
Q703 B	1.9	1.8	1.6	1.6	1.8	1.9
E	1.3	1.2	1.0	1.0	1.2	1.3
Q704 B	143.6	148.0	153.9	153.4	144.9	143.8
C	129.0	134.3	135.4	134.5	31.2	111.5
E	139.7	144.4	150.3	149.6	140.4	140.1
Q705 B	141.7	145.8	154.9	154.2	145.0	141.8
C	124.9	130.2	132.3	130.4	60.4	106.6
E	138.3	142.3	151.3	150.6	140.7	138.5
Q706 B	149.7	151.5	160.4	159.8	144.9	148.6
C	134.5	138.3	141.2	141.1	103.2	114.7
E	146.2	148.0	157.1	156.4	140.8	145.0
Q707 C	143.8	148.0	154.0	153.4	144.9	143.7
Q708 C	141.9	145.9	155.2	154.3	145.0	141.8
Q709 C	149.8	151.5	160.6	159.9	144.9	148.5
Q710 B	172.8	173.1	174.3	173.9	167.0	173.5
E	160.9	164.0	162.9	162.2	154.0	161.2
Q711 B	172.8	173.2	174.3	173.9	167.0	173.5
C	160.6	161.0	162.3	161.8	154.1	161.3
Q712 B	172.9	173.2	174.0	174.2	167.0	173.5
E	161.6	163.6	164.1	164.8	154.5	161.4
Q713 B	172.8	173.2	173.9	173.9	166.8	173.5
C	184.2	184.5	184.7	184.6	176.6	183.8
E	173.3	173.6	174.3	174.3	167.2	173.9
Q714 C	173.6	173.7	174.5	174.4	167.4	174.1
Q715 B	146.7	148.6	157.6	157.0	140.3	145.7
C	149.5	151.5	160.6	159.9	144.9	148.5
E	146.1	148.0	157.2	156.5	140.7	145.0
Q716 B	139.2	143.3	152.5	151.5	140.7	139.4
C	141.7	145.8	155.2	154.2	145.1	141.8
E	138.2	142.3	151.4	150.5	140.6	138.4
Q717 B	140.9	145.4	151.7	150.8	140.6	141.2
C	143.6	148.0	154.1	153.4	144.9	143.8
E	139.8	144.4	150.5	149.6	140.4	140.0


D701	PROTECT 1
D702	PROTECT 2
D703	PROTECT 3
D704	PROTECT 4
D705	PROTECT 5
D706	PROTECT 6
D707	PROTECT 7
D708	PROTECT 8
D709	PROTECT 9
D713	PROTECT 10
D715	PROTECT 11
D716	PROTECT 12
D717	PROTECT 13
Q701	B DRIVE
Q702	G DRIVE
Q703	R DRIVE
Q704	B BUFF
Q705	G BUFF
Q706	R BUFF
Q707	B OUT
Q708	G OUT
Q709	R OUT
Q710	IK SW 1
Q711	IK SW 2
Q712	IK SW 3
Q713	V. BLK OUT
Q714	V. BLK INT
Q715	TRACE SW 1
Q716	TRACE SW 2
Q717	TRACE SW 3

WAVEFORMS

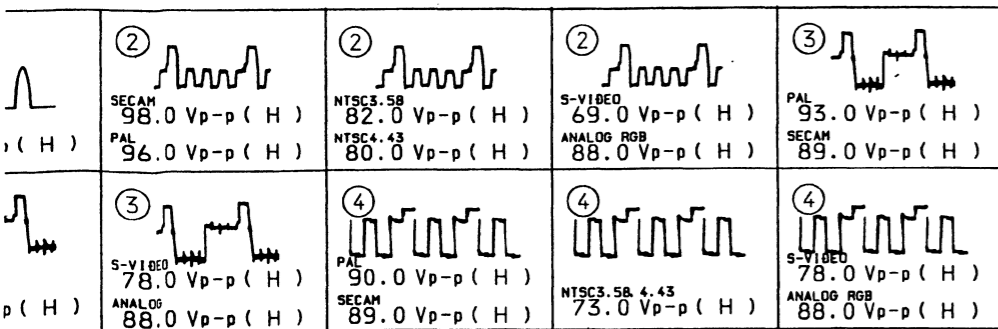


C [R.G.B OUT]

- C BOARD - PVM-20M2U/20M2E ONLY

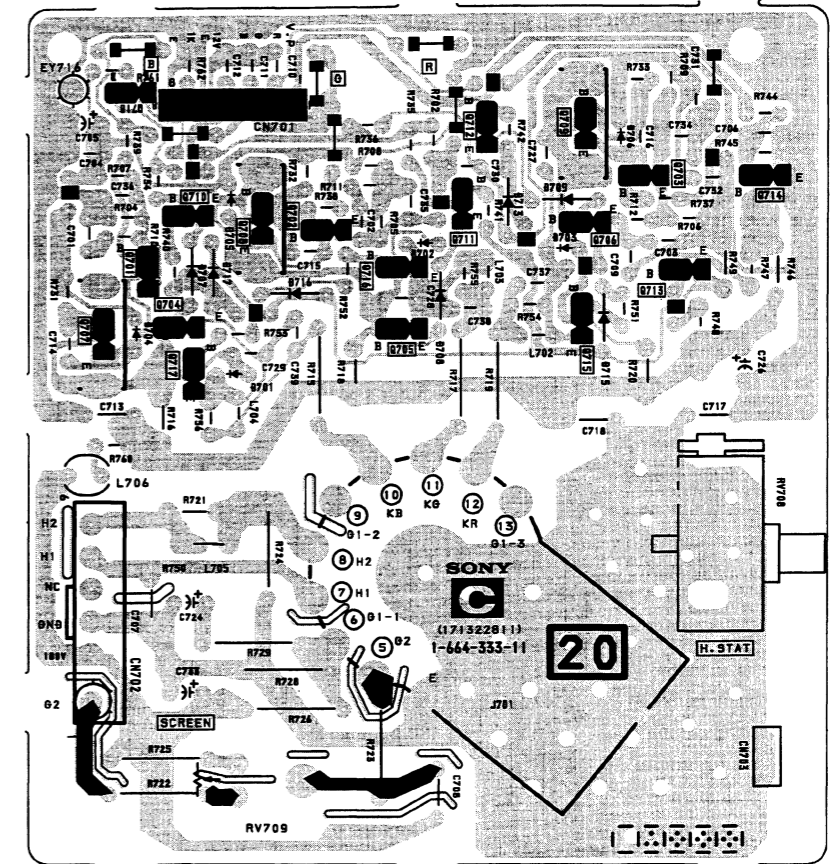


- C BOARD - PVM-20M4U/20M4E/20M4A ONLY

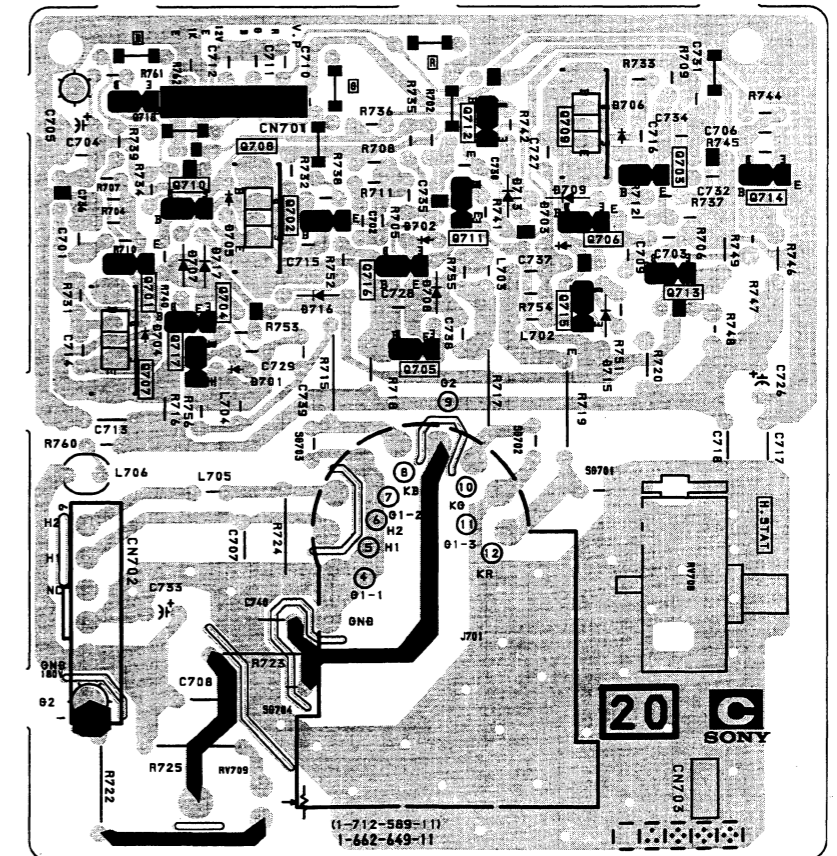


6-5. SEMICONDUCTORS

AN5265

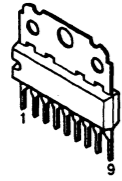


BA10324AF
MC1402BF
MC14066BF
MC14584BF
MC74HC86F

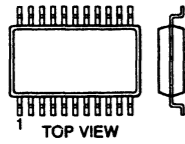


14pin SOP

BA7655AF-E2
CXA1211M
LM358D
MM1111XF
MM1113XFF
NJM2245M
ST24C02FM6TR
XRA10393F
XRA4558F-E2

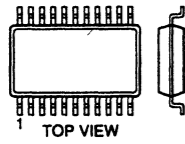


8pin SOP

BU4053BCF

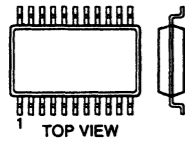

16pin SOP

CXA1214P




24pin DIP

CXA1739S




48pin DIP

H8D7249




11pin SIP


LA6500-FA
MC14052BF
MC14538BF




LM7912CT



MC14094BF

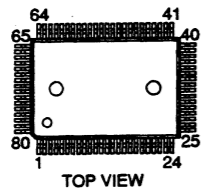


M51279FP




32pin DIP

M62358FP-E1

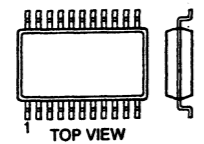


24pin SOP


NJM78M05FA
TA7805S
TA7812S




S-80743AL-A7-S

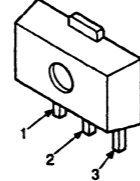

STR-M6524

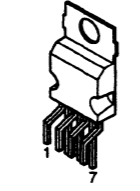


STR-S3115

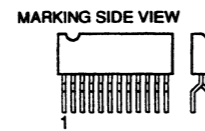


9pin ZIP

ST24C01FM6TR




8pin DIP

UPC1377C




22pin DIP

UPD6451AGT-632-E2

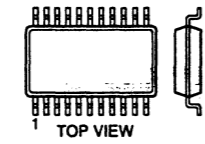


20pin SOP

UPD78P018FYCW-M01




64pin DIP

XRA17812T




Z8622812PSC



18pin DIP

DTA144EKA-T146
DTC124EKA-T146
DTC144EKA-T146
2SA1162-G
2SB709A-R
2SC1623-L5L6
2SD601A-S




IMT1US



IMX1



IRF520




2SA1091-0


2SC2551-0




2SA1220A-P
2SA1407-D
2SC2611
2SC2688-LK
2SC2690A-Q




2SC2785-HFE




2SC2958
2SD774-34




2SC3851-G
2SC4686A (LBSOY)
2SD1133
2SD1134
2SD2396K




2SD1878-CA



2SK94
2SK94-X2X3X4




DTZ11B
DTZ13C
DTZ5.6B
DTZ6.2
MA111

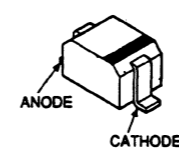


D4SB60L




D5L60
FML-G12S




EGP20G
EL1Z
ERD07-15
RGP02-17EL-6433
RGP15K-6179
UF5406
10E2
1S2076
1SS83

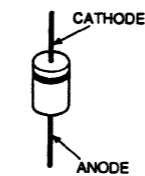


ERA15-06
RD16ES-B1
RD16ES-B3
1SS119-25
1SS133T-77

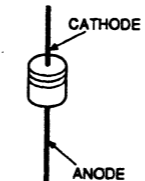


ERC38-06
V11N

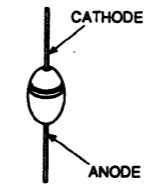


PC111YS




RD10SB1




RH-1A

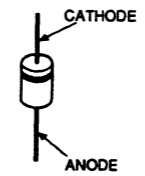


RU-3AM

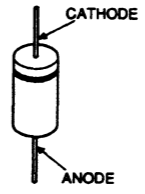


SEL3810DLC05

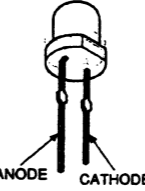


SLP281C-50
TLY123

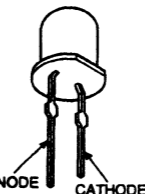


1SS184




1SS226



1SV230TPH3
1SV232-TPH3

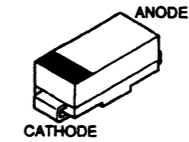

1S2836



SECTION 7 EXPLODED VIEWS

NOTE:

• Items with no part number and no description are not stocked because they are seldom required for routine service.

• The construction parts of an assembled part are indicated with a collation number in the remark column.


• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. CHASSIS

- : 7-685-648-79 +BVTP 3X12
- : 7-682-661-01 +PS 4X8
- ▲ : 7-685-646-79 +BVTP 3X8
- ◆ : 7-685-663-79 +BVTP 4X16
- : 7-685-881-09 +BVTP 4X8

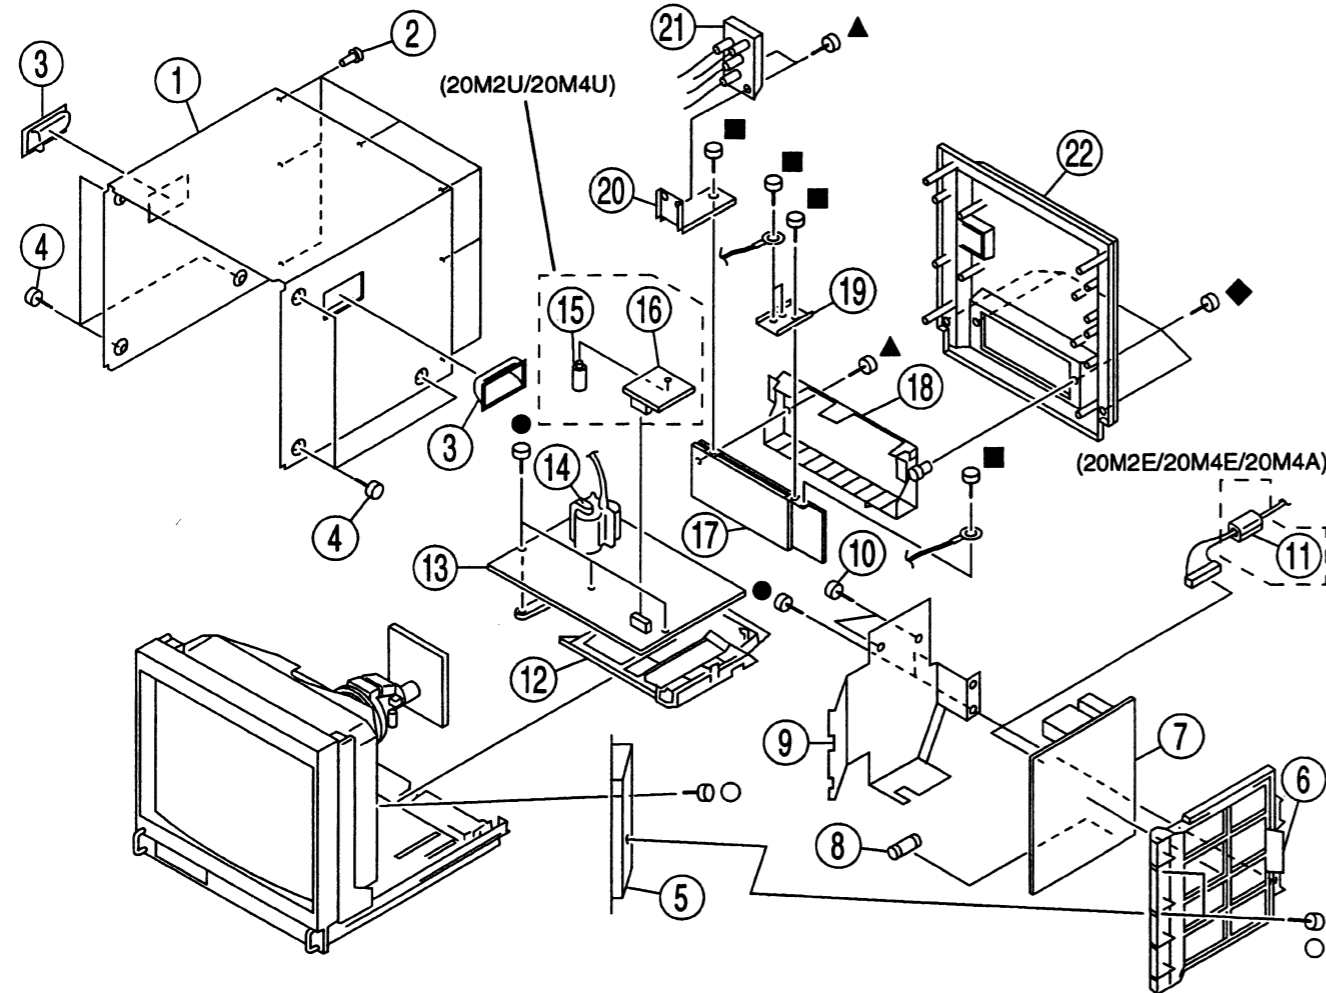


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	4-057-973-11	COVER, TOP		13	* A-1298-003-A	A BOARD, COMPLETE (20M4U/E/A)	
2	4-391-825-01	RIVET, NYLON			* A-1298-005-A	A BOARD, COMPLETE (20M2U/E)	
3	4-043-825-01	HANDLE		14	Δ 1-453-234-1	TRANSFORMER ASSY, FLYBACK	
4	4-847-802-11	SCREW (OS), CASE, CLAW		15	* 3-687-542-41	SPACER, PC BOARD SPACE (20M2U/20M4U)	
5	X-4391-825-1	HOOK ASSY, F		16	* A-1390-705-A	S BOARD, COMPLETE (20M2U/20M4U)	
6	* 4-043-689-01	BRACKET, G		17	1-537-735-14	TERMINAL BOARD ASSY, I/O (A) (Q BOARD)	
7	* A-1316-302-A	G BOARD, COMPLETE		18	4-043-688-01	PANEL, CONNECTOR	
8	Δ 1-576-231-11	FUSE (H.B.C.) 4A/250V		19	* 4-058-363-01	TERMINAL, EARTH	
9	* 4-057-974-01	SHIELD, G PC BOARD		20	4-057-971-01	BRACKET, FOCUS VOLUME	
10	4-382-854-11	SCREW (M3X10), P, SW (+)		21	Δ 1-223-417-12	RESISTOR ASSY (HIGH-VOLTAGE)	(20M4U/E/A)
11	1-543-653-11	CORE ASSY, BEAD (DIVISION TYPE)			Δ 1-238-368-11	RESISTOR ASSY HIGH-VOLTAGE (20M2U/E)	
12	* 4-043-690-01	BRACKET, MAIN		22	4-043-677-11	COVER, REAR	

7-2. PICTURE TUBE

- : 7-685-648-79 +BVTP 3X12
- Δ : 7-685-663-71 +BVTP 4X16
- : 7-682-563-09 +B 4X12
- ▼ : 7-685-883-09 +BVTT 4X12
- ◇ : 7-685-664-79 +P 4X20

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

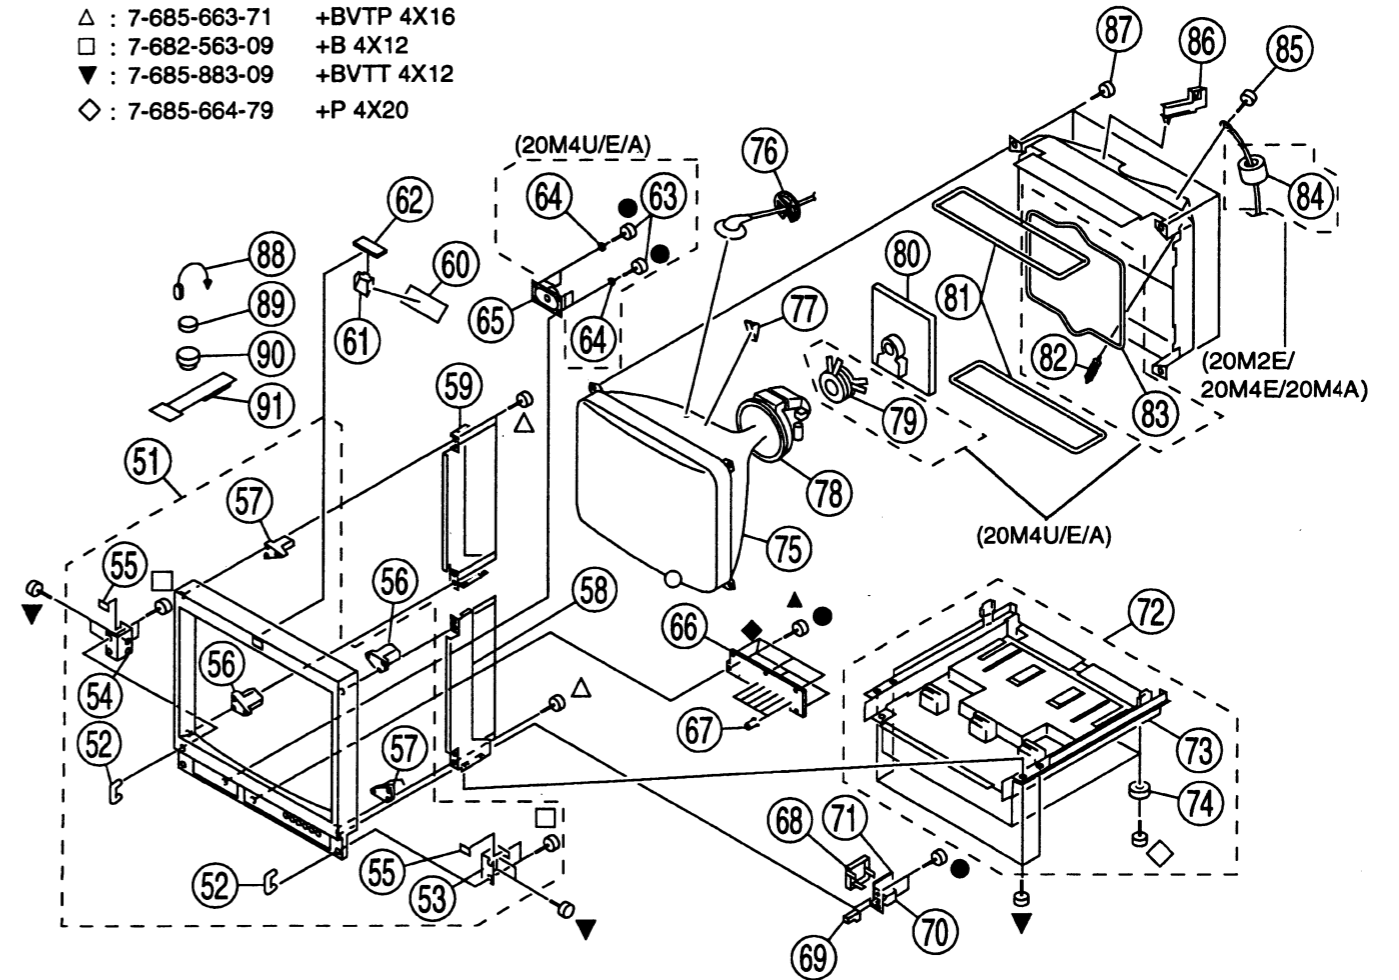

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51	X-4034-348-1	BEZEL ASSY (20M2U/E)	52-57	74	4-901-947-01	LEG	
	X-4034-352-1	BEZEL ASSY (20M4U/E/A)	52-57	75	Δ 4-736-135-05	PICTURE TUBE 20FZ5 (DARK) (20M2U/E)	
52	4-052-200-01	HANDLE, PROTECTOR			Δ 4-736-379-05	PICTURE TUBE 20MT1 (PVM) (20M4E/A)	
53	* 4-043-670-01	REINFORCEMENT (R), HANDLE			Δ 4-736-381-05	PICTURE TUBE 20MT3 (PVM) (20M4U)	
54	* 4-043-669-01	REINFORCEMENT (L), HANDLE		76	3-704-372-01	HOLDER, HV CABLE	
55	* 4-043-797-01	PLATE, BLIND		77	3-703-961-01	SPACER, DY	
56	* 4-043-672-01	BRACKET (A), PICTURE TUBE		78	Δ 1-451-349-11	DEFLECTION YOKE (Y20FZA) (20M2U/E)	
57	* 4-043-673-01	BRACKET (B), PICTURE TUBE			Δ 1-451-456-11	DEFLECTION YOKE (Y20MTA) (20M4U/E/A)	
58	* A-1450-186-A	BRACKET ASSY (R), SIDE		79	Δ 4-453-003-41	NA3012-M4 (20M4U/E/A)	
59	* A-1450-185-A	BRACKET ASSY (L), SIDE		80	* A-1331-630-A	C BOARD, COMPLETE (20M2U/E)	
60	4-044-606-01	CUSHION, TALLY			* A-1331-628-A	C BOARD, COMPLETE (20M4U/E/A)	
61	* 4-043-671-01	REFLECTOR, LED		81	Δ 1-426-505-11	COIL, DEMAGNETIZATION	
62	* A-1390-704-A	X BOARD, COMPLETE		82	* 4-303-774-99	SPRING (20M4U/E/A)	
63	4-379-192-01	SCREW, TAPPING, STEP (20M4U/E/A)		83	Δ 1-411-657-11	COIL, LANDING CORRECTION (20M4U/E/A)	
64	* 4-379-189-01	CUSHION, SPEAKER (20M4U/E/A)		84	1-543-827-11	CLAMP, SLEEVE FERRITE	
65	1-544-063-12	SPEAKER		85	4-389-025-01	SCREW (M4) (EXT TOOTH WASHER)	
66	* A-1372-302-A	H BOARD, COMPLETE		86	* 4-387-284-01	HOLDER, LEAD	
67	4-043-802-02	KNOB, CONTROL		87	4-365-808-01	SCREW (5), TAPPING	
68	4-043-681-01	COVER, AC SWITCH		88	4-308-870-00	CLIP, LEAD WIRE	
69	4-043-683-01	BUTTON, POWER SWITCH		89	1-452-032-00	MAGNET, DISK ; 10mm ϕ	
70	Δ 1-692-921-11	SWITCH, PUSH (A.C. POWER)		90	1-452-094-00	MAGNET, ROTATABLE DISK ; 15mm ϕ	
71	* A-1388-193-A	J BOARD, COMPLETE		91	4-051-736-21	PIECE A(90), CONV. CORRECT	
72	* X-4032-770-1	CABINET ASSY, BOTTOM	73,74				
73	* X-4031-740-1	CABINET, BOTTOM					

SECTION 8 ELECTRICAL PARTS LIST

A

NOTE:

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

- The components identified by in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

When indicating parts by reference number, please include the board name.

RESISTORS

- All resistors are in ohms
- F : nonflammable

CAPACITORS
PF : μF

- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
* A-1298-003-A	A BOARD, COMPLETE (PVM-20M4U/E/A) *****			C200	1-126-963-11	ELECT 4.7MF 20%	50V
				C201	1-137-353-11	MYLAR 0.047MF 10%	100V
* A-1298-005-A	A BOARD, COMPLETE (PVM-20M2U/E) *****			C202	1-163-017-00	CERAMIC CHIP 0.0047MF 10%	50V
				C203	1-126-963-11	ELECT 4.7MF 20%	50V
				C204	1-126-964-11	ELECT 10MF 20%	50V
				C205	1-126-767-11	ELECT 1000MF 20%	16V
				C206	1-128-526-11	ELECT 100MF 20%	25V
				C207	1-104-665-11	ELECT 100MF 20%	25V
				C208	1-126-964-11	ELECT 10MF 20%	50V
				C209	1-126-963-11	ELECT 4.7MF 20%	50V
				C300	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C301	1-163-086-00	CERAMIC CHIP 3PF	0.25PF 50V
				C302	1-163-086-00	CERAMIC CHIP 3PF	0.25PF 50V
				C304	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
				C305	1-163-259-91	CERAMIC CHIP 220PF	5% 50V
				C306	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C309	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C310	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
				C311	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V
				C312	1-126-961-11	ELECT 2.2MF 20%	50V
				C313	1-163-145-00	CERAMIC CHIP 0.0015MF	5% 50V
				C314	1-163-249-11	CERAMIC CHIP 82PF	5% 50V
				C315	1-126-964-11	ELECT 10MF 20%	50V
				C316	1-104-664-11	ELECT 47MF 20%	25V
				C317	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
				C318	1-126-964-11	ELECT 10MF 20%	50V
				C319	1-163-222-11	CERAMIC CHIP 5PF	0.25PF 50V
				C320	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C322	1-163-119-00	CERAMIC CHIP 120PF	5% 50V
				C323	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
				C324	1-163-235-11	CERAMIC CHIP 22PF	5% 50V
				C325	1-126-964-11	ELECT 10MF 20%	50V
				C326	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
				C327	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
				C328	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C329	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
				C330	1-163-243-11	CERAMIC CHIP 47PF	5% 50V
				C331	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
				C332	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
				C333	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C334	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
				C335	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
				C336	1-104-664-11	ELECT 47MF 20%	25V
				C337	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C338	1-163-119-00	CERAMIC CHIP 120PF	5% 50V
				C339	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
				C340	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C341	1-163-119-00	CERAMIC CHIP 120PF	5% 50V
				C342	1-163-018-00	CERAMIC CHIP 0.0056MF	10% 50V
				C343	1-163-031-11	CERAMIC CHIP 0.01MF	50V
				C344	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
				C345	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
				C346	1-126-960-11	ELECT 1MF 20%	50V
				C347	1-163-243-11	CERAMIC CHIP 47PF	5% 50V



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D308	8-719-404-49	DIODE MA111		D518	8-719-404-49	DIODE MA111	
D309	8-719-404-49	DIODE MA111		D519	8-719-404-49	DIODE MA111	
D310	8-719-104-34	DIODE 1S2836		D520	8-719-801-78	DIODE 1SS184	
D311	8-719-045-70	DIODE 1SV230TPH3		D521	8-719-404-49	DIODE MA111	
D313	8-719-801-78	DIODE 1SS184		D522	8-719-977-05	DIODE DTZ6.2	
D314	8-719-404-49	DIODE MA111		D523	8-719-920-76	DIODE 1S2076	
D315	8-719-404-49	DIODE MA111		D524	8-719-200-02	DIODE 10E-2	
D317	8-719-404-49	DIODE MA111		D525	8-719-200-02	DIODE 10E-2	
D320	8-719-404-49	DIODE MA111		D526	8-719-404-49	DIODE MA111	
D322	8-719-404-49	DIODE MA111		D527	8-719-200-02	DIODE 10E-2	
D323	8-719-404-49	DIODE MA111		D528	8-719-300-76	DIODE RH-1A	
D324	8-719-045-70	DIODE 1SV230TPH3		D529	8-719-200-02	DIODE 10E-2	
D325	8-719-801-78	DIODE 1SS184		D530	8-719-300-76	DIODE RH-1A	
D326	8-719-045-70	DIODE 1SV230TPH3		D531	8-719-977-32	DIODE DTZ11B	
D327	8-719-104-34	DIODE 1S2836		D532	8-719-800-76	DIODE 1SS226	
D332	8-719-404-49	DIODE MA111		D533	8-719-302-43	DIODE EL1Z	
D333	8-719-404-49	DIODE MA111		D534	8-719-404-49	DIODE MA111	
D335	8-719-404-49	DIODE MA111		D535	8-719-404-49	DIODE MA111	
D336	8-719-404-49	DIODE MA111		D536	8-719-800-76	DIODE 1SS226	
D337	8-719-404-49	DIODE MA111		D537	8-719-800-76	DIODE 1SS226	
D338	8-719-404-49	DIODE MA111		D538	8-719-800-76	DIODE 1SS226	
D339	8-719-404-49	DIODE MA111		D539	8-719-920-76	DIODE 1S2076	
D344	8-719-801-78	DIODE 1SS184		D540	8-719-404-49	DIODE MA111	
D345	8-719-104-34	DIODE 1S2836		D541	8-719-801-78	DIODE 1SS184	
D346	8-719-104-34	DIODE 1S2836		D542	8-719-404-49	DIODE MA111	
D347	8-719-104-34	DIODE 1S2836		D543	8-719-404-49	DIODE MA111	
D360	1-216-295-91	CONDUCTOR, CHIP		D544	8-719-404-49	DIODE MA111 (20M4U/E/A)	
D361	1-216-295-91	CONDUCTOR, CHIP		D545	8-719-404-49	DIODE MA111 (20M4U/E/A)	
D362	8-719-158-40	DIODE RD10SB1		D546	8-719-901-19	DIODE V11N (20M4U/E/A)	
D363	8-719-158-40	DIODE RD10SB1		D547	8-719-404-49	DIODE MA111	
D364	8-719-104-34	DIODE 1S2836		D548	8-719-110-46	DIODE RD16ESB3 (20M4U/E/A)	
D365	8-719-404-49	DIODE MA111				<DELAY LINE>	
D381	8-719-404-49	DIODE MA111		DL300	1-415-633-11	DELAY LINE, Y	
D401	8-719-404-49	DIODE MA111		DL301	1-415-632-11	DELAY LINE, Y	
D404	8-719-800-76	DIODE 1SS226		DL401	1-409-547-11	DELAY LINE	
D405	8-719-801-78	DIODE 1SS184				<FERRITE BEAD>	
D406	8-719-404-49	DIODE MA111		FB501	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
D407	8-719-404-49	DIODE MA111				<FILTER>	
D408	8-719-404-49	DIODE MA111		FL300	1-236-547-11	TRAP, LC	
D410	8-719-404-49	DIODE MA111		FL401	1-236-364-11	FILTER, BAND PASS	
D411	8-719-404-49	DIODE MA111				<IC>	
D414	8-719-801-78	DIODE 1SS184		IC101	1-540-044-11	SOCKET, IC (20M2U/E)	
D415	8-719-801-78	DIODE 1SS184		IC101	8-759-462-05	IC uPD78P018FYCW-M01 (20M4U/E/A)	
D416	8-719-801-78	DIODE 1SS184		IC102	8-759-354-28	IC ST24C02FM6TR	
D417	8-719-801-78	DIODE 1SS184		IC103	8-759-008-48	IC MC74HC86F	
D418	8-719-801-78	DIODE 1SS184		IC104	8-759-262-59	IC uPD6451AGT-632-E2	
D421	8-719-404-49	DIODE MA111		IC105	8-759-196-70	IC M62358FP-E1	
D422	8-719-404-49	DIODE MA111		IC106	8-759-196-70	IC M62358FP-E1	
D423	8-719-800-76	DIODE 1SS226		IC107	8-759-196-70	IC M62358FP-E1	
D424	8-719-404-49	DIODE MA111		IC108	8-759-042-02	IC S-80743AL-A7-S	
D425	8-719-800-76	DIODE 1SS226		IC109	8-759-196-70	IC M62358FP-E1	
D427	8-719-404-49	DIODE MA111		IC110	8-759-196-70	IC M62358FP-E1	
D500	8-719-404-49	DIODE MA111		IC111	8-759-009-22	IC MC14094BF	
D501	8-719-977-03	DIODE DTZ5.6B		IC112	8-759-354-27	IC ST24C01FM6TR	
D502	8-719-979-80	DIODE UF5406		IC200	8-759-420-04	IC AN5265	
D503	8-719-404-49	DIODE MA111		IC301	8-752-053-21	IC CXA1211M	
D504	8-719-901-83	DIODE 1SS83		IC302	8-759-998-98	IC LM358D	
D505	8-719-028-72	DIODE RGP02-17EL-6433		IC303	8-752-056-67	IC CXA1214P	
D506	8-719-033-83	DIODE ERD07-15		IC304	8-759-932-67	IC BU4053BCF	
D507	8-719-800-76	DIODE 1SS226		IC305	8-759-631-08	IC M51279FP	
D508	8-719-800-76	DIODE 1SS226		IC306	8-759-711-32	IC NJM2245M	
D509	8-719-404-49	DIODE MA111					
D510	8-719-302-43	DIODE EL1Z					
D512	8-719-979-80	DIODE UF5406					
D513	8-719-404-49	DIODE MA111					
D514	8-719-971-20	DIODE ERC38-06					
D515	8-719-971-20	DIODE ERC38-06					
D516	8-719-404-49	DIODE MA111					
D517	8-719-404-49	DIODE MA111					

A

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
IC309	8-759-711-32	IC NJM2245M	
IC310	8-759-932-67	IC BU4053BCF	
IC311	8-759-008-67	IC MC14066BF	
IC312	8-759-711-32	IC NJM2245M	
IC313	8-759-287-89	IC MM1113XFF	
IC314	8-759-287-89	IC MM1113XFF	
IC315	8-759-932-67	IC BU4053BCF	
IC316	8-759-084-76	IC MM1111XF	
IC317	8-759-009-51	IC MC14538BF	
IC318	8-759-009-67	IC MC14584BF	
IC320	8-759-287-89	IC MM1113XFF	
IC321	8-759-287-89	IC MM1113XFF	
IC322	8-759-287-89	IC MM1113XFF	
IC323	8-759-287-89	IC MM1113XFF	
IC324	8-759-287-89	IC MM1113XFF	
IC325	8-759-287-89	IC MM1113XFF	
IC326	8-759-060-00	IC BA10324AF	
IC327	8-759-008-67	IC MC14066BF	
IC350	8-759-100-96	IC uPC4558G2	
IC401	8-759-196-69	IC BA7655AF-E2	
IC402	8-752-053-21	IC CXA1211M	
IC403	8-759-008-67	IC MC14066BF	
IC404	8-752-067-05	IC CXA1739S	
IC405	8-759-932-67	IC BU4053BCF	
IC406	8-759-998-98	IC LM358D	
IC407	8-759-008-67	IC MC14066BF	
IC408	8-759-509-91	IC XRA10393F	
IC409	8-759-060-00	IC BA10324AF	
IC410	8-759-009-06	IC MC14052BF	
IC411	8-759-008-92	IC MC14024BF	
IC412	8-759-932-67	IC BU4053BCF	
IC413	8-759-932-67	IC BU4053BCF	
IC500	8-749-010-08	IC H8D7249	
IC502	8-759-009-51	IC MC14538BF	
IC503	8-759-009-51	IC MC14538BF	
IC504	8-752-053-21	IC CXA1211M	
IC505	8-759-520-07	IC XRA17812T	
IC506	8-759-009-51	IC MC14538BF	
IC507	8-759-100-60	IC uPC1377C	
IC508	8-752-053-21	IC CXA1211M	
IC509	8-759-998-98	IC LM358D	
IC510	8-759-009-51	IC MC14538BF	
IC511	8-759-803-42	IC LA6500-FA (20M4U/E/A)	
IC512	8-759-929-65	IC LM7912CT (20M4U/E/A)	
		<CHIP CONDUCTOR>	
JR302	1-216-295-91	CONDUCTOR, CHIP	
JR307	1-216-295-91	CONDUCTOR, CHIP	
JR310	1-216-295-91	CONDUCTOR, CHIP	
		<COIL>	
L101	1-408-609-41	INDUCTOR 33UH	
L102	1-408-417-00	INDUCTOR 47UH	
L104	1-408-425-00	INDUCTOR 220UH	
L105	1-410-482-31	INDUCTOR 100UH	
L300	1-410-478-11	INDUCTOR 47UH	
L301	1-408-411-00	INDUCTOR 15UH	
L302	1-412-008-31	INDUCTOR CHIP 15UH	
L303	1-408-416-00	INDUCTOR 39UH	
L304	1-412-008-31	INDUCTOR CHIP 15UH	
L305	1-410-196-11	INDUCTOR CHIP 2.2UH	
L306	1-408-416-00	INDUCTOR 39UH	
L307	1-408-411-00	INDUCTOR 15UH	
L308	1-410-466-41	INDUCTOR 4.7UH	
L309	1-410-470-11	INDUCTOR 10UH	
L311	1-410-470-11	INDUCTOR 10UH	
L312	1-412-011-31	INDUCTOR CHIP 27UH	

REF. NO.	PART NO.	DESCRIPTION	REMARK
L314	1-412-011-31	INDUCTOR CHIP 27UH	
L316	1-412-011-31	INDUCTOR CHIP 27UH	
L317	1-410-090-41	INDUCTOR 18mH	
L319	1-408-421-00	INDUCTOR 100UH	
L320	1-410-682-31	INDUCTOR 470UH	
L401	1-410-478-11	INDUCTOR 47UH	
L402	1-410-215-31	INDUCTOR CHIP 82UH	
L403	1-410-215-31	INDUCTOR CHIP 82UH	
L404	1-410-215-31	INDUCTOR CHIP 82UH	
L405	1-408-419-00	INDUCTOR 68UH	
L406	1-408-419-00	INDUCTOR 68UH	
L407	1-408-413-00	INDUCTOR 22UH	
L408	1-408-413-00	INDUCTOR 22UH	
L409	1-410-215-31	INDUCTOR CHIP 82UH	
L500	1-459-155-00	COIL (WITH CORE) 45UH	
L501	1-407-365-00	COIL, CHOKER	
L502	1-407-365-00	COIL, CHOKER	
L503	1-410-093-11	INDUCTOR 33mH	
L504	1-410-666-31	INDUCTOR 18UH	
L505	1-410-671-31	INDUCTOR 47UH	
L506	1-459-087-00	COIL, HCC DUST CORE 3.9mH (20M4U/E/A)	
L506	1-459-104-00	COIL, DUST CORE (20M2U/E)	
L507	1-410-686-11	INDUCTOR 1mH	
L508	1-412-530-31	INDUCTOR 27UH	
L509	1-459-087-00	COIL, HCC DUST CORE 3.9mH	
L510	1-459-106-00	COIL, DUST CORE	
L512	1-459-232-11	COIL, CORE	
L513	1-412-447-11	INDUCTOR 3.9mH	
L514	1-459-104-00	COIL, DUST CORE	
L515	1-459-059-00	COIL, DUST CORE	
L517	1-412-547-21	INDUCTOR 680UH	
		<NEON LAMP>	
NL500	1-519-526-11	LAMP, NEON	
		<TRANSISTOR>	
Q101	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q102	8-729-216-22	TRANSISTOR 2SA1162-G	
Q103	8-729-216-22	TRANSISTOR 2SA1162-G	
Q104	8-729-907-26	TRANSISTOR 1MX1	
Q105	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q107	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q108	8-729-422-29	TRANSISTOR 2SD601A-S	
Q109	8-729-422-29	TRANSISTOR 2SD601A-S	
Q110	8-729-422-29	TRANSISTOR 2SD601A-S	
Q111	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q112	8-729-422-29	TRANSISTOR 2SD601A-S	
Q113	8-729-422-29	TRANSISTOR 2SD601A-S	
Q114	8-729-422-29	TRANSISTOR 2SD601A-S	
Q200	8-729-140-96	TRANSISTOR 2SD774-34	
Q201	8-729-422-29	TRANSISTOR 2SD601A-S	
Q300	8-729-422-29	TRANSISTOR 2SD601A-S	
Q301	8-729-422-29	TRANSISTOR 2SD601A-S	
Q302	8-729-216-22	TRANSISTOR 2SA1162-G	
Q303	8-729-422-29	TRANSISTOR 2SD601A-S	
Q305	8-729-422-29	TRANSISTOR 2SD601A-S	
Q306	8-729-422-29	TRANSISTOR 2SD601A-S	
Q307	8-729-422-29	TRANSISTOR 2SD601A-S	
Q308	8-729-422-29	TRANSISTOR 2SD601A-S	
Q309	8-729-422-37	TRANSISTOR 2SB709A-R	
Q310	8-729-422-37	TRANSISTOR 2SB709A-R	
Q311	8-729-422-37	TRANSISTOR 2SB709A-R	
Q312	8-729-422-29	TRANSISTOR 2SD601A-S	
Q313	8-729-422-37	TRANSISTOR 2SB709A-R	
Q314	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q315	8-729-422-37	TRANSISTOR 2SB709A-R	
Q316	8-729-422-29	TRANSISTOR 2SD601A-S	



<u>REF. NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>	<u>REF. NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>
Q318	8-729-422-37	TRANSISTOR 2SB709A-R		Q419	8-729-422-37	TRANSISTOR 2SB709A-R	
Q319	8-729-422-29	TRANSISTOR 2SD601A-S		Q420	8-729-422-37	TRANSISTOR 2SB709A-R	
Q320	8-729-422-29	TRANSISTOR 2SD601A-S		Q421	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q321	8-729-422-29	TRANSISTOR 2SD601A-S		Q422	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q322	8-729-422-29	TRANSISTOR 2SD601A-S		Q423	8-729-422-29	TRANSISTOR 2SD601A-S	
Q323	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q424	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q324	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q425	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q325	8-729-422-29	TRANSISTOR 2SD601A-S		Q426	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q326	8-729-422-29	TRANSISTOR 2SD601A-S		Q428	8-729-422-37	TRANSISTOR 2SB709A-R	
Q327	8-729-422-37	TRANSISTOR 2SB709A-R		Q429	8-729-422-37	TRANSISTOR 2SB709A-R	
Q328	8-729-141-53	TRANSISTOR 2SK94-X2X3X4		Q430	8-729-422-29	TRANSISTOR 2SD601A-S	
Q329	8-729-141-53	TRANSISTOR 2SK94-X2X3X4		Q431	8-729-422-29	TRANSISTOR 2SD601A-S	
Q330	8-729-422-37	TRANSISTOR 2SB709A-R		Q432	8-729-422-29	TRANSISTOR 2SD601A-S	
Q331	8-729-422-37	TRANSISTOR 2SB709A-R		Q433	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q332	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q434	8-729-422-29	TRANSISTOR 2SD601A-S	
Q333	8-729-422-29	TRANSISTOR 2SD601A-S		Q435	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q334	8-729-422-37	TRANSISTOR 2SB709A-R		Q436	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q335	8-729-422-29	TRANSISTOR 2SD601A-S		Q437	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q336	8-729-109-44	TRANSISTOR 2SK94-X4		Q438	8-729-422-29	TRANSISTOR 2SD601A-S	
Q337	8-729-422-29	TRANSISTOR 2SD601A-S		Q439	8-729-216-22	TRANSISTOR 2SA1162-G	
Q338	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q440	8-729-422-29	TRANSISTOR 2SD601A-S	
Q339	8-729-422-37	TRANSISTOR 2SB709A-R		Q441	8-729-141-53	TRANSISTOR 2SK94-X2X3X4	
Q341	8-729-920-39	TRANSISTOR IMT1US		Q442	8-729-422-29	TRANSISTOR 2SD601A-S	
Q342	8-729-920-39	TRANSISTOR IMT1US		Q443	8-729-216-22	TRANSISTOR 2SA1162-G	
Q343	8-729-920-39	TRANSISTOR IMT1US		Q444	8-729-422-29	TRANSISTOR 2SD601A-S	
Q345	8-729-422-29	TRANSISTOR 2SD601A-S		Q445	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q346	8-729-422-29	TRANSISTOR 2SD601A-S		Q446	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q347	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q447	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q348	8-729-422-37	TRANSISTOR 2SB709A-R		Q448	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q349	8-729-422-37	TRANSISTOR 2SB709A-R		Q449	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q350	8-729-422-37	TRANSISTOR 2SB709A-R		Q500	8-729-422-37	TRANSISTOR 2SB709A-R	
Q351	8-729-422-29	TRANSISTOR 2SD601A-S		Q501	8-729-821-87	TRANSISTOR 2SD1878-CA	
Q352	8-729-422-29	TRANSISTOR 2SD601A-S		Q502	8-729-119-80	TRANSISTOR 2SC2688-LK	
Q353	8-729-422-29	TRANSISTOR 2SD601A-S		Q505	8-729-422-29	TRANSISTOR 2SD601A-S	
Q354	8-729-422-29	TRANSISTOR 2SD601A-S		Q506	8-729-422-29	TRANSISTOR 2SD601A-S	
Q355	8-729-422-29	TRANSISTOR 2SD601A-S		Q507	8-729-422-29	TRANSISTOR 2SD601A-S	
Q356	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q508	8-729-422-37	TRANSISTOR 2SB709A-R	
Q357	8-729-422-29	TRANSISTOR 2SD601A-S		Q509	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q358	8-729-422-29	TRANSISTOR 2SD601A-S		Q510	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q359	8-729-422-37	TRANSISTOR 2SB709A-R		Q511	8-729-422-29	TRANSISTOR 2SD601A-S	
Q360	8-729-907-26	TRANSISTOR IMX1		Q513	8-729-122-03	TRANSISTOR 2SA1220A-P	
Q361	8-729-027-38	TRANSISTOR DTA144EKA-T146		Q514	8-729-901-00	TRANSISTOR DTC124EK	
Q362	8-729-422-29	TRANSISTOR 2SD601A-S		Q515	8-729-106-92	TRANSISTOR 2SC2690A-Q	
Q363	8-729-422-29	TRANSISTOR 2SD601A-S		Q516	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q364	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q517	8-729-027-38	TRANSISTOR DTA144EKA-T146	
Q366	8-729-422-37	TRANSISTOR 2SB709A-R		Q518	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q367	8-729-422-37	TRANSISTOR 2SB709A-R		Q519	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q368	8-729-422-37	TRANSISTOR 2SB709A-R		Q520	8-729-021-82	TRANSISTOR 2SD2396K	
Q369	8-729-027-38	TRANSISTOR DTA144EKA-T146		Q522	8-729-422-29	TRANSISTOR 2SD601A-S	
Q372	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q523	8-729-422-29	TRANSISTOR 2SD601A-S	
Q373	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q524	8-729-422-29	TRANSISTOR 2SD601A-S	
Q401	8-729-422-29	TRANSISTOR 2SD601A-S		Q525	8-729-422-37	TRANSISTOR 2SB709A-R	
Q402	8-729-422-29	TRANSISTOR 2SD601A-S		Q526	8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	(20M4U/E/A)
Q403	8-729-027-59	TRANSISTOR DTC144EKA-T146		Q527	8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	(20M4U/E/A)
Q404	8-729-422-37	TRANSISTOR 2SB709A-R		Q528	8-729-802-71	TRANSISTOR 2SA1407-D	
Q405	8-729-422-37	TRANSISTOR 2SB709A-R		Q529	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q406	8-729-422-29	TRANSISTOR 2SD601A-S		Q530	8-729-027-59	TRANSISTOR DTC144EKA-T146	
Q407	8-729-422-29	TRANSISTOR 2SD601A-S		Q531	8-729-216-22	TRANSISTOR 2SA1162-G (20M4U/E/A)	
Q408	8-729-422-37	TRANSISTOR 2SB709A-R		Q532	8-729-927-31	TRANSISTOR IRF520 (20M4U/E/A)	
Q409	8-729-422-37	TRANSISTOR 2SB709A-R		Q2501	8-729-422-29	TRANSISTOR 2SD601A-S	
Q410	8-729-907-26	TRANSISTOR IMX1		<RESISTOR>			
Q411	8-729-422-29	TRANSISTOR 2SD601A-S		R101	1-216-025-91	METAL GLAZE 100	% 1/10W
Q412	8-729-216-22	TRANSISTOR 2SA1162-G		R102	1-216-025-91	METAL GLAZE 100	% 1/10W
Q413	8-729-141-53	TRANSISTOR 2SK94-X2X3X4		R103	1-216-025-91	METAL GLAZE 100	% 1/10W
Q414	8-729-422-37	TRANSISTOR 2SB709A-R		R104	1-216-073-00	METAL GLAZE 10K	% 1/10W
Q415	8-729-422-37	TRANSISTOR 2SB709A-R		R105	1-216-059-00	METAL GLAZE 2.7K	% 1/10W
Q416	8-729-422-37	TRANSISTOR 2SB709A-R					
Q417	8-729-422-37	TRANSISTOR 2SB709A-R					
Q418	8-729-120-28	TRANSISTOR 2SC1623-L5L6					



REF. NO.	PART NO.	DESCRIPTION	REMARK
R627	1-216-490-11	METAL OXIDE 39K	5% 3W F
R628	1-216-491-11	METAL OXIDE 56K	5% 3W F
R629	1-202-727-00	SOLID	4.7M 10% 1/2W
R630	1-216-490-11	METAL OXIDE 39K	5% 3W F
R631	1-249-412-11	CARBON 390	5% 1/4W F
R632	1-249-401-11	CARBON 47	5% 1/4W F
R1602	1-202-842-11	SOLID 220K	20% 1/2W
R1603	1-202-842-11	SOLID 220K	20% 1/2W
<RELAY>			
RY601	1-515-738-11	RELAY	
<TRANSFORMER>			
T601	1-426-716-11	TRANSFORMER, LINE FILTER (LFT)	
T602	1-426-716-11	TRANSFORMER, LINE FILTER (LFT)	
T603	1-431-245-11	TRANSFORMER, CONVERTER (SRT)	
<THERMISTOR>			
THP601	1-808-059-31	THERMISTOR, POSITIVE	
<TEST PIN>			
TP1601	1-536-354-00	POST PIN	
<VARISTOR>			
VDR601	1-809-942-71	VARISTOR	
VDR602	1-809-942-71	VARISTOR	

* A-1331-628-A	C BOARD, COMPLETE (PVM-20M4U/E/A)		
* A-1331-630-A	C BOARD, COMPLETE (PVM-20M2U/E)		
7-682-949-01	SCREW +PSW 3X10		
<CAPACITOR>			
C701	1-102-116-00	CERAMIC 680PF	10% 50V
C702	1-102-116-00	CERAMIC 680PF	10% 50V
C703	1-102-116-00	CERAMIC 680PF	10% 50V
C704	1-102-121-00	CERAMIC 0.0022MF	10% 50V
C705	1-104-665-11	ELECT 100MF	20% 16V
C706	1-102-074-00	CERAMIC 0.001MF	10% 50V
C707	1-162-116-00	CERAMIC 680PF	10% 2KV
C708	1-136-601-11	FILM 0.01MF	10% 630V
C710	1-101-880-00	CERAMIC 47PF	5% 50V
C711	1-101-880-00	CERAMIC 47PF	5% 50V
C712	1-101-880-00	CERAMIC 47PF	5% 50V
C714	1-102-976-00	CERAMIC 180PF	5% 50V
C715	1-102-976-00	CERAMIC 180PF	5% 50V
C716	1-102-976-00	CERAMIC 180PF	5% 50V
C724	1-107-929-11	ELECT 10MF	20% 100V (20M2U/E)
C726	1-107-662-11	ELECT 22MF	20% 250V
C733	1-107-652-11	ELECT 10MF	20% 250V
C734	1-101-888-00	CERAMIC 68PF	5% 50V
C737	1-102-934-00	CERAMIC 1PF	0.25PF 50V
C740	1-162-114-00	CERAMIC 0.0047MF	2KV (20M4U/E/A)
<CONNECTOR>			
CN701	* 1-564-511-11	PLUG, CONNECTOR 8P	

REF. NO.	PART NO.	DESCRIPTION	REMARK
CN702	* 1-573-964-11	PIN, CONNECTOR (PC BOARD) 6P	
CN703	1-695-915-11	TAB (CONTACT)	
CN704	1-695-915-11	TAB (CONTACT) (20M4U/E/A)	
<DIODE>			
D701	8-719-911-19	DIODE 1SS119-25	
D702	8-719-911-19	DIODE 1SS119-25	
D703	8-719-911-19	DIODE 1SS119-25	
D704	8-719-911-19	DIODE 1SS119-25	
D705	8-719-911-19	DIODE 1SS119-25	
D706	8-719-911-19	DIODE 1SS119-25	
D707	8-719-901-83	DIODE 1SS83	
D708	8-719-901-83	DIODE 1SS83	
D709	8-719-901-83	DIODE 1SS83	
D713	8-719-901-83	DIODE 1SS83	
D715	8-719-901-83	DIODE 1SS83	
D716	8-719-901-83	DIODE 1SS83	
D717	8-719-901-83	DIODE 1SS83	
<JACK>			
J701	1-251-116-11	SOCKET, PICTURE TUBE (20M4U/E/A)	
J701	1-540-071-11	SOCKET, PICTURE TUBE (20M2U/E)	
<COIL>			
L702	1-408-413-00	INDUCTOR 22UH	
L703	1-408-608-31	INDUCTOR 27UH	
L704	1-408-608-31	INDUCTOR 27UH	
L705	1-412-530-31	INDUCTOR 27UH (20M2U/E)	
L705	1-412-532-11	INDUCTOR 39UH (20M4U/E/A)	
L706	1-410-667-31	INDUCTOR 22UH	
<TRANSISTOR>			
Q701	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q703	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q704	8-729-200-17	TRANSISTOR 2SA1091-O	
Q705	8-729-200-17	TRANSISTOR 2SA1091-O	
Q706	8-729-200-17	TRANSISTOR 2SA1091-O	
Q710	8-729-200-17	TRANSISTOR 2SA1091-O	
Q711	8-729-200-17	TRANSISTOR 2SA1091-O	
Q712	8-729-200-17	TRANSISTOR 2SA1091-O	
Q713	8-729-255-12	TRANSISTOR 2SC2551-O	
Q714	8-729-255-12	TRANSISTOR 2SC2551-O	
Q715	8-729-255-12	TRANSISTOR 2SC2551-O	
Q716	8-729-255-12	TRANSISTOR 2SC2551-O	
Q717	8-729-255-12	TRANSISTOR 2SC2551-O	
<RESISTOR>			
R702	1-247-897-11	CARBON 560K	5% 1/4W
R704	1-215-404-00	METAL 200	1% 1/4W
R705	1-215-404-00	METAL 200	1% 1/4W
R706	1-215-404-00	METAL 200	1% 1/4W
R707	1-249-429-11	CARBON 10K	5% 1/4W
R708	1-249-429-11	CARBON 10K	5% 1/4W
R709	1-249-429-11	CARBON 10K	5% 1/4W
R710	1-215-388-00	METAL 43	1% 1/4W
R711	1-215-390-00	METAL 51	1% 1/4W
R712	1-215-388-00	METAL 43	1% 1/4W
R715	1-202-818-00	SOLID 1K	20% 1/2W
R716	1-216-486-00	METAL OXIDE 8.2K	5% 3W F
R717	1-202-818-00	SOLID 1K	20% 1/2W
R718	1-216-486-00	METAL OXIDE 8.2K	5% 3W F
R719	1-202-818-00	SOLID 1K	20% 1/2W
R720	1-216-486-00	METAL OXIDE 8.2K	5% 3W F
R722	1-202-883-11	SOLID 680K	20% 1/2W

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF. NO.	PART NO.	DESCRIPTION	REMARK
R723	1-202-838-00	SOLID 100K	20% 1/2W
R724	1-202-842-11	SOLID 220K	20% 1/2W
R725	1-202-838-00	SOLID 100K	20% 1/2W
R726	1-202-846-00	SOLID 470K	20% 1/2W (20M2U/E)
R728	1-202-837-00	SOLID 82K	20% 1/2W (20M2U/E)
R729	1-202-549-00	SOLID 100	20% 1/2W (20M2U/E)
R731	1-247-815-91	CARBON 220	5% 1/4W
R732	1-247-815-91	CARBON 220	5% 1/4W
R733	1-247-815-91	CARBON 220	5% 1/4W
R734	1-249-409-11	CARBON 220	5% 1/4W F
R735	1-249-409-11	CARBON 220	5% 1/4W F
R736	1-249-409-11	CARBON 220	5% 1/4W F
R737	1-247-807-31	CARBON 100	5% 1/4W
R738	1-247-807-31	CARBON 100	5% 1/4W
R739	1-247-807-31	CARBON 100	5% 1/4W
R740	1-249-433-11	CARBON 22K	5% 1/4W F
R741	1-249-433-11	CARBON 22K	5% 1/4W F
R742	1-249-433-11	CARBON 22K	5% 1/4W F
R744	1-247-843-11	CARBON 3.3K	5% 1/4W
R745	1-249-429-11	CARBON 10K	5% 1/4W
R746	1-215-879-11	METAL OXIDE 47K	5% 1W F
R747	1-247-725-11	CARBON 10K	5% 1/4W F
R748	1-249-923-11	CARBON 1K	5% 1/4W F
R749	1-215-902-11	METAL OXIDE 47K	5% 2W F
R751	1-247-887-00	CARBON 220K	5% 1/4W
R752	1-247-887-00	CARBON 220K	5% 1/4W
R753	1-247-887-00	CARBON 220K	5% 1/4W
R754	1-247-863-91	CARBON 22K	5% 1/4W
R755	1-249-434-11	CARBON 27K	5% 1/4W
R756	1-249-440-11	CARBON 82K	5% 1/4W
R760	1-249-400-11	CARBON 39	5% 1/4W F
<VARIABLE RESISTOR>			
RV708	1-241-714-11	RES, ADJ, METAL FILM 110M	
RV709	1-230-641-11	RES, ADJ, METAL GLAZE 2.2M	
<SPARK GAP>			
SG701	1-519-422-11	GAP, SPARK (20M4U/E/A)	
SG702	1-519-422-11	GAP, SPARK (20M4U/E/A)	
SG703	1-519-422-11	GAP, SPARK (20M4U/E/A)	
SG704	1-519-422-11	GAP, SPARK (20M4U/E/A)	

* A-1372-302-A H BOARD, COMPLETE *****			
* 4-348-208-00 HOLDER, LED			
<CONNECTOR>			
CN105	* 1-564-527-11	PLUG, CONNECTOR 12P	
CN106	* 1-564-526-11	PLUG, CONNECTOR 11P	
<DIODE>			
D2102	8-719-920-05	DIODE SLP281C-50	
D2103	8-719-812-32	DIODE TLY123	
D2104	8-719-991-33	DIODE ISS133T-77	
<RESISTOR>			
R2101	1-249-419-11	CARBON 1.5K	5% 1/4W
R2107	1-249-430-11	CARBON 12K	5% 1/4W
R2136	1-249-414-11	CARBON 560	5% 1/4W

REF. NO.	PART NO.	DESCRIPTION	REMARK
R2137	1-249-414-11	CARBON 560	5% 1/4W
R2138	1-249-414-11	CARBON 560	5% 1/4W
R2139	1-249-414-11	CARBON 560	5% 1/4W
R2140	1-249-414-11	CARBON 560	5% 1/4W
R2141	1-249-414-11	CARBON 560	5% 1/4W
R2142	1-249-414-11	CARBON 560	5% 1/4W
R2143	1-249-414-11	CARBON 560	5% 1/4W
R2144	1-249-414-11	CARBON 560	5% 1/4W
R2145	1-249-414-11	CARBON 560	5% 1/4W
R2147	1-215-427-00	METAL 1.8K	1% 1/4W
R2148	1-215-419-00	METAL 820	1% 1/4W
R2149	1-215-414-00	METAL 510	1% 1/4W
R2150	1-215-409-00	METAL 330	1% 1/4W
R2151	1-215-407-00	METAL 270	1% 1/4W
R2152	1-215-404-00	METAL 200	1% 1/4W
R2153	1-215-401-11	METAL 150	1% 1/4W
R2154	1-215-399-00	METAL 120	1% 1/4W
R2155	1-215-397-00	METAL 100	1% 1/4W
R2156	1-215-421-00	METAL 1K	1% 1/4W
R2157	1-215-416-00	METAL 620	1% 1/4W
R2158	1-215-410-00	METAL 360	1% 1/4W
R2159	1-215-405-00	METAL 220	1% 1/4W
R2160	1-215-421-00	METAL 1K	1% 1/4W
<VARIABLE RESISTOR>			
RV2101	1-241-238-21	RES, VAR, CARBON 20K	
RV2103	1-225-385-11	RES, VAR, CARBON 20K	
RV2105	1-225-385-11	RES, VAR, CARBON 20K	
RV2109	1-225-385-11	RES, VAR, CARBON 20K	
RV2113	1-225-385-11	RES, VAR, CARBON 20K	
RV2117	1-241-238-21	RES, VAR, CARBON 20K	
<SWITCH>			
S2101	1-570-101-41	SWITCH, KEY BOARD	
S2102	1-570-101-41	SWITCH, KEY BOARD	
S2103	1-570-101-41	SWITCH, KEY BOARD	
S2104	1-570-101-41	SWITCH, KEY BOARD	
S2105	1-570-101-41	SWITCH, KEY BOARD	
S2106	1-570-969-11	SWITCH, KEY BOARD	
S2107	1-570-969-11	SWITCH, KEY BOARD	
S2108	1-570-101-41	SWITCH, KEY BOARD	
S2109	1-570-101-41	SWITCH, KEY BOARD	
S2110	1-570-101-41	SWITCH, KEY BOARD	
S2111	1-570-101-41	SWITCH, KEY BOARD	
S2112	1-570-101-41	SWITCH, KEY BOARD	
S2113	1-570-969-11	SWITCH, KEY BOARD	
S2114	1-570-969-11	SWITCH, KEY BOARD	

* A-1388-193-A J BOARD, COMPLETE *****			
<CONNECTOR>			
CN608	* 1-695-561-11	PIN, CONNECTOR (PC BOARD) 7P	
<SWITCH>			
S601	Δ 1-692-921-11	SWITCH, PUSH (A.C. POWER)	



Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
	* A-1390-704-A	X BOARD, COMPLETE *****	
		<CONNECTOR>	
CN108	* 1-564-518-11	PLUG, CONNECTOR 3P	
		<DIODE>	
D001	8-719-023-78	DIODE SEL3810DLC05	
D002	8-719-023-78	DIODE SEL3810DLC05	
D003	8-719-023-78	DIODE SEL3810DLC05	
D004	8-719-023-78	DIODE SEL3810DLC05	

	* A-1390-705-A	S BOARD, COMPLETE ***** (PVM-20M2U/20M4U)	
		<CAPACITOR>	
C805	1-102-978-00	CERAMIC 220PF 5% 50V	
C806	1-136-165-00	FILM 0.1MF 5% 50V	
C807	1-130-477-00	MYLAR 0.0033MF 5% 50V	
C810	1-136-165-00	FILM 0.1MF 5% 50V	
C811	1-136-165-00	FILM 0.1MF 5% 50V	
C812	1-136-495-11	FILM 0.068MF 5% 50V	
C813	1-124-261-00	ELECT 10MF 20% 50V	
C818	1-136-165-00	FILM 0.1MF 5% 50V	
		<CONNECTOR>	
CN801	* 1-573-896-11	SOCKET, CONNECTOR 12P	
		<COIL>	
L801	1-410-470-11	INDUCTOR 10UH	
		<RESISTOR>	
R802	1-249-435-11	CARBON 33K 5% 1/4W	
R803	1-247-863-91	CARBON 22K 5% 1/4W	
R804	1-215-454-00	METAL 24K 1% 1/4W	
R805	1-215-461-00	METAL 47K 1% 1/4W	
R808	1-249-417-11	CARBON 1K 5% 1/4W	
R812	1-249-417-11	CARBON 1K 5% 1/4W	
R813	1-249-417-11	CARBON 1K 5% 1/4W	
R815	1-247-843-11	CARBON 3.3K 5% 1/4W	
R816	1-249-418-11	CARBON 1.2K 5% 1/4W	
R817	1-249-418-11	CARBON 1.2K 5% 1/4W	
R818	1-249-418-11	CARBON 1.2K 5% 1/4W	
R819	1-249-418-11	CARBON 1.2K 5% 1/4W	
R820	1-249-422-11	CARBON 2.7K 5% 1/4W	

	1-537-735-14	TERMINAL BOARD ASSY, I/O (A) ***** (Q BOARD)	
	2-990-241-02	HOLDER (A), PLUG	
	3-178-213-21	SCREW +P 3X10	
	7-685-135-19	SCREW +P 2.6X10 TYPE2 SLIT	
		<CAPACITOR>	
C2401	1-163-111-00	CERAMIC CHIP 56PF 5% 50V	
C2402	1-104-396-11	ELECT 10MF 20% 16V	
C2403	1-104-396-11	ELECT 10MF 20% 16V	

REF. NO.	PART NO.	DESCRIPTION	REMARK
C2404	1-104-396-11	ELECT 10MF 20% 16V	
C2405	1-124-589-11	ELECT 47MF 20% 16V	
C2406	1-104-396-11	ELECT 10MF 20% 16V	
C2407	1-104-396-11	ELECT 10MF 20% 16V	
C2408	1-104-396-11	ELECT 10MF 20% 16V	
C2409	1-124-234-00	ELECT 22MF 20% 16V	
C2410	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2411	1-104-396-11	ELECT 10MF 20% 16V	
C2412	1-104-396-11	ELECT 10MF 20% 16V	
C2413	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C2414	1-126-301-11	ELECT 1MF 20% 50V	
C2415	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2416	1-124-589-11	ELECT 47MF 20% 16V	
C2418	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2422	1-124-234-00	ELECT 22MF 20% 16V	
C2423	1-124-234-00	ELECT 22MF 20% 16V	
C2424	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2425	1-124-589-11	ELECT 47MF 20% 16V	
C2426	1-124-589-11	ELECT 47MF 20% 16V	
C2427	1-124-234-00	ELECT 22MF 20% 16V	
C2428	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2429	1-124-234-00	ELECT 22MF 20% 16V	
C2430	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2431	1-124-234-00	ELECT 22MF 20% 16V	
C2432	1-124-234-00	ELECT 22MF 20% 16V	
C2433	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2434	1-124-463-00	ELECT 0.1MF 20% 50V	
C2435	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2436	1-124-234-00	ELECT 22MF 20% 16V	
C2437	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2438	1-124-234-00	ELECT 22MF 20% 16V	
C2439	1-124-234-00	ELECT 22MF 20% 16V	
C2440	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2441	1-124-234-00	ELECT 22MF 20% 16V	
C2442	1-124-234-00	ELECT 22MF 20% 16V	
C2443	1-124-234-00	ELECT 22MF 20% 16V	
C2444	1-124-234-00	ELECT 22MF 20% 16V	
C2445	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2446	1-163-033-91	CERAMIC CHIP 0.022MF 50V	
C2447	1-124-234-00	ELECT 22MF 20% 16V	
C2448	1-124-234-00	ELECT 22MF 20% 16V	
C2449	1-124-234-00	ELECT 22MF 20% 16V	
C2450	1-124-234-00	ELECT 22MF 20% 16V	
C2451	1-124-589-11	ELECT 47MF 20% 16V	
C2452	1-124-589-11	ELECT 47MF 20% 16V	
C2454	1-126-163-11	ELECT 4.7MF 20% 25V	
C2461	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2462	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2463	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2464	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2465	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2466	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2467	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2468	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2469	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
C2470	1-165-319-11	CERAMIC CHIP 0.1MF 50V	
		<CONNECTOR>	
CN306	1-564-526-11	PLUG, CONNECTOR 11P	
CN307	1-564-522-11	PLUG, CONNECTOR 7P	
CN308	1-564-519-11	PLUG, CONNECTOR 4P	
CN2401	Δ 1-251-263-11	INLET, AC	
CN2402	1-565-167-12	TERMINAL, (S) (WITH SW) 4P	
CN2403	1-569-578-11	TERMINAL, S (WITH SW)	
CN2404	1-764-872-11	CONNECTOR, MULTI 20P	

